
Phase 4 — what the Safety Island changes, at node level

A **selective** zoom, between phase 3 (one box per stack) and phase 5 (the island, node by node).
On the HPC only the nodes that change are opened up — what was **removed**, what is **re-sourced**, and the **new** interface block. Every stack that the island leaves alone stays as one box, exactly as in phase 3.
On the island only the nodes migrated from the HPC are opened up. The island's own new stacks stay as one box each; phase 5 opens them.

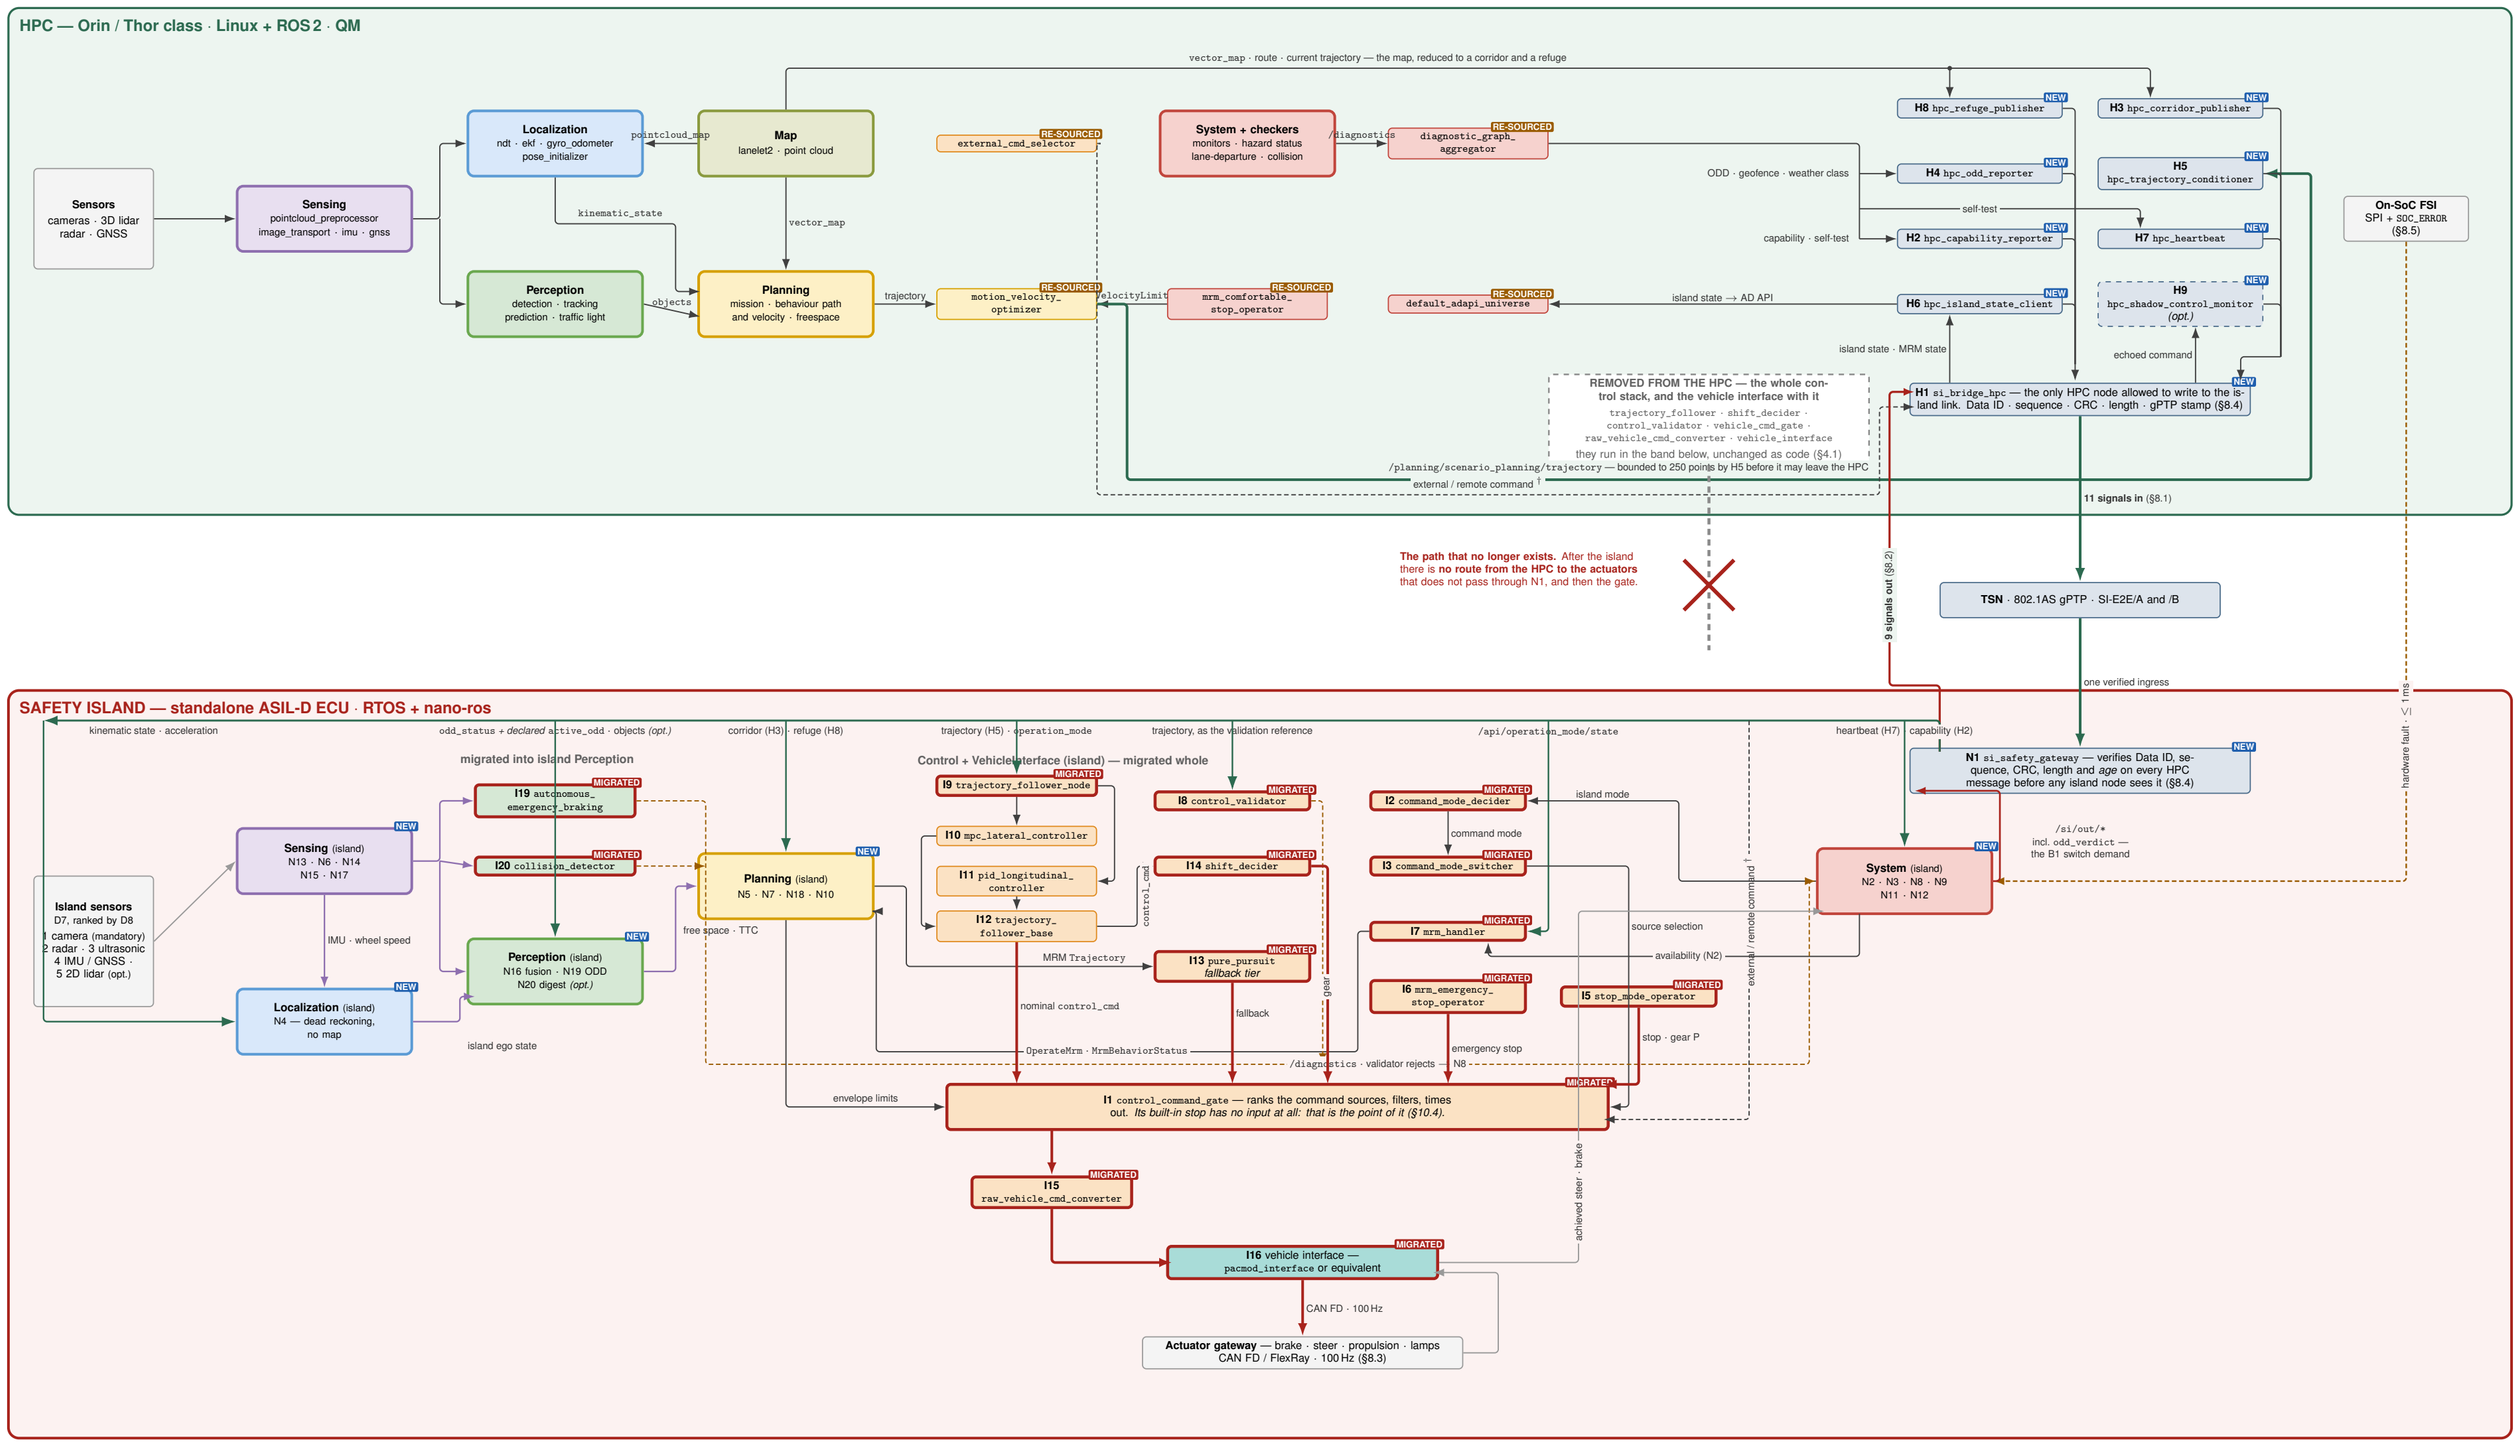

How to read this phase

a whole stack, *unchanged* (phase 3) · a node, *migrated* to the island · a node, *new* · a node that *stays*, re-sourced · *removed* from this ECU

A heavy rule means a whole stack drawn as one box, at the phase-3 level of detail — the island changes nothing inside it. A thin rule means a single node, opened up because it changed. † the external / remote command reaches the gate (§5.2, §10.4) but has no row in the §8.1 interface table.

Messages

- HPC-sourced, verified by N1
- island sensor data
- control command into the gate
- fault · `/diagnostics`
- actuator feedback
- state · mode · decision
- the path that was removed

18 Autoware nodes migrate (§4.1) — every red-bordered box, plus I10–I12 inside I9 and I4, a header-only library with no topics. **19 new island nodes** sit inside the five blue-tagged island blocks; phase 5 opens them. The complete island edge catalogue is `../messageflow/`.