


L4 Safety Island — message flow across every island node

Extends §10.2 *The island sensing chain* from the sensing nodes to all 37 island nodes — 18 migrated Autoware I-nodes and 19 new **N**-nodes — plus the optional N20.

Drawn from L4SafetyIsland_SoftwareDesign.md (version 20260912) without modifying it. Every edge, with the section it is taken from, is catalogued in L4SafetyIsland-MessageFlow.md.

Companion — ../layers/L4SafetyIsland-Layer4-ChangedNodes redraws Autoware’s own node diagram with the island added: *where* each node runs and what changed, coloured by Autoware stack. **Here, colour is the §9.1 execution partition and every message is drawn.**

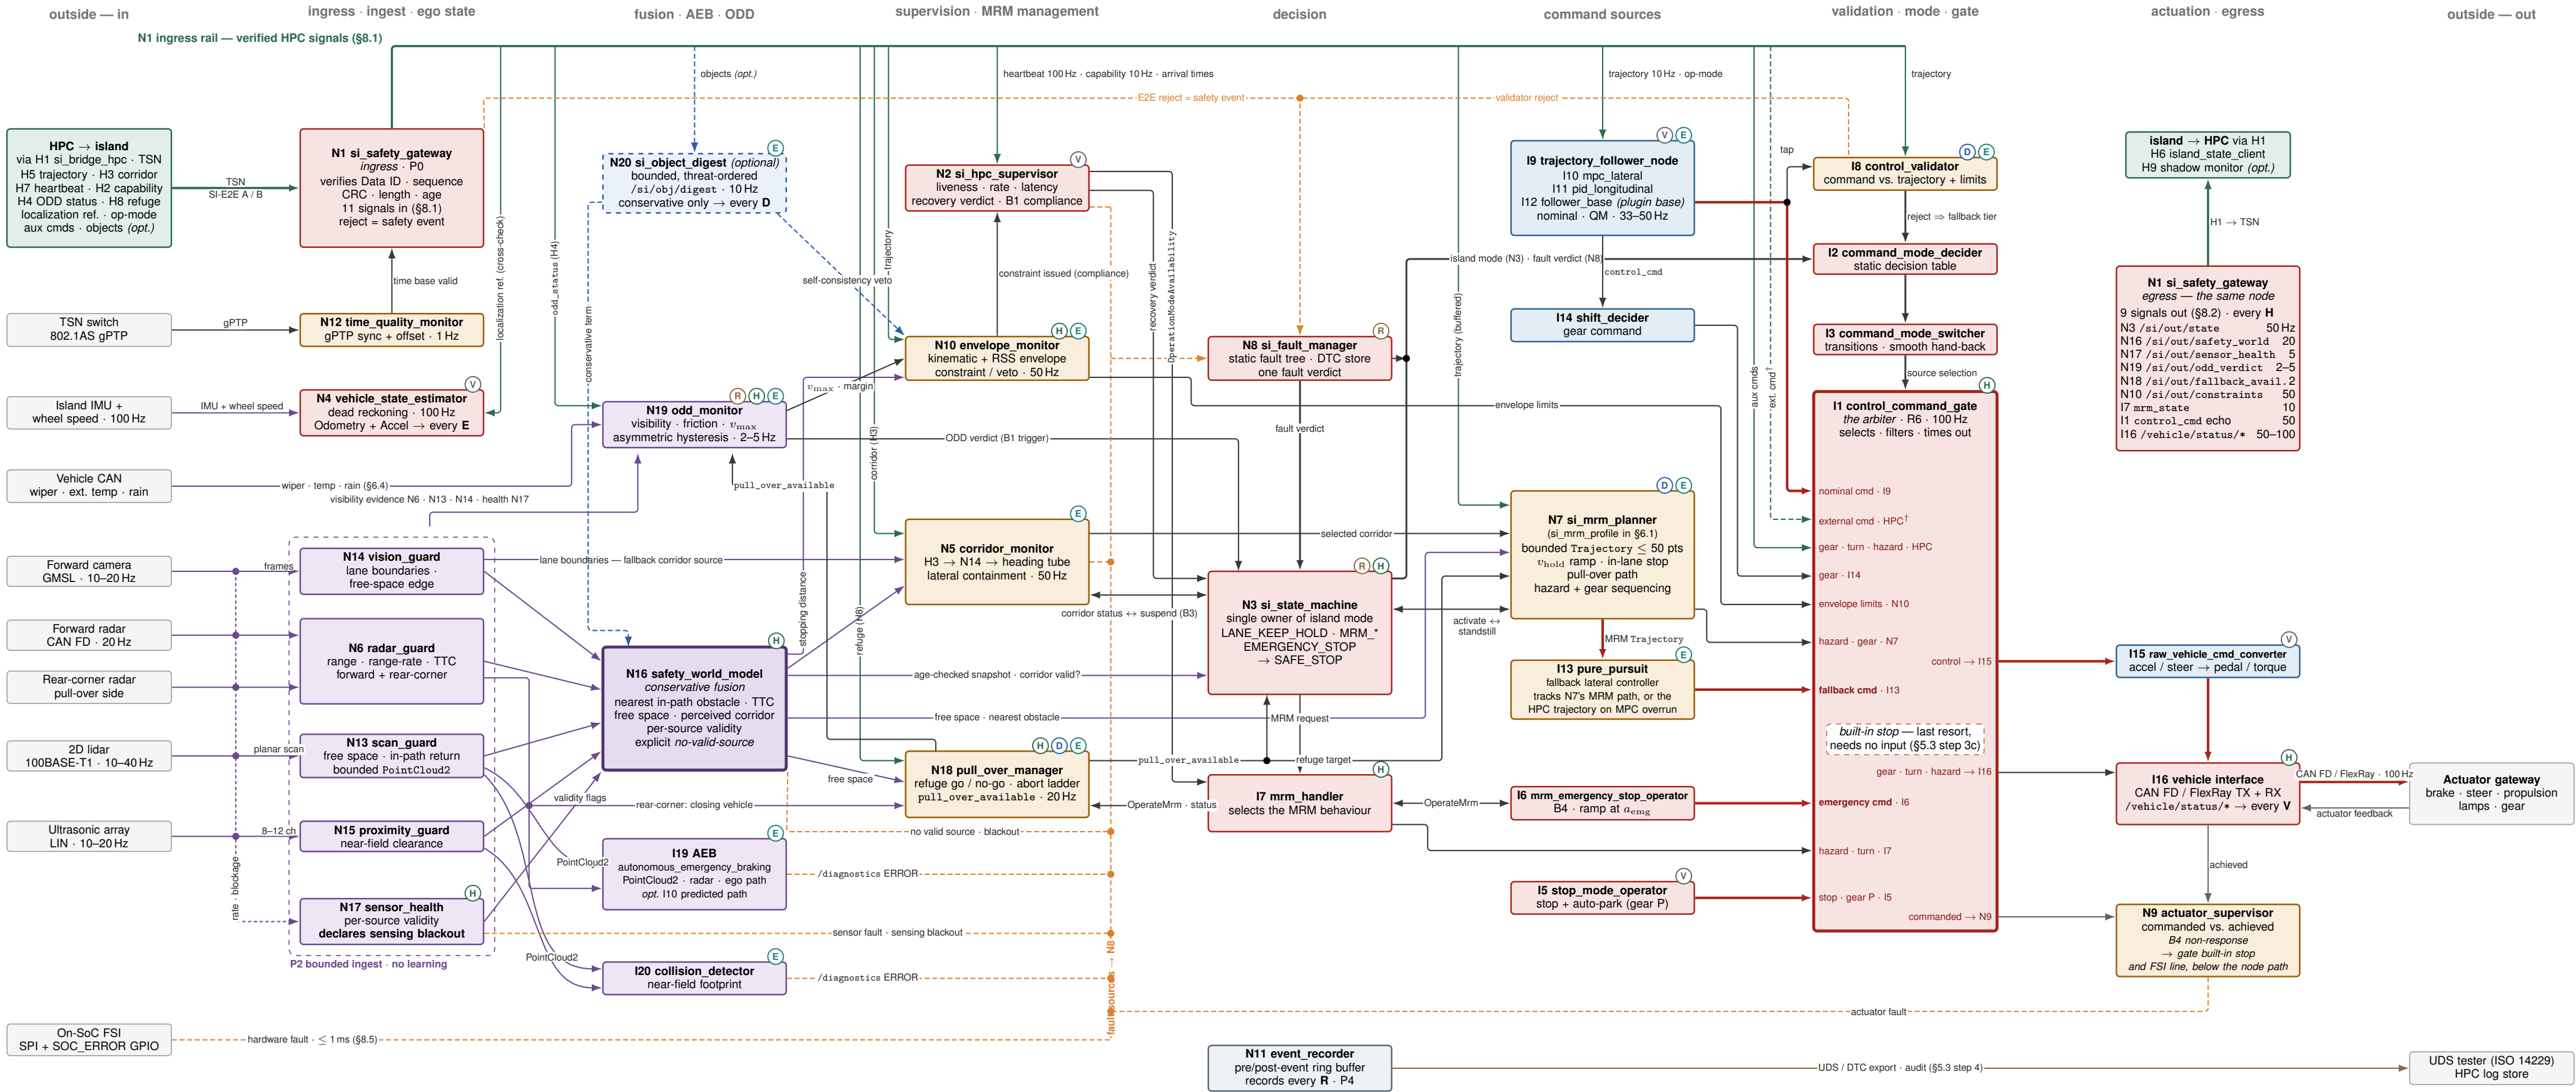


Nodes (partition, §9.1)



Messages



Connectors (a badge replaces a line)

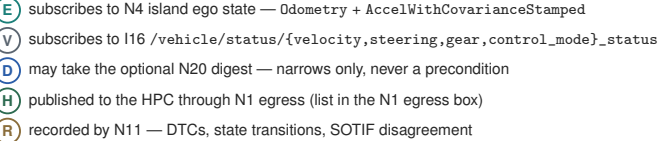

† The external / remote command reaches the gate from the HPC (§5.2, §10.4) but has no row in the §8.1 interface table. No topics of their own: I4 command_mode_types (a library linked into I1–I3), I10–I12 (plugins inside I9). Legacy path: I17 + I18 replace I1–I3 and are not drawn. **Not drawn here, because the companion draws it:** the HPC side of the link (H1–H9), the Autoware stacks that stay on the HPC, and what changed against Autoware as it is today — ../layers/L4SafetyIsland-Layer4-ChangedNodes. Use that one for the allocation argument, this one for timing and interfaces.