
## Driver 1



## Notes:

- Joysticks run split-arcade drive.
- Joysticks are more precise at lower speeds.
- When climbing, hold button A down until the climber reaches the top, let go, then hold it again to climb.

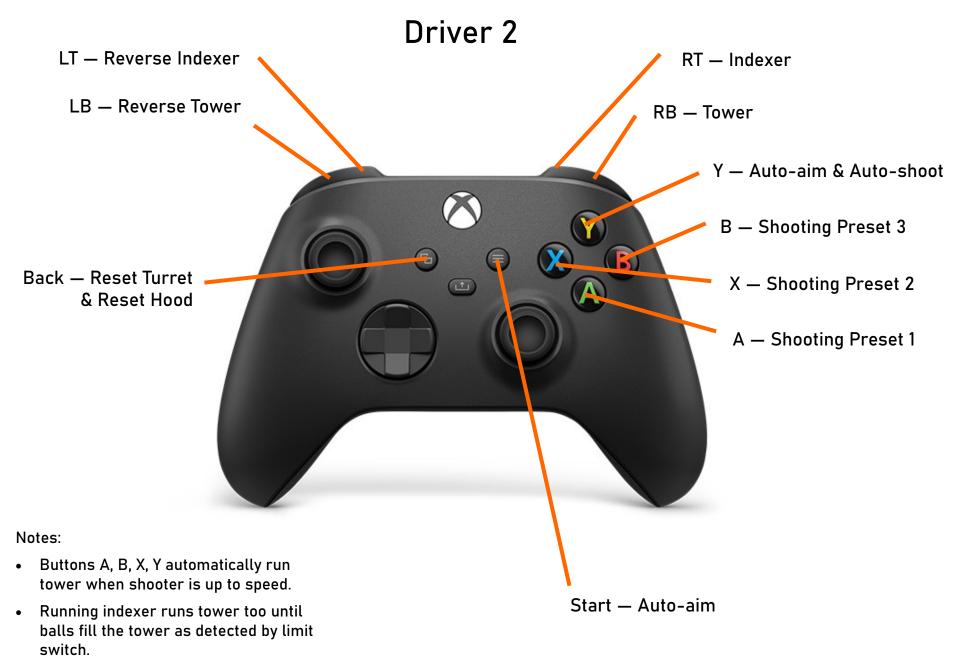

 Auto-aim will seek a target if it doesn't currently see one.