

AYE
TECH HUB

• COOHOM INTERIOR DESIGN • LESSON 04

Floor Plan Creation

Draw Your First Complete Room in Coohom

Lesson 04 of 30 | Coohom Interior Design Program

Awet G. Nway

Founder, AYE Tech Hub | Interior Design & BIM Specialist

- Drawing walls precisely with exact dimensions in Coohom
- Adding and positioning doors — swing direction and width settings
- Adding windows with correct sill height and reveal settings
- Importing a DXF/DWG floor plan as a Coohom background trace
- Common floor plan mistakes — and how to fix them in under 2 minutes

Floor Plan Creation — Your First Complete Room

The floor plan is the foundation of every Coohom project. Everything you do later — furniture placement, materials, lighting, rendering — is built on top of an accurate floor plan. **A floor plan drawn to real dimensions** produces a design that the client can trust and that translates directly into a real space. Getting this right is the most important technical skill in Coohom.

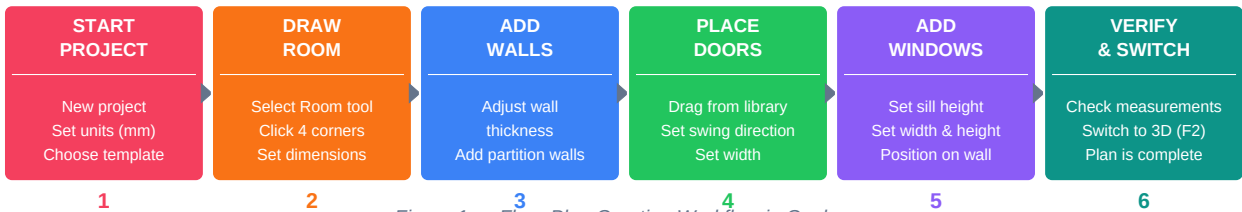


Figure 1 — Floor Plan Creation Workflow in Coohom


Drawing Walls in Coohom

Method	How to Use It	Best For
Draw Room (outline method)	Left panel → Room → Draw Room outline. Click to set corners. Type exact dimension in the input box that appears on each wall segment.	Single rectangular rooms or simple L-shapes. Fastest method for standard room shapes.
Draw Wall (individual walls)	Left panel → Wall → Draw Wall. Click start point, type length, click end. Each wall is a separate element.	Complex room shapes, angled walls, open-plan layouts. Full control over each wall.
Import DXF/DWG plan	Settings → Import → select DXF/DWG file. Appears as a background image. Trace walls over the plan.	When you have an architect's CAD drawing to trace from. Ensures perfect dimensional accuracy.
Room template	Left panel → Room → select a preset (studio, 1-bed, etc.). Modify as needed.	Starting a project quickly with an approximate layout before receiving exact dimensions.

Setting wall thickness: After drawing a wall, click it to select, then look in the right *Properties* panel. Change thickness to match your project standard — typically 200 mm for external walls, 100–120 mm for internal partitions. Wall thickness affects room dimensions, so set it before finalising your plan.

Adding Doors, Windows and the Annotated Floor Plan

Once your walls are drawn, doors and windows bring the plan to life. In Coohom, both are placed from the left panel library — drag and drop onto any wall. The properties panel then lets you adjust every dimension and setting precisely.

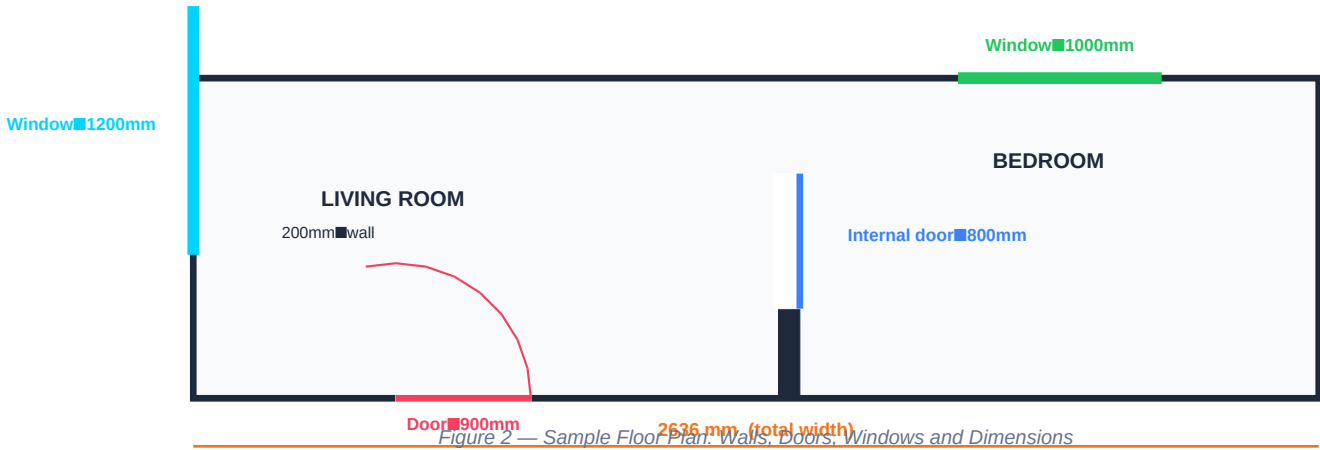

Doors — Settings and Standards

Door Setting	How to Change	Standard Values
Width (door opening)	Select door → right panel → Width field	External entry: 900mm. Internal: 750–800mm. Bathroom: 700mm. Accessible: 850mm+
Swing direction (inward/outward)	Select door → click "Flip" button or F key in properties	Doors swing away from corridors. Check with space planning principles.
Swing side (left/right hinge)	Select door → click "Mirror" button	Hinge on the side nearest the wall corner, usually. Avoid blocking light switches.
Door style	Click door → "Replace" in properties → browse door library	Match style to room function: glass panel for office, solid for bedroom, louvre for storage
Door height	Select door → right panel → Height field	Standard: 2100mm. Feature door: 2400mm. Affordable housing: 2000mm.

Windows — Settings and Standards

Window Setting	How to Change	Standard Values
Width	Select window → right panel → Width field	Bedroom: 1000–1200mm. Living room: 1500–2400mm. Bathroom: 600mm.
Height	Select window → right panel → Height field	Standard: 1200mm. Full-height: 2100mm. Clerestory: 600mm.
Sill height (from floor)	Select window → right panel → Bottom Elevation (sill height)	Standard sill: 900mm. Low sill (seat area): 400–600mm. Clerestory: 1800mm+
Position on wall	Click and drag window along the wall in 2D plan view	Centre on wall unless design requires asymmetric placement.
Window style	Click window → Replace → browse window library (casement, sliding, fixed, bay)	Match climate: casements for ventilation; sliding for space-saving; fixed for views.

The snap system: Coohom automatically snaps doors and windows to wall centres and edges. When you see a green highlight on the wall, the element has snapped to a reference point. Use the right panel to type exact positions rather than dragging for professional-level precision.

Common Mistakes, Measurements and Multi-Floor Projects

Every Coohom beginner makes the same floor plan mistakes. Knowing them in advance saves you hours of frustration.

WALLS NOT JOINED

Gaps at corners cause holes in 3D view

Drag wall end onto corner until it snaps green

WRONG WALL THICKNESS

Default may not match your building standard

Click wall → right panel → change thickness to 200mm

DOOR SWING WRONG WAY

Door opens into furniture or bathroom

Click door → Flip button in right panel

WINDOW WRONG HEIGHT

Window at floor level or too high on wall

Click window → Set sill height 900mm (standard)

ROOM SIZE NOT CHECKED

Room looks OK but dimensions are wrong

Select room → Check properties or use Measure (M)

Figure 3 — 5 Common Floor Plan Mistakes and How to Fix Them

Measuring and Verifying Your Floor Plan

Measurement Tool	How to Access	What to Check
Measurement tool (M key)	Press M → click two points → dimension appears between them	Room internal dimensions; door clearance; furniture clearance zones
Room area display	Click anywhere inside a closed room → area shows in m² in properties	Compare to client brief (e.g. "master bedroom min 14 m²")
Wall length display	Click any wall → length shows in right panel	Confirm wall length matches architectural plan before placing doors
Grid snap verification	Turn on grid (G key) and check walls align to grid intersections	Ensures walls are square and parallel — prevents diagonal drift
3D cross-check	Switch to 3D view (F2) and orbit around the model	Reveals floating walls, missing ceilings, walls that didn't join properly

Multi-Floor and Multi-Room Projects

Task	How to Do It in Coohom	Important Note
Add a second floor	Floor panel (bottom bar or left panel) → + Add Floor → set floor height	Default floor height is 2700mm. Change to match your project.
Copy floor plan to next floor	Select all walls on Floor 1 → Copy (Ctrl+C) → switch to Floor 2 → Paste	Adjust where walls differ between floors after pasting.
Set ceiling height per room	Click ceiling area → right panel → set height in mm	Coohom default is 2700mm. Set feature rooms higher (3000+mm for luxury).
Add a staircase	Left panel → Stair → select style → place between floors	Verify stair opening aligns on both floor plans before rendering.
Link floors for a 3D section view	View menu → Section View → set cut plane height	Useful for showing the relationship between floors to clients.

What comes next — COHOOM-005: Wall Editing — editing individual walls after initial placement, changing wall height for feature walls and open-plan zones, adding wall recesses and niches, and handling the curved wall tool for contemporary designs.