

Wall Editing

in Coohom

Select | Move | Resize | Openings | Materials | Curved Walls

What You Will Learn

- How to select, move, resize, and delete walls in floor plan and 3D view
- Adding openings: doors, windows, archways, and glass wall panels
- Changing wall height, thickness, and adjusting wall start/end coordinates
- Applying materials and textures to wall surfaces — paint, tile, brick, wallpaper

Quick Reference

Click wall:	Select
Drag:	Move
Drag handle:	Resize
Properties panel:	Change height/material

Awet G. Nway

Founder, AYE Tech Hub | Interior Design & Coohom Specialist

COHOOM-005: Wall Editing in Coohom

In Lesson 4 you created a complete floor plan — walls drawn, rooms defined. Real design work, however, requires constant refinement: clients change room sizes, doors need repositioning, a partition wall becomes unnecessary, a window needs to be larger. Coohom's wall editing tools let you make all these changes quickly and precisely without starting over. Mastering wall editing is the difference between a design that feels locked and one that remains flexible throughout the project.

Learning Objectives

- Select walls in both floor plan view and 3D view and access their properties
- Move, resize, and delete walls using Coohom's editing handles and tools
- Adjust wall height and thickness in the properties panel
- Add door, window, archway, and glass wall openings to any wall
- Apply and change wall materials, colours, and surface textures
- Create curved walls and set wall angles for non-rectangular room shapes

1. Selecting Walls


In Coohom, walls can be selected in either **Floor Plan view** (top-down) or **3D view**. Click once on any wall to select it. The selected wall highlights and the Properties Panel on the right shows all editable parameters.



Selection Method	How To	What Appears
Single wall — floor plan	Click once on the wall line in floor plan view	Wall highlights in colour. Resize handles appear at endpoints and midpoint. Properties panel updates.

Single wall — 3D view	Click on the wall face in 3D or perspective view	Same properties panel appears. 3D selection is useful when walls overlap in floor plan.
Multiple walls	Hold Shift and click additional walls	All selected walls highlight. Properties panel shows shared properties only — individual differences are hidden.
All walls in room	Click one wall → Right-click → Select Connected Walls	All walls sharing endpoints with the clicked wall select simultaneously. Fast for moving entire rooms.
Deselect	Click on empty floor area, or press Escape	All selections clear. Properties panel returns to empty state.

2. Wall Editing Operations

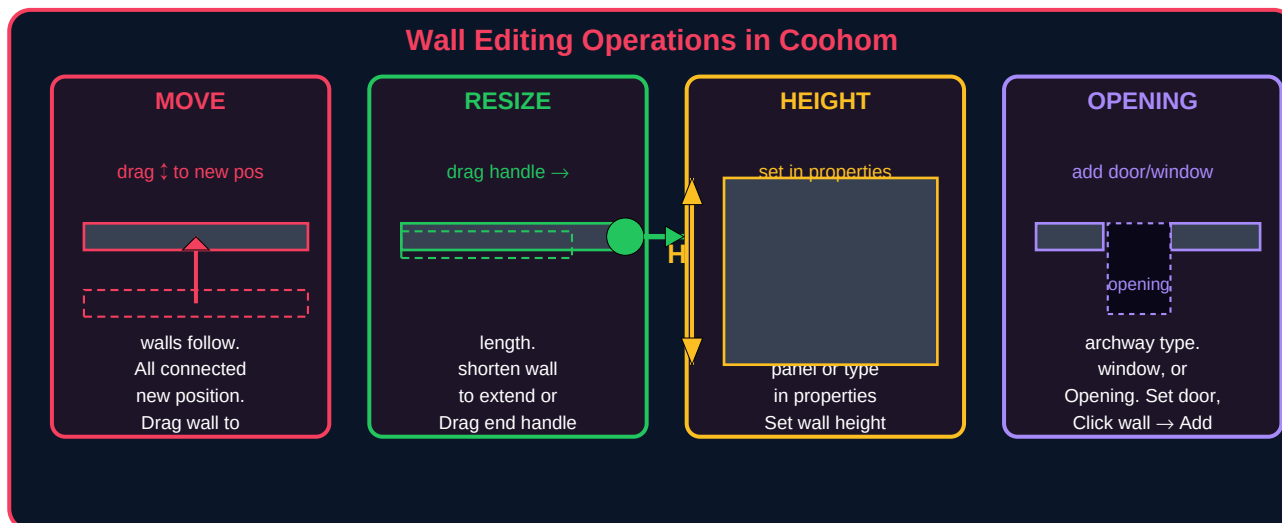

Moving Walls

To move a wall, click to select it, then **click and drag** the wall body (not the handles) to the new position. Connected walls automatically stretch or shorten to maintain the room shape. For precise positioning, type exact coordinates in the Properties Panel Start/End fields.

Move Method	How To	Best For
Drag in floor plan	Click wall → drag body to new position	Quick layout adjustments, moving walls by eye
Type coordinates	Select wall → Properties Panel → edit Start X, Start Y, End X, End Y	Precise positioning to exact mm — required for dimensioned drawings
Offset move	Select wall → click Offset button in toolbar → enter distance	Moving a wall parallel to itself by a specific distance (e.g. widening a room by 300mm)
Move with room	Select all room walls → drag together	Repositioning an entire room without distorting internal proportions

Resizing Walls (Length)

Each wall has **endpoint handles** (circles at the ends) and a **midpoint handle**. Drag an endpoint handle to extend or shorten the wall. The adjacent wall connected at that endpoint adjusts automatically. To set an exact length: select the wall → Properties Panel → edit the **Length** field.

Changing Wall Height

Wall height in Coohom is set **per wall** — individual walls in the same room can have different heights (useful for feature walls, knee walls, and half-height partitions).


Height Setting	Default / Range	How To Change
Standard room height	2,800 mm (default)	Select wall → Properties → Height field → type new value → Enter
Global height change	Applies to all new walls	Settings → Design Settings → Default Wall Height → set value
Specific wall only	Individual wall property	Select one wall → Properties → change Height — only that wall changes
Half wall / knee wall	Any height, e.g. 900mm	Select wall → Height = 900. Used for kitchen bar counters, balustrades, room dividers.
Full height (floor to ceiling)	Equals storey height	Usually 2,800–3,200mm for residential, 3,000–4,000mm for commercial.

Changing Wall Thickness

Wall Type	Typical Thickness	When to Use
Exterior wall (brick)	220–350 mm	Outer building walls. Includes insulation and render layers.
Interior partition (block)	100–150 mm	Non-structural room dividers in residential buildings.
Load-bearing interior (brick)	215–220 mm	Internal walls that support floors or roof structure above.
Stud partition (timber/steel)	75–100 mm	Lightweight internal partitions in commercial fit-outs.
Glass partition	10–25 mm	Full-height glazed partitions in offices and commercial spaces.

3. Adding Wall Openings

Openings — doors, windows, archways, and glass panels — are added to walls rather than replacing them. Each opening type has specific settings for width, height, and position along the wall.

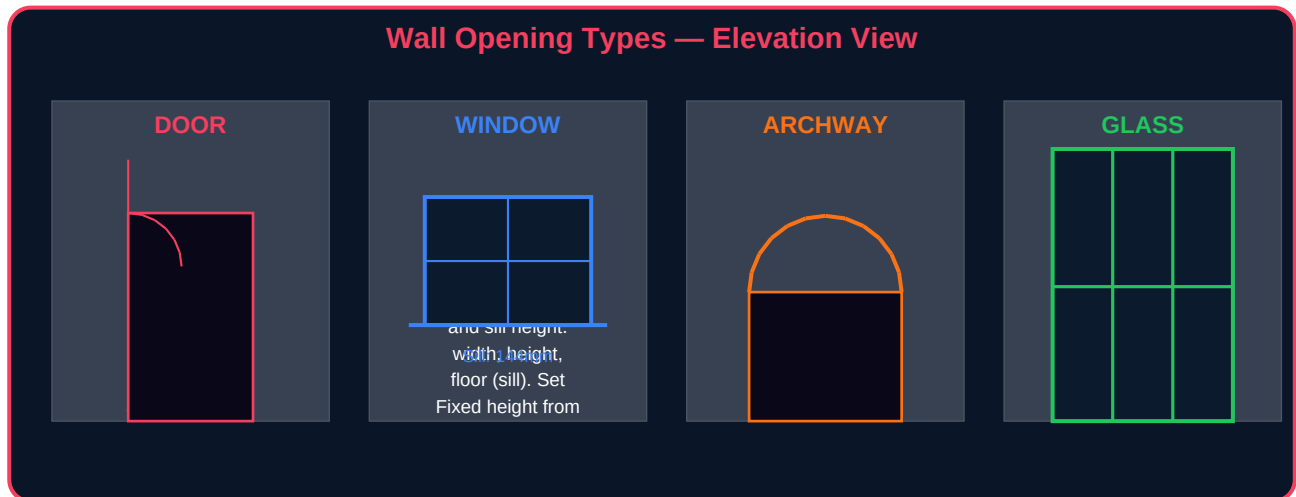

How to Add an Opening in Coohom

Step	Action	Notes
1	Select the wall where you want the opening	Click wall in floor plan or 3D view
2	Click "Add Opening" in the toolbar, or right-click → Insert → Door / Window / Archway	The opening type selector appears
3	Choose the opening type: Door, Window, Fixed Opening, Archway, or Custom	Each type has different parameter fields in the dialog
4	Set dimensions: Width and Height in mm	Width: Door 800–1200mm. Window: 600–2400mm. Archway: 800–2000mm.
5	Set position: Distance from left wall end (mm), or click to place on wall	Drag along wall to position. Or type exact distance from start point.
6	For windows: set Sill Height (height from floor to bottom of window)	Standard: 900mm from floor for windows. 0mm for floor-to-ceiling glazing.

7	Confirm with OK or Enter. The opening appears in both floor plan and 3D view.	The wall automatically breaks at the opening. Adjacent walls are NOT affected.
---	---	--

Standard Opening Dimensions — Reference Table

Opening Type	Minimum Width	Standard Width	Maximum Width	Standard Height
Single door (swing)	700 mm	800 – 900 mm	1,000 mm	2,100 mm
Double door	1,200 mm	1,400 – 1,600 mm	2,000 mm	2,100 mm
Sliding door	700 mm	900 – 1,200 mm	2,400 mm	2,100 – 2,400 mm
Standard window	600 mm	900 – 1,200 mm	2,400 mm	1,200 mm (sill at 900mm)
Picture window	1,200 mm	1,800 – 2,400 mm	4,000 mm	1,500 – 2,000 mm
Archway	800 mm	1,000 – 1,400 mm	2,500 mm	2,100 mm to springing line
Glass wall panel	600 mm	1,000 – 1,800 mm	Full wall width	Floor to ceiling

4. Wall Materials and Surface Finishes

Coohom's material library contains hundreds of realistic wall finishes — paint colours, wallpapers, tiles, brick, stone, wood panelling, and rendered surfaces. Materials can be applied to one face of a wall, both faces independently, or all four surfaces (two faces + top + side ends).

Wall Materials & Styles in Coohom

Plaster
(White)

Concrete
(Grey)

Brick
(Red)

Marble
(Cream)

Tile
(Blue)

Wood
(Oak)

To apply: Select wall → Properties panel → Material/Style → Choose from library → Apply to face or all faces

Tip: Use "Paint Bucket" tool to apply material by clicking directly on wall surface in 3D view

Material Application	How To	When To Use
Apply to one face (interior)	Select wall → Properties → Interior Material → choose from library	Most common — different finish on inside vs outside of exterior walls
Apply to opposite face (exterior)	Select wall → Properties → Exterior Material → choose separately	Exterior render/brick while interior is plaster
Paint bucket tool	3D view → click Paint Bucket icon → click on wall face → choose colour/material	Fastest method for applying materials by clicking directly on surfaces in 3D
Custom colour / hex code	Material library → search "Colour" → enter hex code → Apply	Match exact brand paint colours (RAL, British Standard, NCS, Pantone)
Wallpaper / pattern	Material library → Wallpaper category → select pattern → adjust scale	Feature walls, accent walls. Scale controls pattern repeat size.
Tile	Material library → Tile category → select → set tile size (e.g. 300×300mm)	Bathroom, kitchen, utility walls. Coohom generates accurate grout lines.

5. Curved Walls

Curved walls add architectural interest and are commonly used for bay windows, curved room dividers, reception desks, and feature walls. Coohom supports curved walls through the Wall tool settings.

Step	Action
1. Draw the chord	Use the standard Wall tool. Draw a straight wall from the start point to the end point of the curve.
2. Enable curve	Right-click on the wall → "Make Curved" or select the wall → Properties Panel → toggle "Curved Wall" on.
3. Set arc radius	In Properties Panel → Arc Radius → enter the desired radius in mm. Smaller radius = tighter curve.
4. Set arc direction	Click the Flip Arc button to choose which side of the chord the curve bows towards (inward or outward).
5. Adjust the curve	Drag the midpoint handle in floor plan view to manually adjust the curve amount, or type exact radius.

6. Co nn ect to oth er wa lls	Curved walls connect at their endpoints just like straight walls. The adjacent walls form tangent joins automatically.
---	--

6. Deleting Walls and Splitting Walls

Operation	How To	Effect on Connected Walls
Delete a wall	Select wall → press Delete key or click Delete button in toolbar	Connected walls at endpoints are NOT deleted — they remain but the space between them becomes open.
Delete with fill	Select wall → Delete → choose "Fill Gap" option	Coohom extends adjacent walls to fill the gap left by the deleted wall.
Split a wall	Select wall → right-click → Split at Point → click location	The wall becomes two separate walls at the split point. Each can then be edited independently.
Merge walls	Select two adjacent co-linear walls → right-click → Merge Walls	Two walls sharing an endpoint on the same line become one continuous wall.

7. Practice Exercises

#	Exercise	Step-by-Step Task
1	Resize a room	1. Open your floor plan from Lesson 4. 2. Select the north wall of the living room. 3. In Properties Panel, change Length to extend the room by 500mm. 4. Verify the change in floor plan view — adjacent walls should have adjusted.
2	Add openings to walls	1. Add a single door (800mm wide × 2100mm high) in the main living room wall. 2. Add two windows (1200mm wide × 1200mm high, sill at 900mm) to the bedroom exterior wall. 3. Add an archway (1200mm wide) between the living room and dining area.
3	Change wall heights	1. Select the kitchen breakfast bar partition wall. 2. Change height to 1,050mm (standard bar counter height). 3. Select the main exterior walls and confirm all are at 2,800mm height.
4	Apply wall materials	1. Using the Paint Bucket tool in 3D view, apply white plaster to all interior wall faces. 2. Apply a feature wallpaper to the bedroom headboard wall only. 3. Apply a tile material (e.g. 300×300mm subway tile) to the bathroom walls.
5	Create a curved feature wall	1. Draw a straight wall across a corner of a room (from corner to corner). 2. Right-click → Make Curved → set radius to 1,500mm. 3. Flip direction so the curve bows into the room. 4. View the result in 3D perspective to confirm the curved wall looks correct.

Lesson Summary

Operation	Key Action
Select wall	Click once in floor plan or 3D view. Hold Shift for multiple selection.
Move wall	Drag wall body. For precision: Properties Panel → edit X/Y coordinates.
Resize wall	Drag endpoint handle. For precision: Properties Panel → edit Length.
Change height	Properties Panel → Height field. Can be different for each wall.
Change thickness	Properties Panel → Thickness. Use standard sizes: 100mm partition, 220mm external.
Add opening	Select wall → Add Opening → choose type → set W×H and position → OK.
Apply material	Paint Bucket tool in 3D → click surface → choose from library. Or Properties Panel.
Curved wall	Draw straight wall → right-click → Make Curved → set radius and flip direction.
Delete wall	Select → Delete key. Choose "Fill Gap" to extend adjacent walls automatically.

What Is Next — COHOOM-006

COHOOM-006: Furniture Placement — Adding furniture from the Coohom library to rooms. Searching, filtering, and selecting furniture models. Placing, rotating, and scaling furniture. Grouping and aligning furniture. Custom furniture parameters. Building a complete living room furniture layout from scratch.

Resource	Details
Coohom Design Series	COHOOM-001 through COHOOM-030 — ayetechub.com/pdfs.html
Coohom Software	Free account at coohom.com — browser-based, no installation needed
Community	Telegram: t.me/ayetechub