


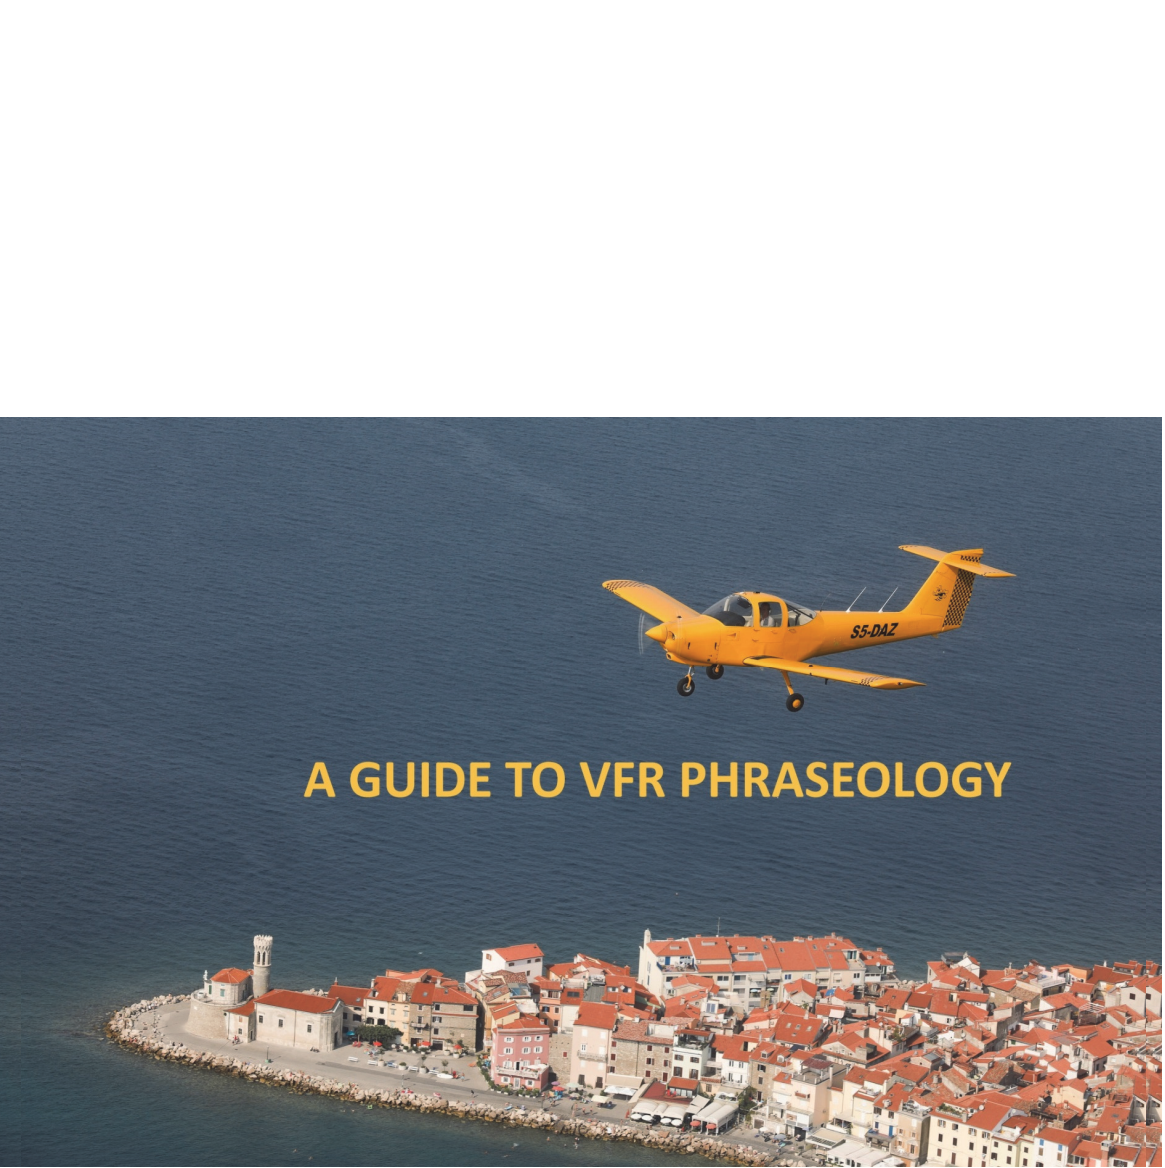

A GUIDE TO VFR PHRASEOLOGY

Prepared by:

Karmen Štumberger, MSc

REPUBLIKA SLOVENIJA
AGENCIJA ZA CIVILNO LETALSTVO



Contents

1. Introduction	1
2. General	2
3. Departure phraseology	12
4. En-route phraseology	16
5. Arrival phraseology	20
6. Emergency and urgency messages	23
7. Helicopter operations	25
8. Unattended aerodromes	26
9. Aerodromes with a flight information service officer	27
10. Gliding	29
11. Ballooning	31
12. Complete flights	32

Symbols used in the examples of use

	Phraseology used by an airplane pilot
	Phraseology used by a helicopter pilot
	Phraseology used by a sailplane pilot
	Phraseology used by a balloon pilot
	Phraseology used by an air traffic controller
	Phraseology used by an aeronautical station operator

Tables 2, 3, 4 and 5 are from *Commission Implementing Regulation (EU) 2016/1185 of 20 July 2016 (Part C SERA)*. The photographs on pages i, 9 and 17 were made by photographer and pilot Miro Majcen. The photographs on pages 13 and 15 were reproduced here with the permission of Primož Jovanovič. The photograph on page 31 was taken by Rok Piciga. The photograph on page 26 was contributed by Letalski klub Novo mesto, and photographs on pages 29 and 30 were reproduced here by kind permission of Letalski center Maribor.

Acknowledgment

Special thanks go to Andrej Perc, Rastko Debevec and Vito Persoglia for their help with examples of use and the director of CAA Rok Marolt for his support.

A GUIDE TO VFR PHRASEOLOGY

FOR GENERAL AVIATION PILOTS IN SLOVENIA

Introduction

In spite of the common belief that the priorities for safe flying are 'aviate, navigate and then communicate', the correct use of standard phraseology (RTF) makes an important contribution to the safe and efficient operation of aircraft. Standard phraseology should be used for all situations for which it has been determined. Only when it cannot serve the purpose of transmission, plain language should be used.



The purpose of this guide is to illustrate the use of standard ICAO phraseology in English for VFR flights conducted in Slovenia and neighbouring states. The first chapter, explaining voice communication procedures, is relevant also for pilots flying in accordance with instrument flight rules.

The guide depicts the use of phraseology during arrival and departure, en route and for training. It further describes the use of phraseology for helicopter operations, soaring, ballooning and flying at uncontrolled aerodromes. It does not explain the use of all phrases foreseen for VFR flights. Therefore, for the extensive list of phrases pilots should see Chapter 12 of the ICAO Document 4444, Air Traffic Management.

We tried to make the examples of use of RTF as realistic as possible. The examples, however, should not be understood as prescribed communication in a given situation.

The use of generic pronoun he in this guide refers to both male and female.

This guide is based on the Guide to Phraseology for General Aviation Pilots in Europe, published by European General Aviation Safety Team (EGAST) and Eurocontrol. Other sources used in its preparation are the course book 'Letalska frazeologija, How do you read (me)?', written by Alenka Kukovec, M.Sc., Commission Implementing Regulation (EU) No. 2016/1185 (Part C SERA) and ICAO Document 4444.

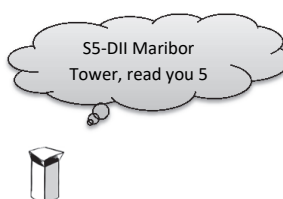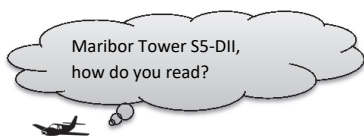

General

✦ Aircraft call signs

The radiotelephony call sign of a general aviation aircraft is usually the aircraft registration, e.g. S5-DAS. The call sign of an aircraft used in commercial aviation is the telephony designator of the aircraft operator, followed by the last four characters of the registration marking of the aircraft, or by the flight identification, e.g. Easy 3246.

Aircraft call signs may be abbreviated. Abbreviated call signs contain the first character of the registration and last two characters of the call sign, e.g. S-AS, or the telephony designator of the aircraft operator, followed by at least the last two characters of the call sign, e.g. Adria AB. An aircraft shall not change the type of its radiotelephony call sign during flight, except temporarily on the instruction of the controller.

✦ Ground station call signs

Ground stations are identified by the name of the location followed by a word (suffix) denoting the type of unit or the service provided. This will normally be an air traffic control or flight information service. Examples of ground station call signs are given in the table below.

Table 1

Unit	Call sign Suffix	Instructions or information
Aerodrome control	GROUND TOWER APPROACH	Prevents collisions between aircraft and on the manoeuvring area between aircraft and obstructions.
Radar Unit (ATC)	RADAR	Radar unit in general
Area Control Centre	CONTROL	Area control centre
Flight Information Service (FIS)	INFORMATION	Provides information for safe and efficient conduct of flights.
Aeronautical Station	RADIO	Aeronautical station in general

Once satisfactory communication has been established, the name of the location or the call sign suffix may be omitted, e.g. 'Tower' or 'Maribor'.

◆ Transmission of letters

When proper names, service abbreviations and other words are spelled out in radiotelephony, the alphabet in Table 2 shall be used.

Table 2

Letter	Word	Approximate pronunciation (for Slovene speakers of English)
A	Alfa	<u>AL</u> FA
B	Bravo	<u>BRA</u> VOU
C	Charlie	<u>ČAR</u> LI or <u>ŠAR</u> LI
D	Delta	<u>DEL</u> TA
E	Echo	<u>EK</u> OU
F	Foxtrot	<u>FOKS</u> TROT
G	Golf	GOLF
H	Hotel	HOU <u>TEL</u>
I	India	<u>IN</u> DI JA
J	Juliett	<u>ĐU</u> LI <u>JET</u>
K	Kilo	<u>KI</u> LOU
L	Lima	<u>LI</u> MA
M	Mike	MAJK
N	November	NO <u>VEM</u> BA
O	Oscar	<u>OS</u> KA
P	Papa	PA <u>PA</u>
Q	Quebec	KI <u>BEK</u>
R	Romeo	<u>RO</u> MI OU
S	Sierra	SI <u>ER</u> A
T	Tango	<u>TEN</u> GOU
U	Uniform	<u>JU</u> NI FORM or <u>U</u> NI FORM
V	Victor	<u>VIK</u> TOR
W	Whiskey	<u>WIS</u> KI
X	X-ray	<u>EKS</u> REJ
Y	Yankee	<u>JEN</u> KI
Z	Zulu	<u>ZU</u> LU

With help of the alphabet from the above table, pilots transmit letters in the aircraft call sign, names of reporting points, taxiway codes and certain parking position codes and ATIS codes.

Examples

S5-DAC	Sierra five Delta Alpha Charlie
DOL	(Delta Oscar Lima)
Taxiway T	(Taxiway Tango)
ATIS R	(Information Romeo)

◆ Transmission of numbers

Clear and comprehensive transmission of numbers is of vital importance in radiotelephony communications. Therefore, to achieve the best readability on the frequency, a more suitable form of pronunciation and transmission of numbers has been adopted.

All numbers used in the transmission of *aircraft call signs, headings, runway, wind direction and speed* shall be transmitted by pronouncing each digit separately.

Flight levels shall be transmitted by pronouncing each digit separately, except for the case of flight levels in whole hundreds.

The *altimeter setting* shall be transmitted by pronouncing each digit separately, except for the case of a setting of 1 000 hPa, which shall be transmitted as 'ONE THOUSAND'.

All numbers used in the transmission of *transponder codes* shall be transmitted by pronouncing each digit separately except, when the transponder codes contain whole thousands only.

Examples

Adria 14
RWY 30
Heading 101
FL 100
QNH 1010
SQUAWK 6503

Transmitted as

Adria one four
runway three zero
heading one zero one
flight level one hundred
QNH one zero one zero
SQUAWK six five zero three

All numbers containing whole hundreds and whole thousands (e.g. used in the transmission of *altitude, cloud height, visibility and runway visual range*) shall be transmitted by pronouncing each digit in the number of hundreds or thousands followed by the word 'HUNDRED' or 'THOUSAND', as appropriate. Combinations of thousands and whole hundreds shall be transmitted by pronouncing each digit in the number of thousands followed by the word 'THOUSAND', followed by the number of hundreds followed by the word 'HUNDRED'.

Examples

altitude 2 300 feet

cloud height 2 600 feet

visibility 800 meters

Transmitted as

two thousand three hundred feet

two thousand six hundred feet

eight hundred meters

When providing information regarding the relative bearing to an object or to conflicting traffic in terms of the 12-hour clock, the information shall be given pronouncing the digits together such as 'TEN O'CLOCK' or 'ELEVEN O'CLOCK'.

Numbers containing a decimal point shall be transmitted as prescribed in second paragraph with the decimal point in appropriate sequence, indicated by the word 'DECIMAL'.

◆ Pronunciation of numbers

Numbers shall be transmitted using the pronunciation shown in Table 3.

Table 3

<i>Numeral or numeral element</i>	<i>Pronunciation (for Slovene speakers of English)</i>
0	<u>ZI-RO</u>
1	<u>WAN</u>
2	<u>TU</u>
3	<u>TRI</u>
4	<u>FO-r</u>
5	<u>FAJF</u>
6	SIKS
7	SEV-n
8	<u>EJT</u>
9	<u>NAJN-r</u>
10	<u>TEN</u>
11	<u>I-LE-VN</u>
12	TWELF
Decimal	DE-SI-MAL
Hundred	HAN-drid
Thousand	TAU-SND

◇ VHF frequencies

All six digits of the numerical designator shall be used to identify the transmitting channel in very high frequency (VHF) radiotelephony communications, except when the fifth and sixth digits are zeros, in which case only the first four digits shall be used.

Examples

118,0	one one eight decimal zero
128.880	one two eight decimal eight eight zero
128.175	one two eight decimal one seven five

◇ Transmission of time

Normally, only minutes are passed. If there is any possibility of confusion, the hour should be included.

Examples

07 08	zero eight	or	zero seven zero eight
14 25	two five	or	one four two five

◇ Read back

Reading back a clearance and any safety critical information helps both the pilot and the controller understand what the aircraft has been instructed to do. It also serves as a check that the right aircraft, and only that aircraft, will take action on the clearance. It will be easier for the pilot to read back the clearance if he notes it down.

◇ Items to be read back

Messages containing the following must be read back:

- ATC route clearance
- clearances/instructions to enter, land on, take-off from, hold short of, cross or backtrack any runway
- runway in use
- altimeter settings
- SSR codes
- level or heading instructions
- speed instructions
- transition levels

When a read back is required, the pilot must make sure it is complete and finish it with the call sign. It is normally best to read back the items in the order given. If the departure instructions are transmitted together with a take-off clearance, it is more appropriate to read back the take-off clearance first, followed by the departure instructions.

◆ Use of 'wilco'

'WILCO' means 'I understand your message and will comply with it'. This standard phrase should not be used instead of a full read back of the items from the previous paragraph.

◆ Acknowledgement by call sign

If a transmission contains information that does not need to be read back, the pilot should acknowledge it by transmitting his call sign or by transmitting his call sign preceded by the word 'ROGER'.

◆ Transmitting technique

Transmissions shall be conducted concisely in a normal conversational tone.

◆ Standard words and phrases

The following words and phrases shall be used in radiotelephony communications as appropriate, and shall have the meaning ascribed in Table 4.

Table 4

Phrase	Meaning
ACKNOWLEDGE	„Let me know that you have received and understood this message.“
AFFIRM	„Yes“
APPROVED	„Permission for proposed action granted.“
BREAK	„I hereby indicate the separation between portions of the message.“
BREAK BREAK	„I hereby indicate the separation between messages transmitted to different aircraft in a very busy environment.“
CANCEL	„Annul the previously transmitted clearance.“
CHECK	„Examine a system or procedure.“
CLEARED	„Authorised to proceed under the conditions specified.“
CONFIRM	„I request verification of: (clearance, instruction, action,

	<i>information).</i> ‘
CONTACT	‘Establish communications with ...’
CORRECT	‘True’ or ‘Accurate’.
CORRECTION	‘An error has been made in this transmission (or message indicated). The correct version is ...’
DISREGARD	‘Ignore’
HOW DO YOU READ	‘What is the readability of my transmission?’
I SAY AGAIN	‘I repeat for clarity or emphasis.’
MAINTAIN	‘Continue in accordance with the condition(s) specified’ or in its literal sense.
MONITOR	‘Listen out on (frequency).’
NEGATIVE	‘No’ or ‘Permission not granted’ or ‘That is not correct’ or ‘Not capable’.
OVER	‘My transmission is ended, and I expect a response from you.’
OUT	‘This exchange of transmissions is ended and no response is expected.’
READ BACK	‘Repeat all, or the specified part, of this message back to me exactly as received’.
RECLEARED	‘A change has been made to your last clearance and this new clearance supersedes your previous clearance or part thereof.’
REPORT	‘Pass me the following information.’
REQUEST	‘I should like to know...’ or ‘I wish to obtain...’
ROGER	‘I have received all of your last transmission.’
SAY AGAIN	‘Repeat all, or the following part, of your last transmission.’
SPEAK SLOWER	‘Reduce your rate of speech.’
STANDBY	‘Wait and I will call you.’
UNABLE	‘I cannot comply with your request, instruction, or clearance.’
WILCO	(<i>Abbreviation for ‘will comply’</i>) ‘I understand your message and will comply with it.’
WORDS TWICE	a) <i>As a request:</i> ‘Communication is difficult. Please send every word, or group of words, twice.’ b) <i>As information:</i> ‘Since communication is difficult, every word, or group of words, in this message will be sent twice.’

◇ Conditional Clearance

Conditional clearances, such as 'BEHIND LANDING AIRCRAFT' or 'AFTER DEPARTING AIRCRAFT', shall not be used for movements affecting the active runway(s), except when the aircraft or vehicles concerned are seen by the appropriate controller and pilot. The aircraft or vehicle causing the condition in the clearance issued shall pass in front of the other aircraft. A conditional clearance shall be given in the following order and consists of:

- the call sign;
- the condition;
- the clearance; and
- a brief repetition of the condition.

RTF Conditional Clearance

1.

	S5-DBS, report Seneca on final in sight
	Seneca in sight, S5-DBS
	S5-DBS, behind the landing Seneca, line up behind
	behind the landing Seneca, line up behind, S5-DBS

2.

	S-GI, report departing Cessna in sight
	Cessna in sight, S-GI
	S-GI, after departing Cessna has passed, runway 14, cleared to land, wind calm
	after departing Cessna has passed, runway 14, cleared to land, S-GI



◇ Categories of messages

The categories of messages handled by the aeronautical mobile service, and the order of priority in the establishment of communications and the transmission of messages shall be in accordance with the Table 5.

Table 5

<i>Message category and radiotelephony order of priority signal</i>	<i>Radiotelephony signal</i>
1. Distress calls, distress messages and distress traffic	MAYDAY
2. Urgency messages, including messages preceded by the medical transport signal	PAN PAN or PAN PAN MEDICAL
3. Communications related to direction finding	—
4. Flight safety messages*	—
5. Meteorological messages	—
6. Flight regularity messages	—

** Flight safety messages include movement and control messages, messages sent by an aircraft operator or by an aircraft and meteorological advice of immediate concern to an aircraft.*

◇ Test transmissions

The test transmission shall follow the format shown in the example on page 12. It includes identification of the station being called, identification of the station calling, the words 'RADIO CHECK' and the frequency being used. The readability of the station making the test transmission is assessed in accordance with the following scale:

1. Unreadable
2. Readable now and then
3. Readable but with difficulty
4. Readable
5. Perfectly readable

◇ Clarification of instructions and corrections

If the pilot does not fully understand the instructions given, or they are inconsistent with his request, the pilot asks the controller to repeat the message using the phrase 'SAY AGAIN'. When an error has been made in transmission, the word 'CORRECTION' shall be spoken, the last correct group or phrase repeated, and then the correct version transmitted.

◇ Use of blind transmission

When an aircraft fails to establish contact on the designated channel(s), and fails to establish communication with the ATS unit(s), or other aircraft, the aircraft shall transmit its message twice preceded by the phrase '*TRANSMITTING BLIND*'. When an aircraft is unable to establish communication due to receiver failure, it shall transmit reports at the scheduled times, or positions, on the channel in use preceded by the phrase '*TRANSMITTING BLIND DUE TO RECEIVER FAILURE*'.

◇ Establishing and continuing communication

Full radiotelephony call signs shall always be used when establishing communication. Aircraft shall start their call by the designation of the station called, followed by the designation of the station calling.

The reply to the above calls shall use the call sign of the station calling, followed by the call sign of the station answering, which shall be considered an invitation to proceed with transmission.

Communications shall begin with a call and a reply when it is desired to establish contact, except that, when it is certain that the station called will receive the call, the calling station may transmit the message, without waiting for a reply from the station called.

Once satisfactory communication has been established, the abbreviated call signs shall be used. The pilot shall use the shortened call sign when addressed in this manner by the controller.

◇ Placing of call signs

Once satisfactory communication has been established, the message is normally prefixed with the aircraft call sign. However, when the pilot needs to read back an instruction or important information, he places the call sign at the end of the message.

◇ Reporting

Aircraft equipped with suitable two-way radio-communications shall report during the period 20 to 40 minutes to indicate that the flight is progressing according to plan. Such report to comprise identification of the aircraft and the words '*OPERATIONS NORMAL*'.

Departure Phraseology

◆ Departure from an aerodrome with ATC

This section provides examples of the RTF typically used by a pilot departing from a controlled aerodrome. Pilots need to be familiar with the type of air traffic control service provided at each aerodrome and working hours of the ATC service.

RTF Engine start-up and radio check

	Portorož Tower S5-DAA, radio check 115,15
	S5-DAA Portorož Tower, read you 5
	S5-DAA, request departure information
	S-AA, runway 33, wind 090 degrees 6 knots, QNH 1014, temperature 5, dew point 3, clouds scattered at 2000 feet
	runway 33, QNH 1014, S-AA

◆ Automatic Terminal Information Service (ATIS)

At aerodromes where departure information is broadcast on an ATIS, the request for departure information is omitted. The pilot acknowledges receipt of the ATIS information by including the ATIS identifying letter in the request for taxi.

◆ Taxi instructions

All taxi instructions contain a limit which represents the point at which the pilot must stop unless a permission to proceed is given. Taxi instructions are not a permission to enter a runway or a clearance for take-off. Sometimes the controller may use the additional phrase 'HOLD SHORT (OF)' to stress the limit. Taxi instructions may be complicated. Writing them down whenever possible helps to prevent runway incursions.

RTF Taxiing

1.

	Maribor Approach S5-DBS, main apron, information R, request taxi for VFR flight to Lesce
	S-BS Maribor Approach, taxi to holding point A, runway 14, QNH 1002, report ready for departure
	taxiing to holding point A, runway 14, QNH 1002, wilco, S-BS

2.

	Ljubljana Tower S5-DAT, position G, information C, request detailed taxi instructions
	S-AT Ljubljana Tower, taxi to holding point runway 30 via T, A and K, QNH 1003, report ready for departure
	taxiing to holding point runway 30 via T, A and K, QNH 1003, wilco, S-AT

Important phrases (taxiing)



start up at *(time)*
 taxi to holding point runway *(number)*
 taxi via *(taxiways)*
 cross runway
 hold short of runway *(number)*
 expedite taxi
 line up
 hold position



request start up
 request taxi
 request detailed taxi instructions
 request cross runway
 runway vacated
 expediting taxi
 lining up
 holding position



◇ Clearance for take-off

In relation to runway movements, the word 'CLEARED' is only used in connection with a clearance to take-off or land. For other RTF exchanges, words such as 'cross', 'departure' and 'approved' should be used. In addition, the word take-off shall be used in the take-off clearance or its cancellation. At other times, pilot should use the terms 'departure' and 'airborne'. If there is conflicting traffic, the controller may instruct the pilot to 'HOLD POSITION'. This instruction needs to be acknowledged by the pilot with the phrase 'HOLDING'.

RTF Take-off

1. Maribor

	S-BS, ready for departure
	S-BS, line up and wait
	lining up and waiting, S-BS
	S-BS, runway 14 cleared for take-off, wind 120 degrees 6 knots, after departure turn right to MS1, climb to 3500 feet, report MS1
	runway 14 cleared for take-off, wind 120 degrees 6 knots, after departure turn right to MS1, climb to 3500 feet, wilco, S-BS

2. Ljubljana

	S-AT, ready for departure
	S-AT, line up runway 12, cleared for take-off, wind 090 degrees 6 knots, after departure turn right to S3, climb to 2500 feet
	line up runway 12, cleared for take-off, turn right to S3, climb to 2500 feet, S-AT
	S-AT, hold position, I say again, hold position, obstacle on runway 12
	holding position, S-AT

3. Portorož

	S-EW, ready for departure
	S-EW line up runway 33, cleared for take-off, after departure turn right to PE2, climb to 3000 feet, report PE1
	line up runway 33, cleared for take-off, after departure turn right to PE2, climb to 3000 feet, wilco, S-EW

Important phrases (take-off)

	report when ready [for departure]? Are you ready [for departure] line up runway (<i>number</i>) line up [and wait] runway (<i>number</i>) cleared for take-off [after departure] turn right (or left or climb) report airborne continue runway heading		ready for departure ready lining up runway (<i>number</i>) lining up and waiting runway (<i>number</i>) cleared for take-off re request right (<i>or left</i>) turn airborne
---	---	---	--



◇ Changing frequency

Pilots will normally be advised by a ground station to change from one radio frequency to another. In absence of such advice, the pilot has to notify the ground station before changing frequency, using the phrase '*REQUEST CHANGE TO (ATS unit)*'. In controlled airspace, the pilot must get permission from the ATC before changing frequency.

RTF Departure

	S-AT, airborne at 08, report S3 at 2500 feet
	wilco, climbing to 2500 feet, S-AT
	S-AT, passing S3 at 43
	S-AT, contact Ljubljana Information 118,475
	118,475, S-AT
	Ljubljana Information S5-DAT, passing S3 at 43, to Novo mesto
	S-AT, QNH 1012, continue visually to Novo mesto, report before changing to local frequency
	QNH 1012, continuing visually to Novo mesto, wilco, S-AT

Important phrases (departure, frequency change)

	frequency change approved		request change to (frequency)
	contact (unit call sign, frequency)		
	stand-by for (unit call sign, frequency)		
	monitor (station, frequency)		monitoring (frequency)
	when ready contact		
	remain this frequency		



En-route Phraseology

◆ Initial call

When establishing contact, the initial call consists of the call sign of the unit the pilot is calling followed by his own call sign. The ground unit will reply with the call sign of the plane followed by their own. Then the pilot informs the ground station of his position, intentions and service required. Reports should be transmitted in the standard order:

- Aircraft call sign (and type if necessary)
- Position (and time over)
- Flight level or altitude
- Next position and time over and following significant point
- Additional information (e.g.: purpose at the aerodrome)

The pilot shall report position over important reporting points. Position reporting may be omitted if flight progress data is available from other sources such as radar, or if requested by the controller (e.g.: 'OMIT POSITION REPORTING').

RTF Position Reporting

	Ljubljana Information S5-DEW
	S5-DEW Ljubljana Information
	S5-DEW overhead Velike Lašče at 24, passing 4500 feet, climbing to 6500 feet, estimating ILB at 40, PE1 next
	S-EW report three minutes before PE1
	wilco, S-EW

◆ Identification by transponder

Use of the transponder helps the controller and pilots of other aircraft fitted with airborne collision avoidance system (ACAS). If an aircraft carries a serviceable transponder, the pilot shall operate it at all times during flight. The pilot shall select codes as instructed by the controller. In absence of such instructions, the pilot selects the code 2000.

To indicate the state of emergency, the pilot selects Code 7700. Code 7600 is selected to indicate a state of radio-communication failure and Code 7500 is reserved for unlawful interference.



SQUAWK
SQUAWK

Squawks, or squawking has its origins in The Second World War, when the Identification Friend or Foe systems were first installed. This IFF system was codenamed parrot during the war and hence the modern term "squawk."

RTF Squawk

	S-AA, advise transponder capability
	transponder Charlie, S-AA
	S-AA, squawk 6503
	squawk 6503, S-AA

Important phrases (transponder)

	advise transponder capability reset squawk (code) for departure squawk (code) confirm squawk (code) squawk ident / MAYDAY		transponder (as in the flight plan) resetting (mode, code) squawk (code) squawking (code) negative transponder
---	---	---	--

◇ Traffic information and avoiding action

VFR flights should maintain their own separation. They are assisted by ATC who provide information on other traffic in their vicinity and avoiding action. Information on other traffic is given in the form of a relative bearing of the conflicting traffic in terms of 12-hour clock, distance from the conflicting traffic and its direction followed by other related information. The pilot acknowledges the traffic information with the phrase 'LOOKING OUT'. When the pilot locates the other traffic, he advises the controller using the phrase 'TRAFFIC IN SIGHT'. If he cannot locate the other traffic, he uses the phrase 'NEGATIVE CONTACT'.

RTF Traffic information

	S-AB, light aircraft 11 o'clock, crossing left to right at 4500 feet
	looking out, S-AB
	S-AA, light aircraft 2 o'clock, crossing right to left at 4000 feet
	S-AA, traffic in sight

Aviation humour:



'Traffic is a light aircraft, 9 o'clock, range 4 meters, same direction, same altitude'

Important phrases (traffic information)



traffic (number) o'clock (distance, direction) fast moving, closing, opposite direction, crossing left to right
Do you want vectors?
clear of traffic



traffic in sight
looking out
negative contact
request vectors

✦ Flight plans

When the pilot files the flight plan during flight, he should contact flight information service and transmit data in the flight plan format.



Ljubljana Information S5-DAA, request file flight plan



S5-DAA Ljubljana Information, ready to copy

When the pilot is landing at an aerodrome which is not his planned destination, he must close the flight plan to avoid unnecessary search and rescue activity. The pilot may do this by radio before landing or by telephone after landing.

RTF Closing a flight plan



Ljubljana Information S5-DJJ, airport Lesce in sight, changing to local frequency, request close flight plan



S5-DJJ Ljubljana Information, flight plan closed at 40

If the weather permits, the pilot may change an IFR flight to VFR flight.

RTF Changing from IFR to VFR



Ljubljana Radar S5-DAA, cancelling my IFR flight, continuing VFR to S1



S5-DAA Ljubljana Radar, IFR flight cancelled at 25, continue to S1, contact Ljubljana Information 118,475

✦ Weather information

The pilot may obtain weather information in the form of reports, forecasts and warnings on ATIS or VOLMET frequency, from a tower controller or flight information services operator.

RTF Requesting weather data



Maribor Tower S5-DBS, request present weather



S5-DBS Maribor Tower, wind 120 degrees 5 knots, clouds scattered 2000 feet, temperature 5, dew point 3, QNH 1023



QNH 1023, S5-DBS

◇ Runway condition

Runway condition can be included in departure or arrival information, it can, however, be also transmitted to the pilot at the appropriate time.

RTF *Runway condition*

	S5-DSC, runway 30 cleared to land, just landed Cessna reported braking action poor
	runway 30 cleared to land, roger, S5-DSC

Important phrases (weather information and runway condition)

	temperature -2, dew point 0 wind gusting at (<i>number of knots</i>) moderate turbulence	runway (<i>number</i>) condition (<i>condition</i>) landing surface (<i>condition</i>) caution construction works/obstacle runway wet/covered with snow braking action good/medium/poor
---	--	---

◇ Weather avoidance

Weather does not always do what the forecasts predict and it can deteriorate very fast. When the pilot is receiving ATC service, he should advise the controller of the situation and request an alternative level or route.

RTF *Unable to maintain VMC*

	S5-DAA, unable to maintain VMC due clouds, request turn left to Ptuj
---	--

◇ Crossing controlled airspace

If the pilot intends to fly through controlled airspace, he needs to obtain clearance to enter it and has to follow ATC instructions. The request needs to be made in good time (at least 5 minutes before), and should include the position and time of entering the controlled airspace.

RTF *Crossing of controlled airspace*

	Maribor Approach S5-DAS
	S5-DAS Maribor Approach
	S5-DAS, VFR from Murska Sobota to Celje, 15 miles north of Maribor, climbing to 2500 feet, request climb to 4000 feet and cross controlled airspace from ME1 to MS3
	S-AS, maintain 2500 feet, report over ME1
	S-AS, over ME1, 2500 feet
	S-AS, report over MS3, climb to 4000 feet
	climbing to 4000 feet, wilco, S-AS
	S-AS, over MS3, 4000 feet
	S-AS, contact Ljubljana Information 118,475

Arrival Phraseology

◇ First call

The pilot should make the initial call in sufficient time to allow a planned entry into the circuit, Aerodrome Traffic Zone or controlled airspace. If the aerodrome provides ATIS, the pilot acknowledges the receipt by including the ATIS code in the initial call. The controller gives the pilot appropriate instructions.

RTF Entering the controlled airspace

	Ljubljana Information S5-DBS
	S5-DBS Ljubljana Information
	S5-DBS, VFR from Maribor to Ljubljana, altitude 4000 feet, estimating NE at 24
	S-BS, report 3 minutes before NE, QNH 1012
	QNH 1012, wilco, S-BS
	S-BS, 3 minutes before NE
	S-BS, contact Ljubljana tower 118.0
	118.0, S-BS

◇ Straight-in-approach

Depending on prevailing traffic condition and the direction from which an aircraft is arriving, the controller may give the pilot a straight-in-approach.

RTF Straight-in-approach and landing

	Ljubljana Tower S5-DJP, passing W1 at 4000 feet, for landing
	S5-DJP Ljubljana Tower, cleared straight-in-approach runway 12, wind 140 degrees 8 knots, QNH 1013, report final
	cleared straight-in-approach runway 12, QNH 1013, will report final, S5-DJP
	S5-DJP, final runway 12
	S-JP, runway 12 cleared to land, wind 140 degrees 8 knots
	runway 12 cleared to land, S-JP

Important phrases (approach and landing)




report runway (lights, field) in sight
hold visual over / between and.....
orbit right/left
(due traffic, spacing, delay)
cleared (*type of approach*) runway
(*number*)
cleared to land



request landing instructions
runway in sight
request straight-in-approach

◇ Traffic circuit and landing

The pilot should make the request for instructions to join the traffic circuit in good time. Having joined the traffic circuit, the pilot makes routine reports. The compulsory reports are downwind and final, other reports are made on request. The examples in this section refer to the left-hand pattern. When the traffic circuit is in a right traffic pattern, IT should be specified, e.g. 'REPORT RIGHT DOWNWIND'. Left-hand patterns don't have to be specified.

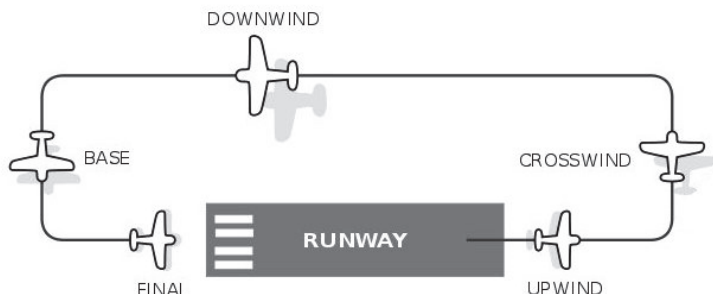

Picture : Left-hand pattern

RTF Joining the circuit and landing

✈	Portorož Approach S5-DMN, over PE1, 3000 feet, for landing
🗼	S5-DMN Portorož Approach, QNH 1021, runway in use 33, continue to the airport, descend visually to 1000 feet, report runway in sight
✈	QNH 1021, runway in use 33, continuing to the airport, descending visually to 1000 feet, wilco, S5-DMN
✈	S5-DMN, runway in sight
🗼	S-MN, number 2, traffic is Piper Tomahawk on final, runway 33, report base
✈	traffic in sight, will report base, S-MN
✈	S-MN, base
🗼	S-MN, runway 33, cleared to land, wind 300 degrees, 8 knots gusting at 12
✈	runway 33, cleared to land, S-MN

Important phrases (joining the circuit and landing)

🗼	join [direction of circuit] (position in circuit) (runway)	✈	(position)(level) for landing downwind/final
	report downwind/base/final		
	extend downwind		
	make short/long approach		
	number... follow (A/C type and position)		
	runway (number) cleared to land		
	vacate (via) / report (runway) vacated		

RTF Landing and vacating runway

	S-MN, vacate right, report runway vacated, continue to general aviation apron via taxiways A and T
	vacating right, continuing to general aviation apron via taxiways A and T, wilco, S-MN
	S-MN, runway vacated

◇ Missed approach

To avert an unsafe situation, the controller may instruct the pilot to perform a missed approach. The pilot reads back the instruction and continues into the traffic circuit if no other instruction is given. The manoeuvre may be initiated by the pilot who informs the controller about it using the phrase *'GOING AROUND'*.

RTF Missed approach

	S-JP, go around, vehicle on the runway
	going around, S-JP

◇ Training

For training purposes, the pilot might request an approach along or parallel to the runway, without stopping.

If the pilot wishes to land and take-off again, he may ask for a touch-and-go. However, if the pilot wants to perform a normal landing and then take-off again, he requests a stop-and-go. When he finishes the training, he requests a full-stop.

RTF Touch-and-go

	S-AT, downwind, request touch-and-go
	S-AT, expect touch-and-go, report final runway 14
	will report final, S-AT
	S-AT, final runway 14
	S-AT, runway 14, cleared touch-and-go, wind 120 degrees 5 knots
	runway 14 cleared touch-and-go, S-AT

Important phrases (training)

	cleared low approach runway (<i>number</i>)		request low approach (<i>reasons</i>)
	expect touch-and-go		request touch-and-go
	make full stop		request stop-and-go
	cleared low pass		request low pass
			request full stop

Distress message

The word 'MAYDAY' announces a distress message that should be sent by an aircraft experiencing a condition of being threatened by serious and/or imminent danger and of requiring immediate assistance. A distress message should normally be made on the frequency used at the time. The pilot may change to the emergency frequency 121.500 MHz or another frequency if better assistance can be provided on these frequencies.

Distress messages shall consist of as many as possible of the following elements spoken distinctly and, if possible, in the following order:

Content	Example
distress signal	MAYDAY MAYDAY MAYDAY
the name of the station addressed	Maribor Approach
the identification of the aircraft	S5-DAT
the nature of the distress condition	engine shutdown
the intention of the pilot-in-command	landing at airfield Cerkevjak
position, level and heading	overhead Lenart, 4500 feet

The ATS unit addressed by an aircraft in distress acknowledges the receipt of the distress message with the phrase 'ROGER MAYDAY'. The unit takes control of the communication or clearly transfers that responsibility.

The ATS unit in control of distress traffic may impose radio silence, either on all stations in the area or on any station which interferes with the distress traffic, using the phrase 'STOP TRANSMITTING, MAYDAY'.



All stations/S5-DBS Ljubljana Approach, stop transmitting, MAYDAY

When an aircraft is no longer in distress, it shall transmit a message cancelling the distress condition.



S5-DAT Maribor Tower, cancel distress, fire extinguished

The controller terminates the distress communication and silence conditions by transmitting a message, including the words 'DISTRESS TRAFFIC ENDED'.

Distress situations

 engine shutdown / on fire / losing power short of fuel / fuel severe icing problem	lost [in cloud, fog] technical trouble electrical failure smoke in the cockpit
--	---

Urgency message

An aircraft sends out the urgency message if she wishes to give notice of a condition, concerning the safety of an aircraft or other vehicle, or of some person on board or within sight, but which does not require immediate assistance. The pilot starts the message with the word 'PAN PAN', preferably spoken three times. The urgency message shall be made on the frequency in use at the time and shall contain the following elements:

Content	Example
urgency signal	PAN PAN PAN PAN PAN PAN
the name of the station addressed	Portorož Approach
the identification of the aircraft	S5-PEA
the nature of the urgency condition	passenger with health problems
the intention of the pilot-in-command	request immediate landing
position, level and heading	overhead Piran, at 2000 feet

The ATS unit addressed by an aircraft acknowledges the receipt of the urgency message and, if necessary, exercises control of communications.

Urgency situations

 bird strike minor technical failure	pilot's health trouble passenger's health trouble
--	--



A hawk with a mouse caught by a web camera at Aerodrome Ljubljana

Helicopter Operations

Based on an appropriate permission, helicopters may be able to land and take-off from areas of the aerodrome other than the runway. Therefore, helicopter pilots need to inform the controller which area of the aerodrome they intend to use. When the take-off is made from the runway, the phraseology in the example below should be used.

RTF Air taxiing

	Ljubljana Tower S5-HNM, on military apron, Information C, request air-taxiing
	S-NM Ljubljana Tower, air-taxi to holding point runway 30 via F, QNH 1003, report ready for departure
	air-taxi to holding point runway 30 via F, QNH 1003, wilco, S-NM

When the pilot takes off from another point on the manoeuvring area, the area needs to be specified in the transmission, e.g. '*area*', *READY FOR DEPARTURE*'.

RTF Departure

	Ljubljana Tower S5-HNM, request departure instructions from present position to Kredarica
	S-NM Ljubljana Tower, cleared for take-off, after departure turn right, direction 30, climb to 6000 feet
	cleared for take-off, after departure turn right, direction 30, climb to 6000 feet, S-NM

Important phrases (departure)



air-taxi to holding point runway
(number) via (route)
air-taxi to (location)
air-taxi via (route) to (location)
caution dust, blowing snow, debris



request air-taxiing from ... to
request departure instructions from (take
off area) to



Unattended Aerodromes

◇ Operations outside the hours of ATS

At some aerodromes operations may take place outside working hours of an air traffic services unit. To improve safety at such aerodromes, the pilot should broadcast information on his position and intentions to other aircraft that may be operating on or in the vicinity of the aerodrome. Besides position and intentions, his transmissions shall include the name of the aerodrome and the runway he intends to use.

RTF Taxiing and departure

	Aerodrome Novo mesto, S5-DBK, taxiing to runway 23
	Aerodrome Novo mesto, S5-DBK, lining up runway 23 for departure
	Aerodrome Novo mesto, S5-DBK, airborne, departing north



◇ Arrival Transmissions

The initial call should be made 5 minutes before arriving at the aerodrome. The examples below show arrival transmissions relating to a normal traffic pattern. Pilots may adapt calls as necessary depending on the situation and any other traffic in the vicinity.

RTF Arrival

	Aerodrome Novo mesto, S5-DBK, at 2000 feet, joining right-hand circuit runway 23
	Aerodrome Novo mesto, S5-DBK, right downwind, runway 23
	Aerodrome Novo mesto, S5-DBK, final runway 23

Aerodromes with a flight information service officer

This section provides examples of the RTF used by a pilot at an aerodrome with a flight information service officer on duty. The AFIS officer provides information necessary for the safe and efficient operation of aerodrome traffic.

✧ Taxiing and departure

The mobile station operator provides information regarding taxiing and occupation of the runway.

RTF Taxiing and take-off

	Aerodrome Lesce S5-DJJ, good day
	S-JJ, Aerodrome Lesce, good day
	S-JJ, request taxi for work in zone Vrba
	S-JJ, taxi to runway 14, wind 160 degrees 2 knots, report ready for departure
	taxiing to runway 14, wilco, S-JJ
	S-JJ, holding point runway 14, ready for departure
	S-JJ, runway 14 free for departure, wind 100 degrees 3 knots, report overhead Vrba
	runway 14 free for departure, wilco, S-JJ

✧ Training

For training purposes, the pilot may ask for permission to fly in the traffic circuit or to perform an approach along or parallel to the runway. He can further ask for a touch-and-go, stop-and-go, flying in the zone or engine failure imitation.

RTF Training (traffic circuit)

	S5-DJJ, ready for departure, traffic patterns
	S-JJ, runway free for departure, left-hand pattern, report downwind
	left-hand pattern, will report downwind, S-JJ
	S-JJ, downwind, runway 14
	S-JJ, report final
	will report final, S-JJ
	S-JJ, final runway 14, for touch-and-go
	S-JJ, runway 14 free for touch-and-go, wind 130 degrees 2 knots
	runway 14 free for touch-and-go, S-JJ

RTF Training (engine failure imitation)

	Lesce S-JJ, left-hand traffic circuit, for engine failure imitation
	S-JJ, engine failure imitation approved, report one minute before imitation
	engine failure imitation approved, wilco, S-JJ
	Lesce S-JJ, one minute before start of imitation
	S-JJ, runway 14, land at own discretion, wind 130 degrees 2 knots
	runway 14, land at own discretion, S-JJ

◇ Approach


The aeronautical station operator provides information for joining the traffic circuit and landing. He does not give instructions and clearances.

RTF Joining the circuit and landing

	Aerodrome Lesce S5-DJJ, good morning
	S-JJ Aerodrome Lesce, good morning
	S-JJ, over W2, altitude 3000 feet, for landing
	S-JJ, join left-hand circuit, runway 14, report downwind
	join left-hand circuit, runway 14, will report downwind, S-JJ
	S-JJ, downwind
	S-JJ, report final runway 14
	will report final, S-JJ
	S5-DJJ, final runway 14
	S-JJ, runway 14 free for landing, wind 100 degrees 2 knots
	runway 14 free for landing, S-JJ



Gliding

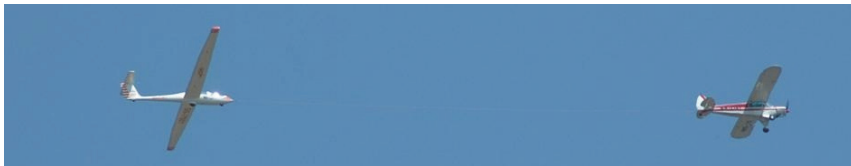

◆ Departure

RTF Take-off and rope dropping

✈	Bovec Blanik 10, radio check 123.500
📡	Blanik 10, read you 4
✈	Blanik 10, ready for departure
📡	Blanik 10, roger
📡	S-AR, runway free for departure
🛩	runway free for departure, S-AR
✈	Bovec Blanik 10, disconnected
🛩	Blanik 10, roger
🛩	S-AR, for dropping (rope)
📡	S-AR, continue runway 07, for dropping
🛩	S-AR, rope dropped (retracted)
📡	S-AR, (rope dropped) report final runway 25
🛩	S-AR, final runway 25
📡	S-AR, runway 25, land at own discretion, wind 120 degrees 5 knots
🛩	runway 25, land at own discretion, S-AR

◆ Sailing

RTF Sailing

📡	Cirus 16 Podpeč, report position
✈	Cirus 16, over Krvavec, 4000 meters, climbing 3 meters per second
📡	Cirus 16

◇ Approach

RTF Approach

✈	Podpeč Blanik 10, overhead Grintavec, at 2000 m, on course to Podpeč
📻	Blanik 10, contact Ljubljana Approach 118.750 for crossing TMA Ljubljana
✈	118.750, Blanik 10
✈	Ljubljana Approach Blanik 10, over Krvavec, at 1800 meters, request crossing TMA Ljubljana
📻	Blanik 10, continue direct to S3, call over airport Ljubljana
✈	continuing direct to S3, wilco, Blanik 10
✈	Blanik 10, over airport Ljubljana, at 1700 meters, on course to S3
📻	Blanik 10, report passing S3, caution light aircraft approaching head on
✈	wilco, light aircraft in sight, Blanik 10
✈	Blanik 10 over S3, at 1500 meters
📻	Blanik 10, contact Podpeč 123.500
✈	123.500, Blanik 10
✈	Podpeč Blanik 10, zone Podpeč, gear down and locked
📻	Blanik 10 Podpeč, runway 26 free for landing, land on T
✈	runway 26 free for landing, wilco, Blanik 10



Ballooning



The balloon pilot makes contact with air traffic control after take-off. He reports his position, height and flight direction. If the altitude changes during the flight, the change is reported to the controller. The controller states the conditions under which the pilot may continue his flight, and instructs the pilot to report when he will start the landing manoeuvre.

RTF Airborne

-  Ljubljana Information S5-ORP, airborne at Barje at 15, intended altitude 2000 feet, direction lg
-  S5-ORP Ljubljana Information, roger, QNH 1002, Squawk 7001, report before landing
-  QNH 1002, Squawk 7001, wilco, S5-ORP

RTF Position reporting

-  S5-ORP Ljubljana Information, report position
-  Ljubljana Information S5-ORP, over Matena, altitude 2000 feet, direction east

RTF Change of altitude

-  Ljubljana Information S5-ORP, request level change
-  S-RP Ljubljana Information, climb to 4000 feet approved
-  climb to 4000 feet approved, S-RP

RTF Landing

-  Ljubljana Information S5-ORP, starting landing procedure
-  S-RP Ljubljana Information, roger, report after landing. Do you request close flight plan?
-  wilco, request close flight plan, S-RP

or

-  wilco, will inform you after landing over the phone, S-RP

Complete flights

1. *RTF* A cross-country flight to Ronchi departing from Portorož

	S-BS, runway 15 cleared for take-off, wind 120 degrees 6 knots, after departure turn left, climb to 2000 feet, report PN1
	runway 15 cleared for take-off, after departure turn left, climb to 2000 feet, wilco, S-BS
	S-BS, over PN1, 2000 feet
	S-BS, continue direct to VICKY, climb to 2500 feet
	continue direct to VICKY, climbing to 2500 feet, S-BS
	S-BS, overhead VICKY, 2500 feet
	S-BS, contact Ronchi Approach 119,15
	119,15, S-BS
	Ronchi Approach, S5-BS, passing VICKY, at 2500 feet, proceeding to GRADO, Ronchi next, for touch-and-go
	S-BS, sr, sh..., fdvn
	Ronchi Approach, S5-BS, say again, unreadable
	S5-BS, Ronchi Approach, proceed to GRADO, maintain 2500 feet, QNH 1013, report GRADO
	proceed to GRADO, maintain 2500 feet, QNH 1013, wilco, S-BS
	S-BS, overhead GRADO
	S-BS, contact Ronchi Tower 130,2
	130,2, S-BS
	Ronchi Tower, S5-DBS, passing GRADO, for touch-and-go
	S-BS Ronchi Tower, join left base runway 09, report final
	joining left base runway 09, will report final, S-BS
	S-BS, final
	S-BS, runway 09, cleared touch-and-go, wind 070 degrees 8 knots, after touch-and-go proceed to RIFEN, climb to 2500 feet, report RIFEN
	runway 09, cleared touch-and-go, after touch-and-go proceed to RIFEN, climb to 2500 feet, willco, S-BS
	Ronchi Tower, S5-DBS, passing RIFEN at 2500 feet
	S-BS, Contact Ljubljana Information 118,475



2. RTF A cross-country flight to Venice departing from Ljubljana

	Ljubljana Tower S5-DAA, dober dan.
	S5-DAA Ljubljana Tower, dober dan, go ahead
	position G9, request taxi for a VFR flight, via S3, S5-DAA.
	S-AA, stand-by, traffic entering GA apron.
	S-AA
...	
	9A-DVW, expedite via RWY A to GA apron.
	expediting, 9A-DVW.
...	
	S-AA, taxi to holding point F, via TWY T and A, QNH 999.
	taxiing to holding point F, via TWY T and A, QNH 999, S-AA.
...	
	S-AA, ready for departure.
	S-AA, RWY 12, cleared for take-off, wind 140 degrees, 8 knots, after departure turn right to S3, climb to 2500 feet, squawk 3363
	RWY 12, cleared for take-off, after departure turn right to S3, climb to 2500 feet, squawk 3363, S-AA
	S-AA, negative, squawk 3363.
	squawk 3363, S-AA
...	
	S-AA, over S3, 2500 feet
	S-AA, contact Ljubljana Information, 118,475
	118,475, S-AA
	Ljubljana Information, S5-DAA, dober dan
	S-AA Ljubljana Information, dober dan
	over S3, estimating S1 at 53', RIFEN next, request 6500 feet
	S-AA, maintain 1000 feet AGL, report abeam Logatec
	maintaining 1000 feet AGL, wilco, S-AA
...	
	S-AA, abeam Logatec
	S-AA, 6500 feet approved, report estimated time over RIFEN
	climbing to 6500 feet, estimating RIFEN at 15 next hour, S-AA
	S-AA, roger
...	
	S-AA Padova, request, 3000 feet over RIFEN, report 2 minutes before
	descending to cross RIFEN at 3000 feet, wilco, S-AA.
...	
	S-AA, 2 minutes to RIFEN
	S-AA, contact Padova Information, 124,150

✈	124,150, S-AA.
✈	Padova Information S5-DAA, good day.
🗼	S-AA Padova Information, good day, QNH 1000, report Grado.
✈	QNH 1000, wilco, S-AA.
...	
✈	S-AA, overhead Grado.
🗼	S-AA, descend to 1000 feet AGL, report PZE1
✈	descending to 1000 feet AGL, wilco, S-AA
✈	S-AA, over PZE1
🗼	S-AA, switch to Lido airport information, 118,525
✈	118,525, S-AA
✈	Lido S5-DAA, overhead PZE1, 1000 feet AGL.
🗼	S-AA, Lido, good day, runway in use 05, report right downwind, traffic is Cessna, turning base
✈	runway 05, will report right downwind, looking out, S-AA
...	
✈	S-AA, right downwind RWY 05
🗼	S-AA, report final RWY 05
✈	will report final, RWY 05, S-AA
✈	I-MISA, vacating left, to the apron.
🗼	I-MISA, good day
🗼	S-AA, RWY 05, wind 110 degrees, 5 knots, land at own discretion, vacate convenient left.
✈	RWY 05, landing at own discretion, wilco, S-AA.
🗼	S-AA, continue to parking by the windsock, good day.
✈	wilco, S-AA, good day.



3. RTF A cross-country flight to Gyor departing from Maribor

	Maribor Approach S5-DMG, on Letalski center, dober dan
	S5-DMG Maribor Approach, dober dan, go ahead
	S5-DMG, request taxi for VFR route to Gyor
	S-MG, QNH 1030, line up runway 14, squawk 7003, report ready for departure
	QNH 1030, lining up runway 14, squawk 7003, ready for departure, S-MG
	S-MG cleared to destination, after departure turn left to ME2, climb to 3500 feet
	cleared to destination, after departure left to ME2, climb to 3500 feet, S-MG
	S-MG correct, runway 14, cleared for take-off
	runway 14, cleared for take-off, S-MG
	S-MG airborne at 20, next report ME2
	willco, S-MG
	Maribor Approach S-MG, over ME2 at time 25, maintaining 3500 feet, estimating DIMLO at time 42
	S-MG report 3 minutes before DIMLO
	willco, S-MG
...	
	Maribor Approach S-MG, 3 minutes before DIMLO
	S-MG contact Budapest info 125.50
	125.50, na svidenje, S-MG
	Adijo
...	
	Budapest Info S5-DMG, overhead DIMLO at time 43, maintaining 3500, Jó napot kívánok, request
	S5-DMG Budapest info, servus, go ahead
	If possible, I would like to cross Papa air base CTR direct Gyor-PER via Panonhalma reporting point, S5-DMG
	S-MG stay on my frequency, coordinating
	roger, S-MG
	S-MG contact PAPA APP 131.25
	131.25, S-MG, szia
	szia
	Papa APP S5-DMG, good afternoon
	SM-G good afternoon, identified, turn 045, maintain 3000 feet
	turning 045, maintaining 3000 feet, S-MG
	S-MG crossing of airfield approved, maintain 3000 feet
	crossing approved, maintaining 3000 feet, S-MG
	S-MG contact Gyor-per, 129.9, Goodbye
	129.9, S-MG, Goodbye
	Gypr-per S5-DMG, Jonapot

	S5-DMG servus, QNH 1028, proceed via Panonhalma to GYR, report reaching
	QNH 1028, willco, S5-DMG
	S5-DMG, overhead GYR
	S5-DMG report long final runway 12
	long final runway 12, S5-DMG
	S5-DMG, land at own discretion, wind 120 degrees 10 knots
	land at own discretion, S5-DMG
	S5-DMG taxi to apron 1 via A
	to apron 1 via A S5-DMG.



Sources:

EGAST and Eurocontrol: *A Guide to Phraseology for General Aviation Pilots in Europe*. - <http://essi.easa.europa.eu/egast/?p=214>, 2010

Kukovec, Alenka: *Letalska frazeologija, How do you read (me)?* - Ljubljana: DIOM, 2010

Commission Implementing Regulation (EU) 2016/1185 of 20 July 2016 amending Implementing Regulation (EU) No 923/2012 as regards the update and completion of the common rules of the air and operational provisions regarding services and procedures in air navigation (SERA Part C) and repealing Regulation (EC) No 730/2006 (Text with EEA relevance)

Doc 4444 - PANS-ATM, Procedures for Navigation Services – Air Traffic Management (16th Edition), Chapter 12, Phraseologies – Montreal: ICAO, 2016

Ljubljana, October 2017

1st Issue

