Setup Serial Com Port

sudo raspi-config

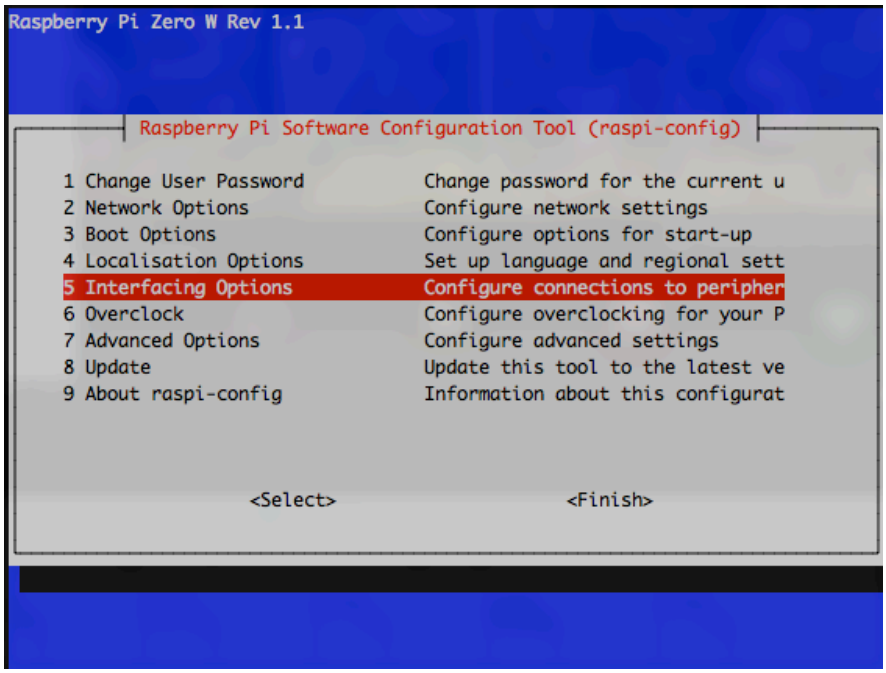

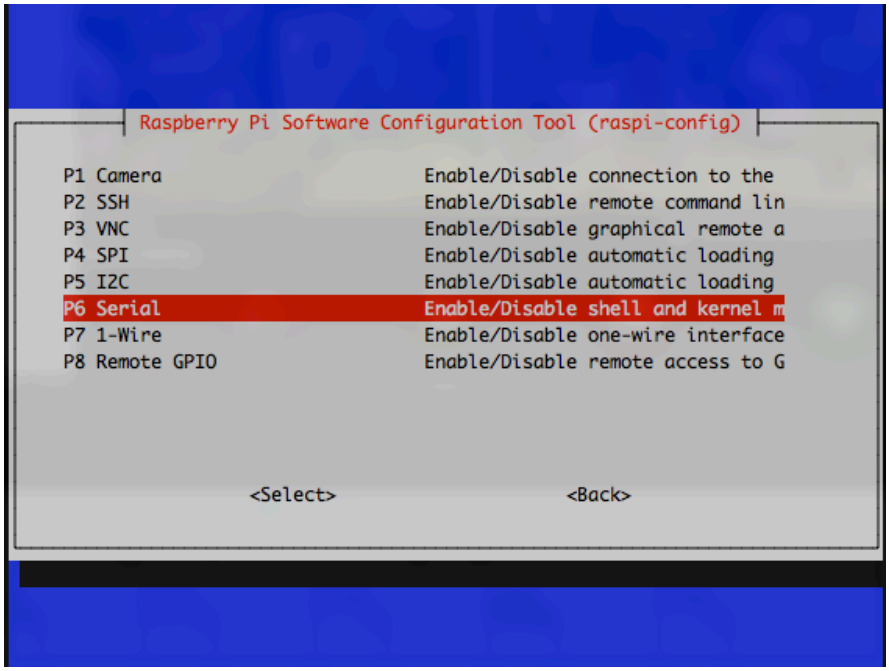

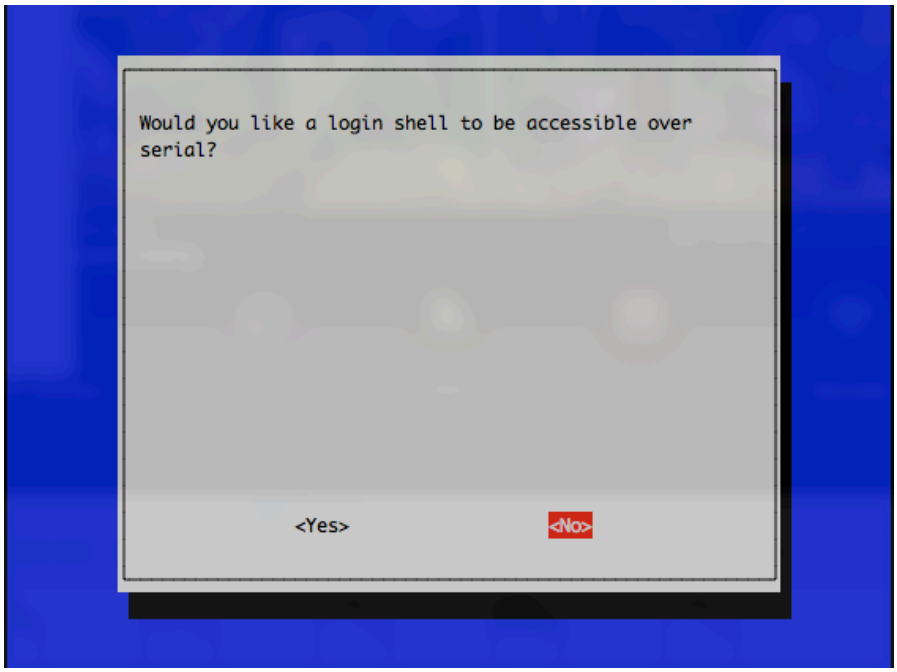
Would you like a login shell to be accessible over serial?
<Yes>
<No>

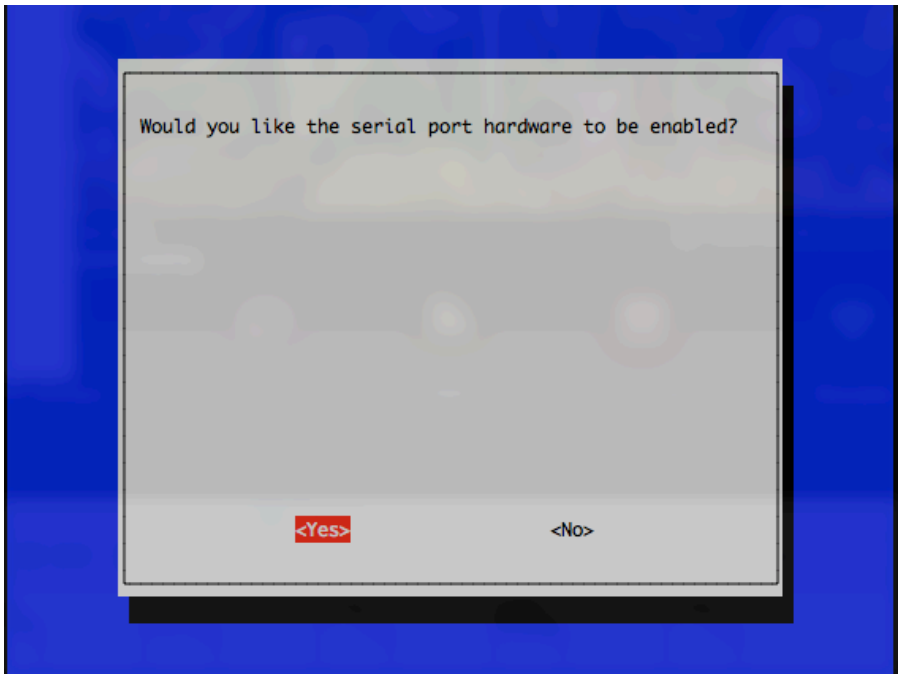
Would you like the serial port hardware to be enabled?
<Yes>
<No>