



VOID

Cyclone 8 V2

User Guide

Contents

1	Safety and Regulations	1
1.1	Important Safety Instructions	1
1.2	Limitations	1
1.3	EC Declaration of Conformity	1
1.4	UKCA Conformity	1
1.5	Warranty Statement	1
1.6	WEEE Directive	1
2	Unpacking and Checking	2
3	About	3
3.1	Welcome	3
3.2	Cyclone 8 V2 Overview	3
3.3	Key Features	3
3.4	Cyclone 8 V2 Specifications	4
3.5	Cyclone 8 V2 Dimensions	5
4	Cable and Wiring	6
4.1	Electrical Safety	6
4.2	Cable Considerations for Fixed Installations	6
4.3	Cyclone 8 V2 Wiring Diagram	6
4.4	Cyclone 8 V2 Gland Connector Wiring	7
4.5	Bias Q1+/Q1.5+/Q2+ Phoenix Wiring	7
4.6	Bias Q3/Q5 NL4 Wiring	8
4.7	Max Parallel Units	8
5	Mounting	9
5.1	Installation Safety	9
5.2	T80 Swivel Bracket Assembly	10
5.3	T80 Swivel Bracket Adjustability	11

5.4	T80 Wall Bracket Assembly	12
5.5	T80 Wall Bracket Adjustability	13
5.6	T80 Ceiling Bracket Assembly	14
5.7	T80 Ceiling Bracket Adjustability	15
5.8	T80 Pole Bracket Assembly	16
5.9	T80 Pole Bracket Adjustability	17
6	Maintenance	18
6.1	Cleaning and Maintenance	18
7	Service	19
7.1	Return Authorisation	19
7.2	Shipping and Packing Considerations	19
8	Appendix	20
8.1	Architectural Specifications	20
8.2	Changelog	20

1.0 Safety and Regulations

1.1 Important safety instructions



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety instructions - read this first

Before using this product, please read and retain these instructions, heed all warnings, and follow all instructions carefully.

1. Do not use this apparatus near water.
2. Clean only with a dry cloth.
3. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
4. Do not install near any heat source such as radiators, heat registers, stoves, or other such apparatus that produce heat.
5. Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
6. Protect power cords from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit the apparatus.
7. Only use attachments and accessories specified by Void Acoustics.
8. Only use with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
9. Unplug the apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. Since the mains power supply cord attachment plug is used to disconnect the device, the plug should always be easily accessible.
12. Void loudspeakers can produce sound levels capable of causing permanent hearing damage from prolonged exposure. The higher the sound level, the less exposure needed to cause such damage. Avoid prolonged exposure to the high sound levels from the loudspeaker.

1.2 Limitations

This guide is provided to help familiarise the user with the loudspeaker system and its accessories. It is not intended to provide comprehensive electrical, fire, mechanical and noise training and is not a substitute for industry-approved training. Nor does this guide absolve the user of their obligation to comply with all relevant safety legislation and codes of practice. While every care has been taken in creating this guide, safety is user-dependent and Void Acoustics Research Ltd cannot guarantee complete safety whenever the system is rigged and operated.

1.3 EC declaration of conformity

For EC Declaration of Conformity please go to:

www.voidacoustics.com/eu-declaration-loudspeakers

1.4 UKCA marking



For details of the UKCA marking go to:

www.voidacoustics.com/uk-declaration-loudspeakers

1.5 Warranty statement

For warranty statement go to:

www.voidacoustics.com/terms-conditions/

1.6 WEEE directive

At the end of its useful life, this product and its components should be disposed of responsibly and recycled wherever possible.



The crossed-out wheeled-bin symbol indicates that this product must not be disposed of with unsorted household waste. Instead, it must be taken to an appropriate collection facility for the recovery and recycling of electrical and electronic equipment. Separating electrical and electronic equipment from other waste helps reduce the amount of waste sent to landfill or incineration and supports the recovery of valuable resources.

Waste electrical and electronic equipment (WEEE) is subject to the Waste Electrical and Electronic Equipment Regulations 2013, as amended. These regulations are intended to reduce the environmental impact of electrical and electronic equipment by promoting its reuse, recovery and recycling.

Void Acoustics Research Ltd supports the responsible disposal and recycling of its electrical and electronic equipment. When disposing of this product, please use an appropriate local WEEE collection or recycling facility and follow the requirements applicable in your country. For information about the appropriate disposal and recycling arrangements in your country, please contact your local authority or authorised recycling facility.

2.0 Unpacking and Checking

All Void Acoustics products are carefully manufactured and thoroughly tested before being despatched. Your dealer will ensure that your Void products are in pristine condition before being forwarded to you but mistakes and accidents can happen.

Before signing for your delivery:

- Inspect your shipment for any signs of contamination, abuse or transit damage as soon as you receive it.
- Check your Void Acoustics delivery fully against your order.
- If your shipment is incomplete or any of its contents are found to be damaged; inform the shipping company and inform your dealer.

When you are removing your Cyclone 8 V2 loudspeaker from its original packaging:

- Cyclone 8 V2 loudspeakers come double boxed and stapled shut; take care when unboxing by removing the staples to avoid injury or damage to the loudspeaker.
- Lift the speaker out of the box from the outer rim ensuring pressure isn't put on the grille of the Cyclone 8 V2.
- If you need to place the loudspeaker on a flat surface ensure you use a lint free product to protect the finish.
- When you have removed the Cyclone 8 V2 loudspeaker from the packaging inspect it to ensure there is no damage and keep all original packaging in case it needs to be returned for any reason.

3.0 About

3.1 Welcome

Many thanks for purchasing this Void Acoustics Cyclone Series loudspeaker. We truly appreciate your support. At Void, we design, manufacture and distribute advanced professional audio systems for the installed and live sound market sectors. Like all Void products, our highly skilled and experienced engineers have successfully combined pioneering technologies with groundbreaking design aesthetics, to bring you superior sound quality and visual innovation. In buying this product, you are now part of the Void family and we hope using it brings you years of satisfaction. This guide will help you both use this product safely and ensure it performs to its full capability.

3.2 Cyclone 8 V2 Overview

The Cyclone 8 V2 is a compact loudspeaker suitable for outdoor applications, featuring a corrosion resistant ABS driver basket design and hydrophobic membrane, along with stainless steel fixings for outdoor durability. Cyclone 8 V2 has bold Cyclone family styling along with customisable colours, allowing installers and integrators to offer clients visually seamless, distinctive designs. Designed for versatility, the Cyclone 8 V2 comes with T80 style fixing points compatible with a wide range of accessories.

Available to order in Void Red, Black, and White finishes, with custom RAL and Krome options upon request.

3.3 Key Features

- Passive 8 inch coaxial loudspeaker
- Weather-resistant input glands with Phoenix connector and link-through functionality
- Low-resonance fibreglass composite construction
- Wide 100° H x 100° V conical dispersion
- Stainless steel grille and fasteners
- T80-style fixing points for compatibility with a wide range of mounting options
- Weather protected with IP rating
- UV resilient finish
- Available as standard in red with a black grille, black with a black grille, and white with a white grille. Custom RAL and KROME finishes are available upon request
- Non-corrosive ABS driver basket design and weather treated diaphragm
- Hydrophobic membrane for enhanced ingress protection

3.4 Cyclone 8 V2 Specifications

Frequency Response ¹	75 Hz - 20 kHz
Maximum Output ²	118 dB cont, 124 dB peak
Nominal Dispersion	100°H x 100°V
Sensitivity ³	96 dB 1W/1m
Driver configuration	1 x 8" LF, 1 x 1" HF coaxial compression driver
Power Handling	200 W AES
Nominal Impedance	8 Ω
Suggested Minimum Amplifier	Bias Q1+
Weight	Net 9.7 kg (21.4 lbs) Gross 12 kg (26.5 lbs)
IP rating	IP55
Connections	Phoenix connector with link out
Enclosure	Fibreglass composite
Finish	Smooth cellulose
Mounting	Type 80 plate
Height	286 mm (11.2 inch)
Width	341 mm (13.4 inch)
Depth	310 mm (12.2 inch)

1 -10 dB IEC 60268-5 2 Calculated 3 Measured in half space

3.5 Cyclone 8 V2 dimensions

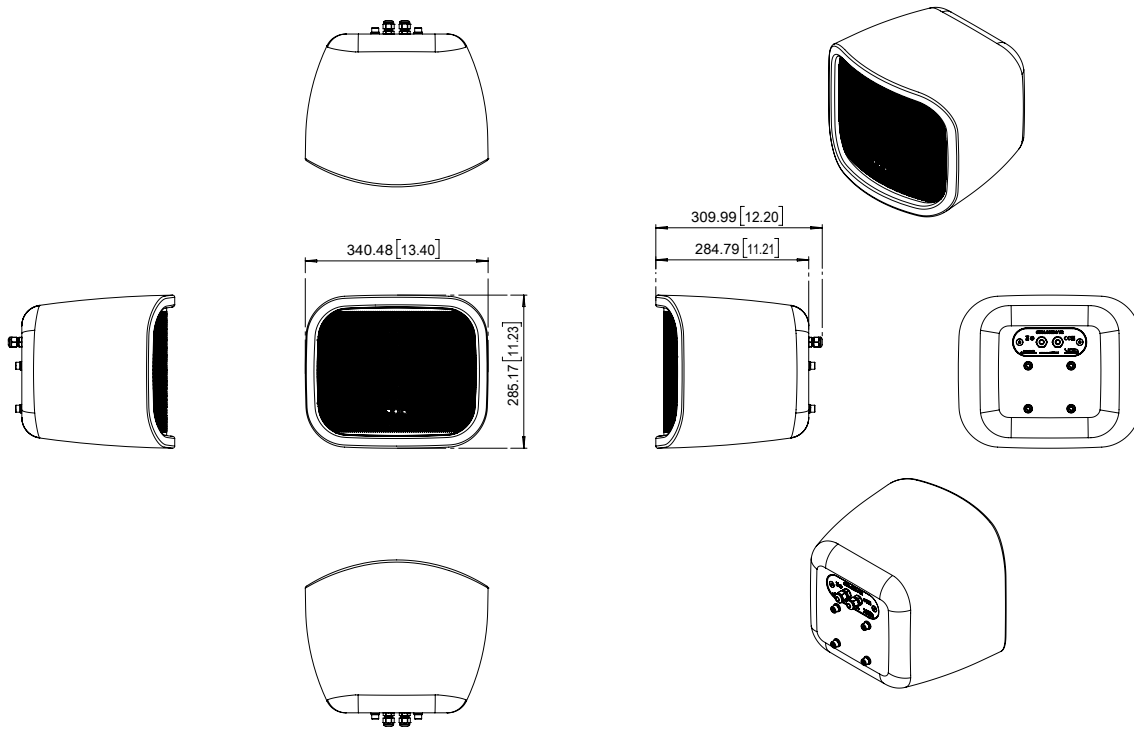


Figure 3.1: Cyclone 8 V2 dimensions

4.0 Cabling and Wiring

4.1 Electrical safety



To avoid electrical hazards please note the following:

Do not access the inside of any electrical equipment.
Refer servicing to Void-approved service agents.

4.2 Cable considerations for fixed installations

We recommend specifying installation-grade Low Smoke Zero Halogen (LSZH) cables for permanent installations. The cables should use Oxygen Free Copper (OFC) of grade C10200 or above. Cables for permanent installations should be compliant with the following standards:

- IEC 60332-1-2 Fire retardancy of a single cable
- IEC 60332-3-24 Fire retardancy of bunched cables
- IEC 60754-1 Amount of Halogen Gas Emissions
- IEC 60754-2 Degree of acidity of released gases
- IEC 61034-2 Measurement of smoke density.

We suggest using the following maximum copper cable lengths to keep level losses below 0.6 dB.

Metric mm ²	Imperial AWG	8 Ω load	4 Ω load	2 Ω load
2.50 mm ²	13 AWG	36 m	18m	9m
4.00 mm ²	11 AWG	60 m	30m	15m

4.3 Cyclone 8 V2 Wiring Diagram


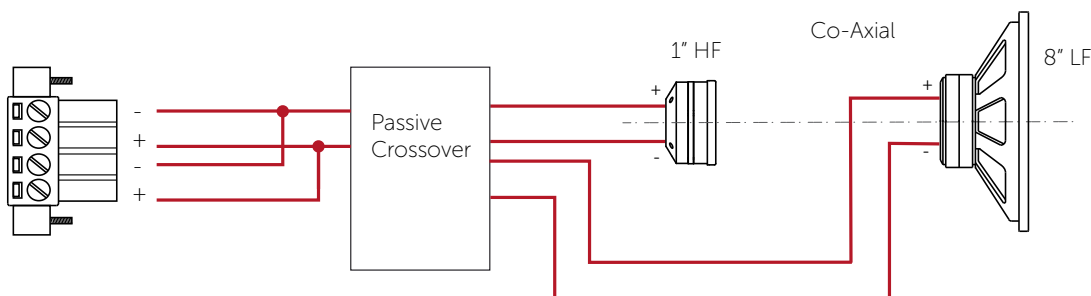


Figure 4.1: Cyclone 8 V2 wiring diagram

4.4 Cyclone 8 V2 gland connector wiring

- Remove both M6 bolts from the rear of the connector plate
- Undo the glanded connectors from the rear of the connector plate and remove the rubber plugs from the connectors.
- Insert the cable through the glanded connectors and tighten.
- Attach the cable to the Phoenix connector then position the connector plate and attach it using the M6 bolts.

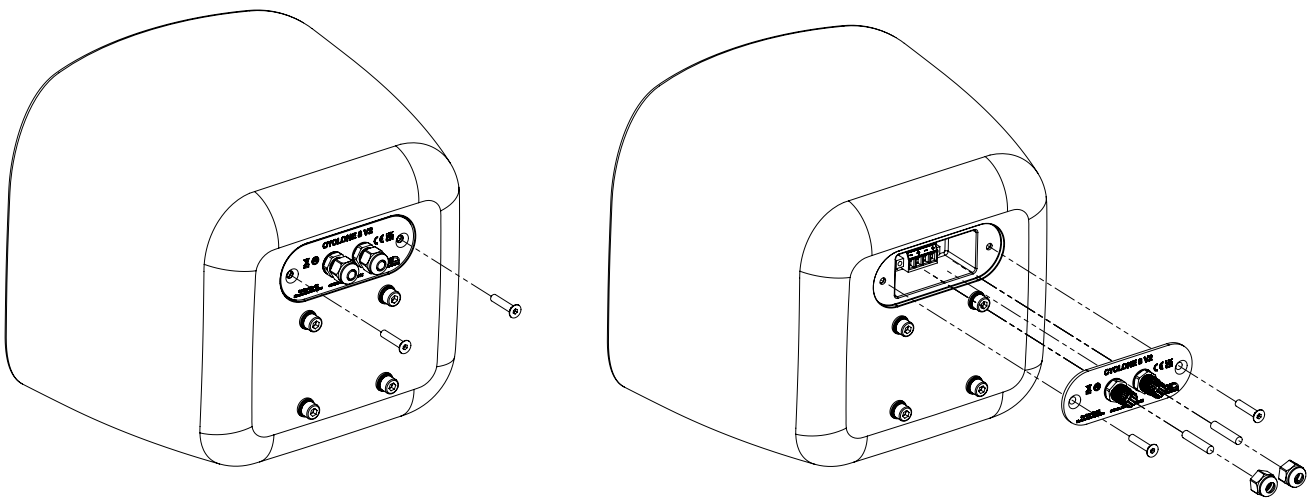

4.5 Bias Q1+/Q1.5+/Q2+ Phoenix Wiring

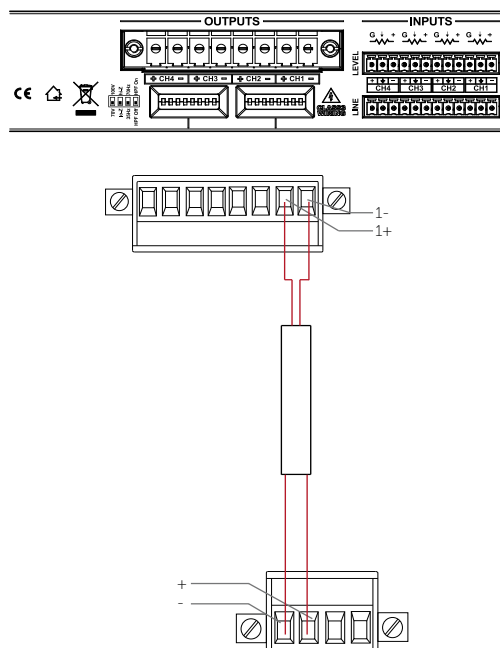


Figure 4.2: Bias Q1+/Q1.5+/Q2+ wiring diagram

4.6 Bias Q3/Q5 NL4 wiring

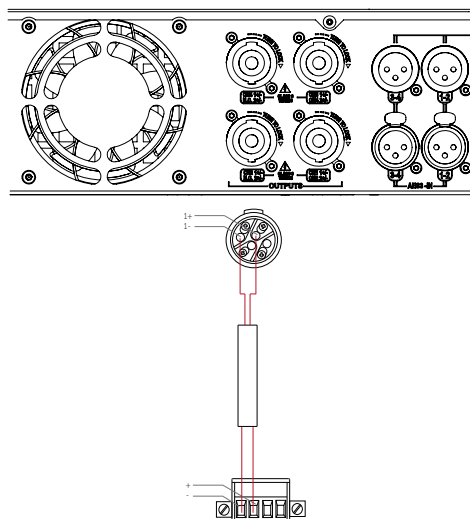


Figure 4.3: Bias Q3

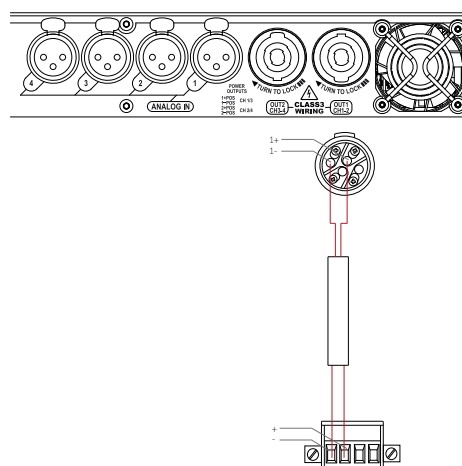


Figure 4.4: Bias Q5

4.7 Max Parallel Units

Output	200 W AES / 8 Ω
Max Parallel Units	4 (2 Ω load to amplifier)*

* Please make sure to select an amplifier with adequate power for your intended parallel configuration

* Half quoted max parallel units if bridging amp channels and consult your amplifier user guide for bridged wiring instructions

5.0 Mounting

5.1 Installation Safety

To avoid mechanical hazards, please note the following:



- Safety regulations vary in different regions. Full compliance with those regulations must be your priority.
- Installations must only be undertaken by fully qualified and experienced engineers/technicians who understand local regulations.
- This may include consulting a structural engineer before installation of wall brackets.
- Remember that all personnel have a duty of care to themselves, to their assistants, to the venue staff and to the public.
- Before lifting any part of the system above head height, check for loose tools or other items that may fall and cause injury.
- Do not use a telephone (even if hands-free) whilst installing. Always concentrate fully on the installation operation.
- Do not install equipment that is worn, damaged, corroded, mishandled or overstressed in any way.
- Use only Void-approved accessories that have been verified as safe to use with the loudspeaker.
- Ensure that the ceiling or wall can safely support the combined weight of the loudspeaker and bracket. Mount only to solid, load-bearing structures. For hollow surfaces, fix into framework such as wall studs or ceiling joists, or reinforce the area before installation.
- Use fixings suitable for both the structure and the load, and ensure that the bracket is securely fastened.
- Use Nyloc nuts, or apply thread locker or equivalent methods to prevent fixings from loosening over time.




Secondary safeties should be provided in all instances where cabinets are flying or fixing overhead and should conform to local regulations.

Tools required

- 8mm hex key

Remove all four M8 bolts, washers and spring washers from the rear of the loudspeaker.

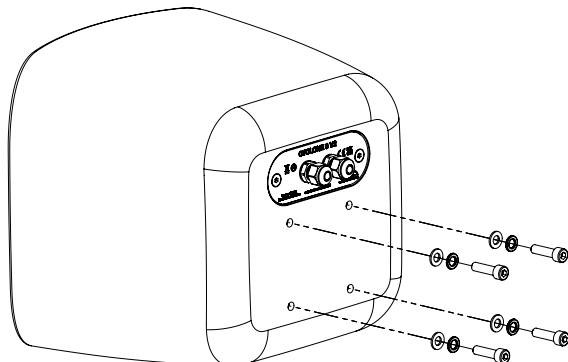

5.2 T80 Swivel Assembly


The T80 Swivel Bracket Assembly has a maximum vertical downtilt of -30 degrees

IT6079 T80 Swivel Bracket Assembly
IT6496 T80 Swivel Bracket Assembly

● Black
 ○ White

Step 1

Separate the two components of the bracket by removing the two M8 bolts.

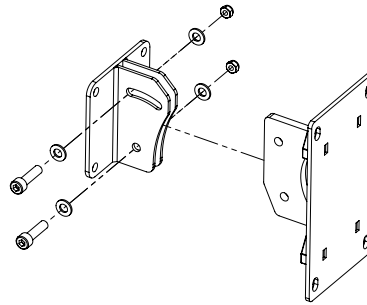


Step 2

Attach the front of the bracket to the speaker using four M8 Bolts, Washers and Spring Washers.




Take care when mounting the rear of the bracket to the wall, make sure to use the correct fixing and that the wall can take the load, for example do not attach the bracket to a stud wall

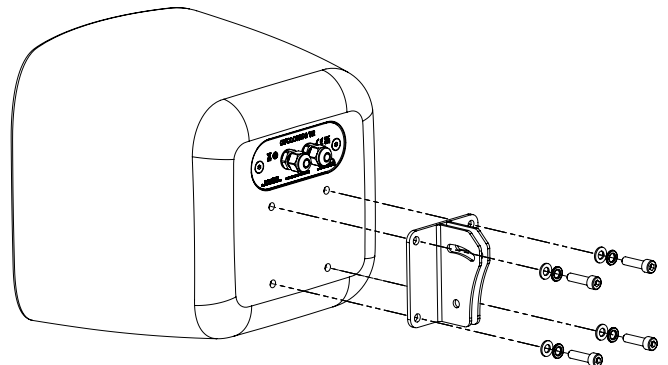

Step 3


Reattach the two components of the bracket together by lifting the Cyclone 8 V2 Loudspeaker, aligning it with its counterpart and securing using the two M8 Bolts, Washers and Nuts.

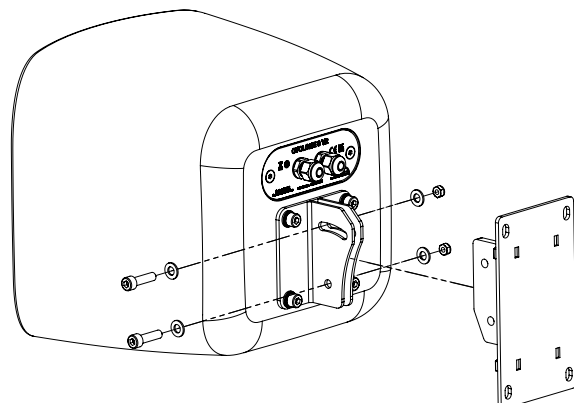

5.3 T80 Swivel Bracket Adjustability


Max Vertical Rotation: -30° , 0°

Max Horizontal Rotation: $\pm 40^{\circ}$

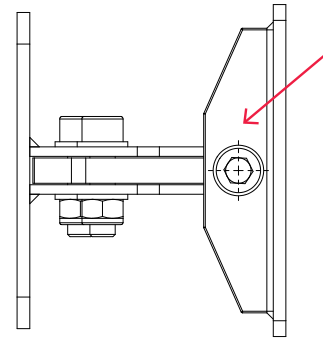


Step 1

To adjust the horizontal angle, loosen the two M10 bolts on the top and bottom and manually adjust by pivoting bracket around the bolts. Refasten when the desired angle is reached.

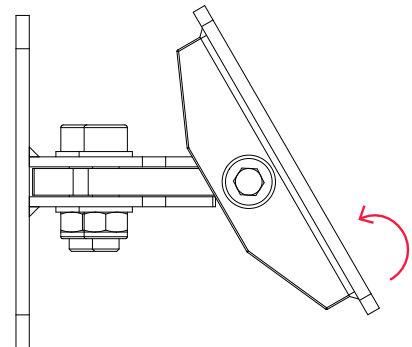

Step 2

To adjust the vertical angle, loosen the two M8 bolts and pivot the bracket around the top bolt. Refasten when the desired angle is reached.

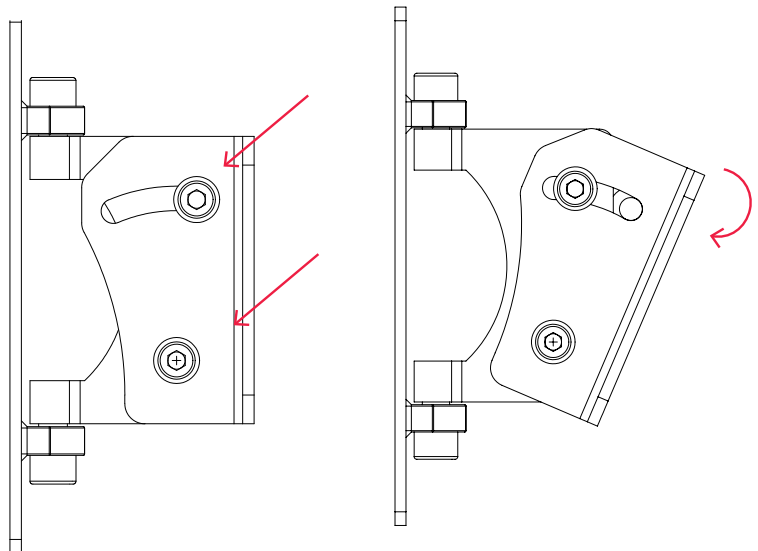


5.4 T80 Wall Bracket Assembly

IT1107	T80 Wall Bracket	● Black
IT1109	T80 Wall Bracket	○ White

Step 1

Separate the two components by removing the M8 screw that secures them and lifting them apart.

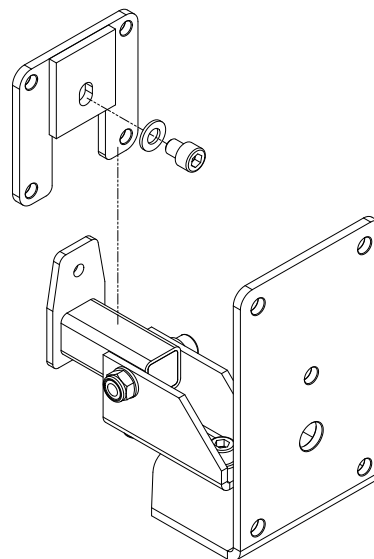


Step 2

Attach the top components of the bracket to the Cyclone 8 V2 using four M8 Bolts, Washers and Spring Washers.




Take care when mounting the rear of the bracket to the wall, make sure to use the correct fixing and that the wall can take the load, for example do not attach the bracket to a stud wall

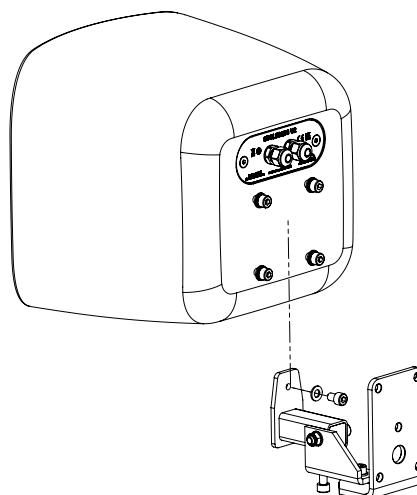

Step 3

Reattach the two components of the bracket together by lowering the Cyclone 8 V2 Loudspeaker, aligning it with its counterpart and securing using the M8 Bolts and Washer.

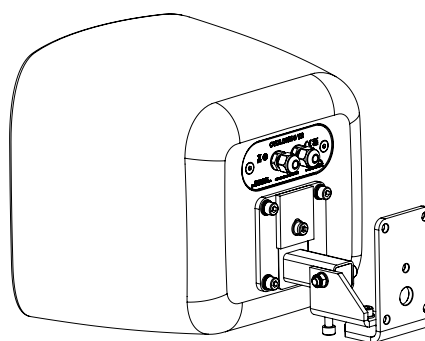



5.5 T80 Wall Bracket Adjustability

Max Vertical Rotation: +28°, -0°

Max Horizontal Rotation: ±70°



Step 1

To adjust the vertical angle, loosen the top M8 bolt and use the bottom vertical bolt to adjust the angle. Refasten when the desired angle is reached.

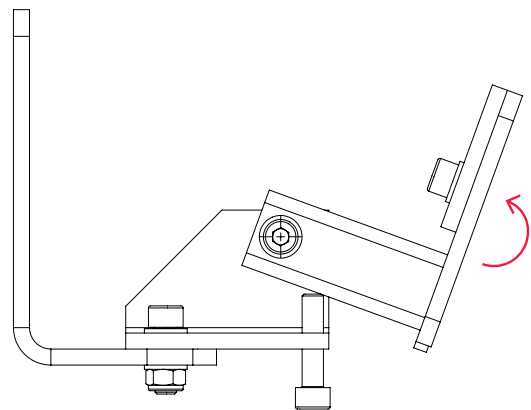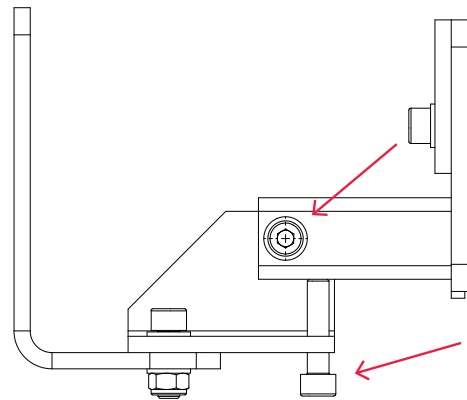

Step 2

To adjust the horizontal angle, loosen the M8 bolt and manually adjust by pivoting bracket around bolt. Refasten when the desired angle is reached.

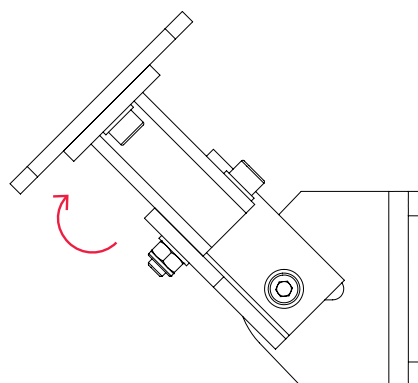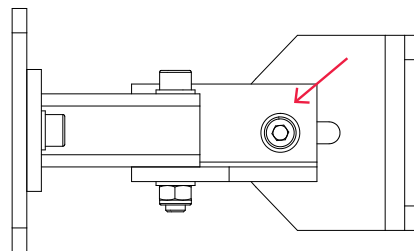


5.6 T80 Ceiling Bracket Assembly

IT1105 T80 Ceiling Bracket ● Black

IT1106 T80 Ceiling Bracket ○ White


Step 1

Separate the two components by removing the M10 Nut and Washer that secures the two components together.

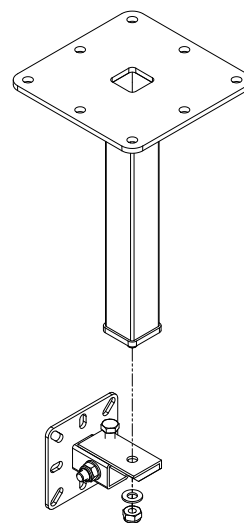

Step 2


Attach the bottom components of the bracket to the Cyclone 8 V2 using four M8 Bolts, Washers and Spring Washers.

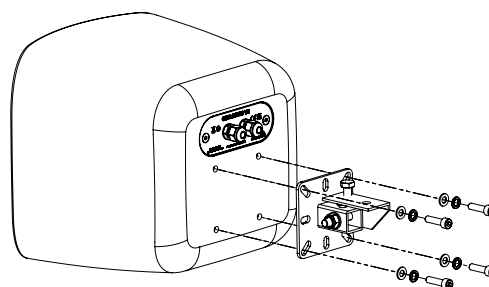

Take care when mounting the rear of the bracket to the wall, make sure to use the correct fixing and that the wall can take the load, for example do not attach the bracket to a stud wall

Step 3


Reattach the two components of the bracket together by lifting the Cyclone 8 V2 Loudspeaker, aligning it with the M8 Bolt and then securing using the nut and washer.

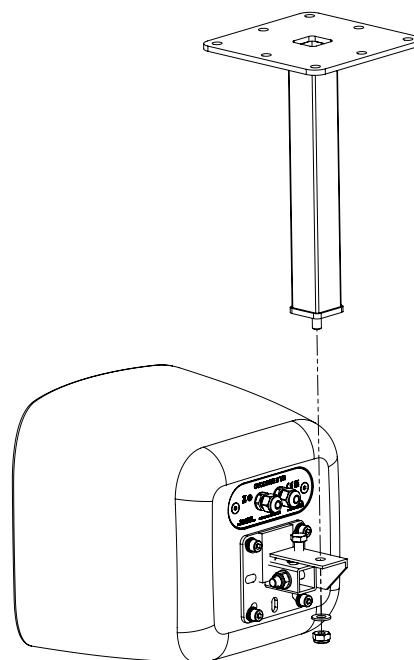

5.7 T80 Ceiling Bracket Adjustability


Max Vertical Rotation: $\pm 12^\circ$

Max Horizontal Rotation: 360°

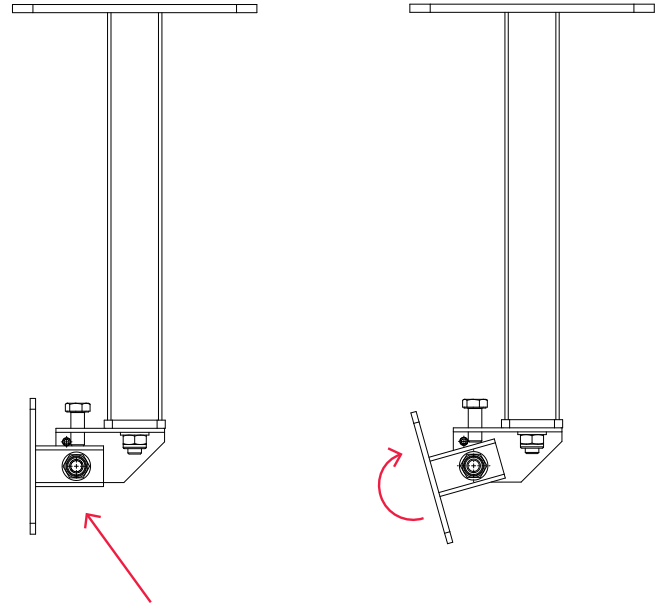


Step 1

To adjust the vertical angle, loosen the M8 bolt and use the top vertical bolt to adjust the angle. Refasten when the desired angle is reached.

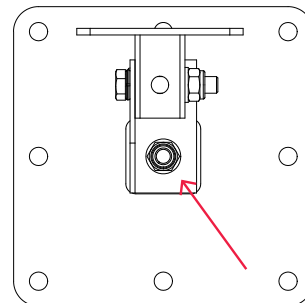

Step 2

To adjust the horizontal angle, loosen the M8 bolt and manually adjust by pivoting bracket around bolt. Refasten when the desired angle is reached.

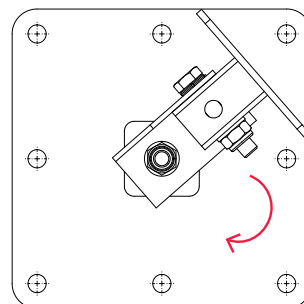


5.8 T80 Pole Bracket Assembly

IT3725 T80 Pole Bracket ● Black
 IT3726 T80 Pole Bracket ○ White


Step 1

To attach the two components, fasten the M12 bolt and washers through the top hat casing.

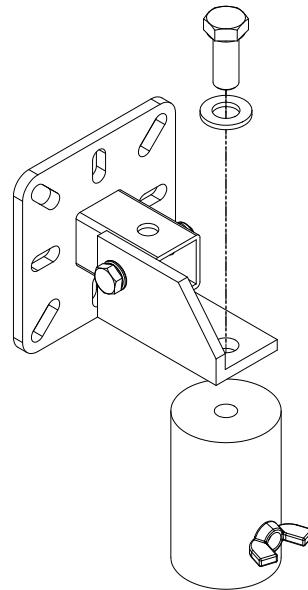


Step 2

Attach the bracket to the Cyclone 8 V2 using four M8 Bolts, Washers and Spring Washers.

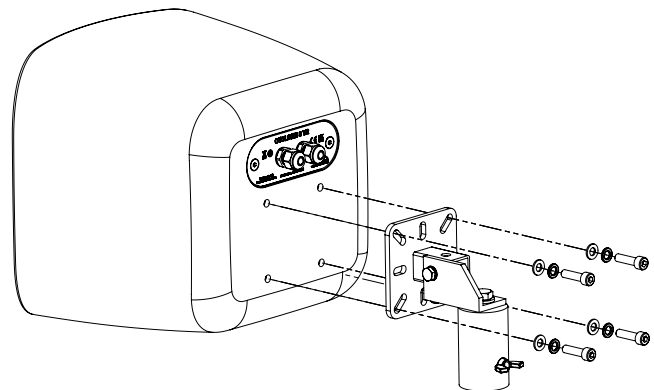

Step 3


Lift the speaker and place on pre-installed pole. Use the wing bolt to secure it in place.

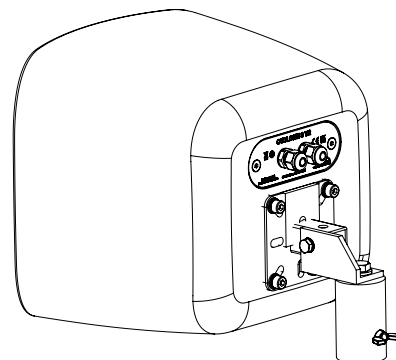

5.9 T80 Pole Bracket Adjustability


Max Vertical Rotation: +28°, -0°

Max Horizontal Rotation: 360°

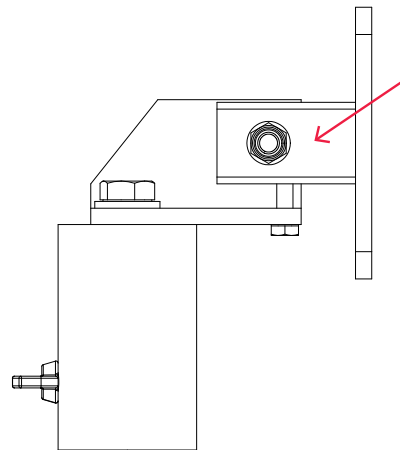


Step 1

To adjust the vertical angle, loosen the top M8 bolt and use the bottom vertical bolt to adjust the angle. Refasten when the desired angle is reached.

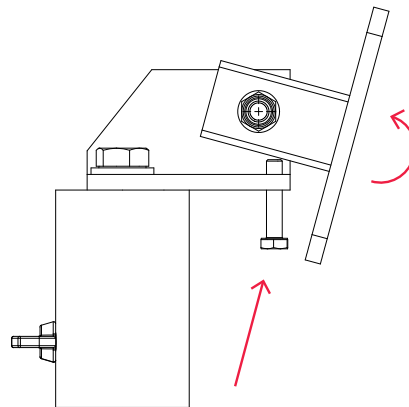

Step 2

To adjust the horizontal angle, loosen the M8 bolt and manually adjust by pivoting bracket around bolt. Refasten when the desired angle is reached.

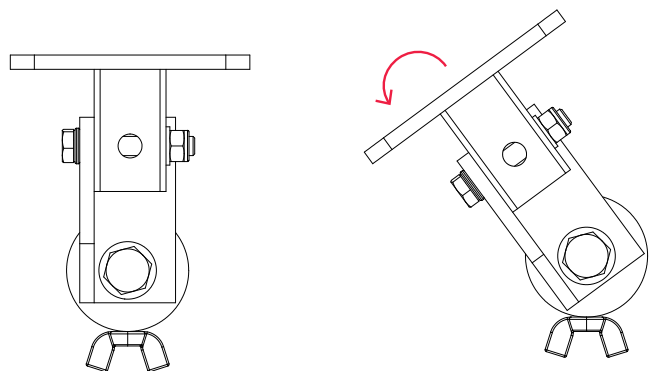

6.0 Maintenance

6.1 Cleaning and Maintenance

The following guide will help to prevent corrosion and prolong both the product aesthetics and sonic performance. It is recommended that this process is implemented weekly.

Step 1

Remove the grill and wash with deionised water, ensuring all build-up of contamination is removed completely from the grille and the foam. Allow the foam to dry completely before reinstalling, protecting the loudspeaker accordingly in the interim.

Step 2

Using a clean microfibre cloth and deionised water, use circular motions working from the top of the product down to remove contamination. Dry the product with a clean, dry microfibre cloth.

Step 3

Use a soft bristled brush and deionised water to clean the bracketry, ensuring all contamination is removed completely.

7.0 Service

7.1 Return authorisation

Before returning your faulty product for repair, please remember to get an R.A.N. (Return Authorisation Number) from the Void dealer who supplied the system to you. Your dealer will handle the necessary paperwork and repair. Failure to go through this return authorisation procedure could delay the repair of your product.

Note that your dealer will need to see a copy of your sales receipt as proof of purchase so please have this to hand when applying for return authorisation.

7.2 Shipping and packing considerations

- When sending a Void Cyclone 8 V2 loudspeaker to an authorised service centre, please write a detailed description of the fault and list any other equipment used in conjunction with the faulty product.
- Accessories will not be required. Do not send the instruction manual, cables or any other hardware unless your dealer asks you to.
- Pack your unit in the original factory packaging if possible. Include a note of the fault description with the product. Do not send it separately.
- Ensure safe transportation of your unit to the authorised service centre.

8.0 Appendix

8.1 Architectural specification

The loudspeaker shall be a passive, two-way system consisting of one 8" (203.2 mm) low frequency (LF) transducer and a 1" (25.4 mm) exit coaxial high frequency (HF) compression driver mounted in a direct radiating, reflex loaded, fibreglass enclosure.

The enclosure shall be constructed of low resonance fibreglass composite with a smooth cellulose finish and shall include internal mounted plate for the fitment of mounting hardware. The external dimensions are (H) 286 mm x (W) 341 mm x (D) 310 mm (11.23" x 13.40" x 12.20"). Weight is 9.7 kg (21.38 lbs) net, 12 kg (26.45 lbs) gross.

Performance specifications of a typical production unit shall be as follows: frequency response bandwidth shall be 75 Hz – 20 kHz (-10 dB), measured in accordance with IEC 60268-5, with an average 100° directivity pattern in the vertical axis and 100° in the horizontal one (-6 dB down from on-axis level). Production consistency shall be verified through end-of-line testing, with individual units required to conform within ± 3 dB of the reference response over the specified bandwidth. Power handling shall be 200 W AES at a rated nominal impedance of 8 Ω .

The wiring connection shall be via a dual glanded and removable lockable wiring connector, with four screw-down terminals with link through to provide secure wiring. This connector should then screw lock to the enclosure to ensure secure attachment.

The low frequency transducer shall use a ferrite magnet structure, and be constructed on a resonant free ABS basket design with a water-resistant treated paper diaphragm with a 2" (51 mm) voice coil, wound with copper-clad aluminium wire on a high quality Kapton former.

The high frequency driver shall utilise a polyimide dome and surround, driven by a 1.4" (35 mm) voice coil wound with copper-clad aluminium wire on a Kapton former.

The loudspeaker system shall be a Void Acoustics Cyclone 8 V2.

8.2 Changelog

Version	Update	Valid from Serial Number
UG11137-1.0	Released User Guide	C82Y0001

HEAD OFFICE

Void Acoustics Research Ltd,
Unit L The Fulcrum, Vantage Way,
Poole, Dorset,
BH12 4NU
United Kingdom

Call: +44(0) 1202 666006

Email: hello@voidacoustics.com

NORTH AMERICA

Void Acoustics North America

Call: +1(630) 6866616

Email: hello@voidacoustics.com

voidacoustics.com

