FNK0107-Troubleshooting

At the time of this writing, compatibility issues associated with the latest Raspberry Pi OS release ("**Trixie**") have been observed. Once an official update addressing these issues is available, we will promptly update our resources and discontinue the relevant troubleshooting notes here

Issue 1: Black bars at the bottom of the DSI screen

Description

After completing the settings in section 3.1.8, a black bar appears at the bottom of the DSI screen. This issue occurs in both landscape and portrait modes, and it is consistently located at the bottom of the current display orientation.

When you embed the accompanying control software into the DSI screen, the bottom portion of the software may not be displayed completely. This is because our control software is rendered starting from below the system status bar.

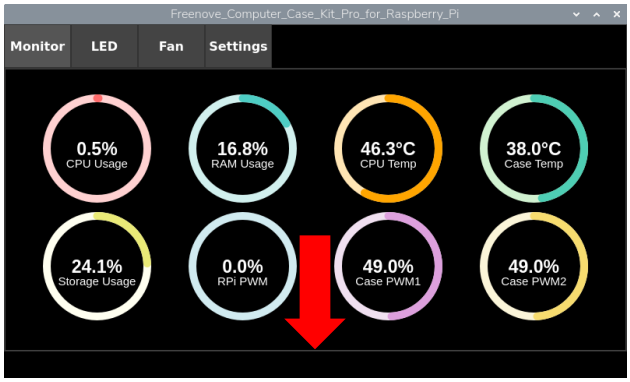

Solution

Open the **app_ui.py** file located in **the Freenove_Computer_Case_Kit_Pro_for_Raspberry_Pi/Code** directory. Find the line that says **self.isMaximized = False**, and change False to True to fix the issue.

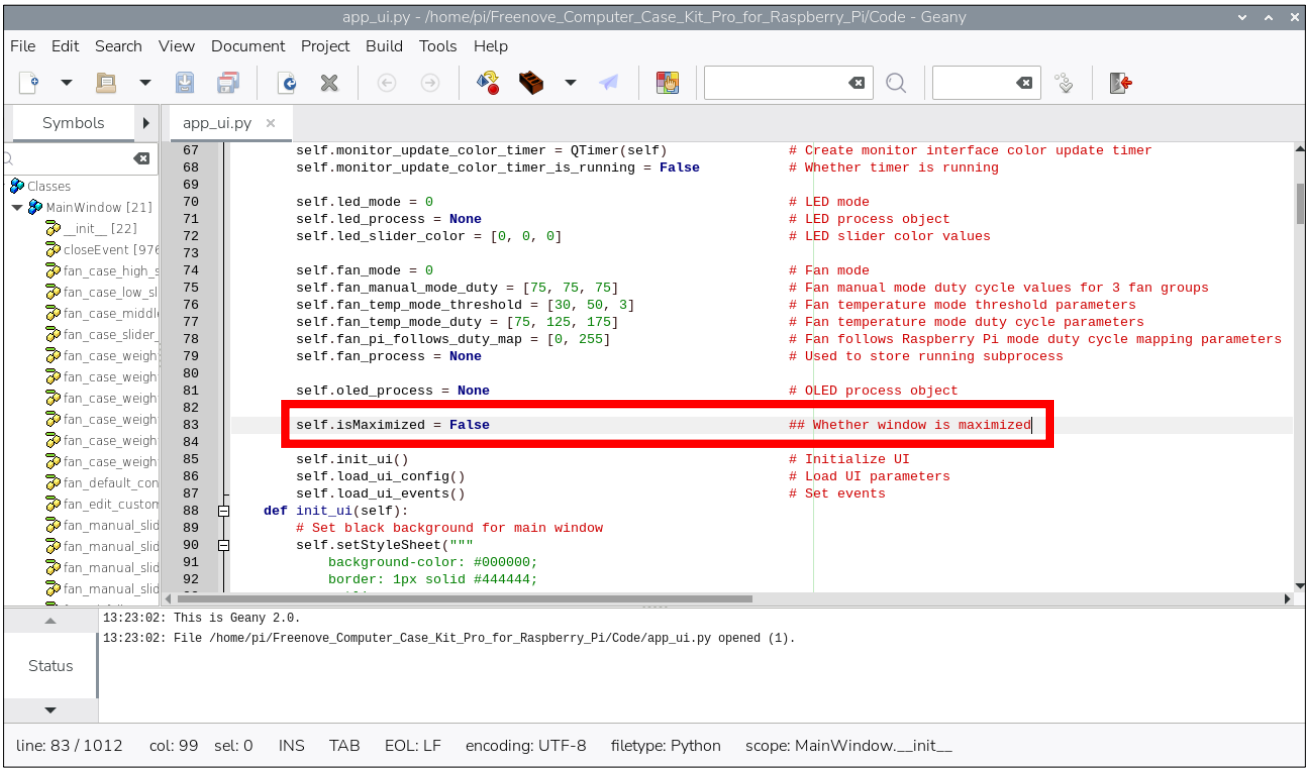

Issue 2: Misaligned Mouse Mapping Coordinates

Description

When the HDMI display resolution is changed, the mouse click position in the VNC interface will be misaligned. This issue arises because the VNC virtual display area is now composed of a combined "HDMI + DSI dual-display" region, rather than the previous "HDMI-only" display area. The mouse coordinate mapping, however, is not updated in real time, resulting in a discrepancy between the actual and expected click positions.

Solution

Restart the VNC interface. The mouse coordinate mapping will be reset and function correctly thereafter.

Issue 3: Fans Not Work

Description

When the cooling tower fan is connected to PI FAN 1, it operates under direct control of the Raspberry Pi. In Follow RPi mode, the case fans' rotation is managed by the GPIO board, which reads the Raspberry Pi's fan interface PWM value in real time.
If the cooling tower fan does not spin, or if all fans fail to spin in Follow RPi mode, the issue may be caused by one of the following:

1. Temperature Not Reaching Threshold: The fan is designed to activate only when a certain temperature is reached. Use the command vcgencmd measure_temp to check the current temperature. The Raspberry Pi fan control activates at 50°C.

```
pi@raspberrypi:~ $ vcgencmd measure_temp
temp=42.8'C
```

2. Missing or Incomplete System Files: The hwmon4 file in the directory **/sys/devices/platform/cooling_fan/hwmon/** may be missing, or the files within it may be incomplete. This prevents the system from reading the PWM value from the Raspberry Pi's fan interface. Please verify that the files in this directory are intact.

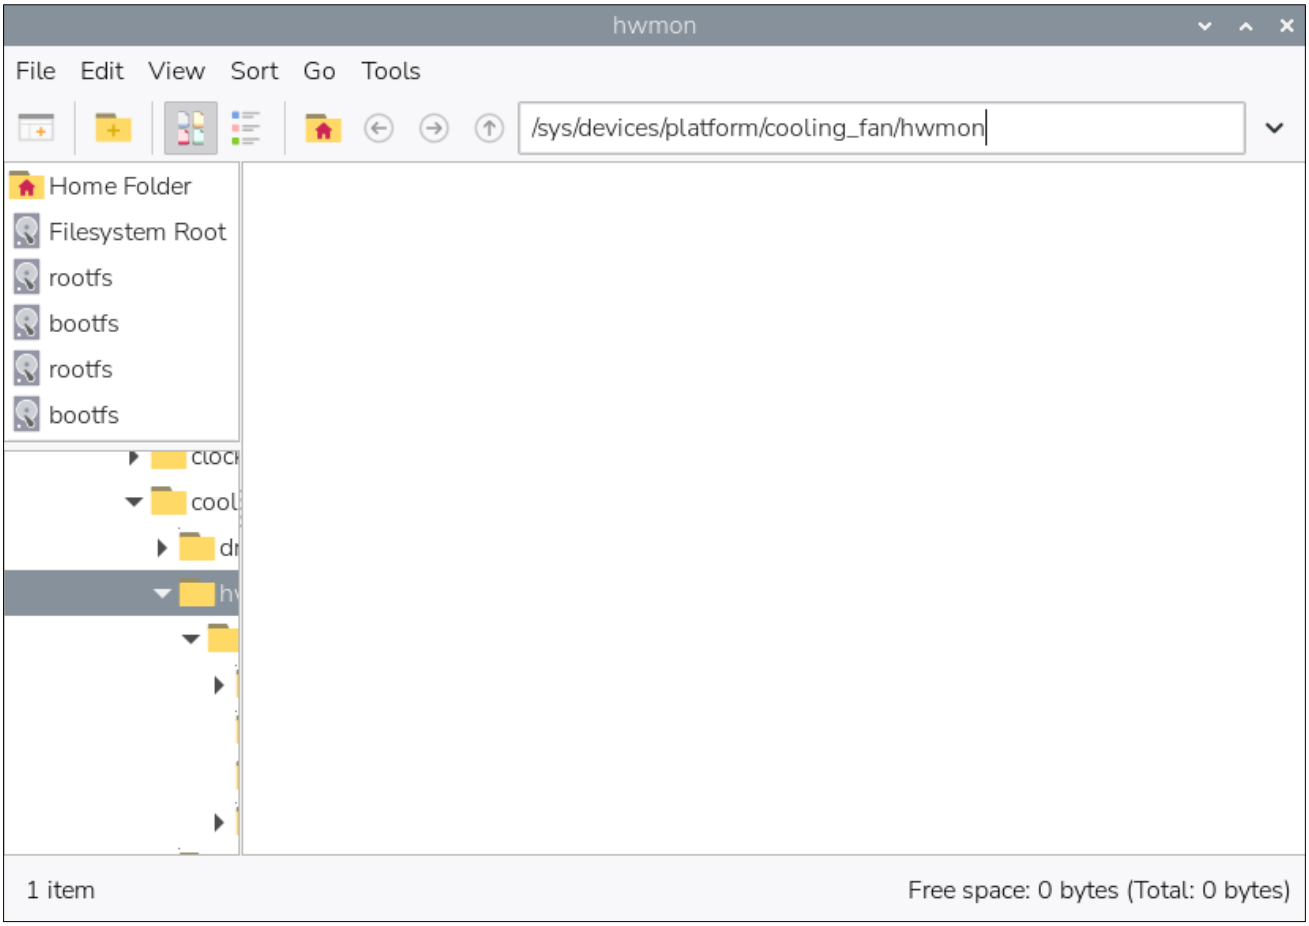

Solution

For Case 1: No action is required. The fan will start automatically once the temperature rises above the 50°C threshold.

For Case 2: Follow the steps below to ensure the required system files are loaded correctly:
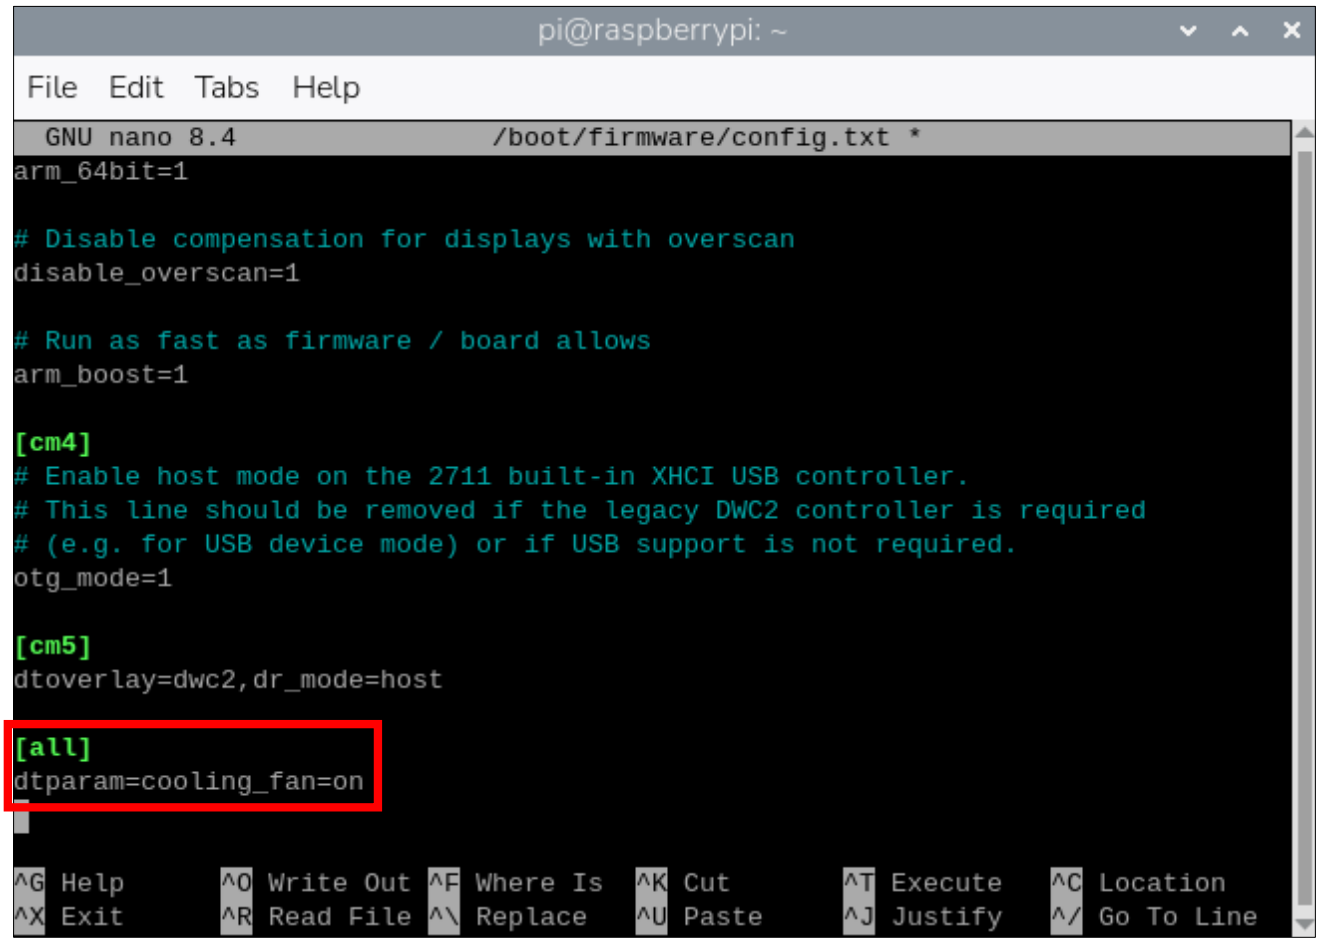
Open the terminal and execute sudo nano /boot/firmware/config.txt to edit the configuration file. Add the line dtparam=cooling_fan=on to the end of the file. Press "Ctrl+O" to save, then "Ctrl+X" to exit the editor. **Reboot the Raspberry Pi** for the changes to take effect.