DCIM Dashboard

User Guide

For administrators and operators of your data-centre sites

Version 3.2.2 · October 2026

Contents

1. About DCIM Dashboard 3
2. Before you begin 4
3. Installing 5
4. Signing in and first steps 7
5. Free trial and licensing 8
6. Dashboard 9
7. Asset Inventory 10
8. DC Capacity 12
9. Monitoring (Dell OME, HPE OneView, Redfish) 14
10. Power Capacity 18
11. Issue Tracker 21
12. DC Activity 23
13. Material Movements and document scanning 25
14. Settings: users, backup, licence 27
15. Reports and exports 30
16. Security 31
17. Troubleshooting and FAQ 32
18. Technical troubleshooting (administrators) 33
19. Getting help 39

1. About DCIM Dashboard

DCIM Dashboard is a web application for running one or more data-centre sites. It keeps one record of what equipment you own and where it sits, how full your racks and power feeds are, what your Dell and HPE management appliances report, which issues are open, what work was done, and what material came in or went out.

It runs on a server inside your network and is used from any modern web browser (Chrome, Edge or Firefox). Nothing is sent to the internet: document scanning (OCR) also runs on your own server.

Module	What you use it for
Dashboard	One-page health view: devices, racks, issues, utilisation, power load, firmware compliance
Asset Inventory	Every device with serial number, location, rack position, firmware and lifecycle state
DC Capacity	Racks, floor layout and U-space elevation per site and zone
Monitoring	Live status and firmware from Dell OME and HPE OneView, and from any Redfish-capable server
Power Capacity	PDU load against rated capacity, A/B feed redundancy, 30-day trend
Issue Tracker	Faults and tickets, with severity and status
DC Activity	Log of planned and completed work in the data centre
Material Movements	Inward and outward material with DC / invoice numbers and scanned documents
Settings	Users and roles, backup and restore, licence

2. Before you begin

Item	Requirement
Server	64-bit Linux (Ubuntu, Debian, RHEL, AlmaLinux, Rocky) or Windows Server; 2 CPU cores, 4 GB RAM and 2 GB free disk are enough for several thousand assets
Database	MySQL 8 or MariaDB 10.6+ (an embedded database can be bundled by the installer)
Network	One TCP port for the web interface (8974 by default). Optional: HTTPS to Dell OME / HPE OneView, SNMP (UDP 161) to PDUs, Redfish (HTTPS) to server BMCs
Browser	Current Chrome, Edge or Firefox; screen width of 1280 px or more is recommended
Accounts	Root / Administrator rights on the server for installation only

Have these ready: the administrator user name and password you want, the database details (if you use your own database), and the host name and read-only account of each Dell OME or HPE OneView appliance you want to connect.

3. Installing

Linux

1. Copy the installer package to the server and unpack it (or install the **.deb** / **.rpm** package).
2. Run the setup script as root and follow the questions, or run it unattended with your options, for example port, database, administrator user and password.
3. When it finishes, it runs a health check and prints a summary: web address, administrator account, database, install folder. Keep this summary.


> The installer creates a system service, so the application starts automatically after a reboot. It listens on port 8974 unless you choose another.

Windows

Run the supplied **setup .exe** as Administrator. It installs the application as a Windows service and offers to open the web address when finished.

First-time setup wizard

After installing, administrators can open **/setup-wizard.html** on the same address to set company name, application name, logo, support contacts, default catalogues and security options.

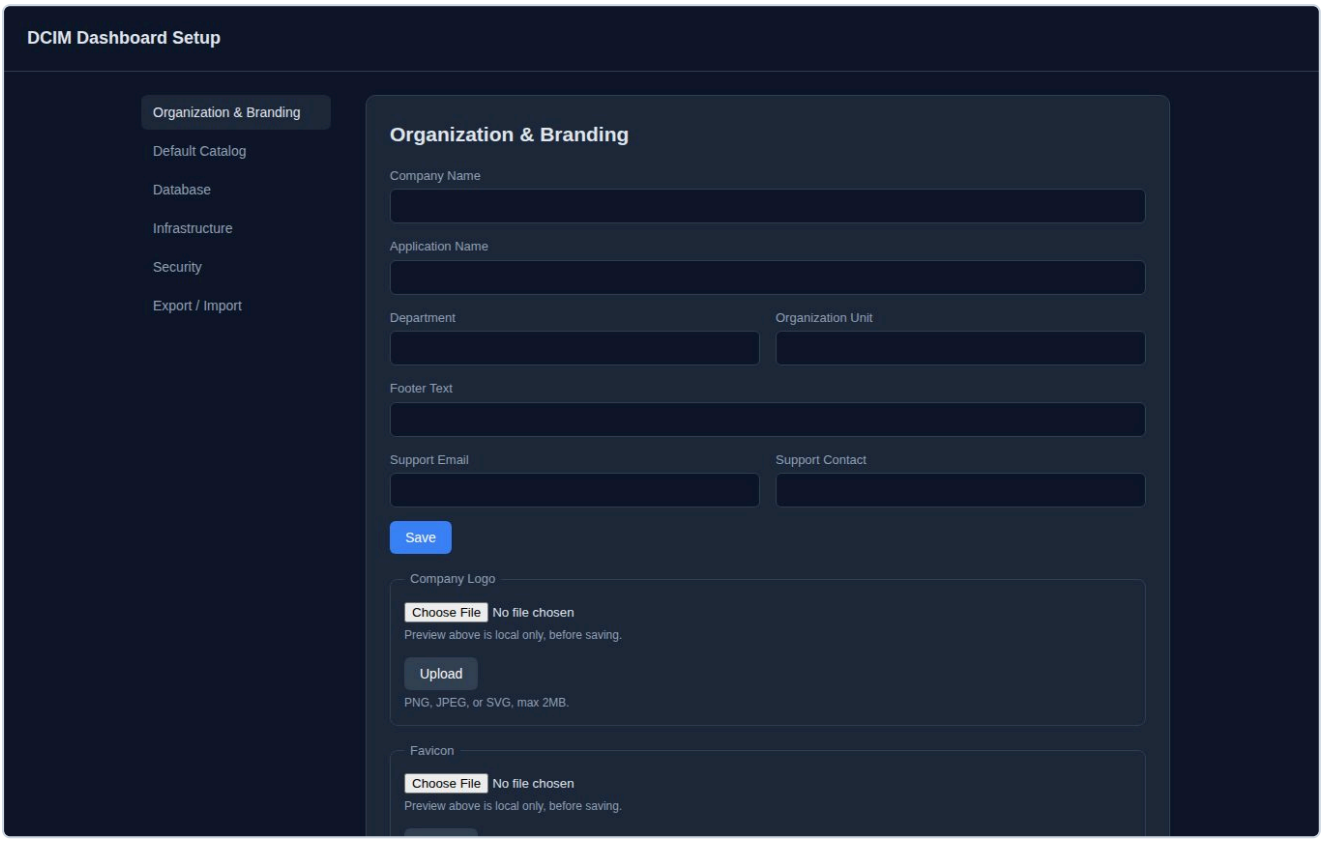


The setup wizard (Organization & Branding).

Upgrading, repairing, removing

Run the same installer again and choose **upgrade** or **repair**. Your settings file, data, uploads, backups and licence are kept. A snapshot of the previous state is saved before every change. To remove the application use the uninstall script or the Windows uninstaller; your database is kept unless you explicitly ask to delete it.

4. Signing in and first steps

1. Open the web address shown at the end of installation, for example **http://your-server:8974/**.
2. Sign in with the administrator account you chose during setup. If you did not choose one, the first account is **admin** with the starting password given in your installation notes; you are required to change it at first sign-in.
3. Look at the blue bar at the top of the page: it shows how many free-trial days remain (see section 5).
4. Go to **Settings > Users** and create accounts for your team (section 14).

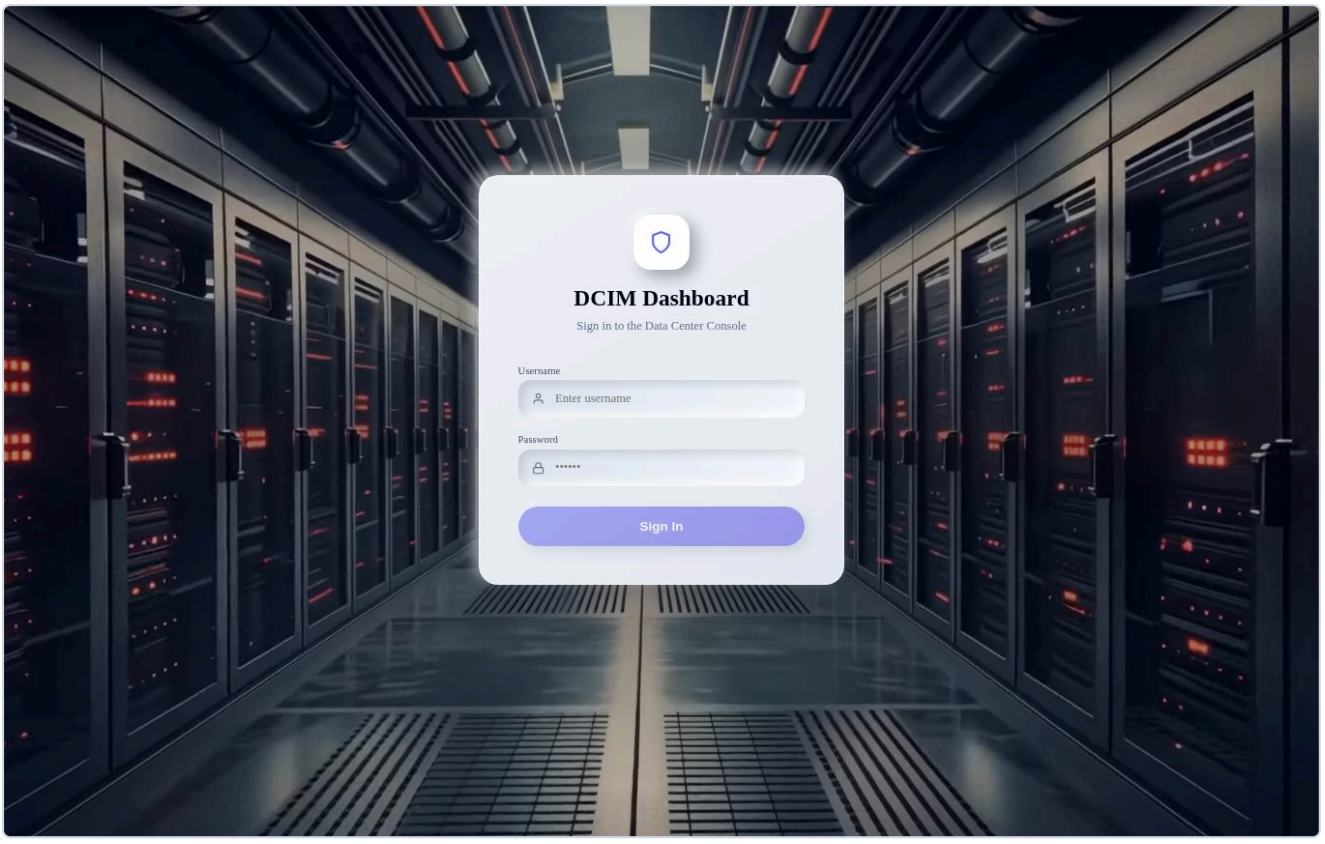

The sign-in page.

Sessions end automatically after a period of inactivity (8 hours by default). Use the icons at the top right for settings, layout options, refresh, lock and sign out.


5. Free trial and licensing

Every new installation starts with a **10-day free trial with full access to all modules**. The days left are always shown in the blue bar at the top of the screen and on **Settings > License**.

- **During the trial**: everything works. Nothing needs to be done.
- **When the trial ends**: the application locks automatically. Signed-in users see a lock screen. Administrators can still change their password and activate a licence; all your data is kept safe and untouched.
- **After activation**: the application unlocks immediately and the panel shows the licence holder, number of users allowed and expiry.

How to activate

1. Sign in as an administrator and open **Settings > License**.
2. Copy the **machine ID** shown on the page and send it to your vendor.
3. Your vendor sends back an activation code (starting **DCIM-LIC-**) or a **.lic** file.
4. Paste the code and press **Activate**, or choose **Upload .lic file**.

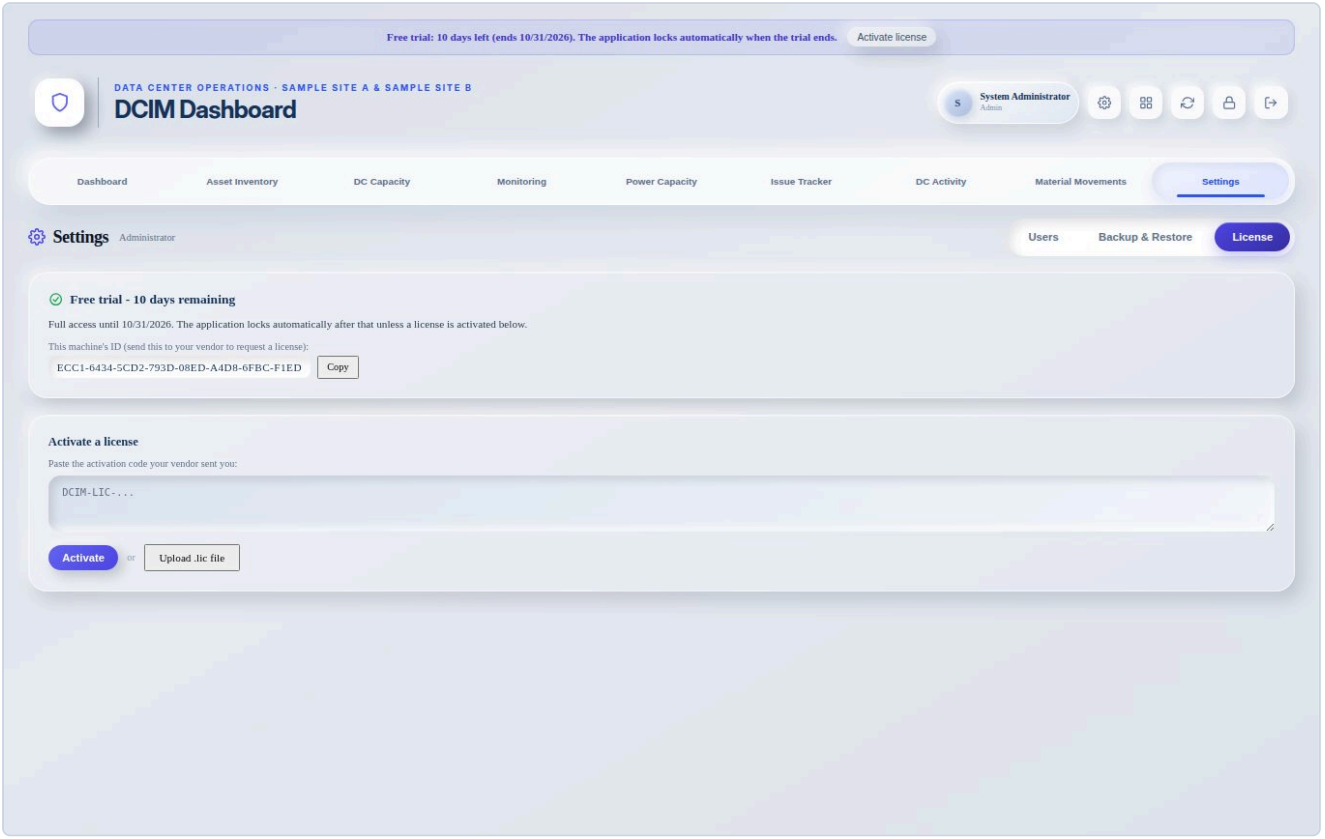


Settings > License during the trial: days remaining, machine ID and activation box.

> The trial cannot be restarted by reinstalling, restoring a backup, deleting files or changing the server clock. Upgrades and repairs keep your licence.

6. Dashboard

The Dashboard is the first page after sign-in and is refreshed automatically.

- **Top tiles**: installed devices, total racks, critical issues, DC utilisation, open issues, transfers awaiting acceptance, assets in store, rejected transfers.
- **Server Power Status**: servers on / off / unknown per location, from the latest 30-minute sync with Dell OME and HPE OneView.
- **Server Count**: servers by hardware type per site and zone.
- **Firmware Compliance**: compliant, outdated and unknown servers against the target firmware you set in Monitoring.
- **Total Power Load by Location**: kW used against rated capacity from your PDUs.
- Asset distribution, three-month issue trend, issue status, recent activity, hardware mix and recent material movements.

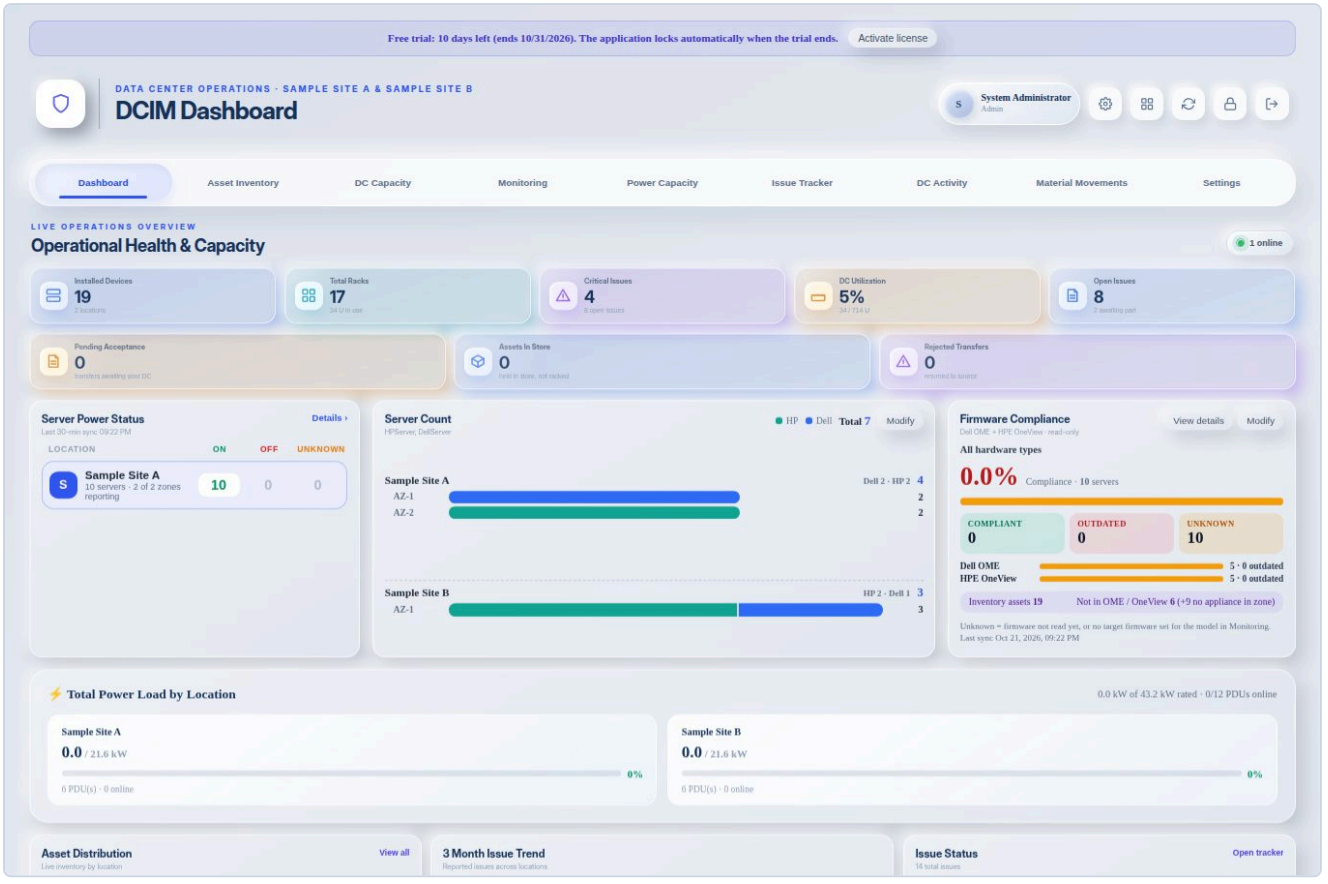


The Dashboard.

Cards marked **Modify** let you choose what they show. **View details** opens the related module.

7. Asset Inventory


Asset Inventory is the master list of equipment. It has three tabs: **Inventory** (installed devices), **Rack Components** and **Asset Lifecycle** (history of installs, moves and removals).

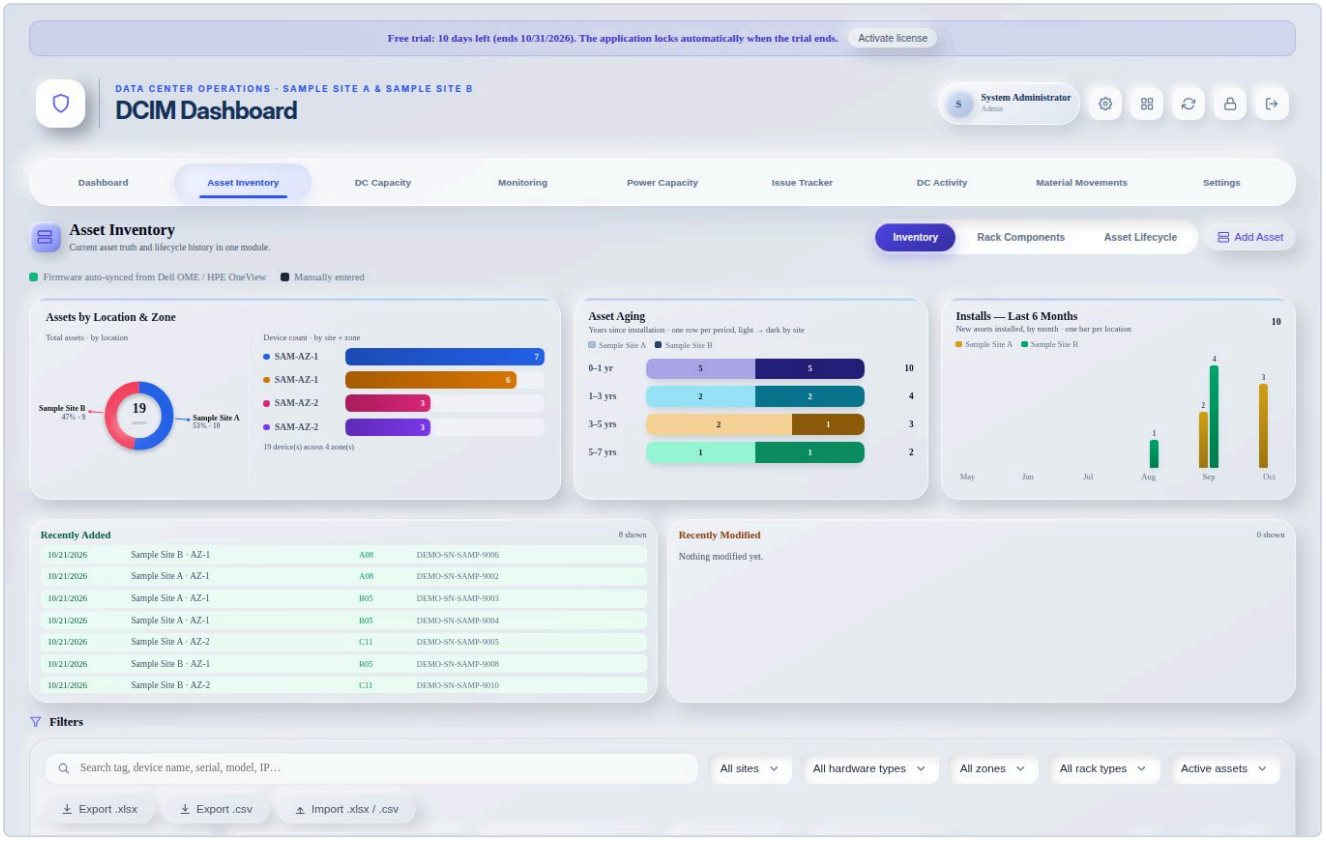

Asset Inventory with filters and export buttons.

Add an asset

1. Press **Add Asset**.
2. Choose the **site** and **zone**. Pick **Initial state**: *Active – install in rack now* (then give rack and U position) or *In store* (held but not racked).
3. Fill hardware type, manufacturer, model, serial number, asset tag and management IP. Serial numbers and asset tags must be unique; the system tells you if one already exists and warns about similar ones.
4. Save. The record appears at once in Inventory, DC Capacity and the Dashboard.

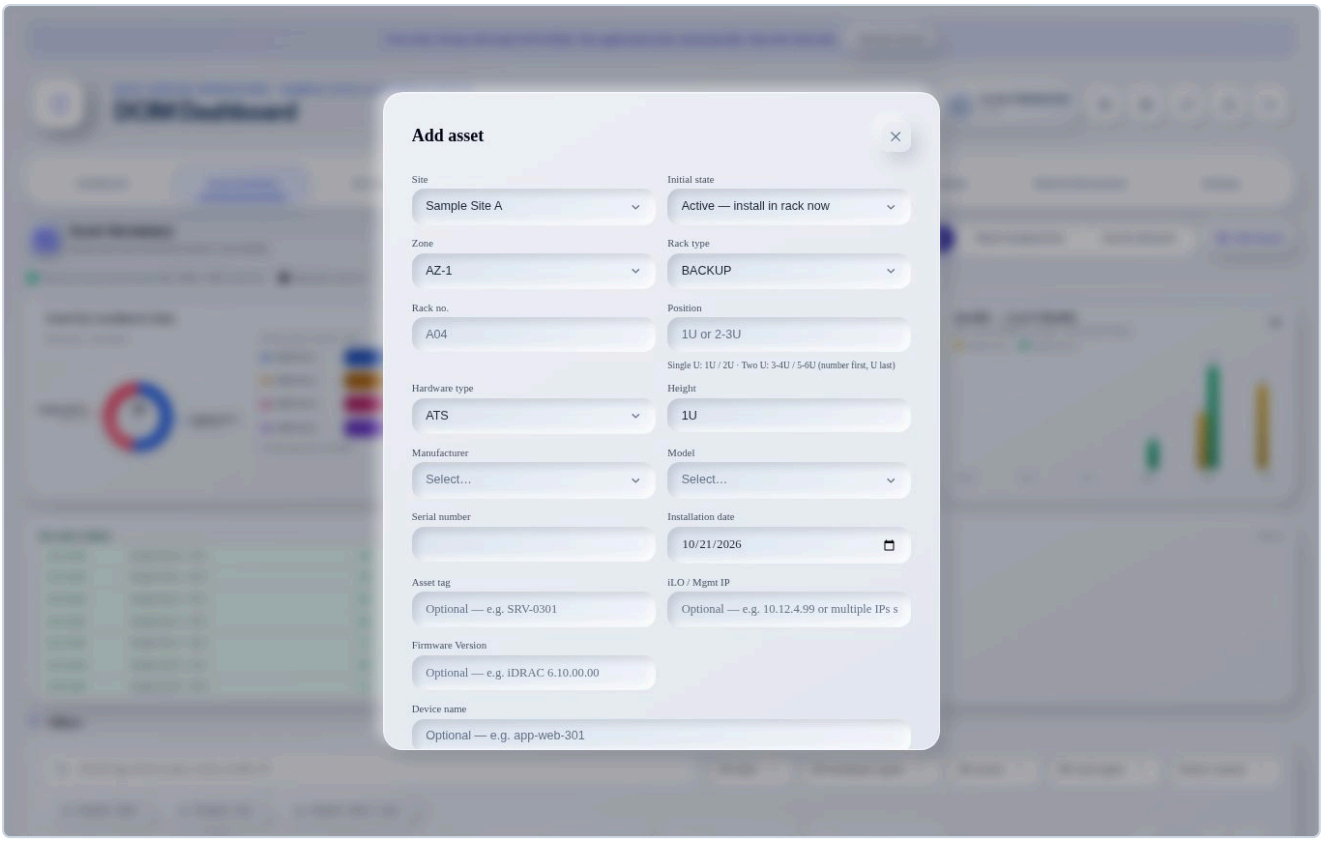

The Add asset form.

Move, install and retire


Open an asset to move it to another rack or site, send it to store, or retire it. Each change is written to **Asset Lifecycle** with who did it and when. A transfer to another site waits for the destination site to accept it (see *Pending Acceptance* on the Dashboard).

Bulk work

- **Import .xlsx / .csv**: upload many assets at once. A template (*asset-import-template.xlsx*) is included in the application folder. Rows that fail checks are reported and nothing is half-saved.
- **Check similar IDs**: finds serial numbers that differ by one or two characters, typically typing or scanning errors.
- **Sync H/W details**: pulls firmware and hardware details for servers from your management appliances.
- **Export .xlsx / .csv**, **Export with Connectivity & H/W details** and **Export cable connectivity** download reports of the current filter.


8. DC Capacity

DC Capacity shows how full each site is. Choose the **site** at the top, then the **zone** (availability zone).

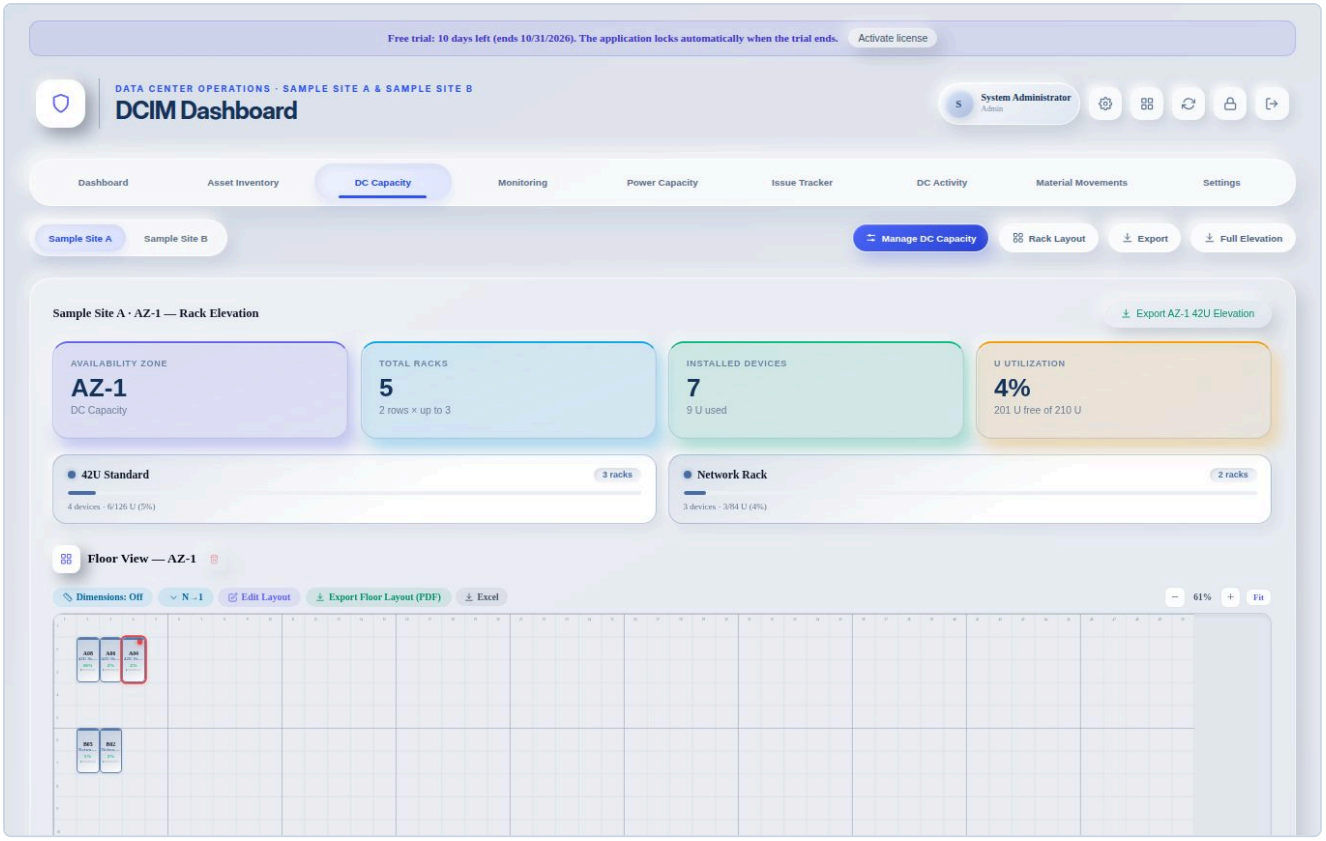

DC Capacity: zone summary, rack types and floor view.

- **Summary cards**: racks, installed devices and U utilisation for the zone.
- **Floor View**: racks on a grid. Use **Edit Layout** to drag racks, **Dimensions** to show sizes, and zoom or **Fit** to resize.
- **Rack Layout**: opens the front elevation of a chosen rack showing each device by U position.
- **Manage DC Capacity** (administrators): add or change locations, zones, racks and rack types.

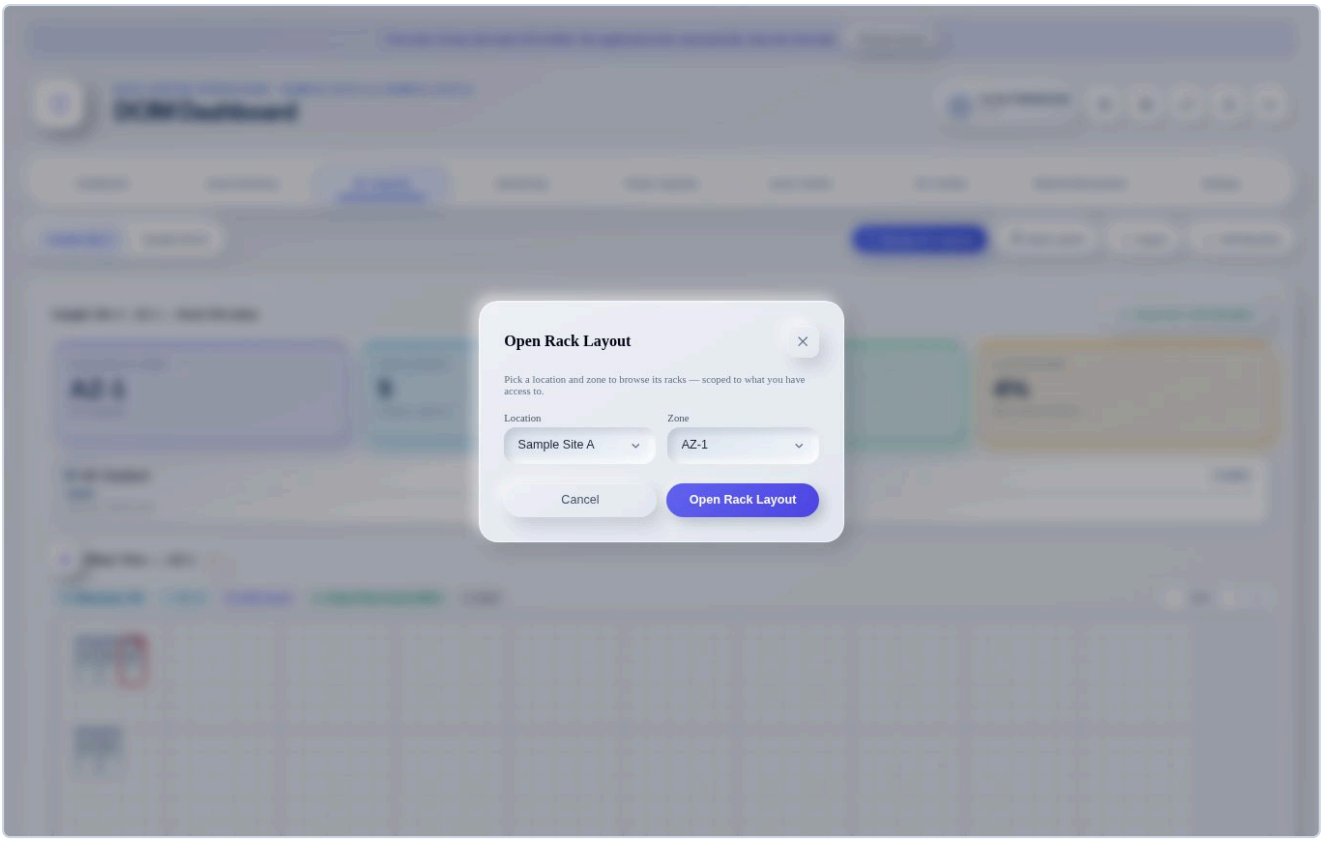

Choosing a rack to open its elevation.

Reports: **Export** (capacity summary), **Full Elevation** (all racks of the site), **Export AZ elevation**, and **Export Floor Layout** as **PDF** or **Excel**.


9. Monitoring (Dell OME, HPE OneView, Redfish)

Monitoring shows live hardware status from your management appliances. Connect each zone once; after that data refreshes by itself every 30 minutes and on demand.

Connecting an appliance


An administrator adds the appliance address and a **read-only** account for each zone in the application's settings file (*.env*) as *OME_<SITE>_<ZONE>_HOST / _USER / _PASS* or *ONEVIEW_<SITE>_<ZONE>_HOST / _USER / _PASS* and restarts the service. A zone that is not connected shows “Not configured for this zone”. Passwords stay on the server and are never shown in the browser.

Device Status

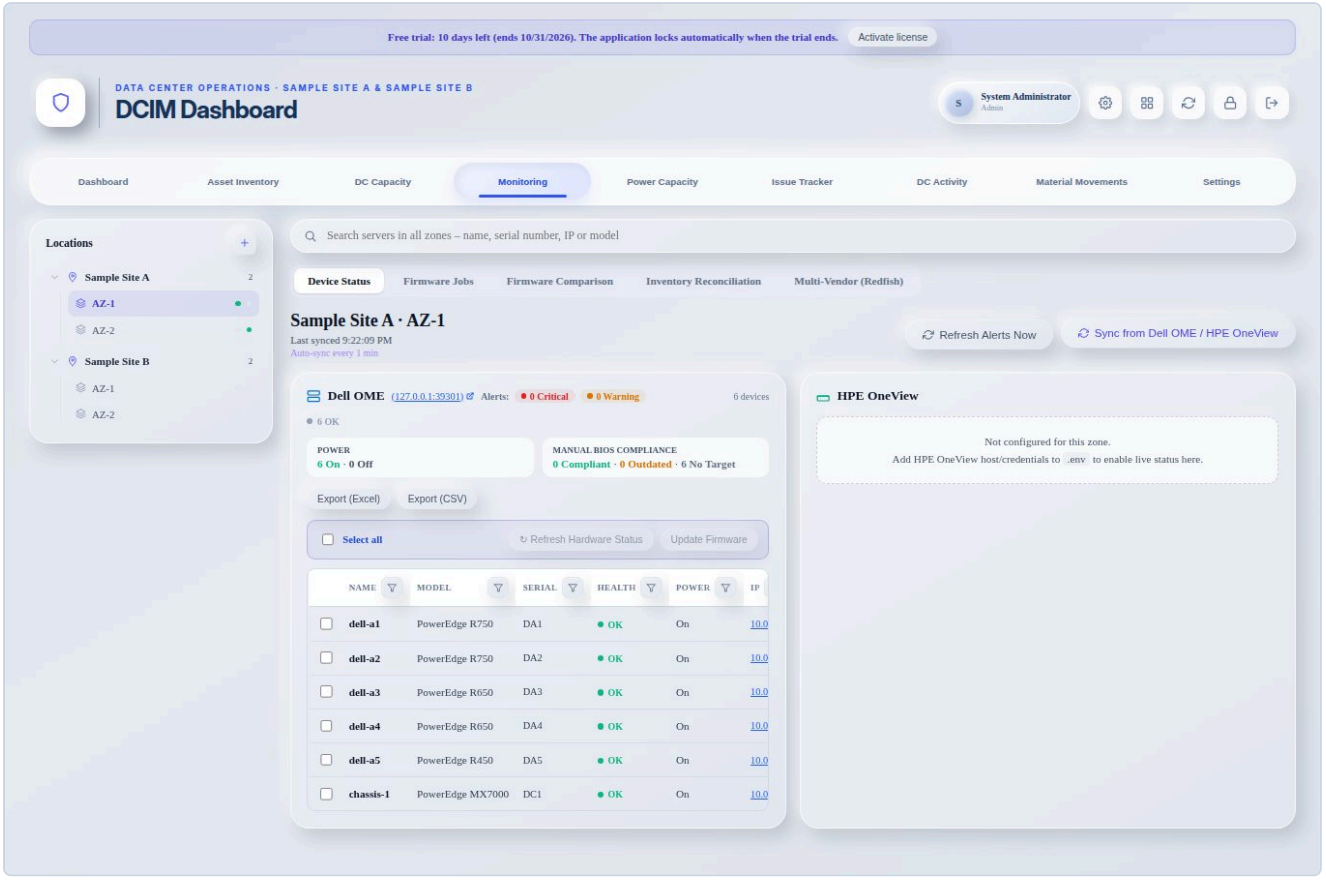

Device Status for a Dell OME zone: health, power state, model, serial number.


- Pick a **location and zone** on the left. **Sync from Dell OME / HPE OneView** fetches the latest data now; **Refresh Alerts Now** reloads alerts.
- The search box at the top finds a server in all zones by name, serial number, IP or model.
- Select servers and use **Refresh Hardware Status** or **Update Firmware** to start a firmware job from the appliance.
- **Export (Excel)** and **Export (CSV)** download the table.

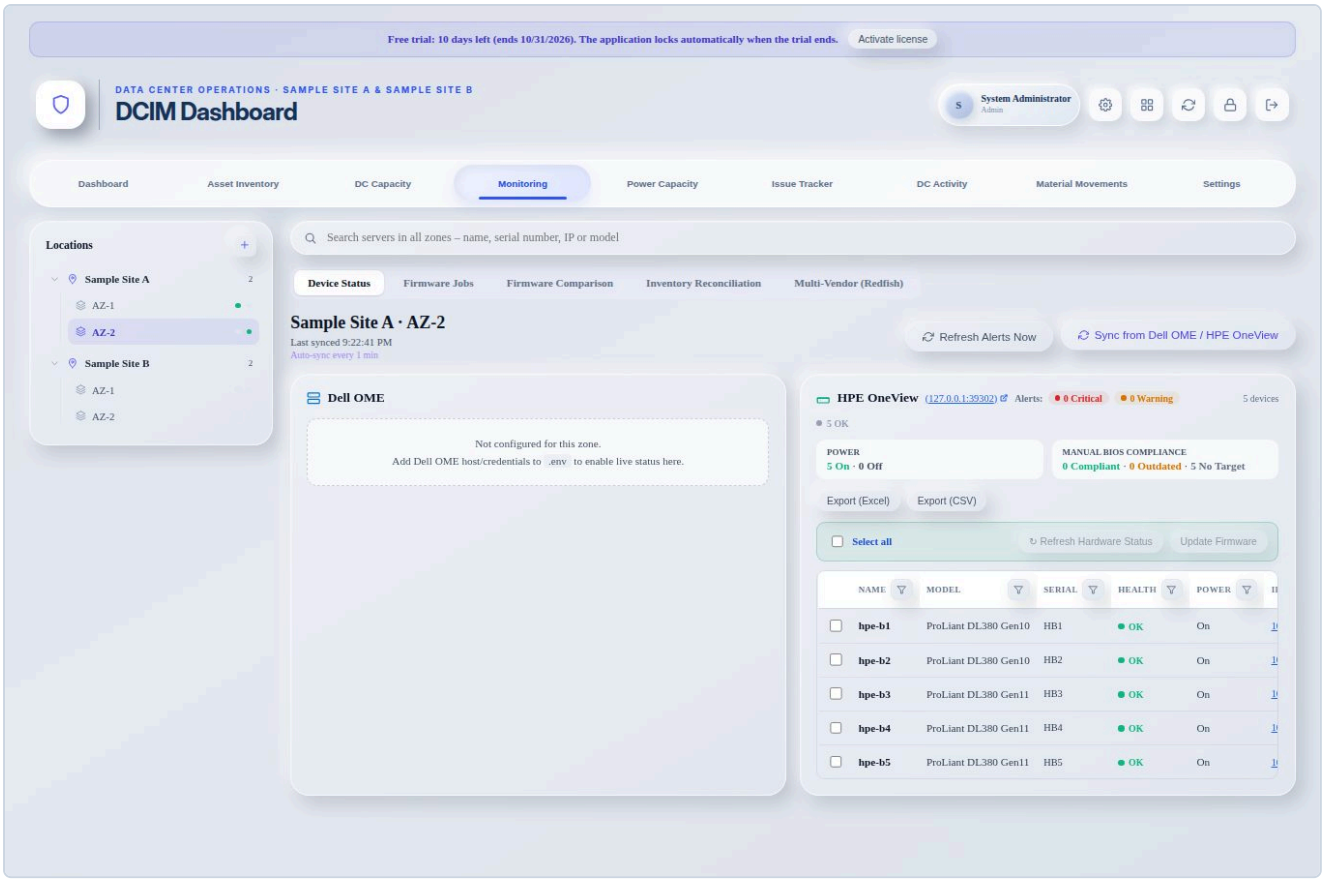

The same view for an HPE OneView zone.

Firmware Comparison and Firmware Jobs

Set a **target firmware** for each server model. The **Firmware Comparison** tab then lists every server as compliant, outdated or unknown. **Firmware Jobs** tracks updates you start from the application, with status and result, and raises an alert if a job fails.

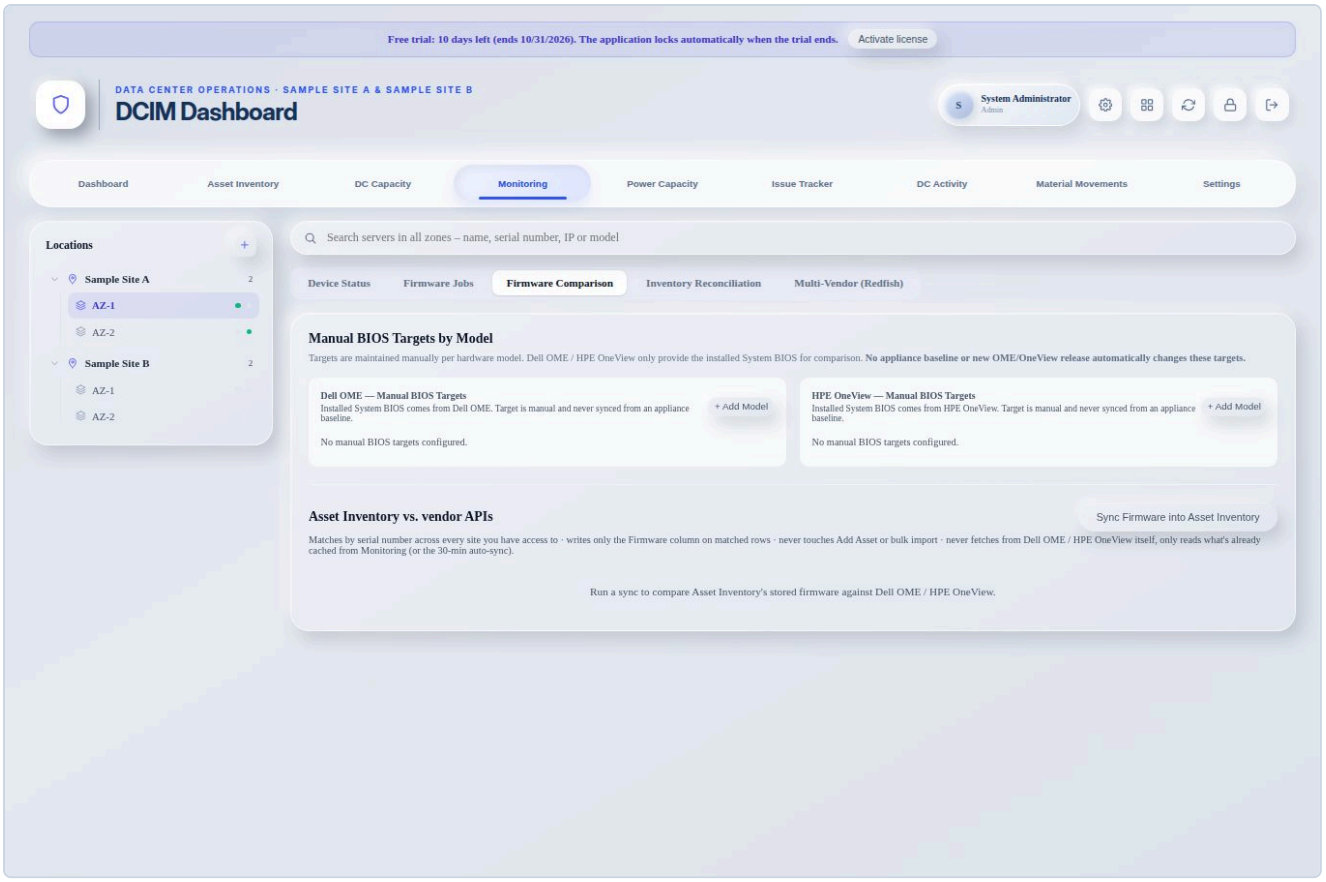


Firmware Comparison.

Inventory Reconciliation

Compares the server count in Asset Inventory with what Dell OME / HPE OneView actually report, zone by zone, so missing or extra devices are found quickly. It always fetches live data.

Multi-Vendor (Redfish)


For servers that are not managed by OME or OneView (Dell iDRAC, HPE iLO, Lenovo XCC, Cisco IMC and others) the application can read health, power state, alerts and BMC firmware directly over Redfish. Use **Configure** on a row, or **Test & Detect** / **Discover** to find BMCs.

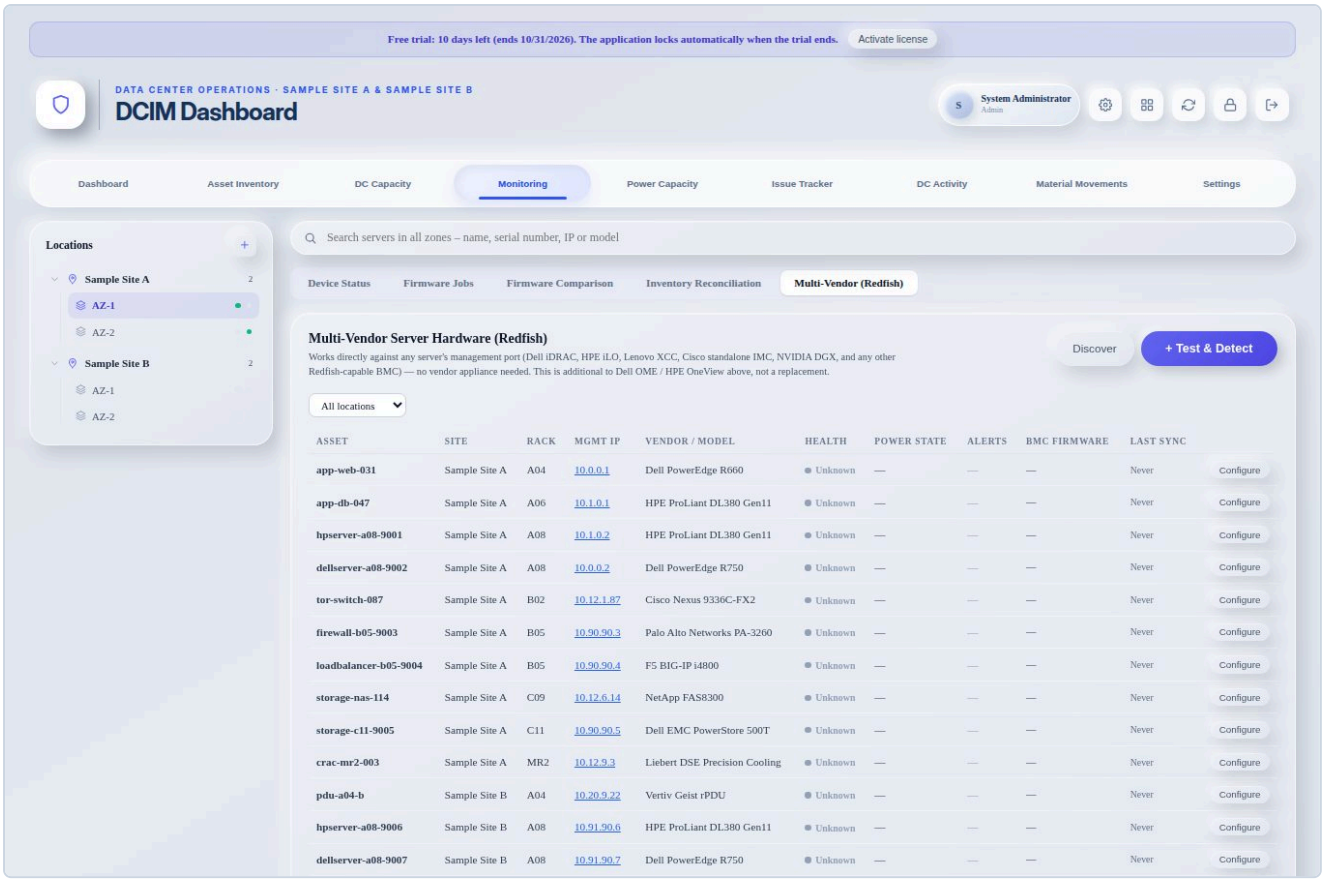

Multi-Vendor (Redfish) list built from Asset Inventory.


10. Power Capacity

Power Capacity compares what each rack's PDUs deliver with what they are rated for, so you know how much room is left before a feed overloads.

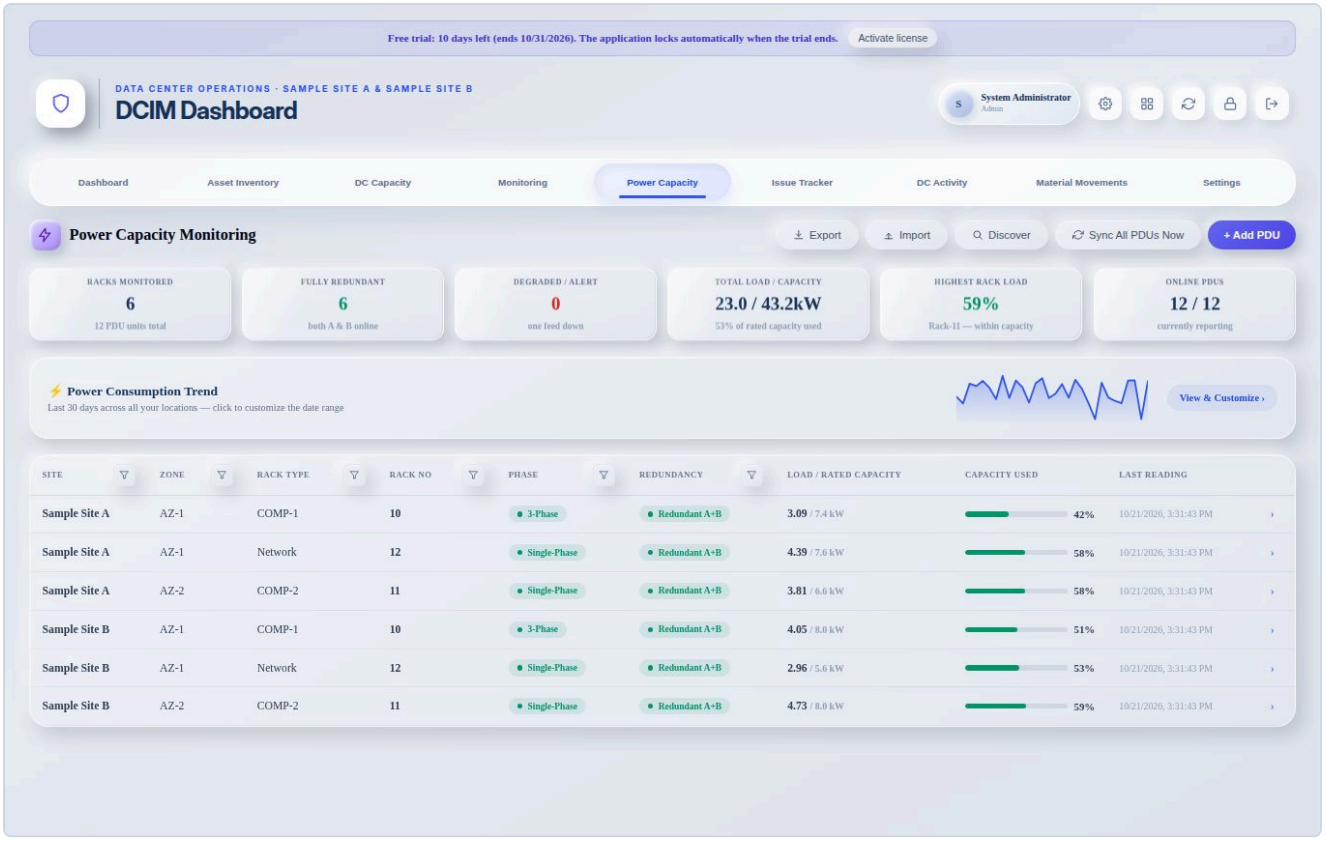

Power Capacity Monitoring.


- **Top tiles**: racks monitored, fully redundant (both A and B feeds online), degraded, total load against capacity, highest rack load, PDUs online.
- **Power Consumption Trend**: last 30 days; **View & Customize** chooses site, zone and dates.
- **Table**: one row per rack with phase, redundancy, load against rated kW and a usage bar. Click a row to see each feed.

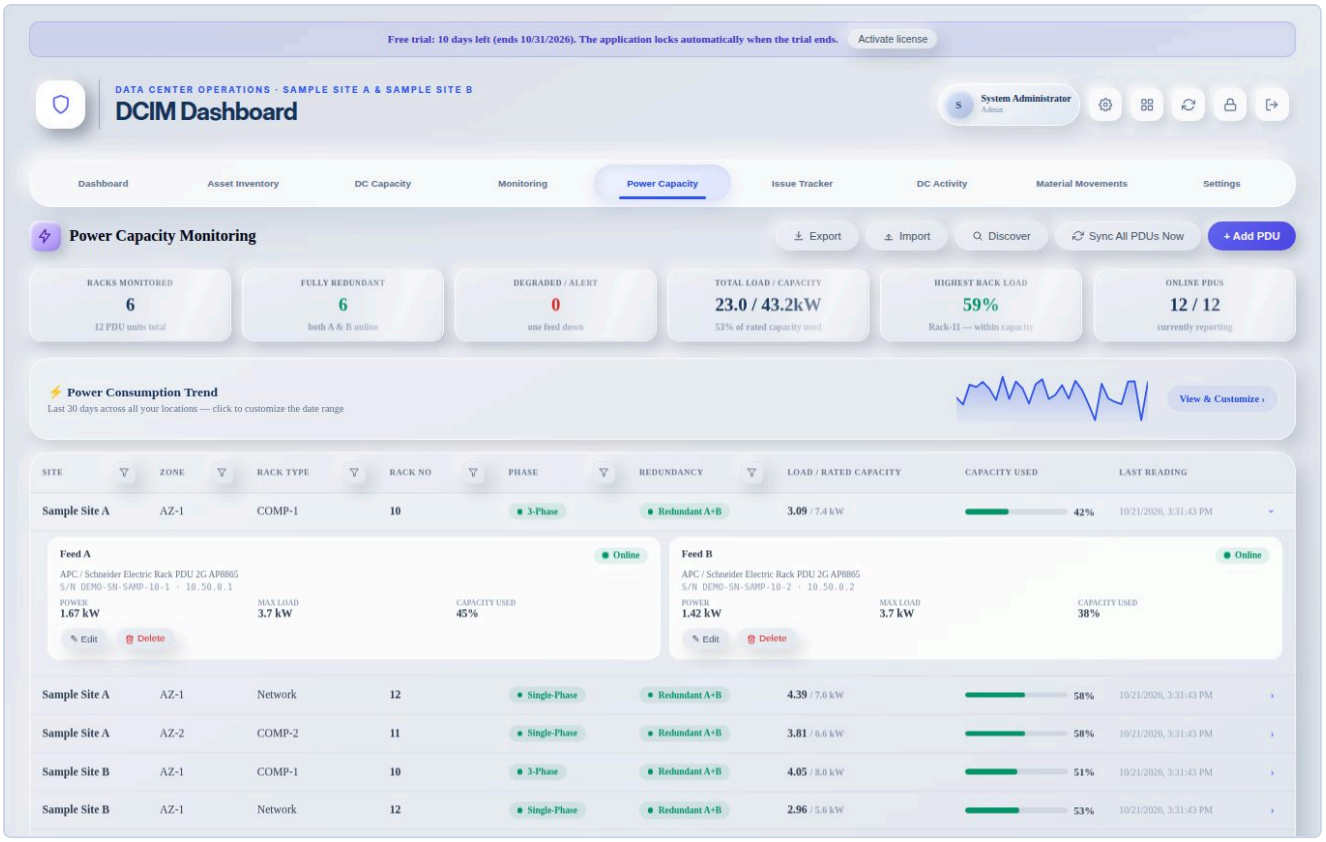

A rack expanded to show Feed A and Feed B.

Add a PDU

1. Press **+ Add PDU**.
2. Enter site, zone, rack number, feed label (A or B) and the PDU's **IP address**.
3. Press **Test & Auto-Detect**. The application reads the PDU over SNMP and fills vendor, model, serial number, firmware and the **rated maximum load** where the PDU reports it (APC, Eaton and Server Technology / Sentry are supported).
4. Choose the **vendor preset** that matches the model (it sets the right reading and scale), check the values, and Save.

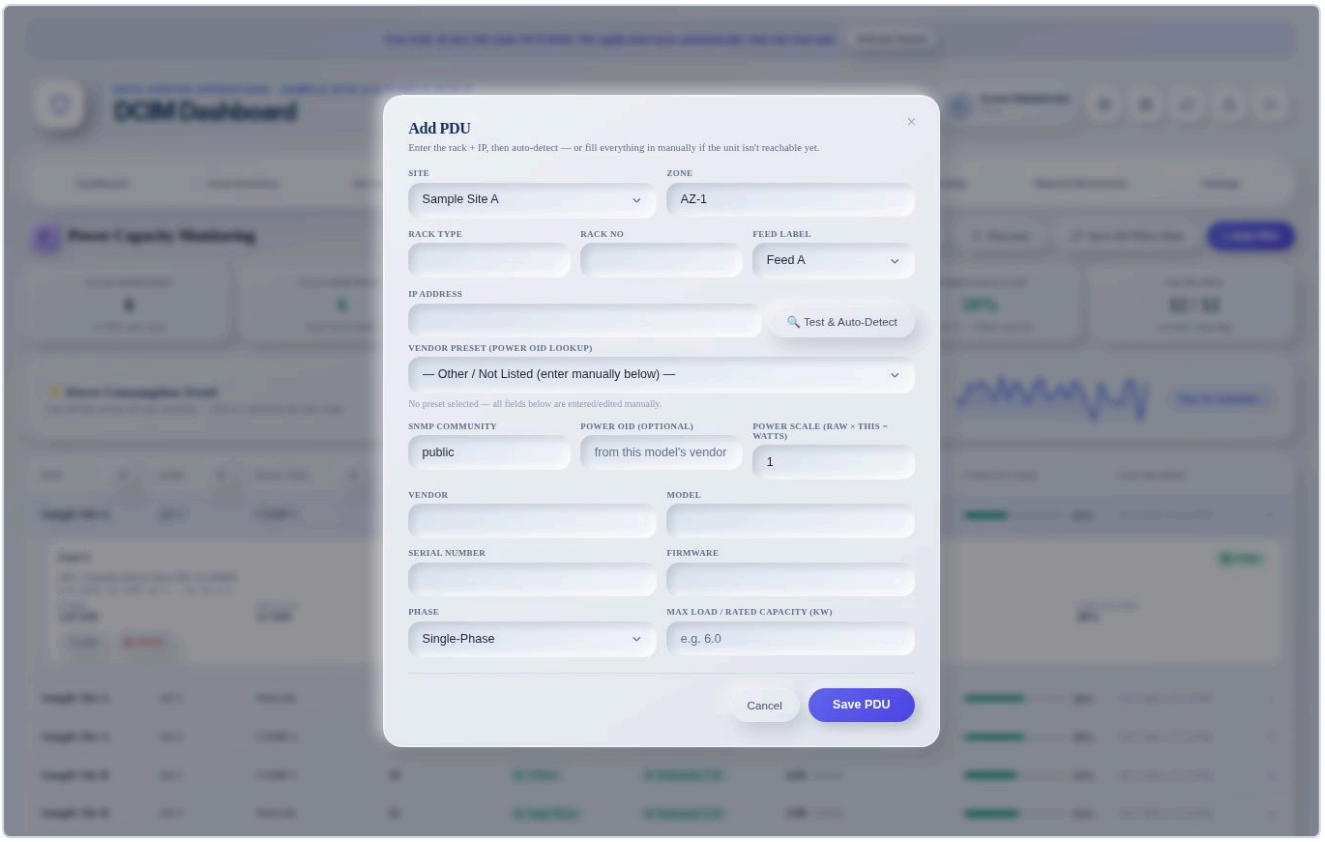

Add PDU with auto-detect and vendor presets.


The PDU must have SNMP v2c enabled and allow the community string you enter (default *public*) from the application server.

More ways to load PDUs

- **Import**: upload a list of PDUs from Excel/CSV (a dry run shows problems first).
- **Discover**: scans the address ranges your administrator configured and offers to add the PDUs it finds. Ranges are set with *PDU_DISCOVERY_RANGES* in the settings file.
- **Sync All PDUs Now** reads every PDU immediately; otherwise they are read automatically on a schedule.
- **Export** downloads the PDU inventory with current load.


11. Issue Tracker

Use the Issue Tracker to record faults and follow them to closure.

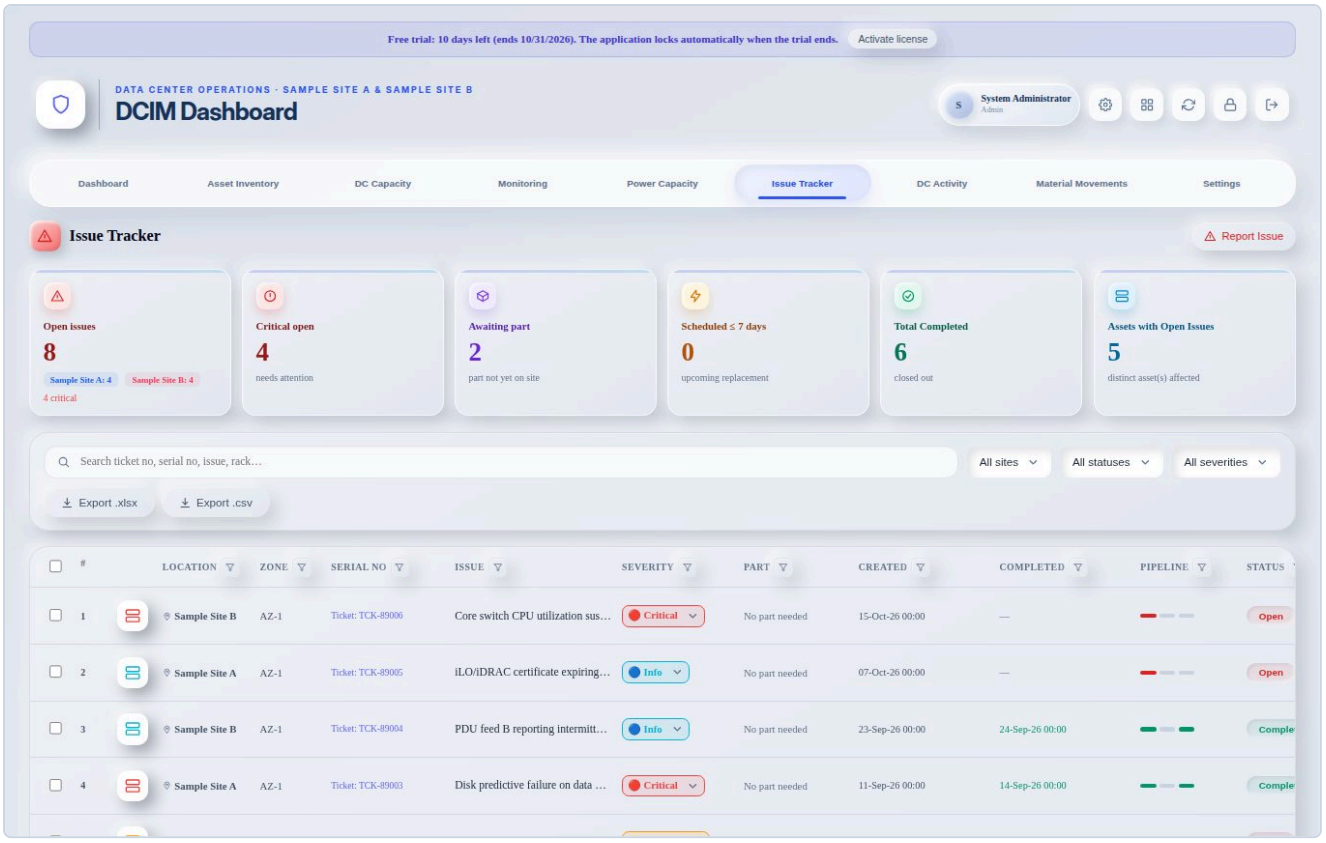

Issue Tracker list.

1. Press **Report Issue**. A ticket number is created for you.
2. Search the serial number to pick the affected asset (site, rack and hardware type fill in), set the **severity** (for example Critical or Warning), add a title and description.
3. Update the status as work progresses: **New**, **In Progress**, **Awaiting part**, **Resolved**, **Completed**.

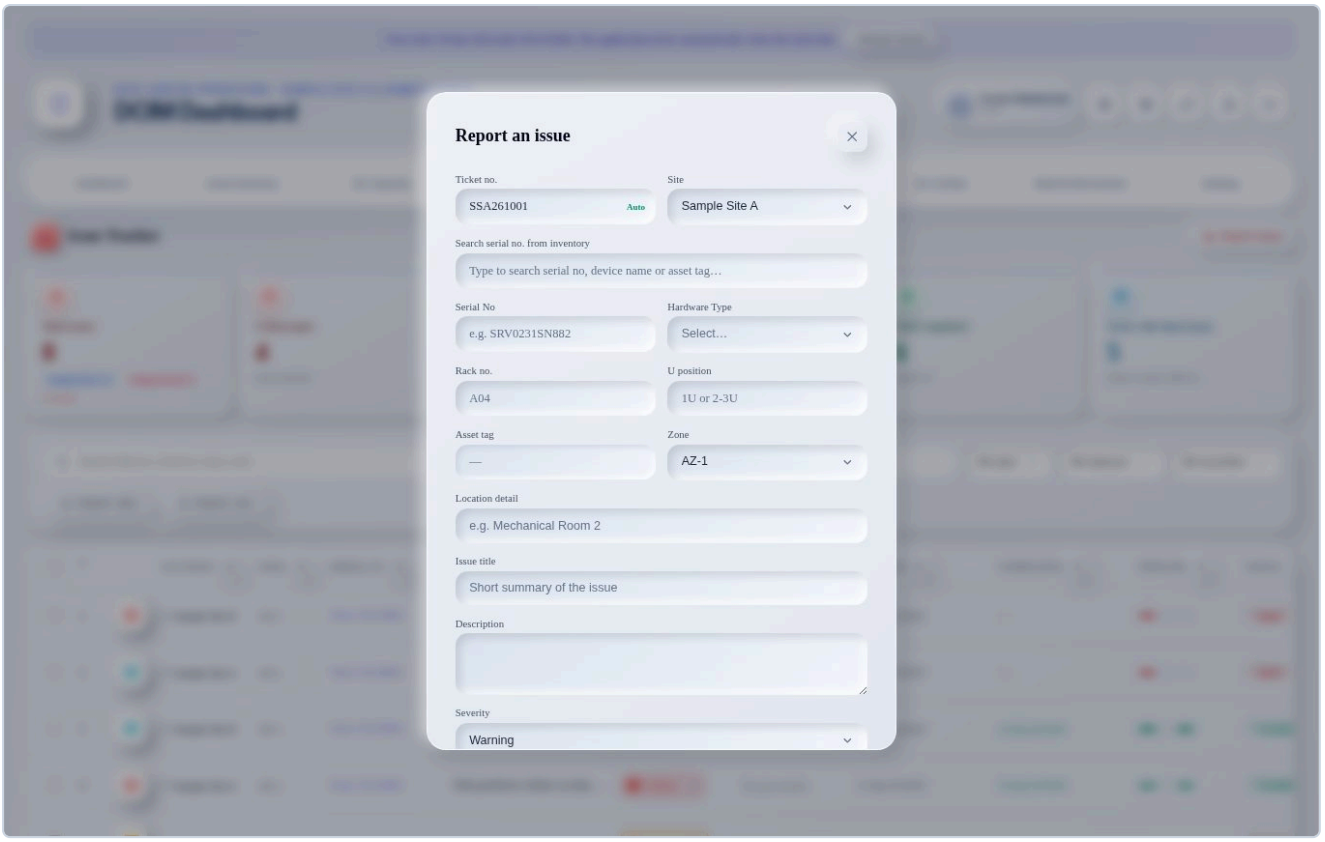


Report an issue.

Counts of open and critical issues feed the Dashboard. **Export .xlsx** and **Export .csv** download the filtered list.


12. DC Activity

DC Activity is the diary of work done in the data centre: cabling, rack and stack, firmware updates, power or UPS drills, commissioning and similar.

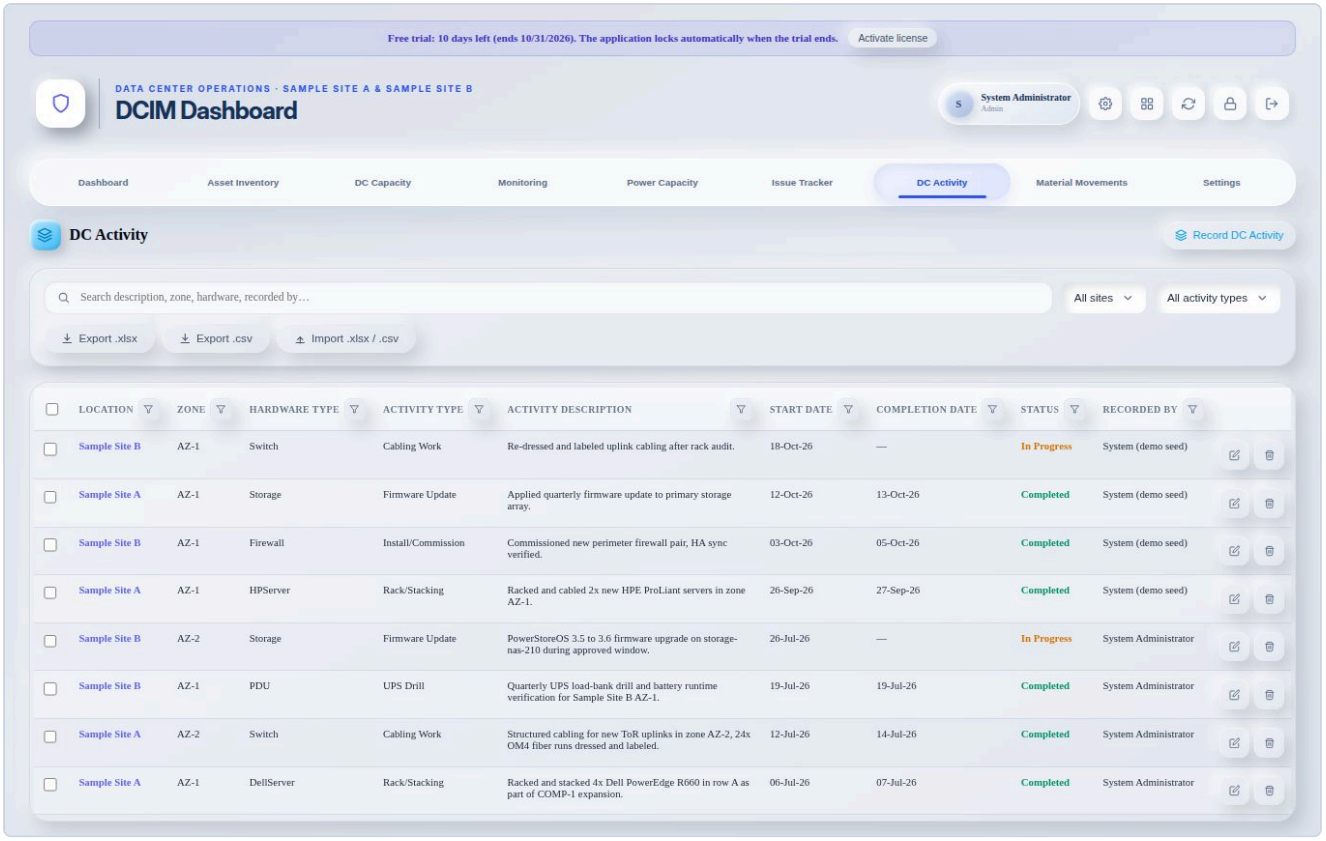

DC Activity list.


- **Record DC Activity**: choose site, zone, activity type and hardware type, enter a description, start date and completion date.
- Click a row to expand the full details (long descriptions wrap and are fully readable there).
- Status shows *In Progress* until a completion date is entered, then *Completed*.
- Search, filter by site or type, and **Export .xlsx / .csv** or **Import** a list.

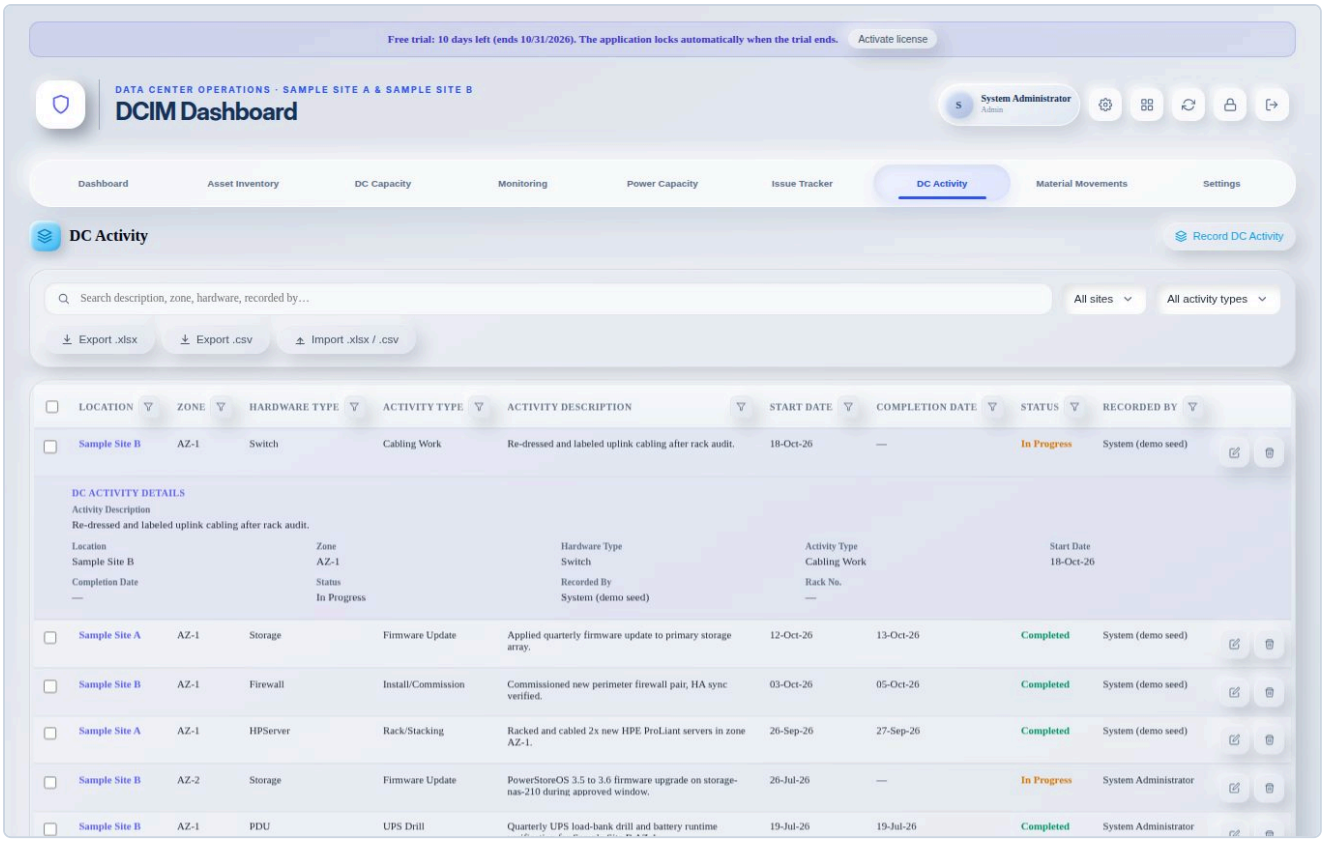

An activity expanded to show its details.


13. Material Movements and document scanning

Record every item that comes into or leaves a site, with the delivery challan or invoice number, so you can show where parts and equipment went.

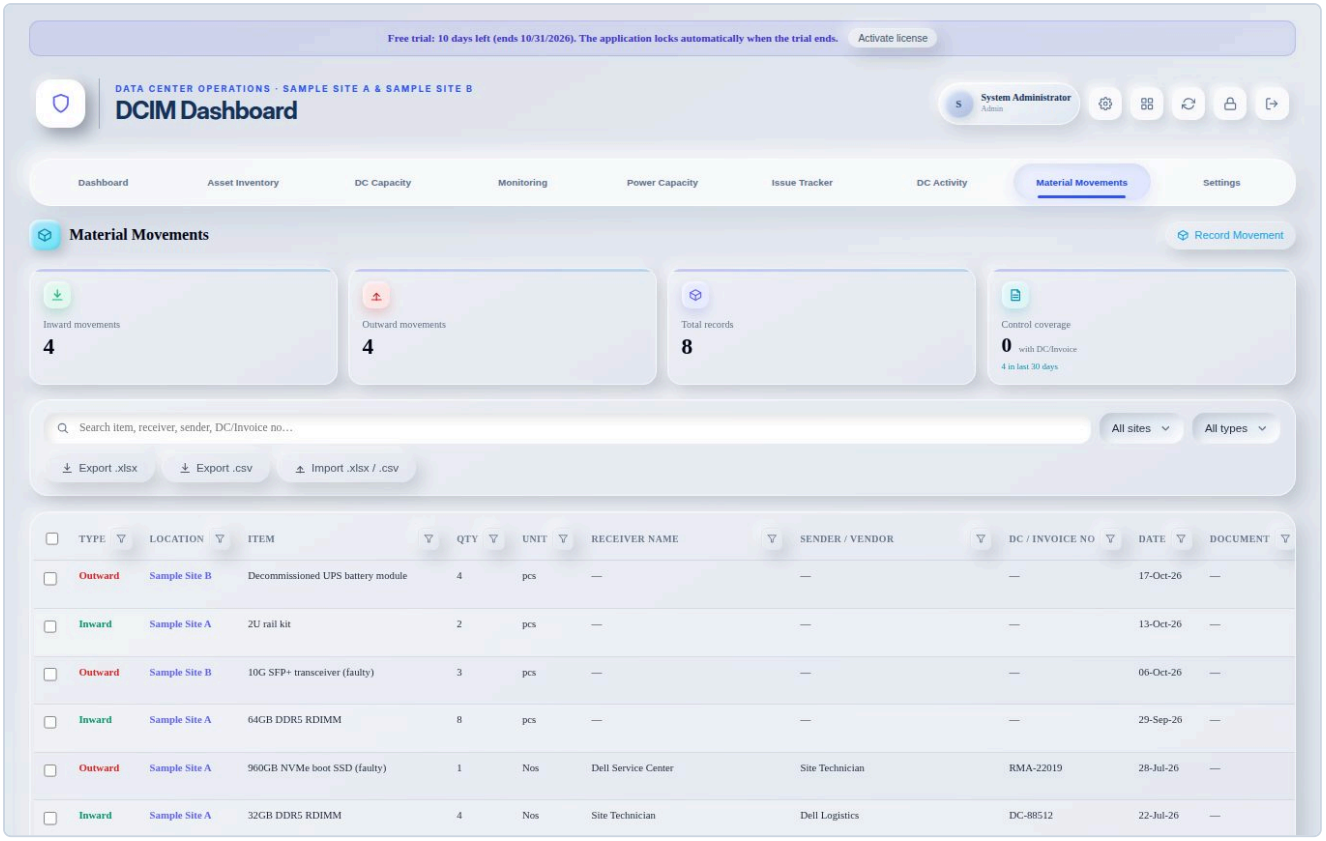

Material Movements.

1. Press **Record Movement** and choose **Inward** or **Outward**.
2. Optional: press **Scan document(s) (OCR)** and select the challan, invoice, POD, GRN or shipment document (PDF, JPG, PNG or WEBP; up to 5 files for one movement). The application reads it on your own server and **suggests** values such as DC / invoice number, date, items and serial numbers. Nothing is saved until you check the values and press Save.
3. Fill or correct item name, quantity, unit, receiver, sender or vendor, date and remarks, then Save. The scanned document stays attached to the movement.

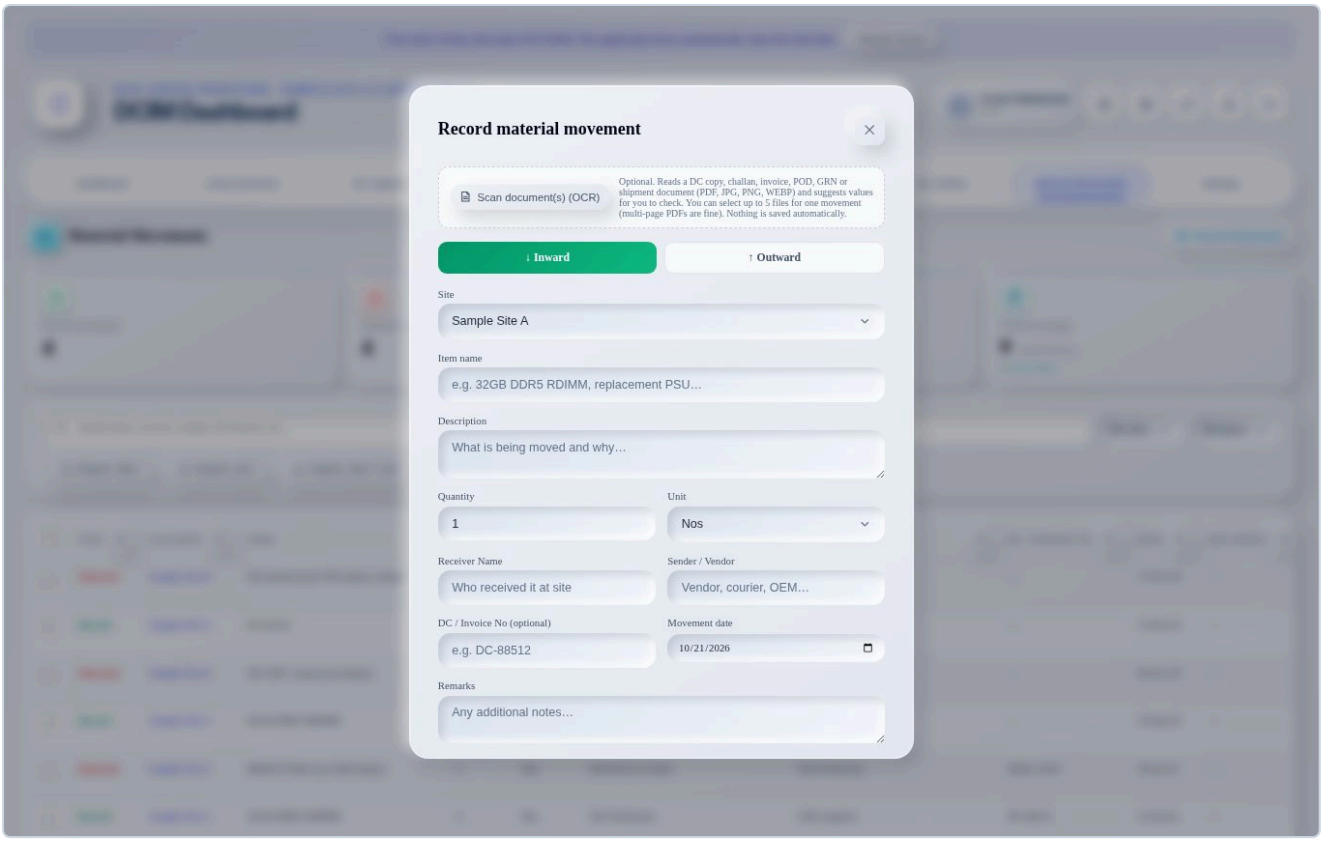


Record material movement with document scanning.

> Scanned text is only a suggestion. Always check serial numbers and quantities, especially for blurred or low-resolution documents.

14. Settings: users, backup, licence

Users and roles

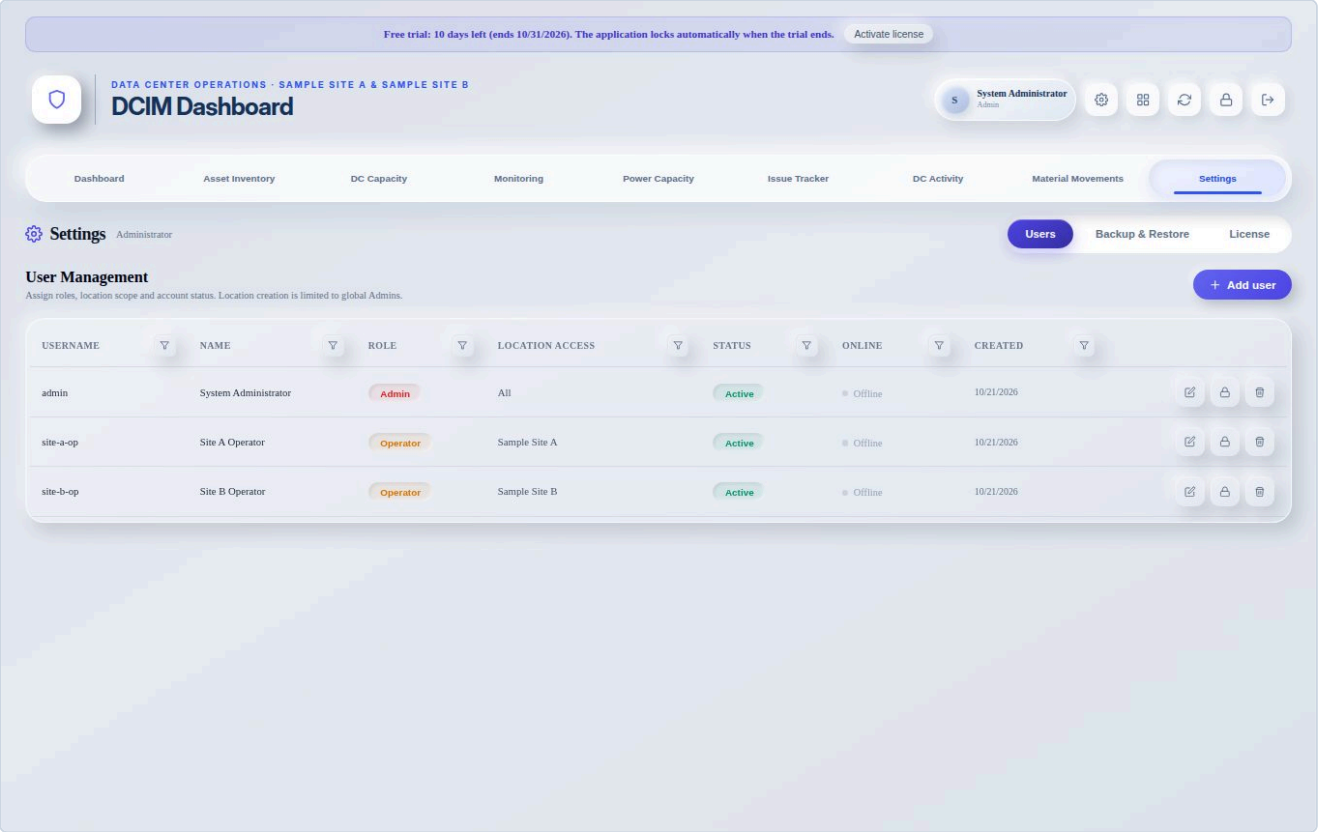


Settings > Users.

Role	Can do
Viewer	See data for the locations given to them. Cannot change anything.
Operator	Add and change assets, issues, activities, movements, PDUs and run syncs, for their own locations only.
Admin	Everything for their locations; an Admin with location *All* (a global Admin) also manages users, locations, backups and the licence.

Use **Add user** to create an account (strong password required), set the role and **Location access** (All or one site), and use the icons on each row to edit, lock or delete. A user restricted to one site never sees another site's data.

Backup and restore

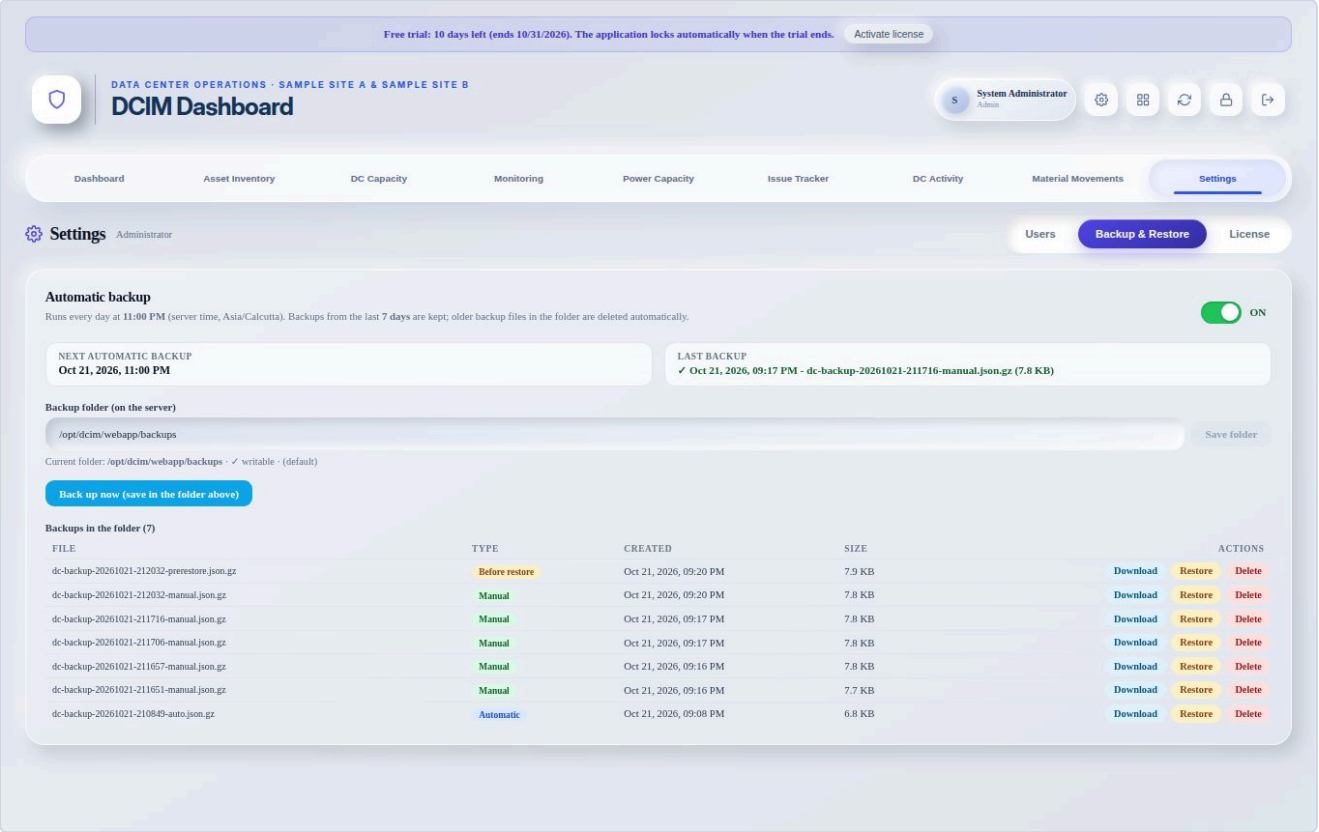


Settings > Backup & Restore.

- **Automatic backup** runs daily at the time shown (23:00 by default) and keeps the last 7 days. You can change the folder.
- **Back up now** saves a backup in that folder; **Download backup to my computer** saves a copy to your PC. A backup contains users (with protected passwords), locations, racks, assets, issues, activities, movements and attached documents.
- **Restore** returns the application to a chosen backup. Type **RESTORE** to confirm. Changes made after the backup are lost; your licence and trial record are not affected.

Keep a copy of backups on another server or disk.

Deployment dashboard

Administrators can open **/deployment-dashboard.html** for a technical status page: version, uptime, database, OCR engine, number of Dell OME and HPE OneView zones, mail server and a deep health check.

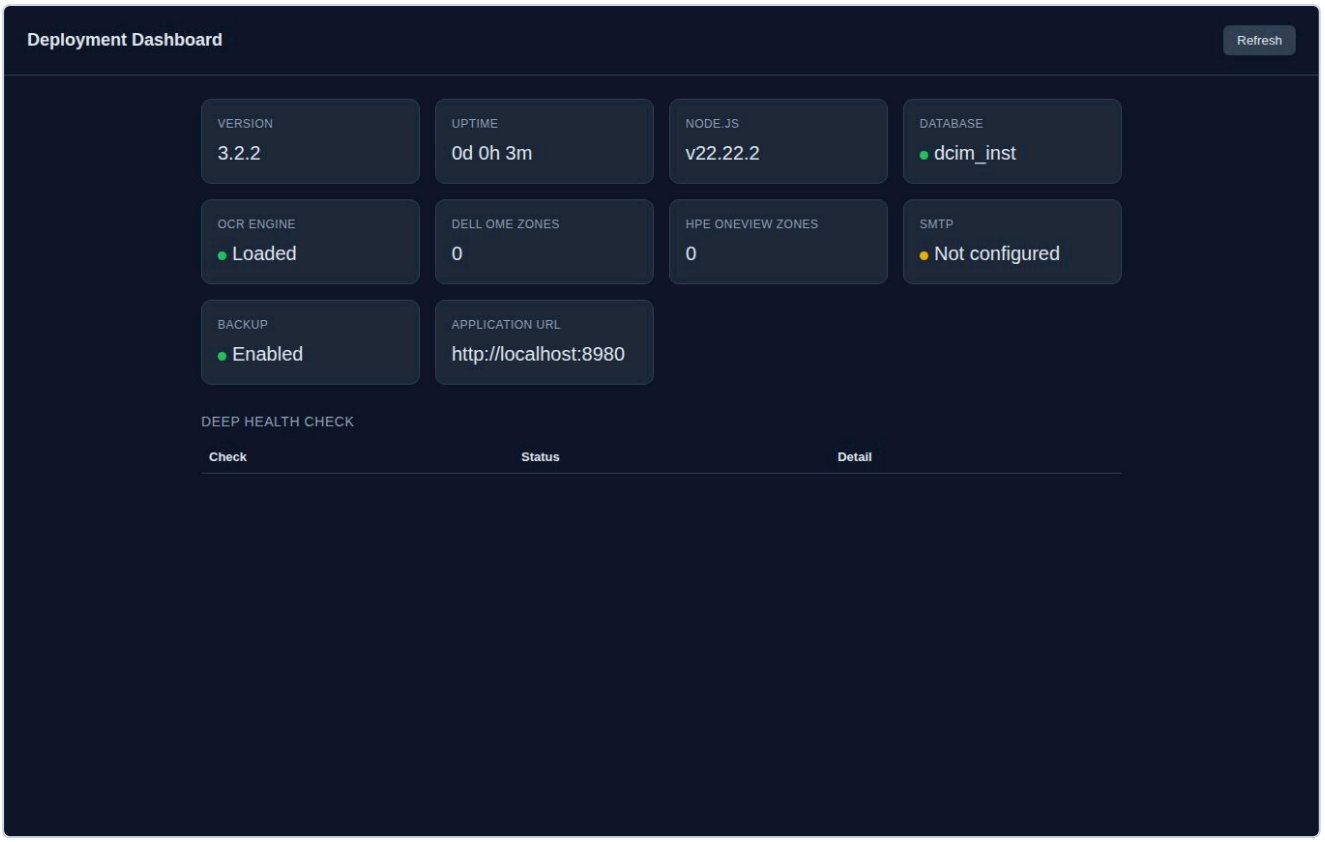

Deployment dashboard.

15. Reports and exports

Every export downloads a file to your computer in the current filter.

Where	Report	Format
Asset Inventory	Asset list; list with connectivity and hardware details; cable connectivity	.xlsx, .csv
DC Capacity	Capacity summary; rack elevation (all or per zone); floor layout	.xlsx, .pdf
Monitoring	Device status per zone	.xlsx, .csv
Power Capacity	PDU inventory with load	.xlsx
Issue Tracker	Issues	.xlsx, .csv
DC Activity	Activities	.xlsx, .csv
Material Movements	Movements	.xlsx, .csv
Settings > Backup	Full backup	.json.gz

A user only receives data for the locations they are allowed to see.

16. Security

- **Passwords**: starting passwords must be changed at first sign-in; new passwords must be strong.
- **Roles and locations** limit what each person can see and do, and the server enforces it, not just the screen.
- **Audit log**: sign-ins, creations, changes, deletions, syncs and restores are recorded with the user and time (kept 365 days by default).
- **Browser protection**: the application sends a strict content-security policy so only its own scripts run.
- **Secrets**: appliance and database passwords live only in the server's settings file, readable by the service account only.
- **Recommended**: put the application behind HTTPS (for example with a reverse proxy), allow the web port only from your management network, and set *CORS_ORIGIN* to your address.

17. Troubleshooting and FAQ

Problem	What to do
The page does not open	Check the service is running and the port is open on the server firewall; the address is *http://server:8974/* unless you chose another port.
“Free trial ended” lock screen	An administrator opens the lock screen's activation box and enters the code or .lic file from your vendor (section 5). Data is not lost.
Monitoring says “Not configured for this zone”	Add the appliance host and read-only account for that site and zone to the settings file and restart the service.
Monitoring says “Connection failed”	Check the appliance address and port, that the server can reach it, and that the account and password are correct.
Firmware Compliance shows “Unknown”	Either the firmware has not been read yet (wait for the next 30-minute sync or press Sync) or no target firmware is set for that model.
A PDU shows offline	Check the IP, that SNMP v2c is enabled, the community string, and that the application server is allowed to query it. Use Test & Auto-Detect.
A serial number is rejected as duplicate	The asset already exists. Search for it; if the serial is genuinely new, check for a typing error.
I forgot the administrator password	Another global administrator can reset it in Settings > Users. If none exists, contact your vendor for the reset procedure.
I see only one site	Your account's Location access is limited to that site; ask an administrator.
An upgrade went wrong	Run the installer in **repair** mode, or use the rollback script; a snapshot of the previous version is kept before every change.

18. Technical troubleshooting (administrators)

These steps are for the person who looks after the server. Commands are shown for Linux first and Windows (PowerShell, run as Administrator) second. Default locations: Linux **/opt/dcim**, Windows **C:\DCIM**; the application itself is in the **webapp** folder below it.

18.1 First check: is the application healthy?

```
curl http://localhost:8974/api/health
```

A healthy answer looks like **{"status":"ok","database":"connected","version":"3.2.2",...}**. Use your own port if you changed it.

Result	Meaning	Go to
Connection refused / no answer	Service is stopped, crashed or on another port	18.2, 18.3, 18.9
"status":"ok" but "database" is not "connected"	Application is up, database is not reachable	18.5, 18.6
Answer is OK but browsers cannot open the page	Firewall, wrong address, or proxy	18.9

The **Deployment dashboard** (*/deployment-dashboard.html*) shows the same information with version, uptime, database name, OCR engine and a deep health check.

18.2 Check, start, stop and restart the service

	Linux	Windows
Status	`sudo systemctl status dcim` `dcim-service status`	`Get-Service DCIM`
Restart	`sudo systemctl restart dcim` `dcim-service restart`	`Restart-Service DCIM`
Stop / start	`sudo systemctl stop dcim` `sudo systemctl start dcim`	`Stop-Service DCIM` `Start-Service DCIM`
Start at boot	`sudo systemctl enable dcim`	`Set-Service DCIM -StartupType Automatic`

The **dcim-service** shortcut is installed by the .deb and .rpm packages. Always restart the service after editing the **.env** settings file, wait about 15 seconds, then repeat the health check in 18.1.

18.3 Read the logs

```
# Linux: service output (last 100 lines, then follow)
sudo journalctl -u dcim -n 100 --no-pager
```

```
sudo journalctl -u dcim -f

# Application log files (one per day)
/opt/dcim/webapp/logs/dcim-YYYYMMDD.log        (Linux)
C:\DCIM\webapp\logs\dcim-YYYYMMDD.log          (Windows)
```

- Lines marked **[ERROR]** and **[WARN]** are the ones to read. At start-up the log also prints the version, port, database and licence mode.
- When a screen shows an error with a **reference ID**, search the log for that ID to find the exact cause.
- Send the last 100 lines and the support bundle (section 19) to your vendor.

18.4 Check Node.js

The application needs Node.js 18 or newer (22 recommended). The Windows installer, the .deb package and the offline kit bundle their own Node.js; the .rpm and the plain install script use the one installed on the server.

```
node -v
which node                                  # Linux: where it is
/opt/dcim/runtime/node/bin/node -v          # bundled copy, if present
```

- **"node: command not found"** or a version below 18: install Node.js 18 or newer (from your distribution or nodejs.org), then run the installer in **repair** mode so the service points to it.
- The service stops right after start: run **journalctl -u dcim -n 50**; the last lines name the missing file, module or setting.

18.5 Check the database

```
# Linux: is the database service running? (name is mysql, mysqld or mariadb)
sudo systemctl status mysql
sudo systemctl status mariadb
# Embedded database installed by DCIM: service dcim-mariadb, port 3307

# Windows
Get-Service MySQL*, MariaDB*, DCIMMariaDB

# Can the application's account log in? (use the values from .env)
mysql -h localhost -P 3306 -u dcim -p dcim -e "SELECT 1"
```

- The database name, user, host and port the application uses are the **DB_HOST, DB_PORT, DB_USER, DB_NAME** lines of the **.env** file in the webapp folder.
- **Access denied for user**: the password in .env is wrong or the account has no rights. Ask your database administrator to run (with your own values):

  ```
  GRANT ALL ON dcim.* TO 'dcim'@'localhost' IDENTIFIED BY 'new-password';
  FLUSH PRIVILEGES;
  ```

  then put the same password in DB_PASSWORD in .env and restart the service.
- **Unknown database**: create it first (**CREATE DATABASE dcim;**); the application creates its tables itself at start-up.

- **Too many connections**: check **SHOW VARIABLES LIKE 'max_connections';**. The application uses up to 25 connections (setting DB_POOL_SIZE); raise the database limit or lower DB_POOL_SIZE.

18.6 The database restarted or the network dropped (reconnect)

1. The application normally reconnects by itself within a few seconds once the database is back.
2. Run the health check (18.1). If "database" is still not "connected" after a minute, restart the DCIM service (18.2).
3. If it still fails, run the login test in 18.5 from the application server. A failure there means a database, account or network problem, not an application problem.
4. When the database is on another server, also check that the port (3306) is open between the two servers and that the database account is allowed to connect from the application server's address.

> Start the database before the application. The installer sets the service order for you; if you start things by hand, start the database first.

18.7 Missing modules, blank page, "Cannot find module" (npm install)

Packaged installs already contain every module, so this normally appears only after files were copied by hand or a copy was incomplete. Typical signs: the service stops right after start with **Cannot find module 'express'** (or another name), or the page never loads.

```
# Linux
cd /opt/dcim/webapp
sudo -u dcim npm ci --omit=dev      # needs access to the npm registry
# if the server is offline, re-copy the application files instead:
sudo dcim-repair
sudo systemctl restart dcim

# Windows
cd C:\DCIM\webapp
npm ci --omit=dev
Restart-Service DCIM
```

- Run npm as the service account, or fix ownership afterwards with **sudo chown -R dcim:dcim /opt/dcim**, so the service can read the files.
- Never copy only some files over an installation; use upgrade or repair mode so the application, its modules and the browser files stay in step.
- If the page looks old or broken after an update, press **Ctrl+F5** in the browser to load the new files.

18.8 Settings file (.env) quick reference

The file is **webapp/.env**. Only the service account and administrators should be able to read it. Restart the service after every change.

Setting	Purpose

PORT	Web port (default 8974)
DB_HOST, DB_PORT, DB_USER, DB_PASSWORD, DB_NAME	Database connection
DB_POOL_SIZE	Maximum database connections (default 25)
JWT_SECRET	Secret used to sign sign-in sessions; changing it signs everyone out
SESSION_TIMEOUT_HOURS	How long a sign-in lasts
CORS_ORIGIN	The web address users type; set it in production
CSP_MODE	enforce (default), report-only or off; use report-only only to diagnose a blank or half-working page
OME_<SITE>_<ZONE>_HOST / _USER / _PASS	Dell OME appliance for a zone
ONEVIEW_<SITE>_<ZONE>_HOST / _USER / _PASS	HPE OneView appliance for a zone
PDU_DISCOVERY_RANGES	Address ranges the PDU Discover button scans, as start-end:Site:Zone
MONITOR_AUTOSYNC_INTERVAL_MS	How often appliances are polled (default 30 minutes)
SEED_SAMPLE_DATA	Set to 0 before the very first start to create no demo data

18.9 Port in use, firewall, cannot reach the page

```
# What is using the port? (Linux / Windows)
sudo ss -ltnp | grep 8974
netstat -ano | findstr :8974

# Open the port (Linux: RHEL family / Ubuntu)
sudo firewall-cmd --add-port=8974/tcp --permanent && sudo firewall-cmd --reload
sudo ufw allow 8974/tcp

# Open the port (Windows)
New-NetFirewallRule -DisplayName "DCIM" -Direction Inbound -Protocol TCP -LocalPort 8974 -Acti
on Allow
```

- **EADDRINUSE** in the log: another program already uses the port. Stop it, or set a different PORT in .env and restart.
- If it opens on the server itself (**http://localhost:8974/**) but not from your PC, the cause is a firewall, a cloud security group or a wrong address.
- Behind a reverse proxy (nginx, IIS) set **TRUST_PROXY** and **CORS_ORIGIN**; an example nginx file is installed with the package.

18.10 Sign-in and session problems

- **Signed out suddenly**: a user has one active session; signing in on another PC ends the first one. Sessions also end after the timeout.

- **Everyone is signed out after a restart**: JWT_SECRET is missing or changed in .env. Set a long fixed value once.
- **Wrong time or date**: keep the server clock correct (NTP). Sessions, backups, the trial period and reports depend on it.

18.11 Dell OME, HPE OneView, Redfish and PDU connectivity tests

Test from the **application server**, not from your PC, because the server is what connects.

```
curl -k -I https://ome.example.local/                # appliance answers?
getent hosts ome.example.local                       # name resolves? (Linux)
snmpget -v2c -c public 10.0.0.50 1.3.6.1.2.1.1.5.0   # PDU answers on SNMP?
```

- **Connection failed**: wrong address or port, DNS name not resolving, or a firewall between the servers.
- **Login failed**: wrong user or password in .env, or the account is locked on the appliance. Use a dedicated read-only account.
- **Appliance uses a self-signed certificate**: that is accepted for these connections.
- **PDU offline**: SNMP v2c must be enabled on the PDU, the community string must match, and UDP 161 must be open from the application server.
- Data appears after the next 30-minute sync, or at once when you press **Sync** on the page.

18.12 Backup, restore and disk space

- **"Another backup or restore is already running"**: wait a minute; a backup can run at start-up or at the scheduled time.
- **Backup folder not writable**: Settings > Backup & Restore shows the folder state; fix the folder permissions for the service account or choose another folder.
- **Out of disk space**: check **df -h** (Linux) or the drive properties (Windows). Old backups are deleted after the retention period; log files and uploaded documents also grow over time.

18.13 Repair, upgrade and rollback

```
# Linux
sudo dcim-repair             # re-applies files, service and permissions; keeps data and .env
sudo dcim-upgrade            # upgrade in place from a newer package
sudo bash rollback.sh        # (from the package folder, e.g. /usr/share/dcim) return to the
snapshot taken before the last change

# Windows: run the Repair or Upgrade utility from the Start menu,
# or run the installer again and choose repair / upgrade.
```

A snapshot (settings and a database dump) is saved under **/var/backups/dcim/** (Linux) before every upgrade or repair.

18.14 What to collect before asking for help

1. The output of the health check (18.1) and **node -v**.

2. The last 100 log lines (18.3) and the reference ID of any on-screen error.
3. The service status (18.2) and, for database problems, the result of the login test in 18.5 (without the password).
4. The support bundle from the Deployment dashboard (it leaves out passwords).

19. Getting help

When you contact your vendor, an administrator can open **Deployment dashboard** and create a **support bundle** (a file with version, configuration summary without passwords, and recent logs). Please send:

- the application version (shown on the Deployment dashboard);
- what you did, what you expected and what happened, with the time;
- a screenshot of the message, and the support bundle.

Glossary

Term	Meaning
AZ / Zone	A hall, room or availability zone inside a site
U	Rack unit: 1U is 44.45 mm of rack height
PDU	Power distribution unit that feeds a rack; usually an A and a B feed
OME / OneView	Dell OpenManage Enterprise and HPE OneView management appliances
Redfish	Standard management interface of server BMCs (iDRAC, iLO, XCC)
OCR	Reading text from a scanned document or photo
Machine ID	Code that identifies this server for licensing