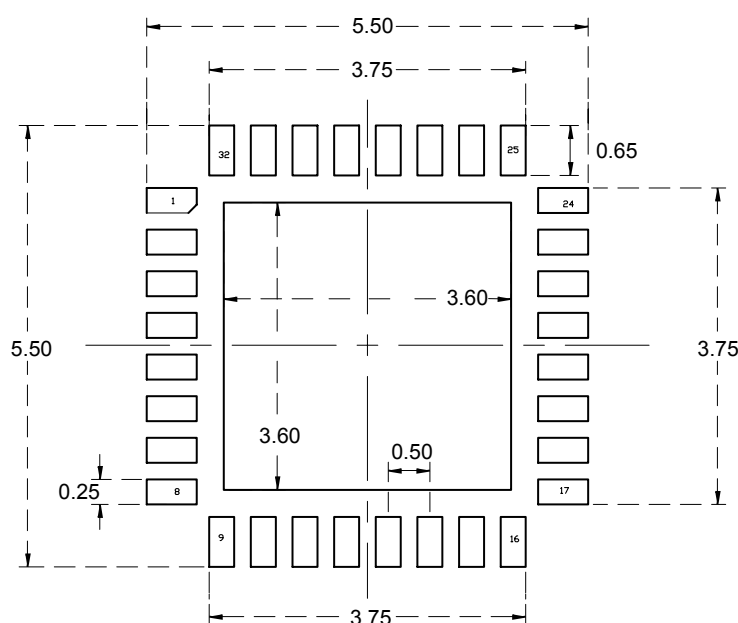


**Table 78. Tolerance of form and position symbol definition**

| Symbol | Definition                                                                                                                                                                                                 |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| aaa    | The bilateral profile tolerance that controls the position of the plastic body sides. The centres of the profile zones are defined by the basic dimensions D and E.                                        |
| bbb    | The tolerance that controls the position of the terminals with respect to Datums A and B. The centre of the tolerance zone for each terminal is defined by basic dimension e as related to datums A and B. |
| ccc    | The tolerance located parallel to the seating plane in which the top surface of the package must be located.                                                                                               |
| ddd    | The tolerance that controls the position of the terminals to each other. The centres of the profile zones are defined by basic dimension e.                                                                |
| eee    | The unilateral tolerance located above the seating plane wherein the bottom surface of all terminals must be located = coplanarity                                                                         |
| fff    | The tolerance that controls the position of the exposed metal heat feature. The centre of the tolerance zone is the data defined by the centrelines of the package body                                    |

**Figure 48. UFQFPN32 - Footprint example**


A0B8\_UFQFPN32\_FP\_V1

1. Dimensions are expressed in millimeters.