


Passive expression pedal / I2C ADC / PIN GUIDE

IN = into this board OUT = from this board I/O = both directions GND = 0 V 3V3 = 3.3 V

BACK / READ FROM THIS SIDE

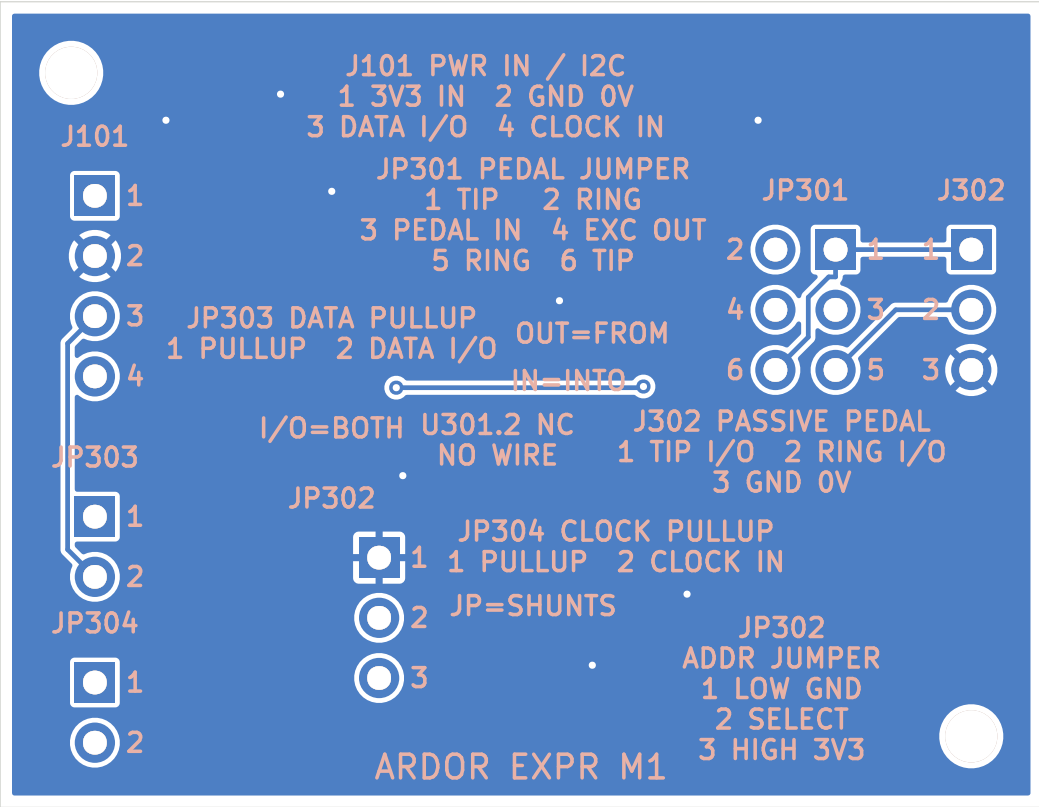

The square connector pad is pin 1.

Match the connector name and pin number.

Connector assignments differ between modules.

UNUSED COMPONENT PINS

U301.2 / UNUSED ALERT - LEAVE OPEN

H1 / H2: mounting holes; no electrical connection.

Small via holes are not wire connectors.

JP connectors accept shunts, not host cables.

Use ASSEMBLY.md for the short procedure. Disconnect the power supply before solder work or jumper changes.

J302 / PASSIVE PEDAL INPUT / EXCITATION OUTPUT

1: TIP I/O / INPUT / OUTPUT

Passive expression socket tip; not a powered CV pedal.

2: RING I/O / INPUT / OUTPUT

Passive expression socket ring; not a powered CV pedal.

3: GND 0V / GROUND

TRS sleeve; pedal pot ground and enclosure bond.

JP302 / JUMPER ONLY: ADC ADDRESS

1: LOW GND / JUMPER

Shunt 1-2 selects address 0x48.

2: SELECT / CONTROL / JUMPER

Fit ONE shunt: 1-2 or 2-3.

3: HIGH 3V3 / JUMPER

Shunt 2-3 selects address 0x49.

1-2: 0x48; 2-3: 0x49. One shunt required; no external cable.

JP303 / JUMPER ONLY: SDA PULLUP

1: PULLUP / JUMPER

Shunt 1-2 only if the host has no SDA pull-up.

2: DATA I/O / INPUT / OUTPUT / JUMPER

Same shunt; this is not a host cable connector. Fit 1-2 to enable. Remove if host already has a pull-up.

J101 / 3V3 POWER INPUT + I2C TO HOST

1: 3V3 IN / POWER INPUT

Positive output of the matching regulated supply.

2: GND 0V / GROUND

Host or cable ground / 0 V.

3: DATA I/O / INPUT / OUTPUT

Host I2C SDA data pin.

4: CLOCK IN / INPUT

Host I2C SCL clock pin.

JP301 / JUMPER ONLY: PEDAL POLARITY

1: TIP / JUMPER

Fit a shunt to pin 3 for tip-wiper mode.

2: RING / JUMPER

Fit a shunt to pin 4 for tip-wiper mode.

3: PEDAL IN / INPUT / JUMPER

Shunt 1-3 for tip wiper, or 3-5 for ring wiper.

4: EXC OUT / OUTPUT / JUMPER

Shunt 2-4 for tip wiper, or 4-6 for ring wiper.

5: RING / JUMPER

Fit a shunt to pin 3 for ring-wiper mode.

6: TIP / JUMPER

Fit a shunt to pin 4 for ring-wiper mode.

TIP: 1-3 + 2-4; RING: 3-5 + 4-6. Use TWO shunts; no external cable.

JP304 / JUMPER ONLY: SCL PULLUP

1: PULLUP / JUMPER

Shunt 1-2 only if the host has no SCL pull-up.

2: CLOCK IN / INPUT / JUMPER

Same shunt; this is not a host cable connector. Fit 1-2 to enable. Remove if host already has a pull-up.