

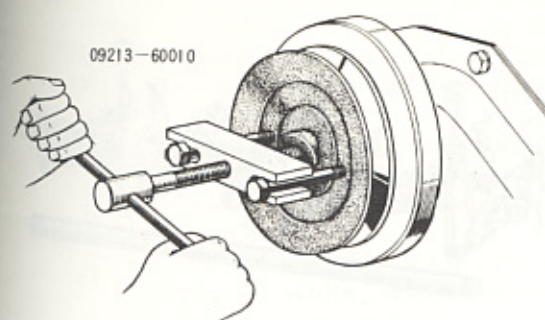


Fig. 2-3 Crankshaft Pulley Removal X4925

26. Remove the two bolts retaining the camshaft thrust plate by working through the holes in the camshaft timing gear.

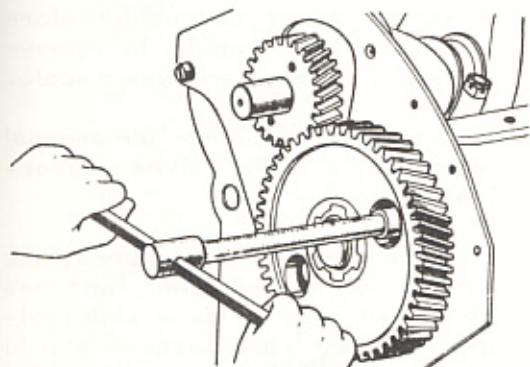


Fig. 2-4 Removing Camshaft X4926

27. Remove the camshaft assembly toward the front of the block. Support the camshaft with hands carefully so as not to damage the camshaft bearings when removing the camshaft. Remove the timing gear oil nozzle, and the front end plate.
28. If necessary, remove the crankshaft timing gear using the Crankshaft Pulley & Gear Puller 09213-60010.
29. Remove the front end plate retaining bolt, and screw, then remove the plate, and the gasket.

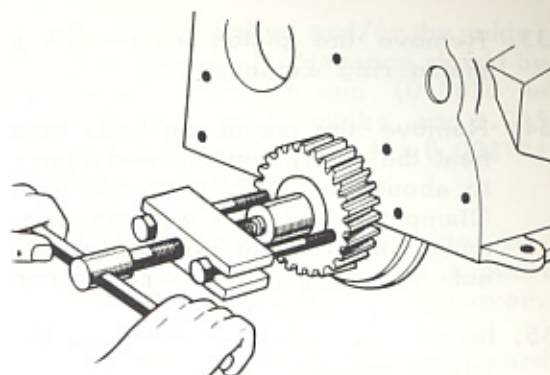


Fig. 2-5 Crankshaft Timing Gear Removal X4927

30. Check the connecting rods, and pistons for the cylinder number, and mark the number on these parts if necessary.
31. Remove the cotter pins from the connecting rod bolts, then remove the nuts, and rod caps. Install a vinyl tubes on the connecting rod bolts.
32. Remove the pistons with the connecting rods toward the cylinder head. If the piston rings strike against the ridge at the top of the cylinder, remove the ridge to prevent damaging the piston ring lands. Remove the vinyl tubes from the bolts, and install the caps, and nuts on their respective con-rods. Place the pistons aside in the sequence of the cylinder number.



Fig. 2-6 Piston Ring Removal X4928