

(5) Install twelve valve lifters in right side of block and drop the twelve push rods down through the openings in the cylinder head and seat them in the lifters.

(6) Drop oil delivery pipe down through the openings in the cylinder head and tighten it to oil delivery union of block.

(7) Place two rocker shaft assemblies on the cylinder head so that the studs on the cylinder head will the respective supports on each shaft.

(8) Install four bolts and two stud nuts which retain each rocker shaft assembly to cylinder head and tighten evenly to 30~45 foot-pounds torque. Place the oil connect sleeve, spring, union over open ends of the two rocker shaft assemblies.

(9) Connect oil delivery pipe to rocker shaft oil delivery union and tighten securely. Figure 28 shows rocker arm and shaft assemblies correctly installed on head.

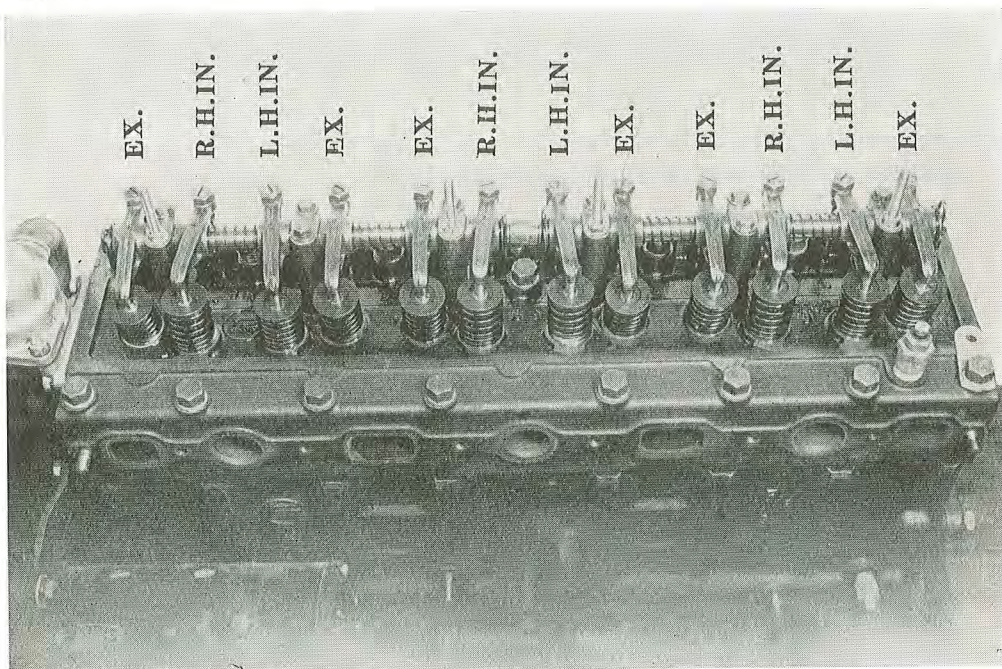


Figure 28 - Valve Rocker Arms Correctly Assembled

(10) Install water thermal unit and tighten securely.

(11) Connect radiator inlet hose and bypass hose to thermostat case.

(12) Install valve lifter cover using a new gasket and tighten lifter cover bolts to 2~4 ft-lbs torque. Place coil in position at right side of head, and install attaching bolts and tighten to 10~15 ft-lbs torque.

(13) When the engine is overhauled, all spark plugs and spark plug gaskets should be replaced with new parts. Always check new spark plugs for proper gap, using a 0.9 mm spark plug gage. Tighten spark plugs to 12~18 foot-pounds tension. If torque wrench is not available, tighten finger tight and one-half turn more.