

Operation Instructions

5.8. Stopping in case of emergency (EMERGENCY OFF)



In case of danger: Switch EMERGENCY OFF main switch (1) to OFF
OR
Press EMERGENCY STOP button (2)

Turn on again after EMERGENCY OFF

- Determine the reason for EMERGENCY OFF and eliminate existing hazards.
- Switch on the machine and establish operational readiness OR unlock the Emergency Stop button
- ➔ See chapter 5.5 Switching on the machine - establishing operational readiness.
- Ensure proper operation by observing machine operation.

Operation Instructions

Parameter / Function - Description

6.1.1.2. CALIBRATION FACTOR

- ☞ Depending on the material it is possible that the current length doesn't fit to the required length. The length calibration makes it possible to coordinate the length measuring unit with the different materials. If corresponding empirical values of the calibration are known for different materials, these can be entered accordingly in the CALIBRATION FACTOR parameter.
- To determine the calibration manually the CALIBRATION FACTOR has to be set to 1,000 first and a length of e.g. 1000mm has to be input. Then a testing part has to be cut.
The CALIBRATION is calculated by dividing the measured length of the test part through the set length.
E.g. set length = 1000mm, measured length of test part = 1035mm.
Result for the CALIBRATION = 1035mm / 1000mm = 1,035.
The input is executed at the touch panel at display 2a field (3) or in the datasets at display 10a.
- ☞ The calibration factor can also be determined automatically (see the following parameter CAL. MEASURED LENGTH)

6.1.1.3. CAL. MEASURED LENGTH

- ☞ If the length of the cut parts no longer corresponds to the set length, a new calibration factor can be determined automatically via the parameter CAL. MEASURED. LENGTH.
- For this, the last cut part is measured and the measured length is input in the parameter CAL. MEASURED LENGTH. The calibration factor is then automatically recalculated.
The input is executed at the touch panel at display 2a field (4).

6.1.1.4. CUTTING TIME

- ☞ The cutting time is the time that the cutter spends in the cutting position.
The required cutting time needs to be found empirically depending on the material.
A guide value of ca. 1-4 sec. applies to the cutting time depending on the material.
- The input is executed at the touch panel at display 2a field (5) or in the datasets at display 10a.

6.1.1.5. MIN. CYCLE TIME

- ☞ The min. cycle time is needed to ensure that the blades can be heated up after cutting of very thick materials with short cutting length.
The min. cycle time needs to be found empirically depending on the material.
The default setting for the min. cycle time is 2 seconds.
- The input is executed at the touch panel at display 2a field (6) or in the datasets at display 10a.

Operation Instructions

6.1.2. Process parameters on the front panel



Parameter / Function - Description

6.1.2.1. FEED

- ☞ The feed speed can be adjusted depending on the material.
In general, the feed speed can be set to the maximum value of 120m/min and only needs to be changed if e.g. there is frequent material jam at the material outlet of the drive rollers.
- The feed speed is adjusted with the potentiometer (1) on the front panel.

6.1.2.2. HEATING CURRENT

- The heating current is adjusted via a potentiometer (2) in the front of the machine down below the ammeter (3). The heating current is displayed on the ammeter.
The required cutting temperature and the associated heating current need to be found empirically depending on the material.
- ☞ A **guide value** of **ca. 90-110 A** applies to the heating current depending on the material.

Operation Instructions

Parameter / Function - Description

6.1.3.4. TIME WASTE FEED

- ☞ This parameter defines the time and thus the drop length that the drive runs after starting until the first cut is made,
The factory setting is 0.8 seconds.
- The input is executed at the touch panel at display 5a field (4)

6.1.3.5. CALCULATION FACTOR ENCODER

- ☞ This machine parameter is used for the internal calculation of the counting impulses of the encoder.
It is defined as number of the counting impulses/increments of the encoder per turn multiplied with 1000 and divided through the circumference of the measuring roll in mm.
The default setting of the factor is 2000 and mustn't changed.
- The input is executed at the touch panel at display 5a field (5).

Operation Instructions

6.2. Datasets

To make the operation easier if production orders are repeated parameters like e.g length, creep speed length, length calibration, cutting time and others and the selection/deselection of functions can be stored in datasets. These datasets are stored on the touch panel and can be loaded and administrated.



HINT!

Please note that changes to or entry of a data record must always be stored and transferred in order to update the data in the controller.


The datasets can be loaded and send to the PLC at display 2a. Editing of the datasets isn't possible at display 2a.

All changes are executed at display 10a that is selected with the button EDIT DATASETS at display 1a or after pressing CALL DATASET at display 2a with the button EDIT DATASETS at the appearing POP-UP window.


6.2.1. Call/Send dataset by selection

The data that is stored in the datasets has to be send to the PLC to make it available for the PLC.

Therefore touch the button CALL DATASET at display 2b.

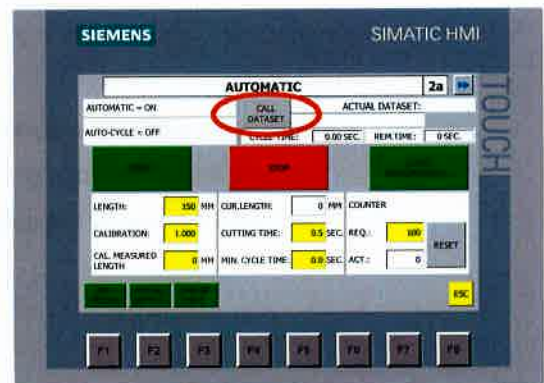




A POP-UP-window does appear.

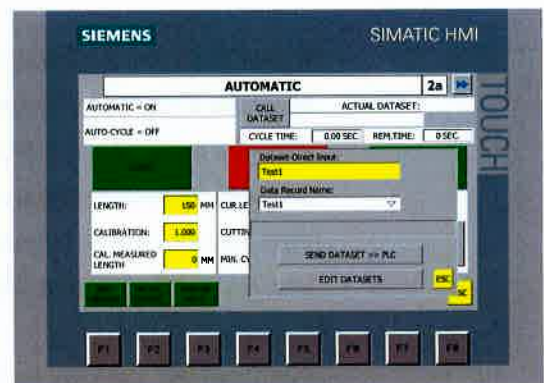

Operation Instructions


6.2.2. Edit datasets

To create, store, load, modify, copy and delete datasets touch the button EDIT DATASETS at display 1a or EDIT DATASET at the POP-UP window. The button is password protected. After input of the password and pressing the button again the display 10a occurs.

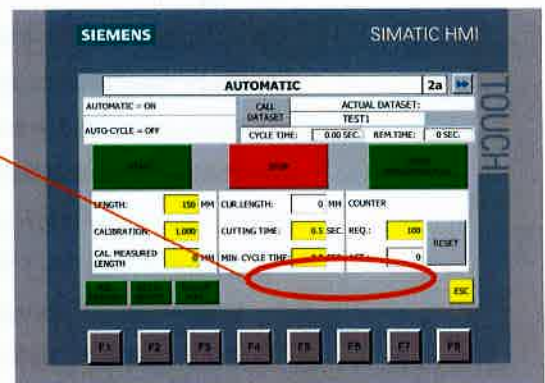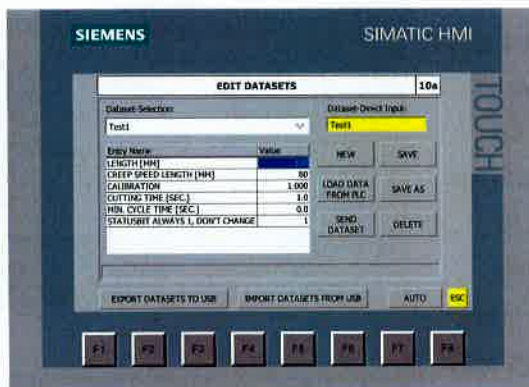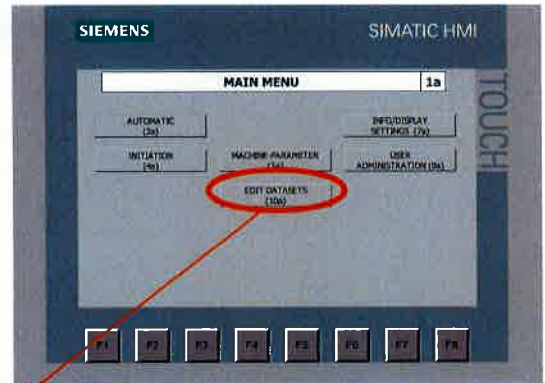

6.2.2.1. Create and save new datasets

Touch the button NEW at display 10a.

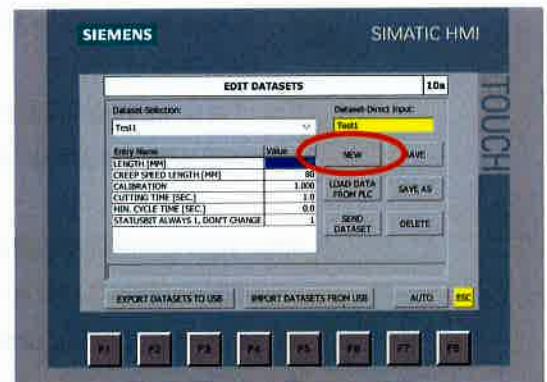


Operation Instructions

6.2.2.2. Changing a dataset

To modify a dataset it has to be loaded first.

Select the required dataset by double clicking on it at the list at display 10a or if the name is known by input the exact name in the yellow field.


The name of the dataset is shown in the top line.

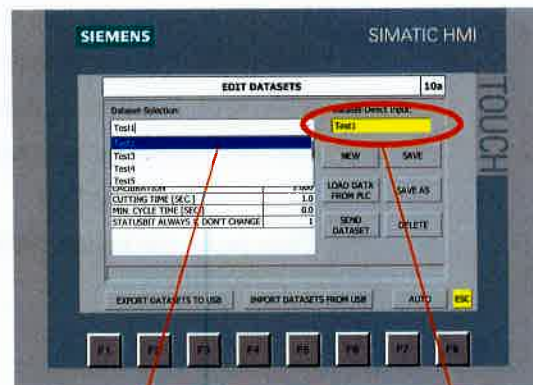

SELECT

INPUT


Input/change the required parameters in the list by touching on the shown values. Therefore click on the value right of the parameter name and input the value in the opened pop-up window and confirm it.

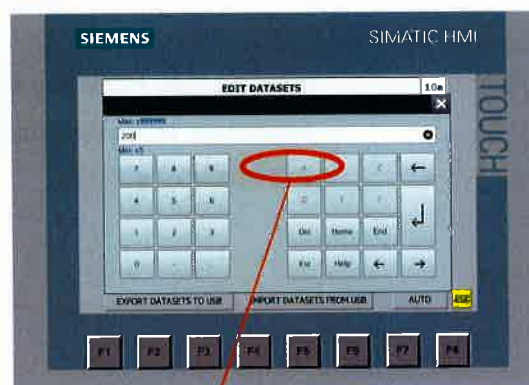

After setting/modifying the parameters press the button SAVE to store the dataset.

In the opened pop-up window and confirm the overwrite request with YES.

If the changes shouldn't be saved select in the pop-up-window NO.

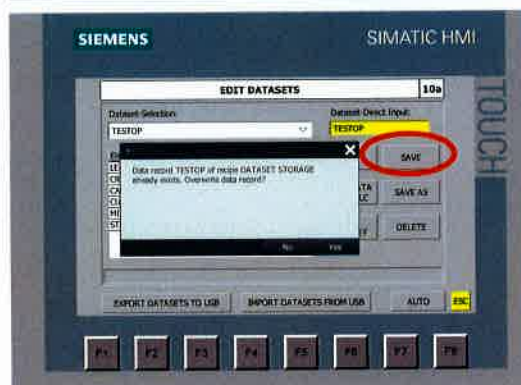


Operation Instructions

6.2.2.4. Delete dataset


To delete a dataset it has to be loaded first.

Select the required dataset by double clicking on it at the list at display 10a or if the name is known by input the exact name in the yellow field.

Then press the button SAVE AS.

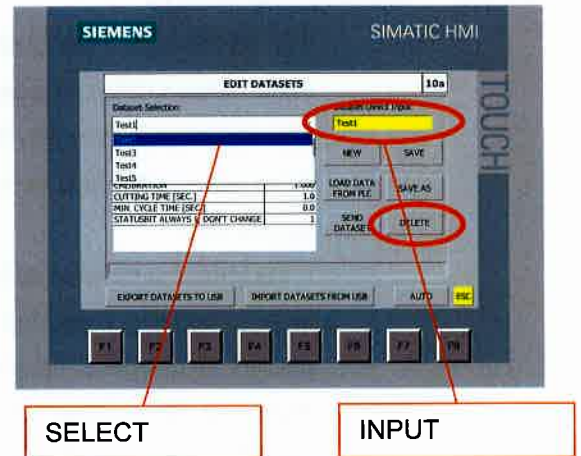

Confirm the deletion in the opened pop-up window with YES.

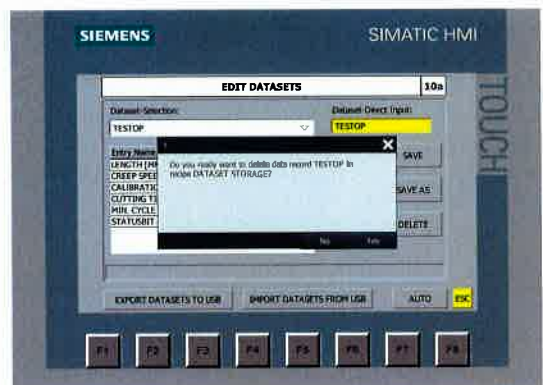

6.2.2.5. Load data from PLC

If data of parameters was modified in the windows outside the dataset, e.g. length has been changed, it is possible to load these values from the PLC and save them e.g. in a new dataset.


If the values need to be taken over in an existing dataset select the required dataset by double clicking on it at the list at display 10a or if the name is known by input the exact name in the yellow field.

If the values should be taken over in a new dataset create a new dataset like described at 6.2.2.1.

Then touch the button LOAD DATA FROM PLC.

The values will be transferred from the PLC to the touch panel.

After the transfer these data can be saved e.g. as new dataset like described at 6.2.2.1 or 6.2.2.2 .

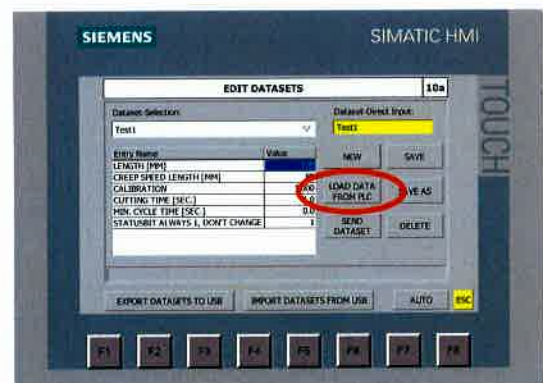

Operation Instructions

6.2.3. Export/import datasets to a CSV file

To save/modify the datasets these can be exported into a CSV-file to an external USB stick. Therefore put a USB stick (FAT or FAT32 formatted) into the USB socket USB TOUCH PANEL on the front panel.

Then touch the button EXPORT DATASETS TO USB at display 10a.

The datasets will be stored in a CSV-file with the fixed name **HSGM-Maschine.csv** in the main directory of the storage medium. This file can be edit/expanded by opening it in WINDOWS EXCEL version 2010 or higher (See 6.2.4)

If there already exists a file with the name **HSGM-Maschine.csv** on the storage medium a POP-UP window appears that requests the overwriting.

If the file can be overwritten confirm with YES.

If the existing file shall not be overwritten cancel with NO and rename the file on the storage medium or move it into a subdirectory.

To import the datasets put the USB stick (FAT or FAT32 formatted) with the saved/modified CSV-file into the USB socket USB TOUCH PANEL on the front panel. The datasets need to be in a file with the name **HSGM-Maschine.csv** in the main directory of the storage medium. Then touch the button IMPORT DATASETS FROM USB at display 10a.

