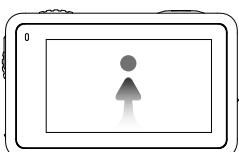
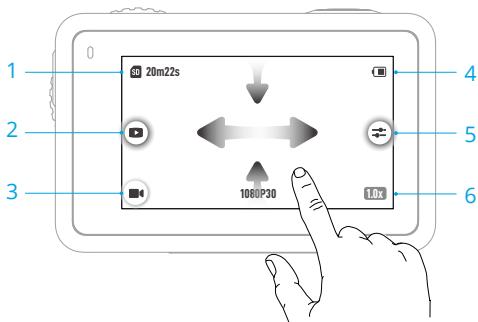
**Swipe Left or Right**

Switches between video, photo, and other shooting modes.

**Swipe Up from the Bottom of the Screen**

Sets the shooting parameters such as Aspect Ratio, Countdown Timer, and Resolution.

Camera View**1. Storage Capacity Information**

20m22s : the icon displays either the storage capacity, the remaining number of photos or the video duration that can be taken or recorded according to the current shooting mode. The icon is displayed only when a microSD card is inserted.

2. Playback

: tap to preview the last photo or video captured or played back. Swipe from the right to exit playback and go back to liveview.

3. Shooting Modes

: tap the icon and swipe to select the shooting mode.

Shooting Modes	Description
Take a photo	Take a photo or countdown photo.
Video	Record a video.