


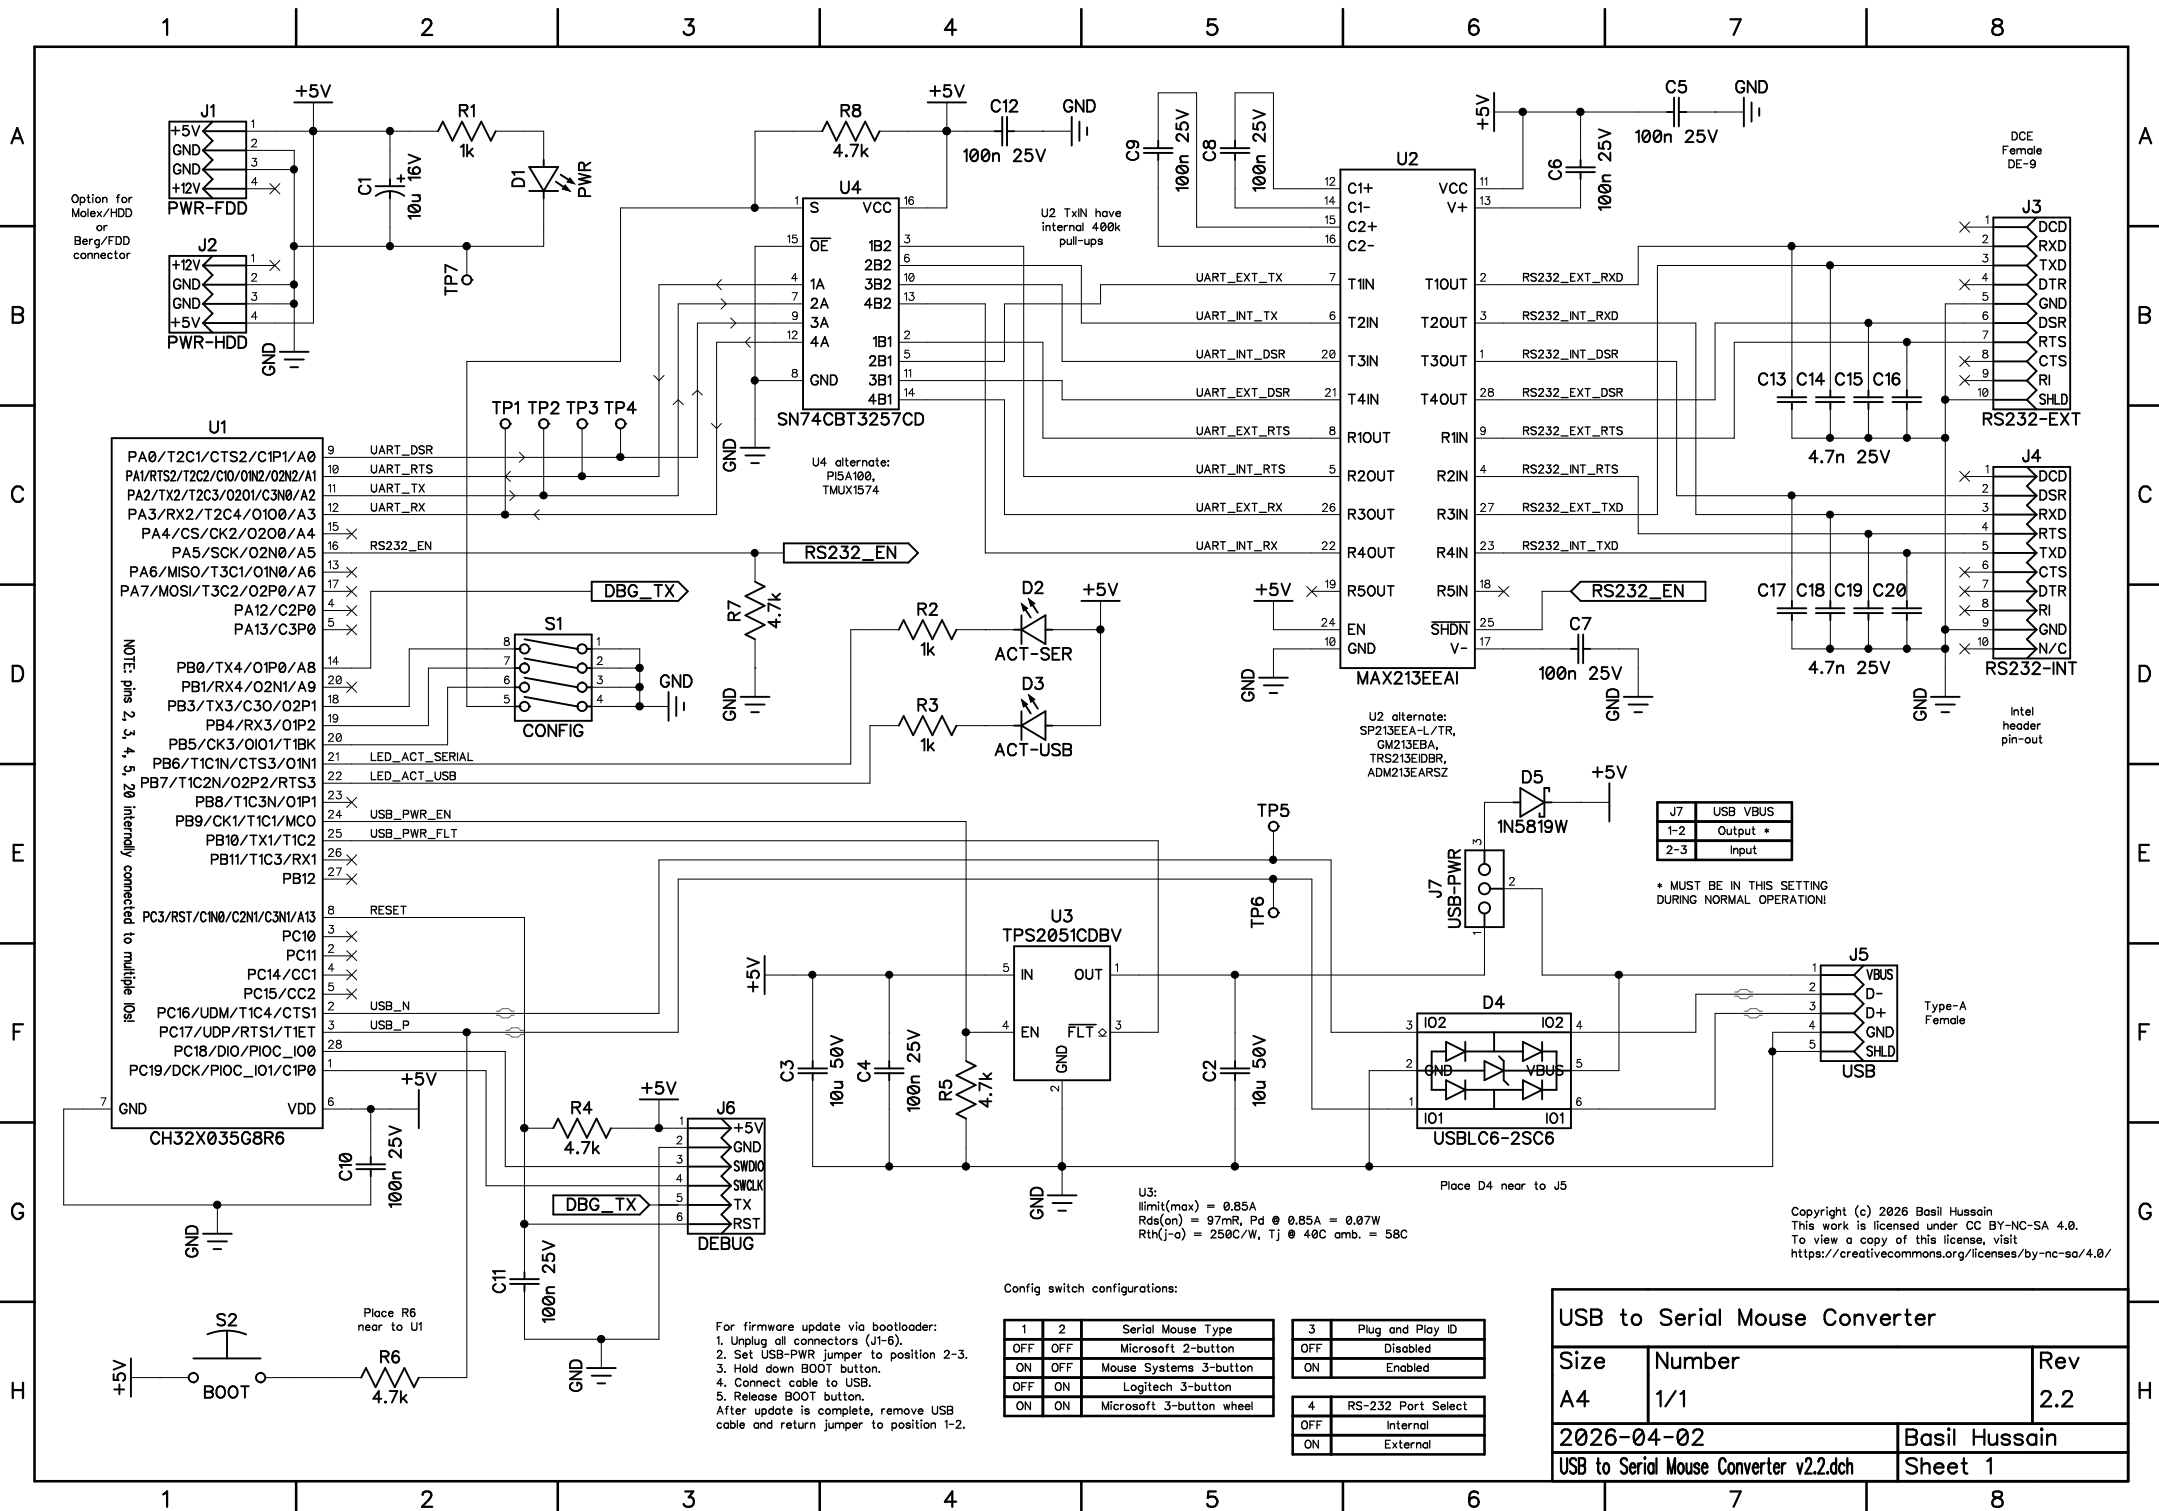

Option for Molex/HDD or Berg/FDD connector

NOTE: pins 2, 3, 4, 5, 20 internally connected to multiple I/Os

U4 alternate: PISA100, TMUX1574

U2 alternate: SP213EEA-L/TR, GM213EBA, TRS213EIDBR, ADM213EARSZ

U3: Ilimit(max) = 0.85A, Rds(on) = 97mR, Pd @ 0.85A = 0.07W, Rth(j-a) = 250C/W, Tj @ 40C amb. = 58C

For firmware update via bootloader:
1. Unplug all connectors (J1-6).
2. Set USB-PWR jumper to position 2-3.
3. Hold down BOOT button.
4. Connect cable to USB.
5. Release BOOT button.
After update is complete, remove USB cable and return jumper to position 1-2.

Config switch configurations:

USB to Serial Mouse Converter

Size A4

Number 1/1

Rev 2.2

2026-04-02

USB to Serial Mouse Converter v2.2.dch

Basil Hussain

Sheet 1