


SIM7100

Application Note



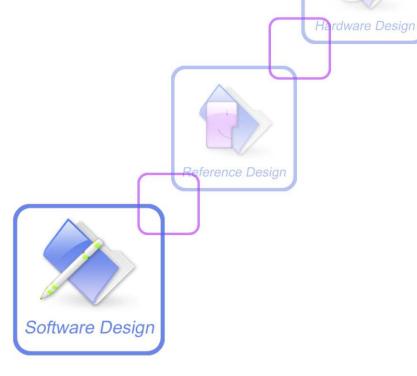



Document Title:	SIM7100 SMS Application Note	
Version:	0.01	
Date:	2015-02-10	
Status:	Release	
Document ID:	SIM7100_SMS_Application_Note_V0.01	

General Notes

Simcom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Simcom. The information provided is based upon requirements specifically provided to Simcom by the customers. Simcom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Simcom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of SIMCOM Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2014



Version History

Version	Chapter	Comments
V0.01	New Version	



Contents

Version History	2
Contents	
1. Introduction	4
1.1 Overview	4
1.2 References	4
1.3 Terms and Abbreviations	4
2. SMS Quick Start – Storage	
2.1 Set preferred message storage	
3. Read SMS	
3.1 List SMS messages from preferred store	6
3.2 Read message	
3.3 Delete SMS	7
3.4 Write message to memory	7
4. Edit/Send SMS	7
4.1 Send message from Scratch	7
4.2 Send message from Storage	8
5. Receive SMS	8
5.1 New message indications to TE	8
6. SMS AT Command Samples	9
7 Conflict AT Commands	11



1. Introduction

1.1 Overview

This document gives the usage of SIM7100 SMS functions, user can get useful information about the SIM7100 SMS functions quickly through this document.

The SMS functions are provided in AT command format, and they are designed for customers to design their SMS applications easily. User can access these SMS AT commands through UART/USB interface which communicates with SIM7100 module.

SIM7100 SMS features:

- Manage SMS storage
- Read ,write and delete SMS messages in preferred storage
- Edit SMS message and send it
- Receive SMS message
- Set sending and receiving parameters

1.2 References

The present document is based on the following documents:

[1] SIMCOM_SIM7100_ATC_EN_V0.01.doc.

1.3 Terms and Abbreviations

For the purposes of the present document, the following abbreviations apply:

- AT ATtention; the two-character abbreviation is used to start a command line to be sent from TE/DTE to TA/DCE
- CSD Circuit Switched Data
- DCE Data Communication Equipment; Data Circuit terminating Equipment
- DCS Digital Cellular Network
- DTE Data Terminal Equipment
- DTMF Dual Tone Multi–Frequency
- EDGE Enhanced Data GSM Environment
- EGPRS Enhanced General Packet Radio Service
- GPIO General—Purpose Input/Output
- GPRS General Packet Radio Service
- GSM Global System for Mobile communications
- HSDPA High Speed Downlink Packet Access

SIM7100 SMS Application Note



HSUPA High Speed Uplink Packet Access

■ I2C Inter–Integrated Circuit

■ IMEI International Mobile station Equipment Identity

■ IMSI International Mobile Subscriber Identity

■ ME Mobile Equipment

MMS Multimedia message system

MO Mobile–OriginatedMS Mobile Station

MT Mobile—Terminated: Mobile Termination

PCS Personal Communication System

■ PDU Protocol Data Unit

■ PIN Personal Identification Number

■ PUK Personal Unlock Key

• SIM Subscriber Identity Module

■ SMS Short Message Service

■ SMS–SC Short Message Service – Service Center

TA Terminal Adaptor; e.g. a data card (equal to DCE)
 TE Terminal Equipment; e.g. a computer (equal to DTE)

■ UE User Equipment

UMTS Universal Mobile Telecommunications System

URL Uniform resource locator

USIM Universal Subscriber Identity ModuleWCDMA Wideband Code Division Multiple Access

2. SMS Quick Start – Storage

The purpose of this section is to help get you start with SMS storage

2.1 Set preferred message storage

Select memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc. These values will be saved after the module restarts

```
< mem 1 >
String type, memory from which messages are read and deleted (commands List Messages
AT+CMGL, Read Message AT+CMGR and Delete Message AT+CMGD).
    "ME" and "MT"
                       FLASH message storage
    "SM"
                       SIM message storage
    "SR"
                       Status report storage
<mem2>
String type, memory to which writing and sending operations are made (commands Send Message
from Storage AT+CMSS and Write Message to Memory AT+CMGW).
    "ME" and "MT"
                       FLASH message storage
    "SM"
                       SIM message storage
    "SR"
                       Status report storage
<mem3>
String type, memory to which received SMS is preferred to be stored (unless forwarded directly to
TE; refer command New Message Indications AT+CNMI).
    "ME"
                       FLASH message storage
    "SM"
                       SIM message storage
```

AT+CPMS="SR","ME","SM"

3. Read SMS

3.1 List SMS messages from preferred store

This command is used to return messages with status value <stat> from message storage <mem1> to the TE. If the status of the message is 'received unread', the status in the storage changes to 'received read'.

```
AT+CMGL="ALL"
+CMGL: 1,"STO UNSENT","+10011",,,145,4
```

```
Hello World
OK
```

3.2 Read message

This command is used to return message with location value <index> from message storage <mem1> to the TE.

```
AT+CMGR=1
+CMGR: "STO UNSENT","+10011",,145,17,0,0,167,"+8613800100500",145,4
Hello World
OK
```

3.3 Delete SMS

This command is used to delete message from preferred message storage <mem1> location <index>. If <delflag> is present and not set to 0 then the ME shall ignore <index> and follow the rules for <delflag> shown below.

```
AT+CMGD=1
OK
```

3.4 Write message to memory

```
AT+CMGW="13012832788" <CR> (TEXT MODE)

ABCD<ctrl-Z/ESC>
+CMGW:1

OK
```

4. Edit/Send SMS

4.1 Send message from Scratch

send message from a TE to the network (SMS-SUBMIT).:

```
AT+CMGS="13012832788"<CR>(TEXT MODE)
```

```
> ABCD<ctrl-Z/ESC>
+CMGS: 46
OK
```

4.2 Send message from Storage

send message with location value <index> from preferred message storage <mem2> to the network (SMS-SUBMIT or SMS-COMMAND).:

```
AT+CMSS=3
+CMSS: 0
OK
AT+CMSS=3,"13012345678"
+CMSS: 55
OK
```

5. Receive SMS

5.1 New message indications to TE

AT+CNMI command is used to select the procedure how receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF). If set <mt>=2, <mt>=3 or <ds>=1, make sure <mode>=1, otherwise it will return error.

These values will be saved after the module restarts

directly to the TE.

9 Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications. 1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE. 2 Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them

< mt >

The rules for storing received SMS depend on its data coding scheme, preferred memory storage

(AT+CPMS) setting and this value:

- 0 No SMS-DELIVER indications are routed to the TE.
- 1 If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem3>,<index>.
- 2 SMS-DELIVERs (except class 2 messages and messages in the message waiting indication group (store message)) are routed directly to the TE using unsolicited result code:
 - +CMT:[<alpha>],<length><CR><LF><pdu> (PDU mode enabled); or
 - +CMT:<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]
 - <CR> <LF><data>

(text mode enabled, about parameters in italics, refer command Show Text Mode Parameters AT+CSDH).

3 - Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.

<bm>

The rules for storing received CBMs depend on its data coding scheme, the setting of Select CBM Types (AT+CSCB) and this value:

- 0 No CBM indications are routed to the TE.
- 2 New CBMs are routed directly to the TE using unsolicited result code:
 - +CBM: <length><CR><LF><pdu> (PDU mode enabled); or
 - +CBM: <sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> (text mode enabled)

< ds >

- $\underline{0}$ No SMS-STATUS-REPORTs are routed to the TE.
- 1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code:
 - +CDS: <length><CR><LF><pdu> (PDU mode enabled); or
 - +CDS: <fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> (text mode enabled)
- 2 If SMS-STATUS-REPORT is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem3>,<index>.

bfr>

- O TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 to 3 is entered (OK response shall be given before flushing the codes).
- 1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1 to 3 is entered.

6. SMS AT Command Samples

Commands and Responses	Comments
AT+CMGF=1	Set SMS system into text mode, as opposed to
OK	PDU mode.

AT+CPMS="SM","SM","SM" +CPMS: 0,40,0,40,0,40 OK	Select memory storages.
AT+CNMI=2,1 OK	Set new message indications to TE.
AT+CMGS="+861358888xxxx" >This is a test < <i>Ctrl</i> + <i>Z</i> > +CMGS:34 OK	Set new message indications to TE.
+CMTI:"SM",1	Unsolicited notification of the SMS arriving.
AT+CMGR=1 +CMGR: "REC UNREAD", "+86135888xxxx", ,"08/01/30, 20:40:31+00" This is a test OK	Read SMS message that has just arrived. NOTE: The number should be the same as that given in the +CMTI notification.
AT+CMGR=1 +CMGR: "REC READ", "+861358888xxxx",,"08/01/30, 20:40:31+00" This is a test OK	Reading the message again changes the status to "READ" from "UNREAD".
AT+CMGS="+861358888xxxx" >Test again< <i>Ctrl</i> + <i>Z</i> > +CMGS:35 OK	Send another SMS to myself.
+CMTI:"SM",2	Unsolicited notification of the SMS arriving.
AT+CMGL="ALL" +CMGL: 1, "REC READ", "+861358888xxxx", , "08/01/30,20:40:31+00" This is a test +CMGL: 2, "REC UNREAD","", "+861358888xx xx", , "08/01/30,20:45:12+00" Test again OK	Listing all SMS messages.
AT+CMGD=1	Delete an SMS message.
OK	Ü
AT+CMGL="ALL" +CMGL: 2,"REC READ","+861358888xxxx", "08/01/30,20:45:12+00" Test again OK	List all SMS messages to show message has been deleted.

7 Conflict AT Commands

Following AT commands cannot be used with SMS AT commands together:

• Call AT Commands.

Contact us

Shanghai SIMCom Wireless Solutions Ltd.

Add: Building A, SIM Technology Building, No.633, Jinzhong Road, Changning District

200335

Tel: +86 21 3252 3300 Fax: +86 21 3252 3301

URL: http:/www.sim.com/wm