

Veeam Availability on UCS C240 Deployment Guide

Stefan Renner

Alliance Systems Engineer

Shawn Lieu

Veeam Solutions Architect, vExpert



1+1=3
Cisco + Veeam
Better Together

Contents

The Challenge	3
The Solution.....	3
Deployment Recommendations	4
CIMC Virtual Drive configuration via web interface.....	5
CIMC Virtual Drive configuration via SSH	8
Creating a new volume in Windows	11
Veeam Backup & Replication installation process	15
Veeam Backup & Replication Configuration.....	18
Adding the Virtual Infrastructure	18
Veeam Backup Proxies	26
About the Authors	32
About Veeam Software	32

The Challenge

With data growing at astounding rates, IT managers are depending more and more on reliable backup and recoverability of their data. Businesses of all sizes require a complete Availability and data protection solution that is reliable, flexible and easy to use. Virtualizing an environment provides increased levels of data Availability, but the need to meet aggressive RPOs and RTOs becomes increasingly difficult.

Traditional backup tools were not created for virtualized environments. That makes it hard for many organizations to take full advantage of their virtualized environment, and many IT managers struggle with:

- Unreliable backups
- Recovery that takes too long
- High costs associated with managing backup data and secondary storage
- Inability to provide reliable and true backups for compliance purposes
- Lost productivity due to management complexity
- The need to scale backup operations for growth

IT managers must meet the challenges of ever-shrinking RPOs and the aggressive RTOs associated with virtualized environments.

The Solution

Veeam® enables Availability for the Always-On Enterprise™ with Cisco UCS for combined data management and protection solutions required for 24/7 application Availability.

By combining Cisco UCS and Veeam solutions, customers eliminate data loss and deliver fast data recovery, helping them minimize risk, decrease downtime and easily adapt to business changes to meet the most stringent recovery time and point objectives, or RTPO™.

Veeam Backup & Replication™ unifies backup and replication in a single solution – increasing the value of backup and reinventing data protection for VMware vSphere and Microsoft Hyper-V virtual environments. The Veeam agentless design provides multiple backup options to meet your needs. Features such as source-side deduplication and compression, change block tracking, parallel processing and automatic load balancing provide the fastest, most efficient backups possible.



Figure 1

The Cisco UCS C240 M4 Rack Server (Figure 1) is designed for performance and expandability, making it ideal for modern data protection. The Cisco UCS C240 addresses the need for highly scalable computing with high-capacity local storage. Designed for a new class of applications, it is simple to deploy and excellent for backup repositories. Together, Veeam and Cisco UCS C240 create the perfect staging area for backups – reducing backup ingest bottlenecks and providing faster backups using parallel processing. In addition, Veeam Backup & Replication provides:

- Granular recovery of VMs and files, including item-level recovery for Microsoft Active Directory, Exchange and SharePoint, as well as transaction-level recovery for Microsoft SQL and Oracle databases.
- The ability to automatically verify every backup, every VM and every replica – every time.
- Self-service recovery of VMs and guest files without direct network connection to the VM, user permissions or the need to deploy costly agents.

- Instant VM Recovery® to recover a failed VM in less than two minutes.
- A choice to back up and recover what you need, where you need it and when you need it –whether it's on site, on tape or in the cloud. Veeam and Cisco offer the right solution for performance, flexibility and reliability – providing an impressive, modern disaster recovery (DR) solution for your VMware vSphere or Hyper-V environment.

Deployment Recommendations

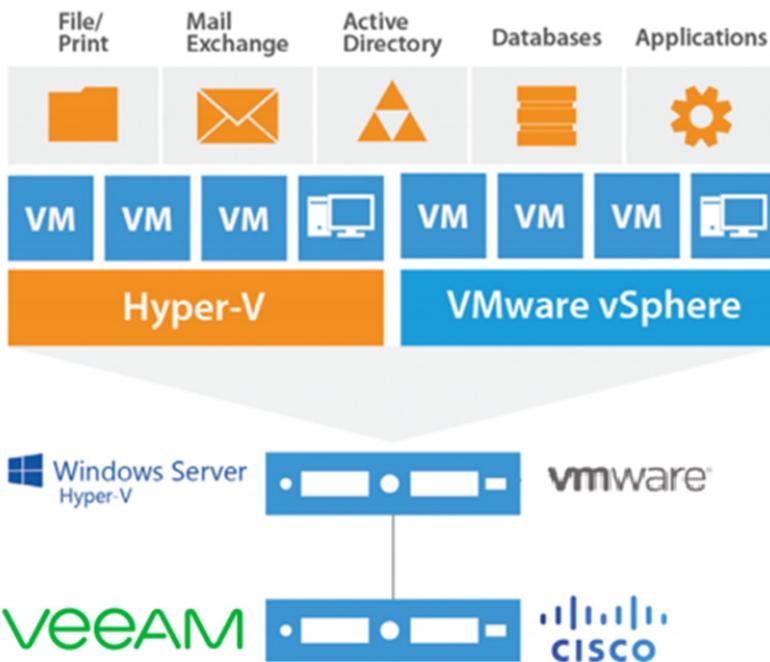


Figure 2

Simplified deployment helps streamline your data protection strategy. With the UCS C240's combination of compute, memory and high-capacity storage, deployment of Veeam's modern data protection can be accomplished on a single UCS C240 server (Figure 2).

UCS C240 reference architecture specifications:

- 2x Intel Xeon processors
- 32GB base RAM
- 1GB of RAID cache with battery backed write cache
- 480GB SSD for OS (optional 2x in RAID 1 if desired for OS redundancy)
- 12x NL-SAS HDDs
- 64-bit Windows OS

There are a number of different ways to install the Windows OS onto the C240's SSD. Please refer to the C240 installation guide for details. We recommend you use two SSDs in a RAID1 configuration for the Windows OS. Once Windows is installed, several drivers will need to be installed as well. Drivers can be downloaded here: <https://software.cisco.com/download/navigator.html>

For environments with existing Fabric Interconnects, UCS Manager can be leveraged. For environments that already have UCS Manager in place, server configuration, network connectivity and storage can all be configured here. In this guide, we will cover CIMC (Cisco Integrated Management Controller) and CLI. Create a UCS C240 volume for a Veeam backup repository using CIMC, alternatively, environments already running Cisco UCS Manager can also use UCS Manager as an option. In this guide, we will use CIMC. CIMC can be accessed via the web interface or via SSH. Both methods will be covered, select the method you are most comfortable with.

CIMC Virtual Drive configuration via web interface

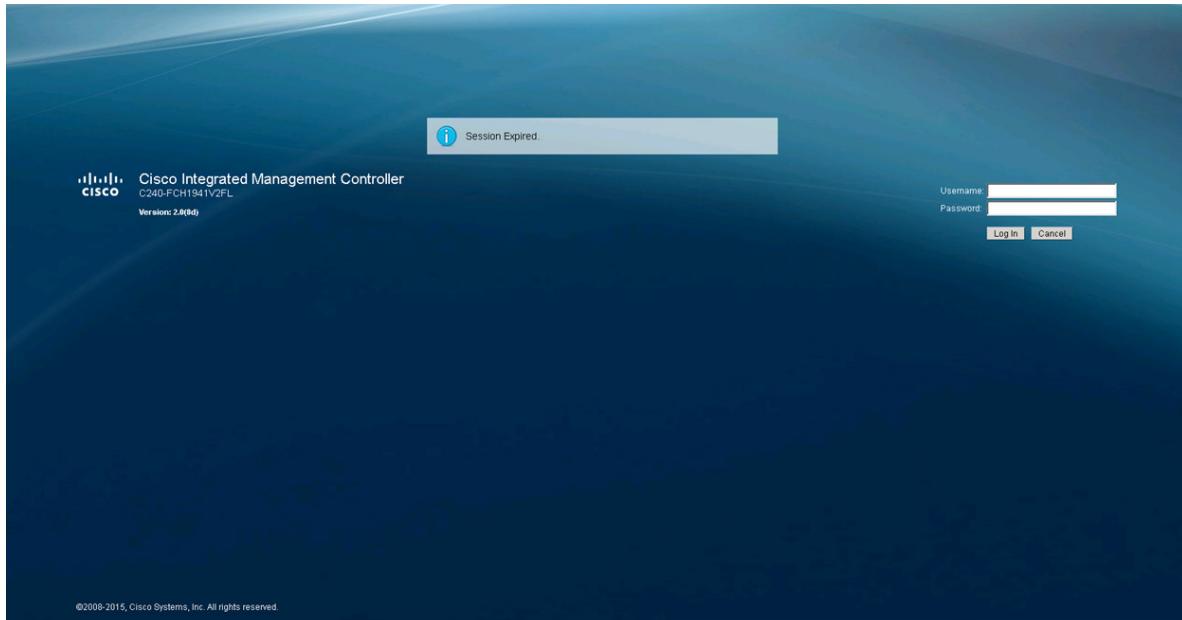


Figure 3

Open a web browser and enter the IP for the CIMC. You will be directed to the login screen where you can enter your credentials for access (Figure 3).

Figure 4

Once logged in, the Server tab will open (Figure 4). Select the **Storage** tab from the left side pane and navigate to **Physical Drive Info**. If the status of the unused drives is listed as **JBOD**, you will need to select each one and click **Set State as Unconfigured Good**.

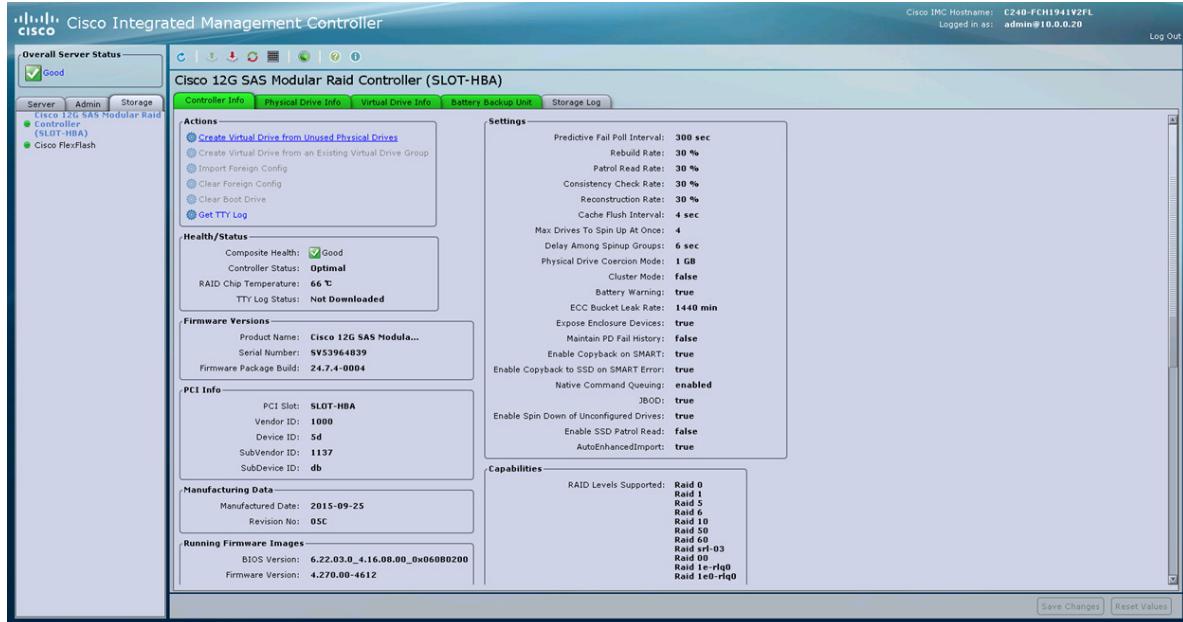


Figure 5

Under the Server tab (Figure 5), a list of actions that can be performed will be present in the right-side pane. Select the **Create Virtual Drive from Unused Physical Drives** action.

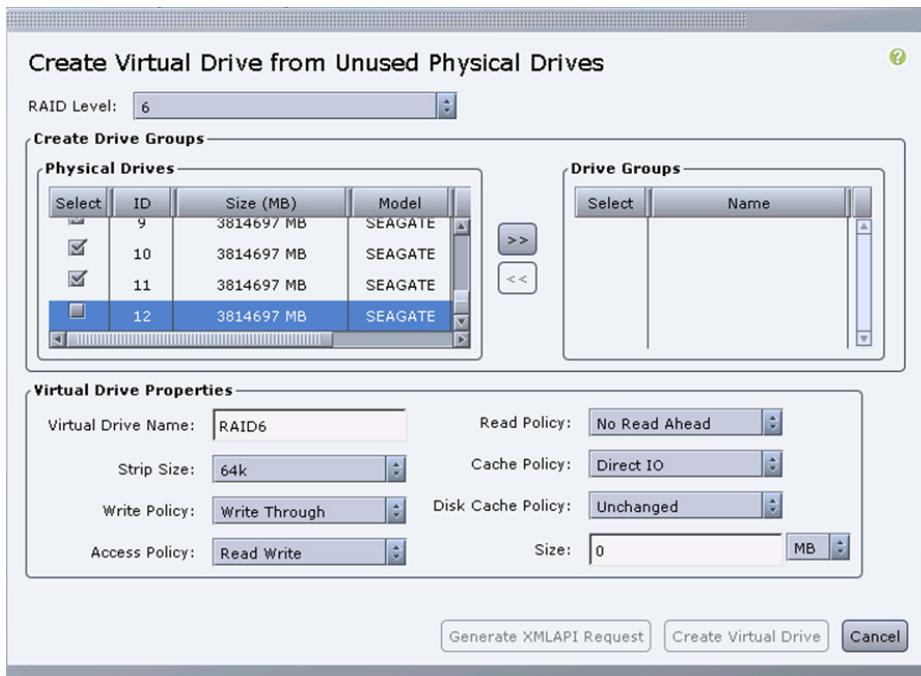


Figure 6

The **Create Virtual Drive from Unused Physical Drives** box will popup (Figure 6). The selections made will result in a new Virtual Drive that will be used as a Veeam backup repository.

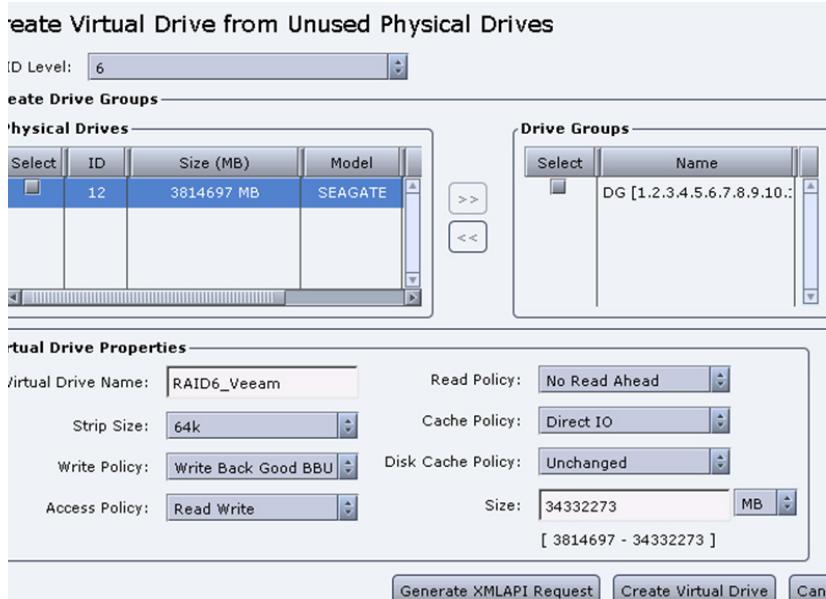


Figure 7

Let's begin with the following recommended settings (Figure 7) for a Veeam repository:

- RAID Level: 6
- Strip Size: 64k
- 11x NL-SAS HDDs for Virtual Drive (12th drive will be used for Hot-spare)
- Virtual Drive Name: Use any name, up to 15 characters
- Write Policy: Write Back Good BBU
- Cache Policy: Cached IO
- Size: Specify the desired Virtual Drive size in MB, GB or TB

Read Policy, Cache Policy and Disk Cache Policy can be left at the default settings. Once the recommended settings have been entered, click **Create Virtual Drive**. This will take a few moments, once complete you will be returned to the **Controller Info** tab. Select the Virtual Drive Info from the right-side pane to verify the newly created Virtual Drive (Figure 8).

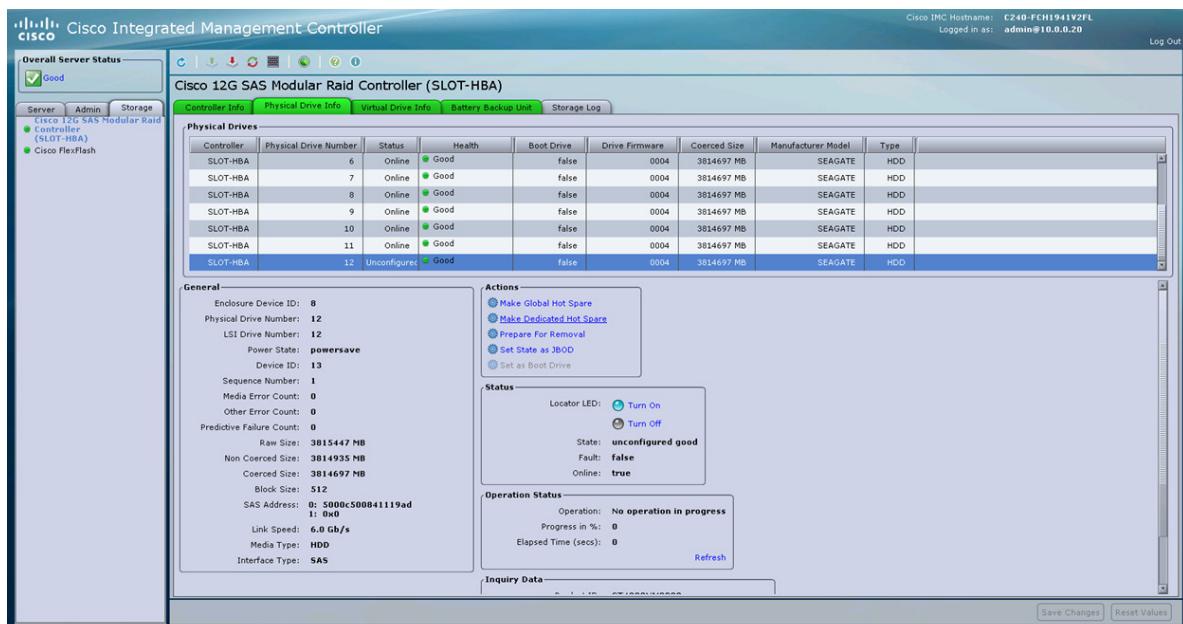


Figure 8

Now that the Virtual Drive is created, select the remaining drive at **Storage – Physical Drive Info** and select **Make Global Hot Spare**.

If you used the web interface to configure the Virtual Drive, skip the following section for SSH.

Before you create the volume in Windows, you will need to make sure that all necessary network connections are made. Number of NICs required will depend on your environment and what type of backup mode you wish to leverage within Veeam. For best performance, direct storage access is the preferred backup mode. To leverage direct storage access, the Veeam server will need management network access, as well as storage network access. There are other transport modes and other deployment scenarios not covered within this guide, please refer to the Veeam User Guide (link located on page 36).

CIMC Virtual Drive configuration via SSH

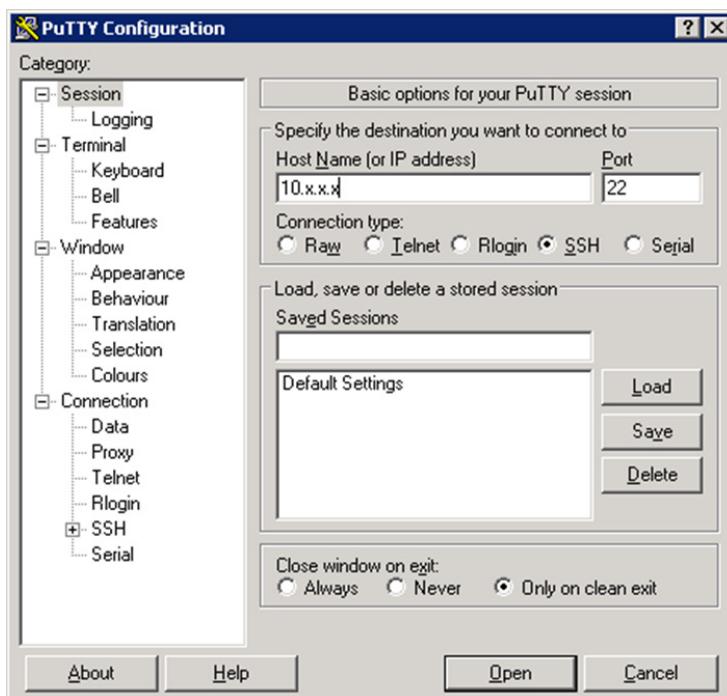


Figure 9

Open a SSH client, PuTTY will be used in this example. To connect to CIMC, enter the IP address and click Open (Figure 9). PuTTY will connect and prompt you for the login name and password.

After you are logged in, you will be presented with the command prompt. Enter the following commands to configure the Virtual Drive:

1. **Server# scope chassis**
2. **Server /chassis # show storageadapter** "this lists the available storage adapters on the chassis"
3. **Server /chassis # scope storageadapter slot-xxx** "replace xxx with actual adapter from above"
4. **Server /chassis /storageadapter # show physical-drive** "list of all physical drives, note the assigned drive numbers"
5. **Server /chassis /storageadapter # scope physical-drive X** "start with the first drive number, the next three steps will need to be repeated for all physical drives"

6. **Server /chassis /storageadapter/physical-drive # make-unconfigured-good** "will change the drive from WJBOD to unconfigured-good state"

Please confirm that you want to change physical drive 12 from a JBOD to Unconfigured Good.

If the drive is subsequently used in a RAID operation, all data on the drive will be lost.

Enter 'yes' to confirm -> yes "you must type yes to confirm operation"

7. **Server /chassis /storageadapter/physical-drive # exit** "will move back to storageadapter, now you can set the scope to the next physical drive to configure. Note: All physical drives will need to be set as unconfigured-good before moving on to the next step, repeat the steps highlighted in green for all physical drives"
8. **Server /chassis /storageadapter # create-virtual-drive** "this command allows you to create a virtual drive to use as a Veeam repository"

9. **Please enter RAID level**

0, 1, 5, 6, 10, 50, 60 --> 6 "RAID 6 is recommended for a Veeam repository"

10. **Please choose from the following 12 unused physical drives:**

ID	Size(MB)	Model	Interface	Type
----	----------	-------	-----------	------

"a list of all unused drives will be listed here, note the drive IDs"

11. **Specify physical disks for span 0: <enter> when finished:**

12. **Enter comma-separated PDs from above list -->** "specify the drive IDs to use for the group. Drive IDs should be separated by a comma, ie: 1,2,3,4,5,etc. Hit enter when complete"

13. **Specify physical disks for span 1: <enter> when finished:**

14. **Enter comma-separated PDs from above list -->** "specify the drive IDs to use for the second span, same as above. Veeam recommends one span for every 14-15 drives, ie: 56-60 drives = 4 spans. Hit enter when complete"

15. **Please enter Virtual Drive name (15 characters maximum) -->** "specify a name for the new Virtual Drive"

16. **Please enter Virtual Drive size in MB, GB, or TB**

Example format: '400 GB' --> "specify the desired virtual drive size"

17. **Optional attribute:**

Strip Size: defaults to 64K Bytes

0: 8K Bytes

1: 16K Bytes

2: 32K Bytes

3: 64K Bytes

4: 128K Bytes

5: 256K Bytes

6: 512K Bytes

7: 1024K Bytes

Choose number from above options or hit return to pick default --> 3 "recommended"

stripsize will be set to 64K Bytes (7 and 'strip-size):64k')

18. Disk Cache Policy: defaults to Unchanged

- 0: Unchanged
- 1: Enabled
- 2: Disabled

19. Choose number from above options or hit return to pick default --> 0 "recommended"

20. Disk Cache Policy will be set to Unchanged (0 and 'disk-cache-policy\:unchanged')

21. Read Policy: defaults to No Read Ahead

- 0: No Read Ahead
- 1: Always

Choose number from above options or hit return to pick default --> 0 "recommended"

22. Read Policy will be set to No Read Ahead (0 and 'read-policy\:no-read-ahead')

23. Write Policy: defaults to Write Through

- 0: Write Through**
- 1: Write Back Good BBU**
- 2: Always Write Back**

Choose number from above options --> 1 "recommended"

24. Write Policy will be set to Write Back Good BBU (1 and 'write-policy\:write-back-good-bbu')

25. IO Policy: defaults to Direct I/O

- 0: Direct I/O
- 1: Cached I/O

Choose number from above options or hit return to pick default --> 1 "recommended"

IO Policy will be set to Cached I/O (1 and 'io-policy\:cached-io')

26. Access Policy: defaults to Read Write

- 0: Read Write
- 1: Read Only
- 2: Blocked

Choose number from above options or hit return to pick default --> 0 "recommended"

Access Policy will be set to Read Write (0 and 'access-policy\:read-write')

27. New virtual drive will have the following characteristics:

- Spans: '[X.X.X.X.X.X.X.X]'
- RAID level: '6'
- Name: 'virtual_drive_name'
- Size: XXXXXX MB
- stripsize: 64K Bytes
- Disk Cache Policy: Unchanged
- Read Policy: No Read Ahead
- Write Policy: Write Back Good BBU
- IO Policy: Cached I/O
- Access Policy: Read Write

28. OK? (y or n)--> y "If all parameters are correct, enter y and hit enter to commit"

29. Server /chassis /storageadapter # show-virtual-drive "make sure the newly created Virtual Drive appears in the list"

Virtual Drive	Health	Status	Name	Size
1	Good	Optimal	veeam	XXXX MB

Physical Drives	RAID Level	Boot Drive
X, X, X, X, X, X...	RAID 6	false

30. Server /chassis /storageadapter # scope physical-drive X "remaining unused physical drive"

31. Server /chassis /storageadapter/physical-drive # make-global-hot-spare "configures the remaining physical drive as a hot-spare"

Creating a new volume in Windows

Once the Virtual Drive has been created, a new volume and drive letter can be assigned in Windows. You will encounter a pop-up asking if the new disk will be MBR or GPT. Select GPT. The newly created Virtual Drive will appear in the offline state. As part of the process, bring the drive online, format it and give it a drive letter. This configuration can be completed via the Disk Management interface within Windows (Figure 10).

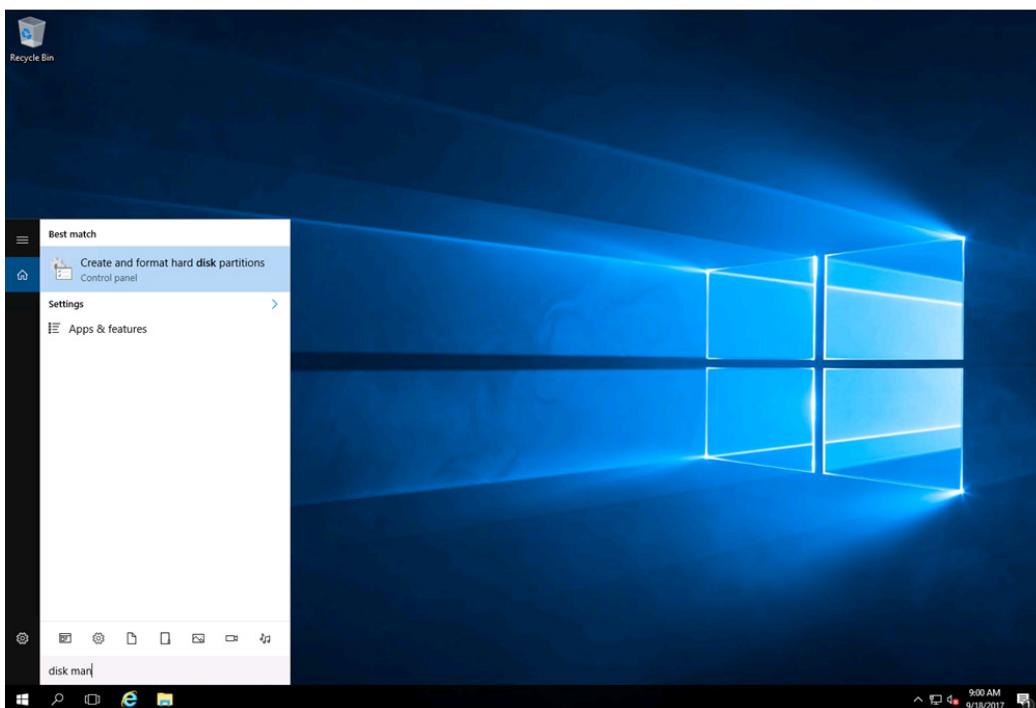


Figure 10

Right click on the new disk and select Online. Once online, right click in the space that currently says Unallocated (Figure 11). A menu will appear with multiple option, for this example, New Simple Volume will be selected.

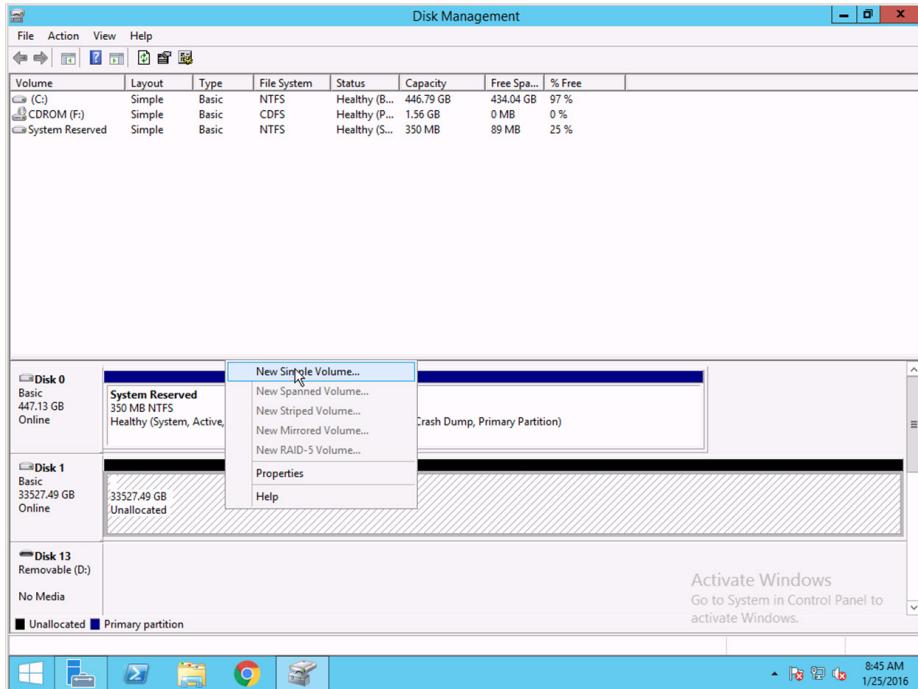


Figure 11

Making this selection will launch the New Simple Volume Wizard (Figure 12). Continue by clicking **Next**.

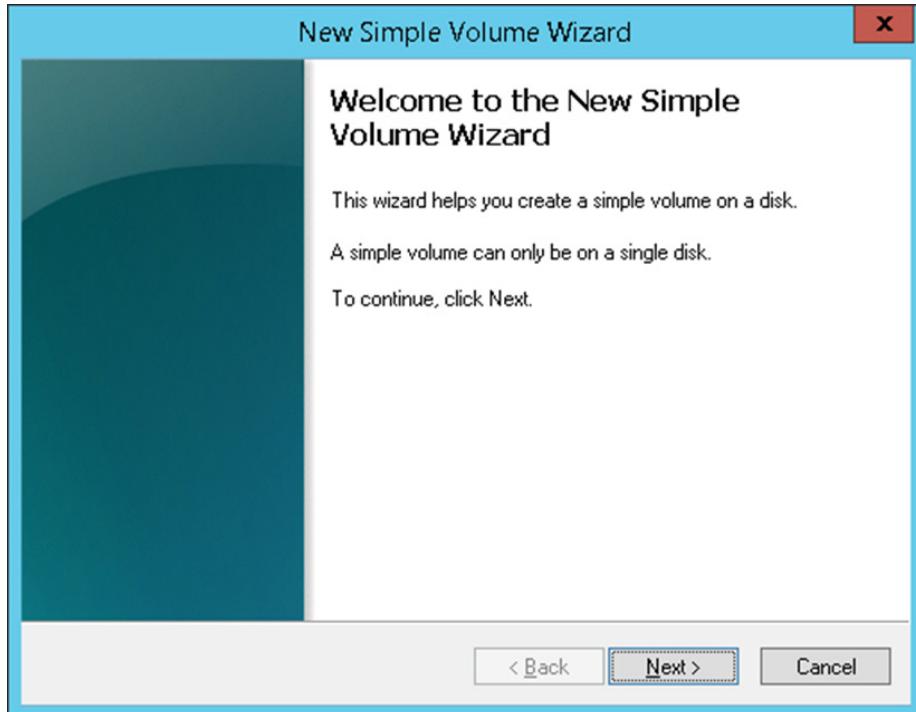


Figure 12

On the next step of the wizard, specify the volume size. Based on the maximum disk space in MB, the new simple volume size in MB should be prepopulated with the same value. Click **Next** to accept the maximum size and continue (Figure 13).

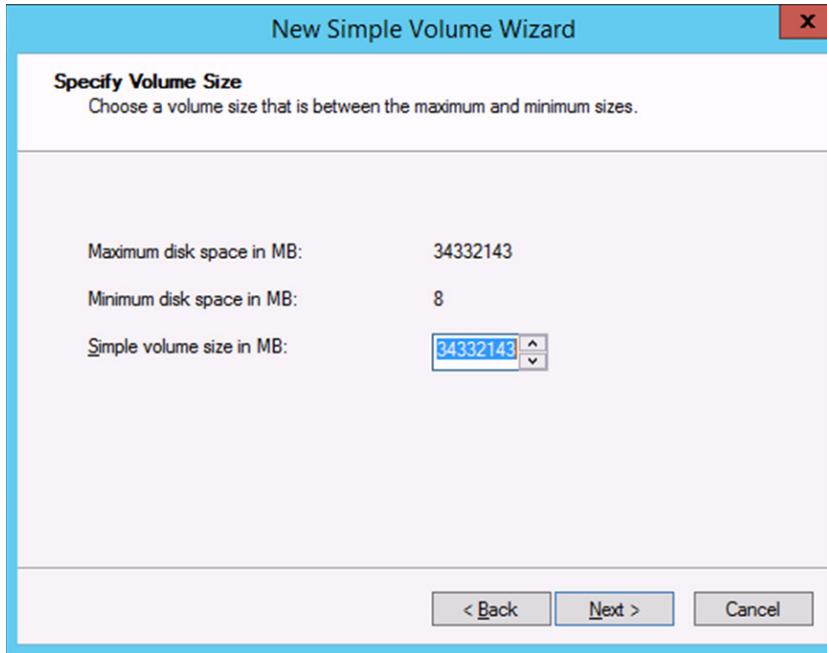


Figure 13

Next, assign a drive letter to the new volume. Once the selection has been made, click **Next** to continue (Figure 14).

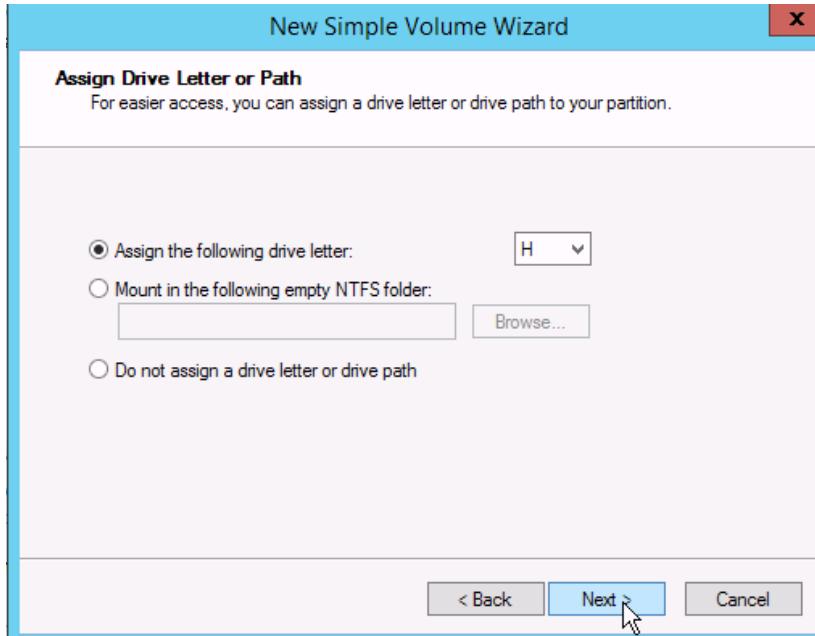


Figure 14

The next screen will have the format and file system options. Select the desired file system (ReFS is recommended), allocation unit size of 64K is recommended, and enter in a volume label. Click **Next** to continue (Figure 15).

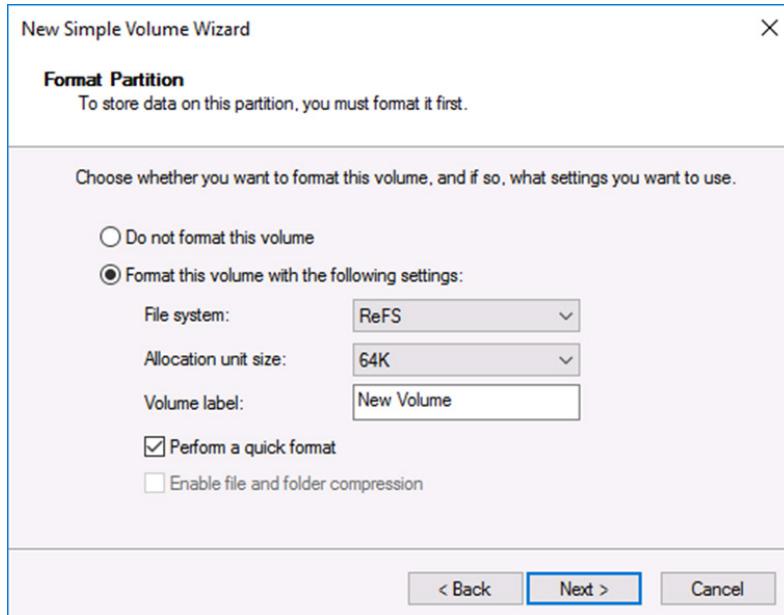


Figure 15

On the final screen, verify the settings are correct and click **Finish** (Figure 16). After a few moments, the new volume will be ready for use.

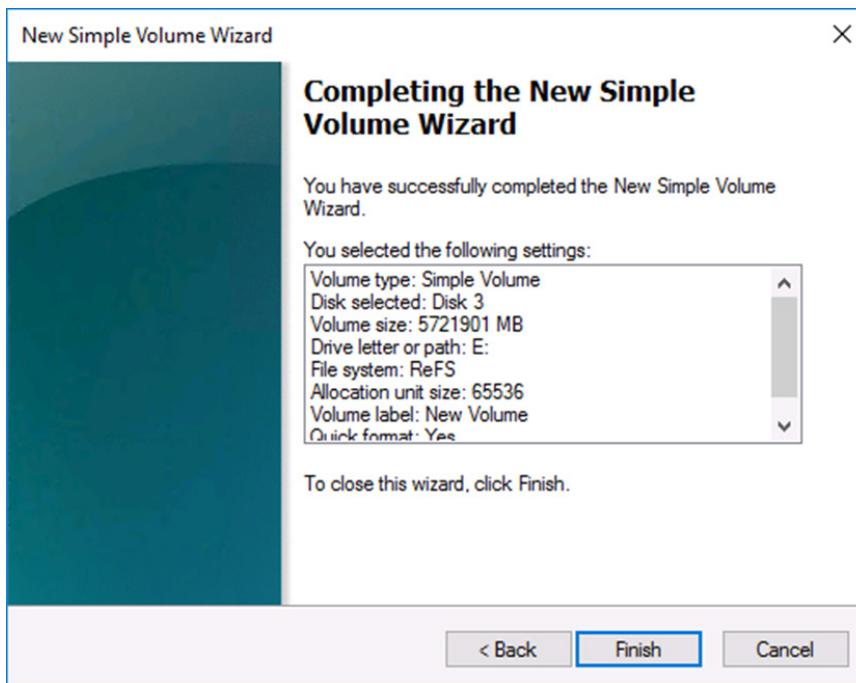


Figure 16

Once the volume has been created and assigned a drive letter, close the **Disk Management** window. The next step is to install Veeam Backup & Replication.

Veeam Backup & Replication installation process

To install Veeam Backup & Replication 9.5, follow these steps:

1. Log into the C240 server as a user with Local Administrator privileges.
2. Mount the installation image using disk image emulation software, or burn the ISO image to a blank CD/DVD.
3. After you mount or insert the disk with Veeam Backup & Replication set up, **Autorun** will open a screen with installation options (Figure 17). If **Autorun** is not available or disabled, run the Setup.exe file from the CD/DVD disk. Alternatively, you can right-click the new disk in **My Computer** and select **Execute Veeam Backup & Replication Autorun** or simply double-click the new disk to launch the splash screen.

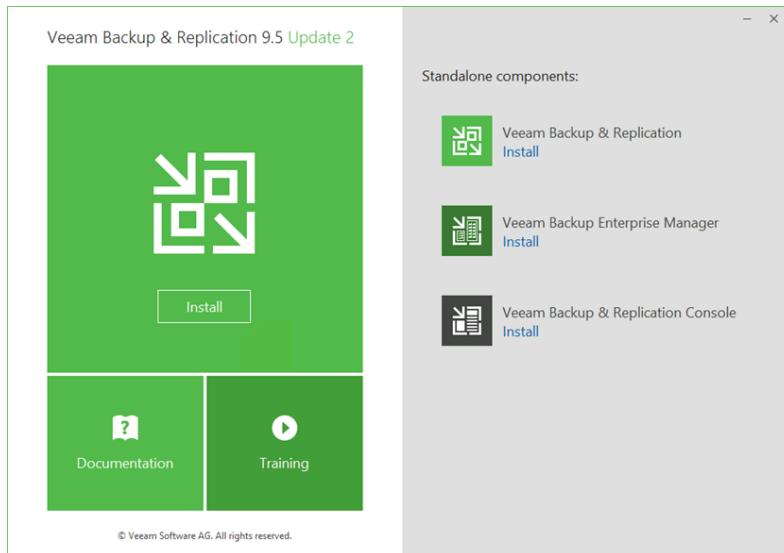


Figure 17

4. Click the **Install** link in the **Veeam Backup & Replication** section of the splash screen.
5. On the **Welcome** step of the wizard, click **Next** to start the installation.
6. To begin the installation, you must accept the license agreement (Figure 18). Read the license agreement, select the **I accept the terms in the license agreement** option and click **Next**.

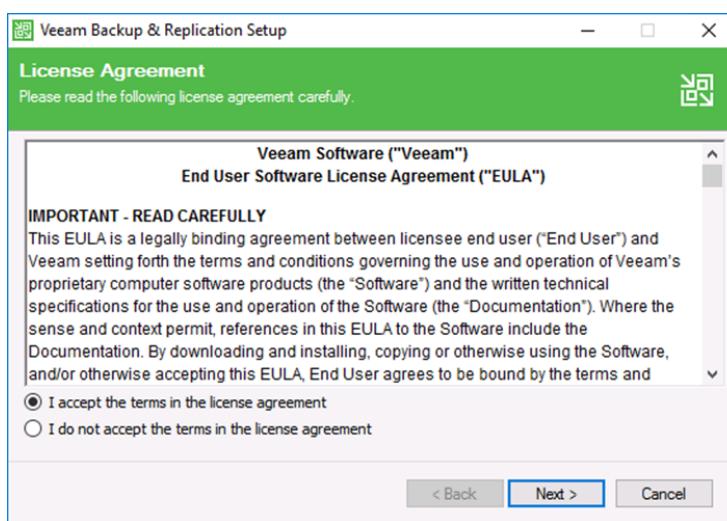


Figure 18

7. You can install Veeam Backup & Replication with a trial license that was sent to you after registration or a purchased license. To install a license, click **Browse** and select a valid license file for Veeam Backup & Replication (Figure 19).

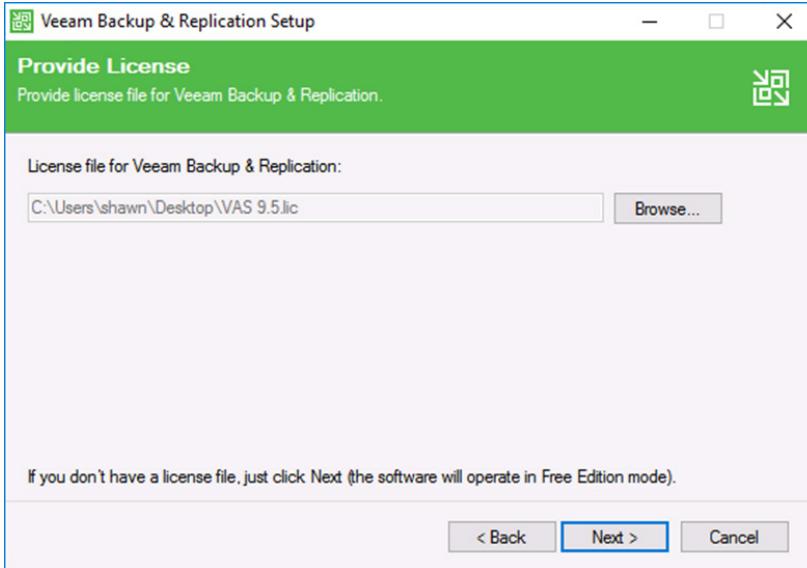


Figure 19

8. Select the components you want to install (Figure 20). The Veeam Backup & Replication setup includes the following components:

- Veeam Backup & Replication
- Veeam Backup Catalog
- Veeam Backup & Replication Console

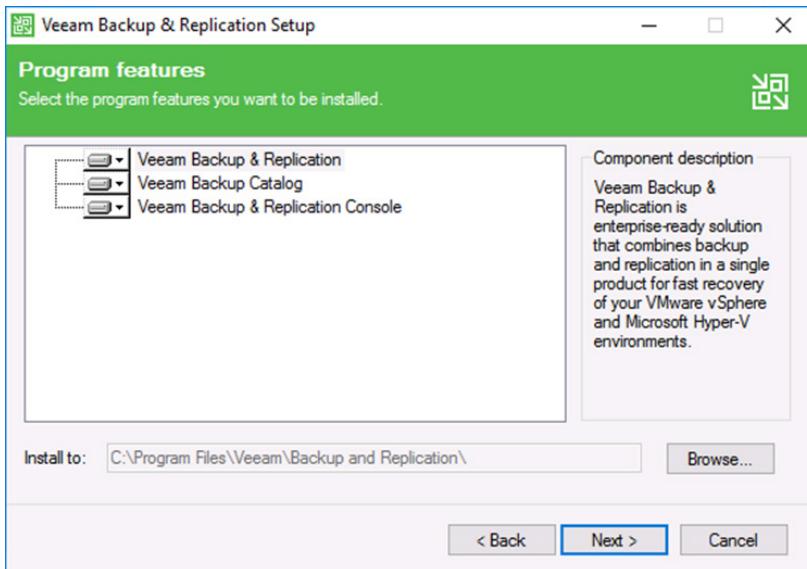


Figure 20

9. Before proceeding with the installation, the setup wizard will perform a system configuration check to determine if all prerequisite software is available on the machine. If some of the required software components are missing, the wizard will automatically offer you to install missing software (Figure 21).

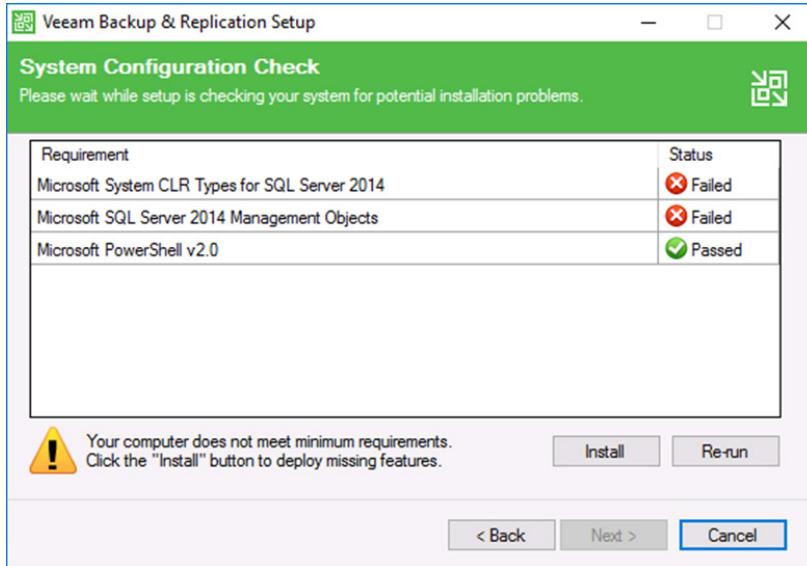


Figure 21

10. At this step, Veeam will list all pre-defined defaults for installation. If you wish to change any of the default directories or port numbers, check the **Let me specify different settings** box (Figure 22).

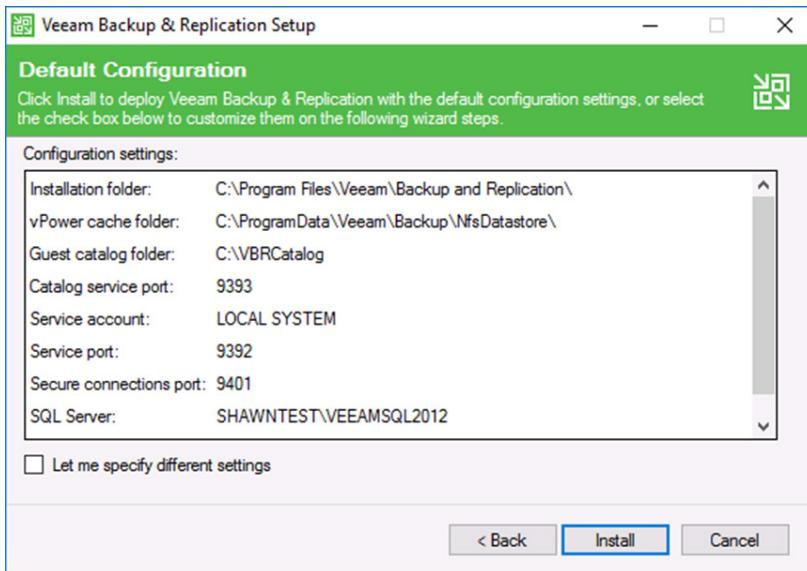


Figure 22

11. When the installation completes, click **Finish** to exit the setup wizard (Figure 23). You can now start Veeam Backup & Replication

Veeam Backup & Replication Configuration

Now that Veeam Backup & Replication is installed, launch the application directly from the desktop icon. Once launched, the following configurations are required:

- Backup infrastructure including vSphere infrastructure, backup repositories and configuration backups
- SAN infrastructure to allow for integration with the various storage systems

Adding the Virtual Infrastructure

1. For building your backup infrastructure in a VMware vSphere environment, Veeam Backup & Replication supports the following types of servers (Figure 23):

- VMware Server
- Microsoft Windows Server
- Linux Server
- vCloud Director

Veeam Backup & Replication allows you to connect both vCenter servers and standalone ESX(i) hosts. If possible, avoid adding ESX(i) hosts which are part of the vCenter Server hierarchy. Add the corresponding vCenter Server instead. Adding the vCenter Server facilitates management of the backup infrastructure and can be a recommended condition for certain types of operations (such as Quick Migration). Note: Free ESXi is not supported.

Server Type	Source	Replication Target	Backup Proxy	Backup Repository
VMware Server (standalone ESX(i) host or vCenter Server)	●	●	○	○
Microsoft Windows server	○	○	●	●
Linux server	○	○	○	●
vCloud Director	●	○	○	○

Figure 23

For building your backup infrastructure in a Microsoft Hyper-V environment, Veeam Backup & Replication supports the following types of servers (Figure 24):

- Microsoft Hyper-V server
- Microsoft Windows server
- Linux server
- SMB3 server

You can connect both physical and virtual machines to the Veeam backup server and assign different roles to them.

The table below describes which roles can be assigned to the different types of servers added to Veeam Backup & Replication.

Server Type	Source	Replication Target	Offhost Backup Proxy	Backup Repository
Microsoft Hyper-V Server (standalone Hyper-V host, SCVMM or Hyper-V cluster)	●	●	○	○
Microsoft Windows server	○	○	●	●
Linux server	○	○	○	●
SMB3 server	●	○	○	○

Figure 24

Before you connect a Hyper-V host, cluster or SCVMM, check the following prerequisites:

- File and printer sharing must be enabled in network connection settings of the added Hyper-V host. On every connected Hyper-V host, Veeam Backup & Replication deploys a set of components: *Veeam Installer Service*, *Veeam Transport Service* and *Hyper-V Integration Service*. If file and printer sharing is not enabled, Veeam Backup & Replication will fail to install these components.
- [For SCVMM] SCVMM Admin UI must be installed on the Veeam backup server. Otherwise, you will not be able to add SCVMM servers to Veeam Backup & Replication.

2. To add a Server, select the desired server type to add (Figure 25).

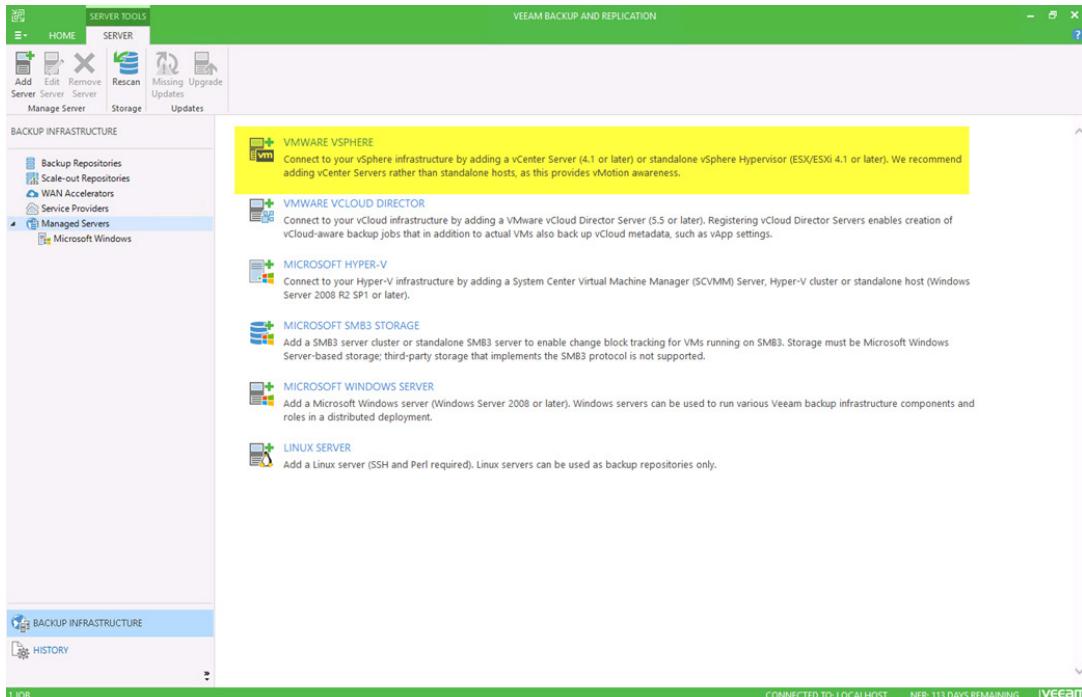


Figure 25

3. Enter the DNS name or IP address the Server. A description can be entered for future reference (Figure 26).
 The default description will include information about the user who added the server, as well as the date and time of when the server was added. When done, click **Next**.

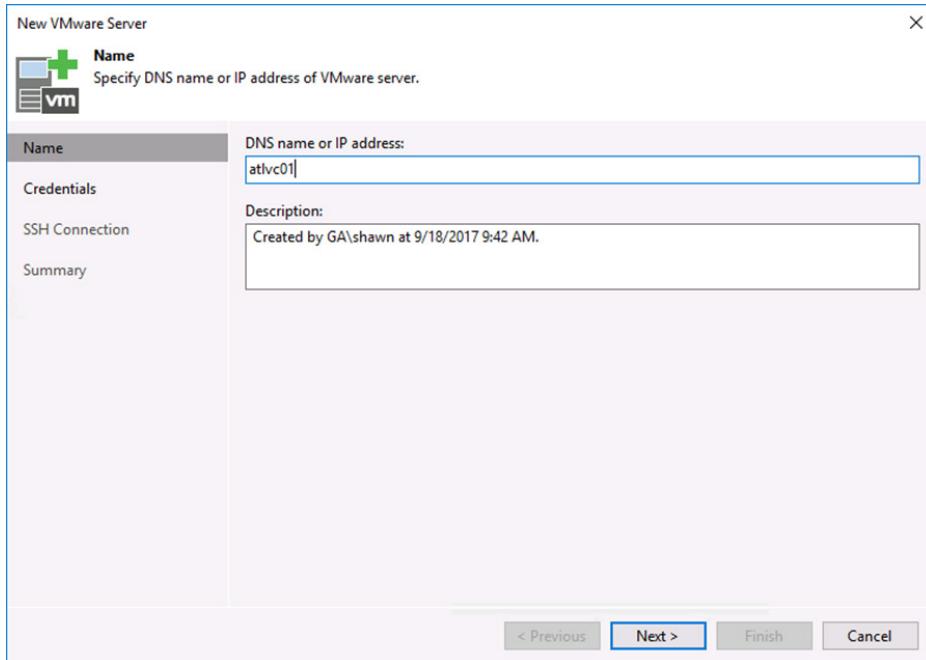


Figure 26

4. For VMware vSphere, skip to step 6. If adding Microsoft Hyper-V, next will be the **Server Type** selection (Figure 27). At this step, select from the three options: Microsoft System Center Virtual Machine Manager (SCVMM), Microsoft Hyper-V cluster or Microsoft Hyper-V server. Once the selection has been made, click **Next** to continue.

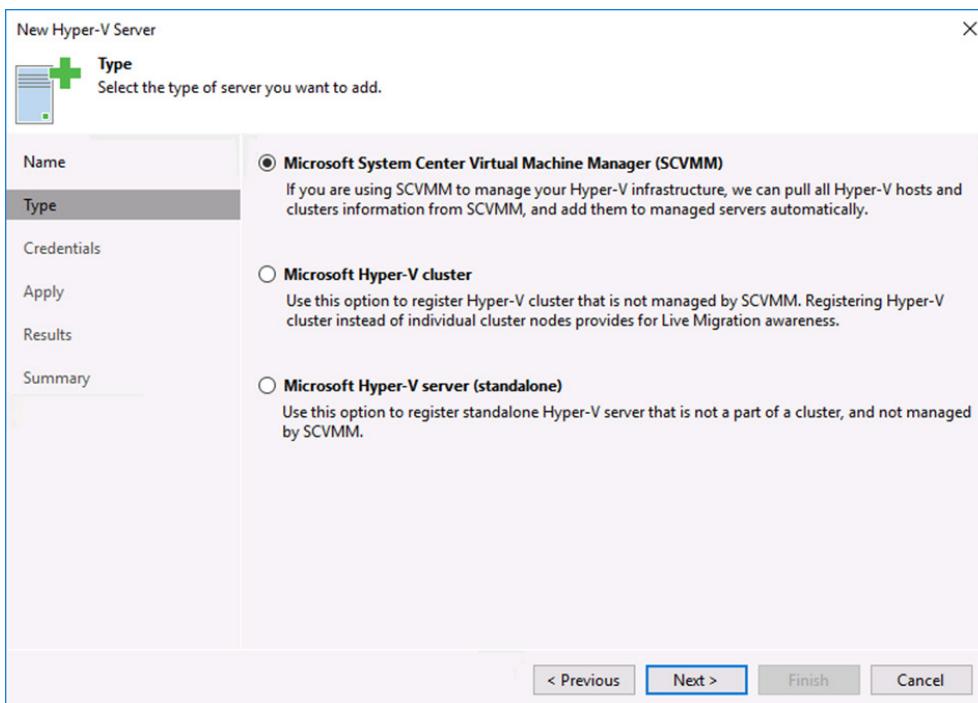


Figure 27

5. Next is the **Credentials**. On this screen click **Add** to input new credentials. For VMware, it is recommended that vCenter Admin be used if adding a vCenter Server and root credentials are needed for standalone ESX(i) hosts. Note: The username of the account should be provided in the DOMAIN\USERNAME format (Figure 28). Click **Next** to proceed.

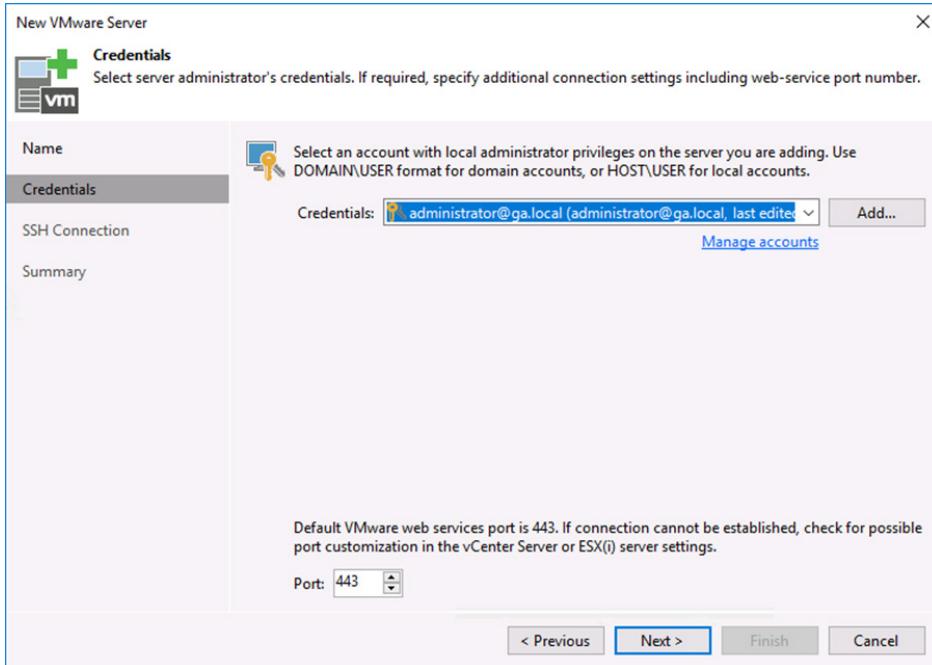


Figure 28

6. On the Summary screen, review the configuration information and click **Finish** to exit the wizard.
7. You can repeat these steps for any additional servers you need to add. Note: The steps for servers other than VMware vSphere or Microsoft Hyper-V are not identical, but are very similar. At this point, add any Windows or Linux servers you wish to use as a backup repository (backup repositories are the locations where you wish to house your backup files).

Creating a new Veeam Backup Repository

By default, Veeam automatically creates a local backup repository on the C:\ drive of the Veeam Backup & Replication server. We will create a new backup repository so that we are storing backups on our newly created volume. The following steps will outline how to create the backup repository.

1. Select **Backup Infrastructure** from the lower left pane.
2. Right click on **Backup Repositories** and select **Add Backup Repository** (Figure 29).

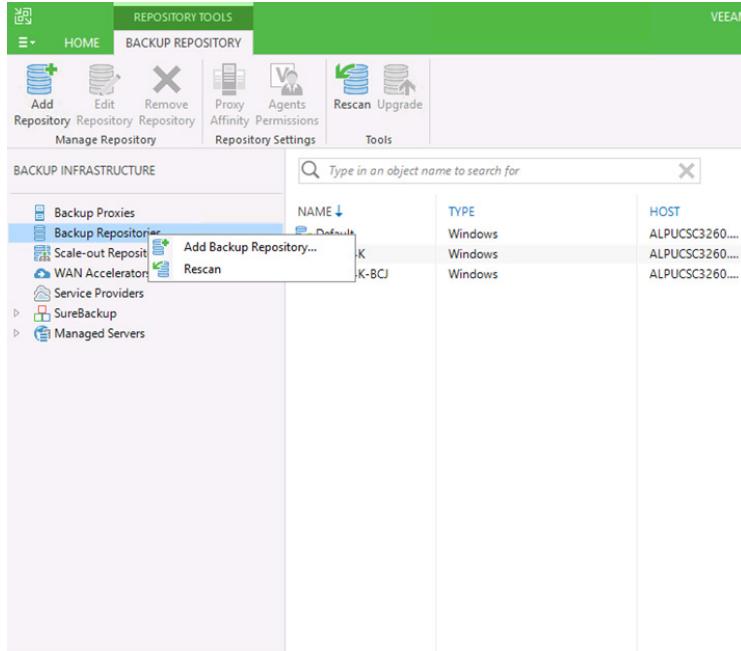


Figure 29

3. The New Backup Repository wizard will launch, the first screen is **Name** (Figure 30). Give the new backup repository a name. The description will be prepopulated, but you can edit this field. Click **Next** to move on to **Type**.

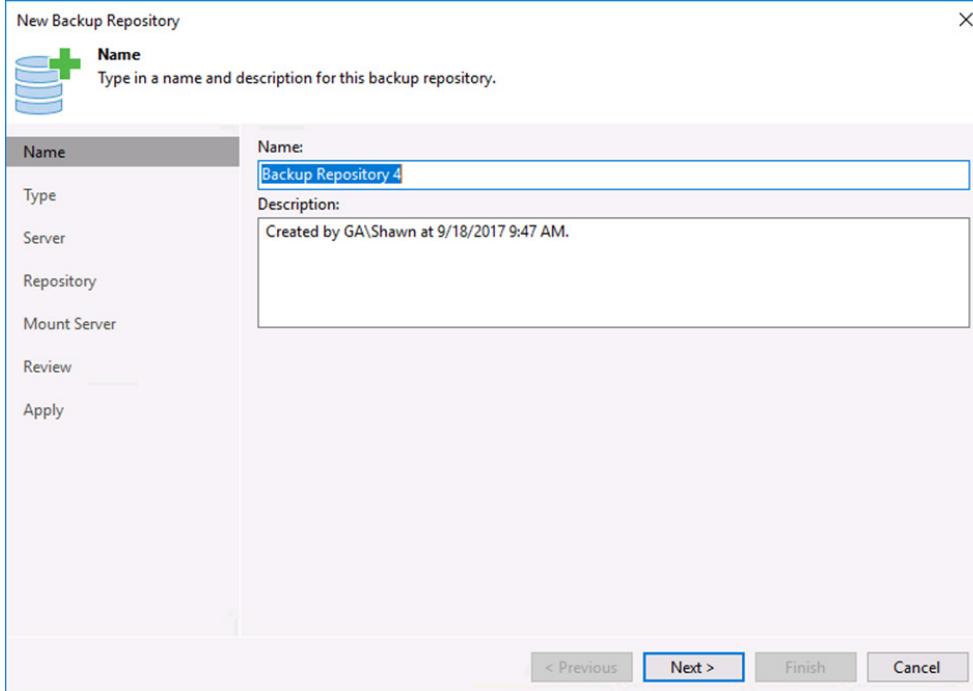


Figure 30

4. On the **Type** screen, there will be multiple options for the repository type. For the C240, we will select Microsoft Windows server and click **Next** to continue to **Server** (Figure 31).

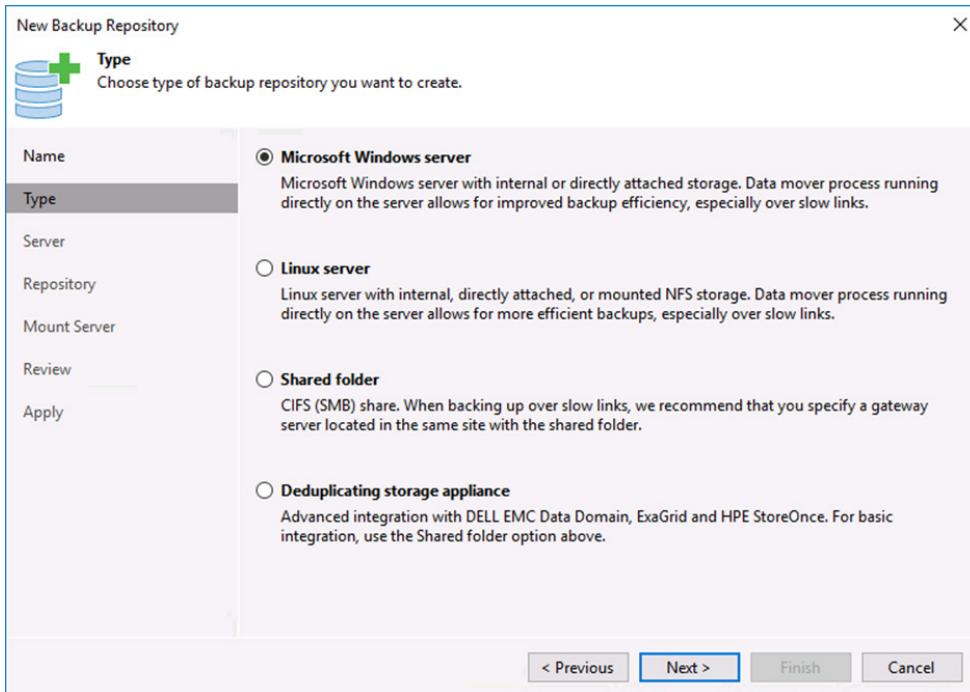


Figure 31

5. Moving on to the **Server** screen, click the **Populate** button for Veeam to detect all volumes on this server. Select the newly created volume and click **Next** to continue to the **Repository** screen (Figure 32).

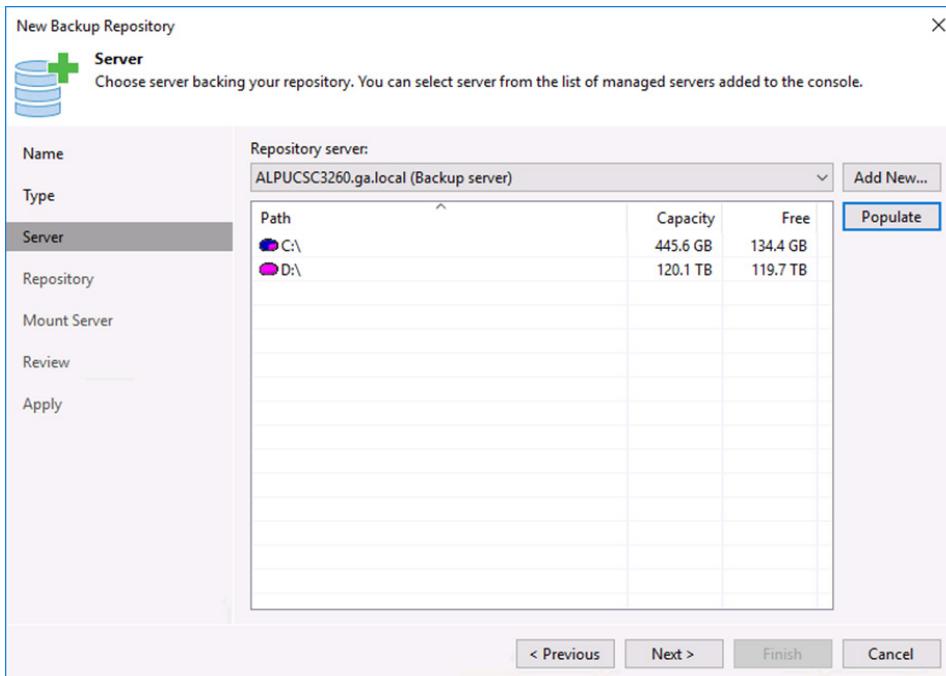


Figure 32

6. The **Repository** (Figure 33) screen is the most important screen in repository creation. First, specify a path on the new volume for which to store backups. Below Location, you will find the Load control settings. There are two options for load control, you can limit the maximum number of concurrent tasks or you may limit the combined data rate. Maximum concurrent tasks are the usual recommendation as the combined data rate can be difficult to determine. To make the determination on the maximum concurrent tasks, there will be some considerations. To avoid confusion, tasks are not jobs. There can be multiple tasks running for a single job if parallel processing is left on (parallel processing is on by default on new installs). The number of available CPU cores will determine the maximum number of concurrent tasks, Veeam will limit one task per available CPU core. Our example box has two physical processors, each with 12 physical cores, so both are capable of 24 concurrent tasks together. We recommend leaving a little headroom so we have limited the number of tasks to 22 in this example. Once the settings have been made, click **Next** to continue.

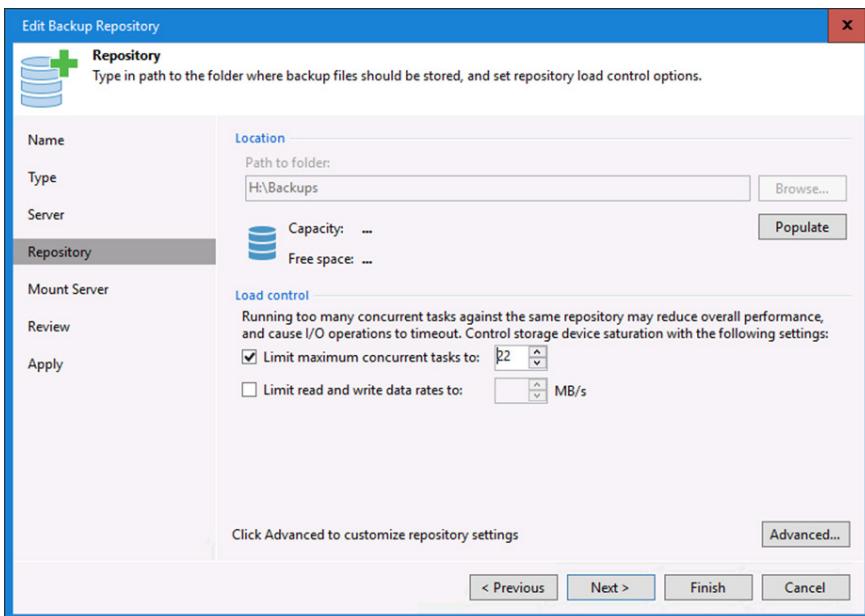


Figure 33

7. Click on the Advanced button in the lower right to make additional recommended settings.

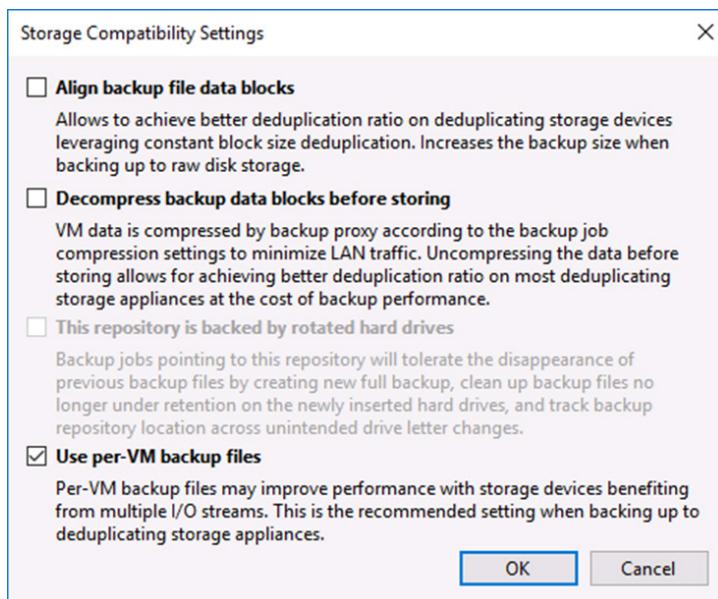


Figure 34

8. Check the box **Use per-VM backup files**. This recommended setting allows Veeam to create a backup file for each VM being backed up (Figure 34).
9. The next screen (Figure 35) is vPower NFS, no changes need to be made here based on the configuration on the C240. Click **Next** to proceed to the **Review** screen.

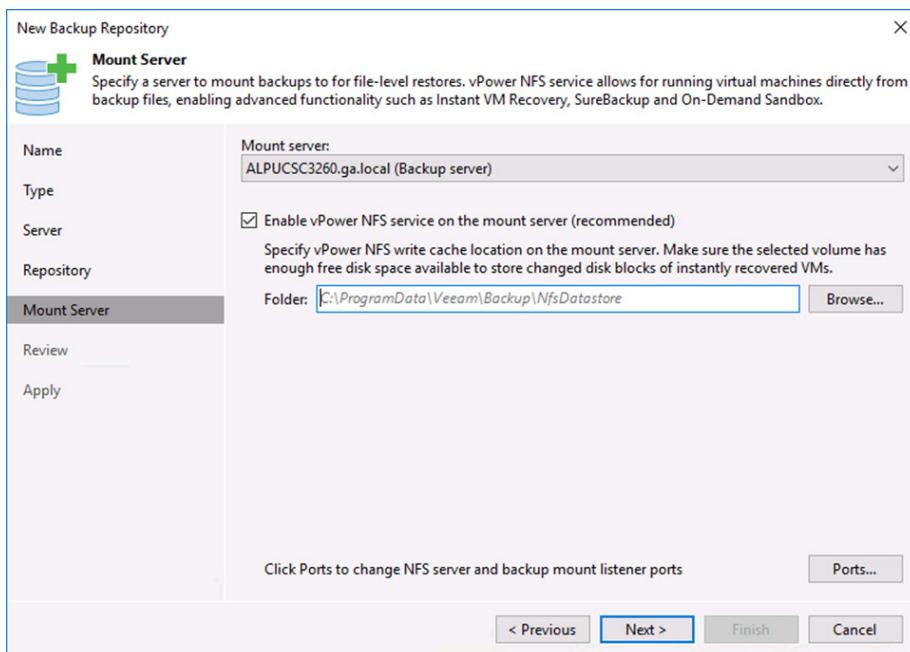


Figure 35

10. On the Review screen, verify the desired settings are accurate and click **Next** to continue (Figure 36).

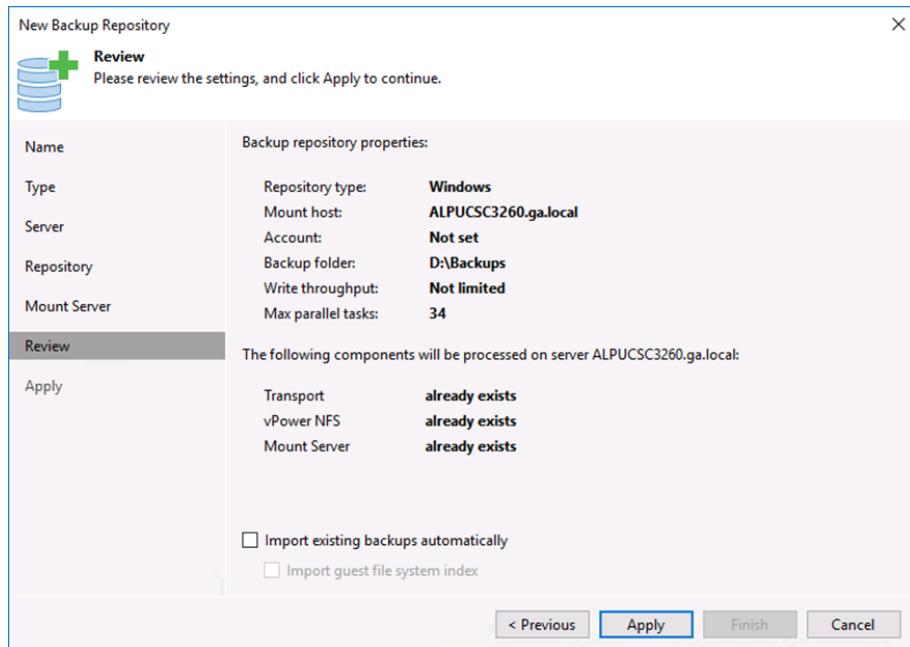


Figure 36

11. Veeam will now apply all the settings and create the new repository, click **Finish** to exit the wizard (Figure 37).

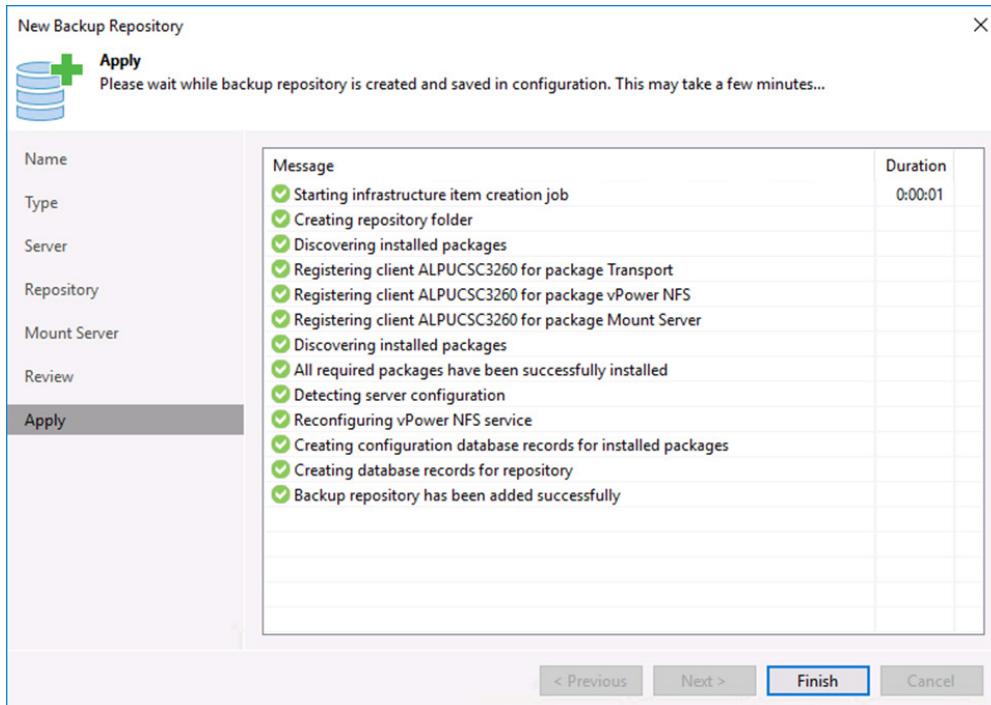


Figure 37

Veeam Backup Proxies

For VMware vSphere:

By default, for VMware there is already a VMware Backup Proxy present. This is the current server running Veeam Backup & Replication. Verify the VMware Backup Proxy settings by selecting **Backup Infrastructure -> Backup Proxies** and then right-clicking on the existing Backup Proxy and selecting **Properties** (Figure 39).

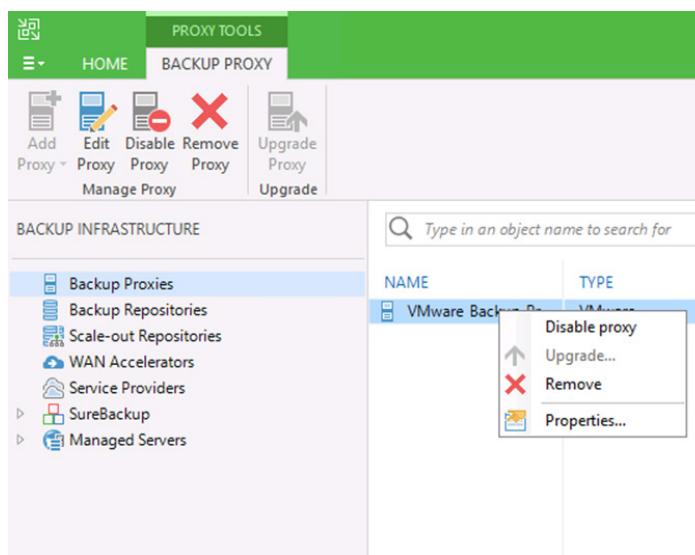


Figure 38

The **Edit VMware Proxy** settings will pop up (Figure 39). Ensure that the maximum concurrent tasks are as expected. Referencing the example we used early with the backup repositories, the server has two physical processors with 10 physical cores each. This results in a maximum of 20 concurrent tasks. For this guide, we will leave a little room for overhead and set the maximum number of concurrent tasks to 18.

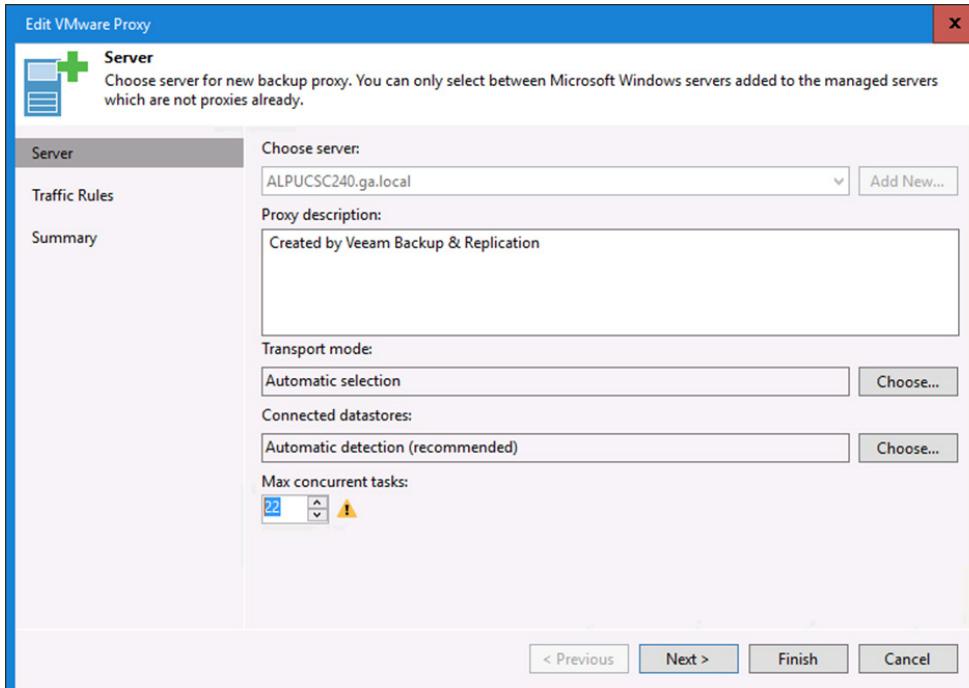


Figure 39

Additional Veeam Backup Proxies can be added to scale the Veeam backup infrastructure for any size environment. Additional C24Os can be used as Veeam Backup Proxies / Backup Repositories by installing a 64-bit Windows operating system (see pre-requisites on page 3). By adding additional C24Os to the backup infrastructure you can scale the backup solution linearly. Each unit provides not only additional backup storage space, but also compute and memory resources. Each C240 can have up to 12 NL-SAS HDDs for additional backup storage. Backup Proxies can be added, as needed, to scale the backup infrastructure to suite any size environment. To add additional Veeam Backup Proxies, perform the steps below:

For Microsoft Hyper-V:

By default, the Hyper-V hosts are leverage as On-Host Backup Proxies. To configure the C240 as an Off-Host Backup proxy, the following pre-requisites must be met:

- Must be running the same version of Windows as the Hyper-V Hosts. The off-host proxy role can only be assigned to Windows Server 2008 R2, Server 2012 and Server 2012 R2.
- The Hyper-V role must be enabled on the off-host proxy.
- The source Hyper-V host and off-host backup proxy must be connected via a SAN configuration to the shared storage that supports VSS hardware providers.
- To create and manage volume shadow copies on the shared storage, you must install and properly configure a VSS hardware provider that supports transportable shadow copies. The VSS hardware provider must be installed on the off-host proxy and Hyper-V host. The VSS hardware provider is typically distributed as a part of client components supplied by the storage vendor.
- If you plan to perform off-host backup for a Hyper-V cluster with CSV, you must deploy an off-host backup proxy on a host that is not a part of a Hyper-V cluster. If the off-host backup proxy is deployed on a node of a Hyper-V cluster, the cluster will fail during VM data processing.

1. Select **Backup Infrastructure** from the lower-left pane (Figure 40).
2. Right click on **Backup Proxies** and select **Add VMware Backup Proxy** or **Add Hyper-V Off-Host Backup Proxy**.

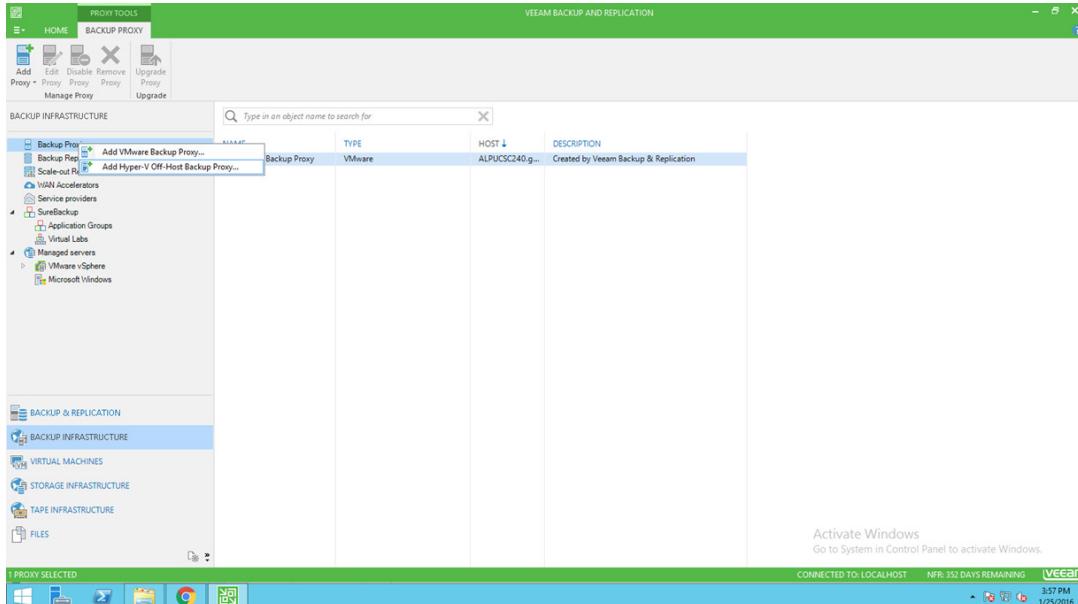


Figure 40

3. From the **Choose Server** list, select a Microsoft Windows server to which you want to assign the off-host backup proxy role (Figure 41). If the server is not added to Veeam Backup & Replication yet, you can click **Add New** to open the **New Windows Server** wizard. If the server is already added to Veeam Backup & Replication, skip to step 8.

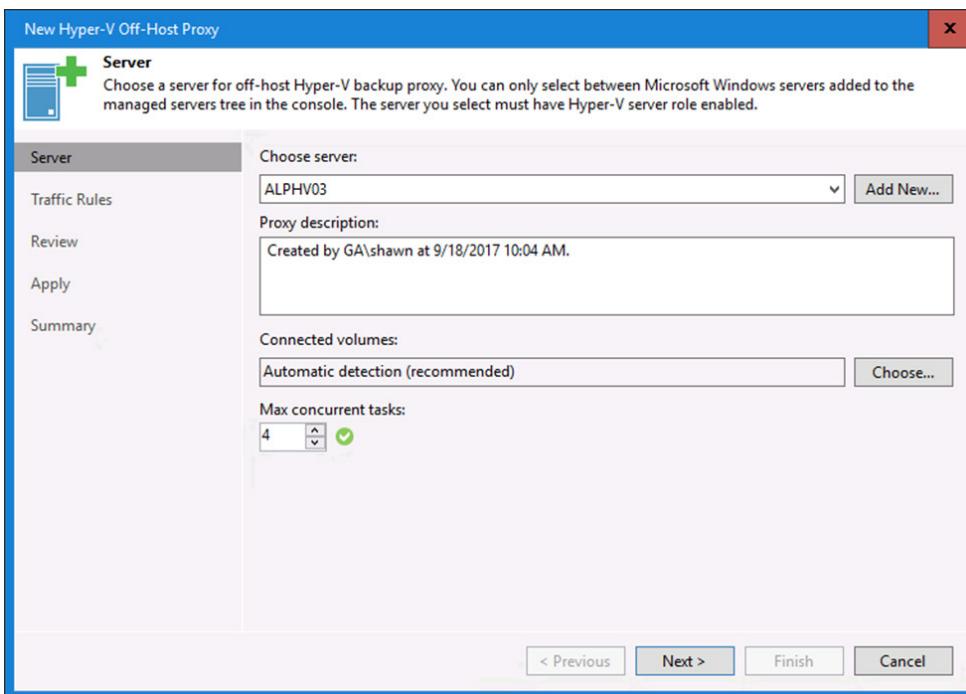


Figure 41

4. In the **New Windows Server** box enter a full DNS or IP address for the Microsoft Windows Server (Figure 42). You can also provide a description for future reference, by default the description contains information about the user who added the server, date and time when the server was added. Click **Next** when complete.

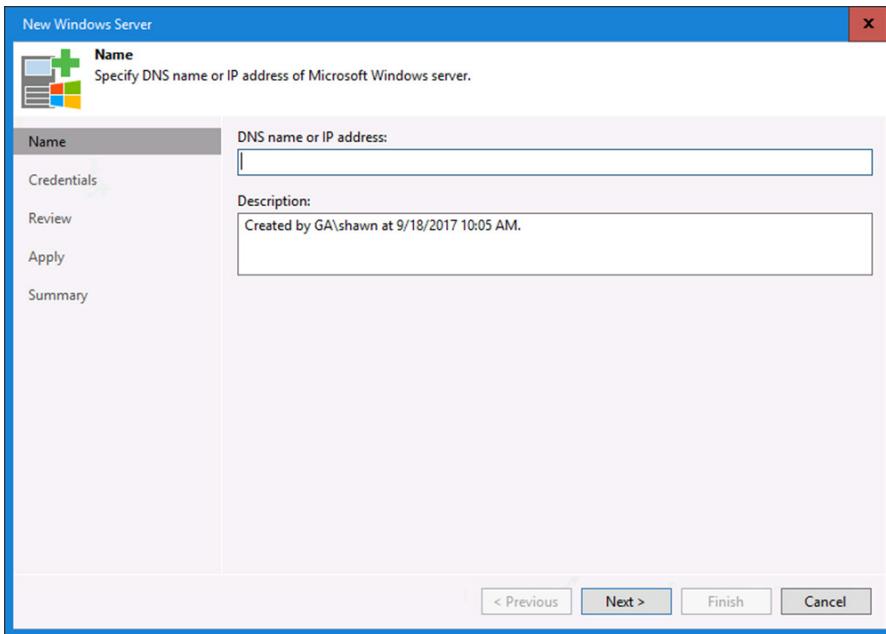


Figure 42

5. Next is the **Credentials** step of the wizard. Specify credentials for the newly added Windows Server (Figure 43).

Veeam will use the provided credentials to deploy the following components:

- Veeam Installer Service
- Veeam Transport Service

To customize network ports used by Veeam Backup & Replication components, click **Ports**. By default, Veeam Backup & Replication components use the following ports:

- Veeam Installer Service: port 6160
- Veeam Transport Service: port 6162

If necessary, adjust port numbers as required.

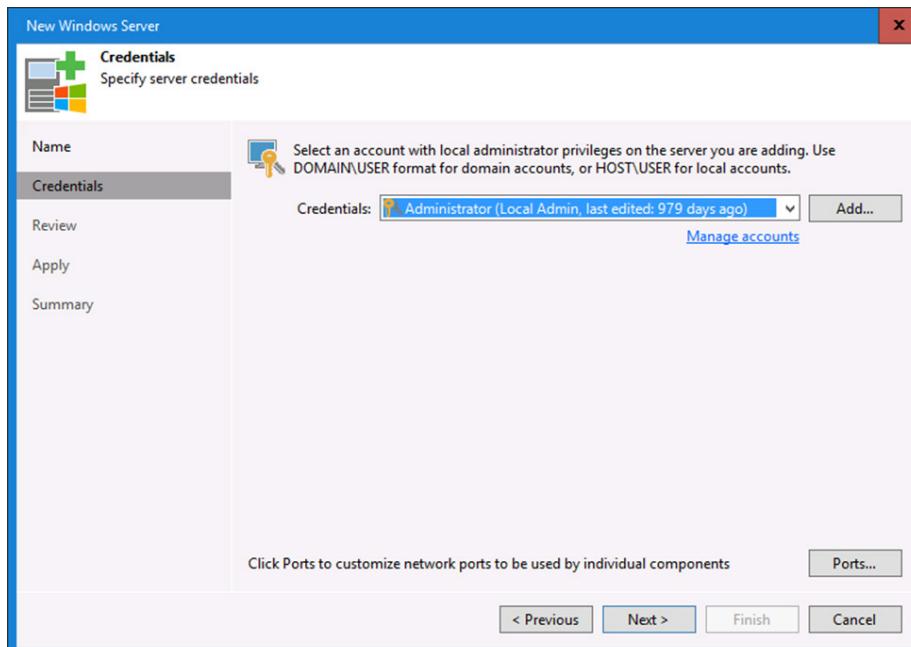


Figure 43

6. At the **Review** step of the wizard, review what Veeam Backup & Replication components are already installed on the server and what components will be installed. Click **Next** to add the Microsoft Windows Server to Veeam Backup & Replication.
7. At the **Apply** step of the wizard, complete the procedure for adding Microsoft Windows server. Review the details for the added Windows Server, click **Next** to proceed and finally click **Finish** to exit the wizard.
8. Back on the New Hyper-V Off-Host Proxy window (Figure 44), you can verify and edit the following:
 - In the **Proxy description** field, provide a description for future reference. The default description contains information about the user who added the backup proxy, date and time when the proxy was added.
 - In the **Connected volumes** field, specify from which volumes the backup proxy should be able to retrieve VM data. By default, Veeam Backup & Replication automatically detects all volumes accessible by the backup proxy.
 - You can set up the list of volumes manually, for example, if you want a backup proxy to work with specific volumes. Click **Choose** on the right of the **Connected datastores** field, choose **Manual selection** and add datastores from which the backup proxy should retrieve VM data.
 - In the **Max concurrent tasks** field, specify the number of tasks that the backup proxy must handle in parallel. If this value is exceeded, the backup proxy will not start a new task until one of current tasks is finished. The recommended number of concurrent tasks is calculated automatically based on available resources. Veeam backup proxies with multi-core CPUs can handle more concurrent tasks. For example, for a 4-core CPU, it is recommended to specify a maximum of four concurrent tasks, for an 8-core CPU – eight concurrent tasks. When defining the number of concurrent tasks, keep in mind network traffic throughput in your virtual infrastructure.

When ready, click **Next** to proceed.

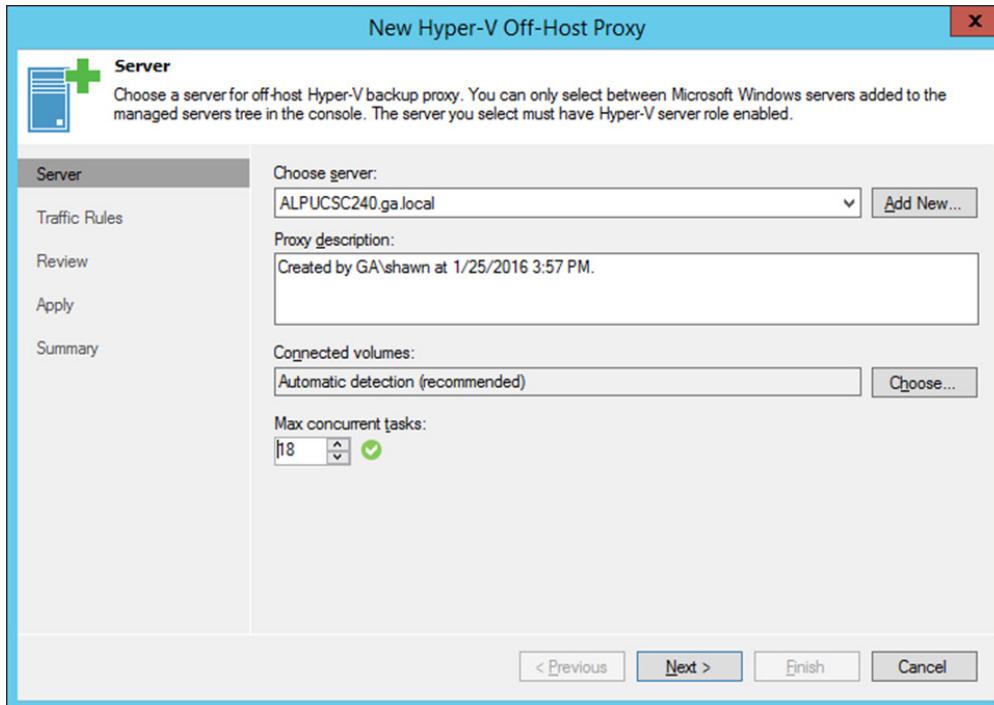


Figure 44

9. At the **Traffic** step of the wizard, configure throttling rules to limit the outbound traffic rate for the backup proxy (Figure 45). Throttling rules can help you manage bandwidth usage and minimize the impact of data protection and DR tasks on network performance. Click **Next** when ready to proceed.

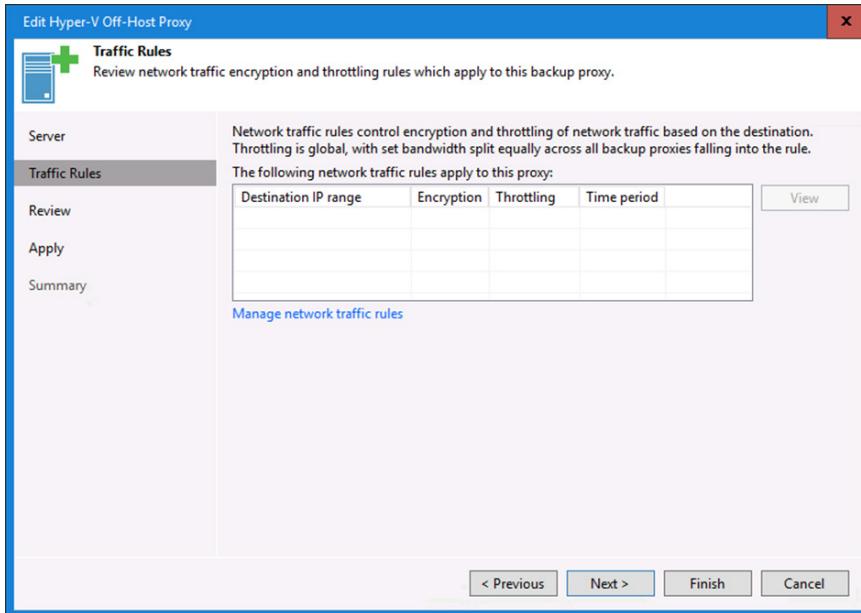


Figure 45

10. At the **Review** step of the wizard, review what Veeam Backup & Replication components are already installed on the backup proxy and what components will be installed (Figure 46). Click **Next** to add the new backup proxy.

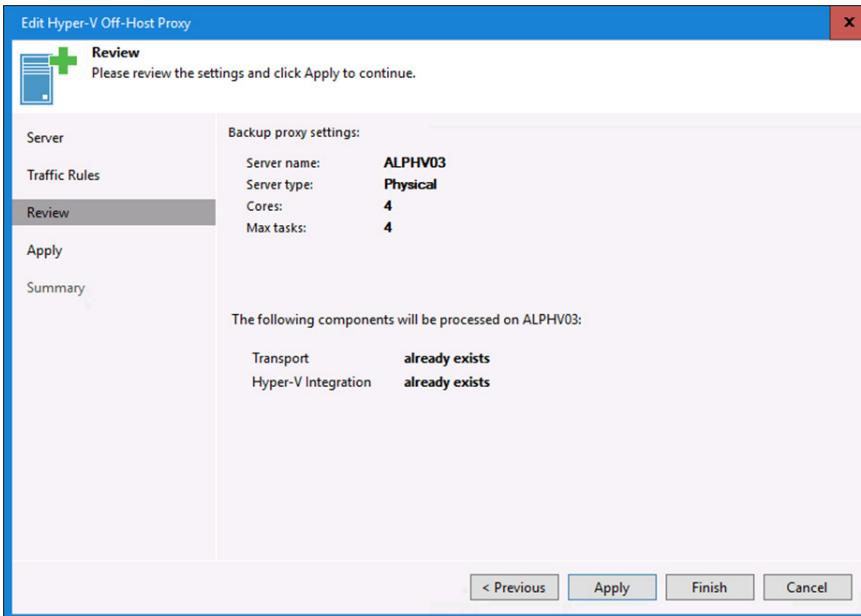


Figure 46

11. At the **Apply** step of the wizard, complete the procedure of backup proxy configuration. Review the details for the added backup proxy. Click **Next** and then **Finish** to exit the wizard.

Now that Veeam Backup & Replication is configured, backup jobs and many other jobs may be configured to use the newly available volume. Additional C3160's configured as a Veeam Backup Proxy / Backup Repository can deployed off site for additional protection or archival of your backups. Veeam Backup Copy Jobs can be leveraged to move backup data to these off-site locations. If further installation or operational detail is needed, refer to the Veeam Backup & Replication user guides for more detail. You can find the Veeam user's guide below:

[User Guide for VMware vSphere](#)

[User Guide for Microsoft Hyper-V](#)


About the Authors



Stefan Renner

With 11 years of IT-Experience in designing and implementing Enterprise Datacenters, he is the responsible Alliance Systems Engineer for NetApp and Cisco at Veeam Software. Before joining Veeam he worked 7 years as IT-Consultant with a strong focus on NetApp, Cisco, VMware and Data Protection in projects all over EMEA. Stefan lives near Nuremberg in Germany.

[Twitter: @rennerstefan](#)

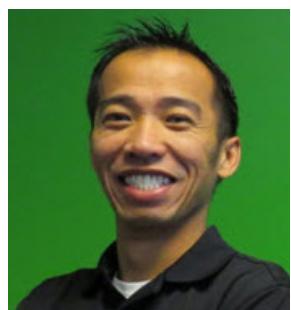

Shawn Lieu

Shawn is a virtualization and data protection IT professional with over 17 years of industry related experience. He is a Solutions Architect that works with the Global Alliances Team. Shawn is also the co-host of Whiteboard Fridays, a live tech and virtualization show. Shawn lives in Atlanta, Georgia USA.

[Twitter: @shawnlieu](#)

About Veeam Software

Veeam® recognizes the new challenges companies across the globe face in enabling the Always-On Business™, a business that must operate 24.7.365. To address this, Veeam has pioneered a new market of Availability for the Always-On Enterprise™ by helping organizations meet recovery time and point objectives (RTO/RPO) of < 15 minutes for all applications and data, through a fundamentally new kind of solution that delivers high-speed recovery, data loss avoidance, verified protection, leveraged data and complete visibility. [Veeam Availability Suite™](#), which includes [Veeam Backup & Replication™](#), leverages virtualization, storage, and cloud technologies that enable the modern data center to help organizations save time, mitigate risks, and dramatically reduce capital and operational costs.

Founded in 2006, Veeam currently has 47,000 ProPartners and more than 242,000 customers worldwide. Veeam's global headquarters are located in Baar, Switzerland, and the company has offices throughout the world. To learn more, visit <http://www.veeam.com>.

AVAILABILITY for the Always-On Enterprise™

veeAM

Veeam makes
the Fortune 500
Available.

24.7.365

To enable its **Digital Transformation**, 70% of the Fortune 500 rely
on Veeam to ensure Availability of all data and applications. **24.7.365**