



Kunak AIR Pro

External SIM card installation

SUMMARY

1.1 Communication by 2G/3G/4G	1
1.2 Install or Change the external SIM card	1

TABLES

Table 2 – Install or change of SIM card	3
---	---

FIGURES

Figure 1 – Location of the mini-SIM card and USB configurator	2
Figure 2 – Device configuration: Detecting devices	4
Figure 3 – Device configuration: node	4
Figure 4 – Device configuration: PIN.....	5
Figure 5 – Device configuration: Connection	6
Figure 6 – Device configuration: node status.....	7

1.1 Communication by 2G/3G/4G

By default, the device is shipped with a multioperator eSIM (embedded SIM on chip) already installed, configured and ready to operate. At the time of communication, the **Kunak AIR Pro** device will choose the carrier with the best coverage for the location you are in.



The eSIM supplied with the device can work in almost all countries.

To ensure that it works in your country, please contact your distributor or Kunak.

In case it is required, the **Kunak Air Pro** device offers the possibility of inserting an external SIM card. In order to make the device work with the external SIM card it **MUST** be configured with the new SIM parameters. At any time, the device can be re-installed with the Kunak eSIM by simply removing the external SIM card from its dedicated slot.

1.2 Install or Change the external SIM card



CAUTION: Inserting a new external SIM into the device or changing the one already inserted in it requires the change of the SIM PIN and APN.

- To change the SIM PIN, APN, APN user or APN password, the software "Kunak Device Configurator" **MUST** be used. The software and the user manual of the "Kunak Device configurator" can be downloaded from the Support area of **Kunak Cloud**.

By default, the **Kunak AIR Pro** is shipped with an eSIM card installed and configured. This is a global multi-operator eSIM card that cannot be removed from the device. With the eSIM, at the time of communication, the **Kunak AIR Pro** device will choose the carrier with the best coverage for the location you are in.


If it is needed, a Mini-SIM (form factor 2FF, 25mm x 15 mm) card can be installed. In this case, the device must be open to install the mini-SIM and update the PIN and APN configuration of the SIM that has been installed.

The **Kunak AIR Pro** device will communicate through the eSIM if there is no mini-SIM card inserted. When a mini-SIM card is inserted into the external sim slot, the device will detect it and will always work through the external SIM instead of the embedded eSIM. Therefore, it **MUST** be ensured that whenever a mini-SIM card is inserted, the device is correctly configured to make the external SIM work.

The following steps describe how to insert an external SIM into a **Kunak AIR Pro** device.



Figure 1 – Location of the mini-SIM card and USB configurator

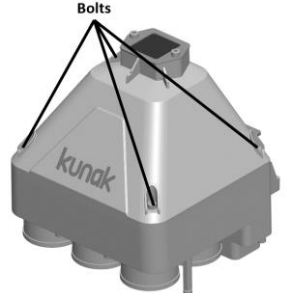
1 The device must be switched off before starting the process.	
2 Remove the solar shield from the device by unscrewing the 2 screws and pulling it out.	
3 Unscrew the 4 screws on the top cover of the device to open the upper half of the device.	
4 Open the SIM card holder by sliding the metal part to the left (as in the picture).	

5 Insert the mini-SIM card by sliding it into the SIM card holder.	
6 When the mini-SIM is inserted, close and lock the SIM card holder by sliding the metal part to the right (as in the picture).	
7 Connect the mini-USB cable to the connector and the PC.	
8 Once is connected to the PC, switch on the device.	
9 Wait until "DEVICE READY FOR USB CONFIGURATION" appears on Kunak Air Pro screen.	
10 The device is ready for USB configuration, please follow the instructions bellow to set external SIM configuration parameters to the device through Kunak Device Configurator application.	
11 When the configuration is finished, disconnect the USB, switch off the device and follow the instructions in reverse to reassemble the device.	

Table 1 – Install or change of SIM card

To make the external SIM work properly, its PIN and APN parameters **MUST** be configured and stored into the **Kunak AIR** device. To do so, Kunak provides a Windows application (Kunak device configurator) that can be downloaded from the **Kunak Cloud** support section. Once the application has been properly installed, the **Kunak AIR** device can be connected to the PC through an USB cable in order to be configured by Kunak Device Configurator application.

First, open Kunak Device Configurator application and wait for it to recognize the COM PORT where the device is connected. Once the COM PORT has been displayed in the application window, insert the device PIN to enable Kunak Device Configurator application and click "Next".

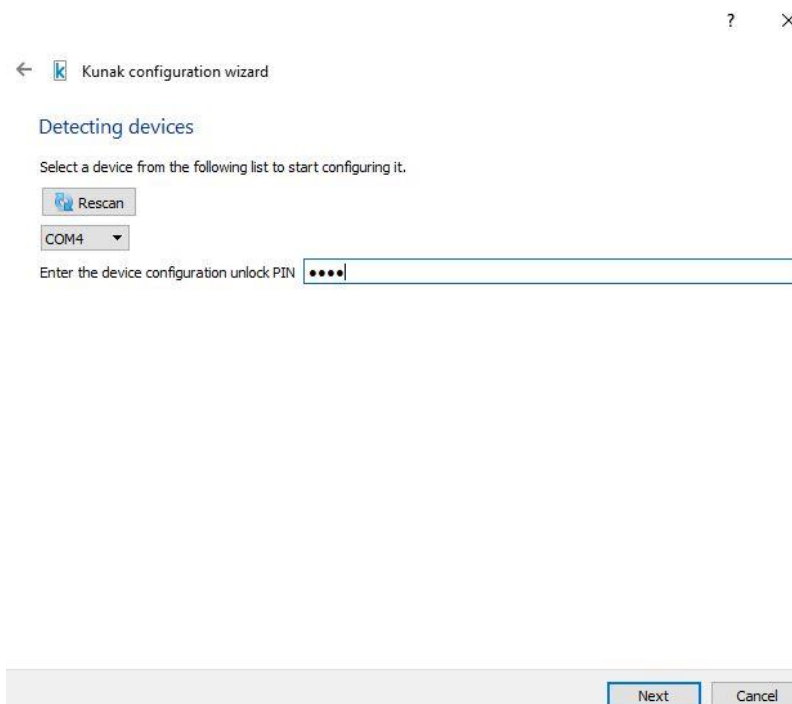

Kunak configuration wizard

Detecting devices

Select a device from the following list to start configuring it.

 Rescan


COM4

Enter the device configuration unlock PIN:

Next Cancel

Figure 2 – Device configuration: Detecting devices

Then, Kunak Device Configurator application will show the device's home page where device name, pin and time zone configuration can be edited if needed. Skip to the SIM and Cellular Communication configuration window by clicking next.

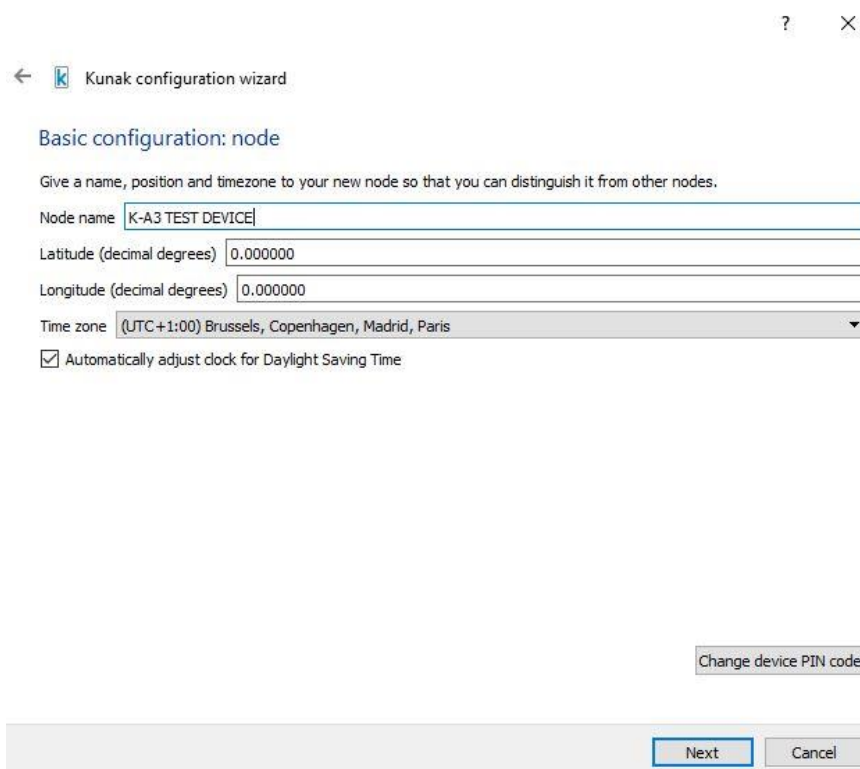

Kunak configuration wizard

Basic configuration: node

Give a name, position and timezone to your new node so that you can distinguish it from other nodes.

Node name:

Latitude (decimal degrees):

Longitude (decimal degrees):

Time zone:

☒ Automatically adjust clock for Daylight Saving Time

Change device PIN code

Next Cancel

Figure 3 – Device configuration: node

In case your external SIM requires a PIN in order to enable communication, configure it in the "SIM PIN" field, otherwise leave the field as it is.

? ×

←  Kunak configuration wizard

Basic configuration: connection

Please enter the available communication interfaces different configurations. Beware that high frequency connections drain more battery.

GPRS **LoRa WAN** Ethernet WiFi LoraK

SIM PIN

SIM APN

APN user

APN password

KWP server URL or IP

KWP port

Connection period 30 minutes

☒ Normal working mode ☐ Alarms working mode

Erase storage memory ☐

Omit data validation test (Not recommended) ☐

Next Cancel

Figure 4 – Device configuration: PIN

Once in the SIM and Cellular Communication window, set your specific external SIM configuration parameters in the “SIM APN”, “APN user” and “APN password” fields.

 Search for the APN configuration of your operator over internet.

←  Kunak configuration wizard

Basic configuration: connection

Please enter the available communication interfaces different configurations. Beware that high frequency connections drain more battery.

GPSS LoRa WAN Ethernet WiFi LoraK

SIM PIN <empty>

SIM APN myapn

APN user myuser

APN password mypassword

KWP server URL or IP:

KWP port:

Connection period 30 minutes

☒ Normal working mode ☐ Alarms working mode

Erase storage memory ☐

Omit data validation test (Not recommended) ☐

Next Cancel

Figure 5 – Device configuration: Connection

Once all external SIM parameters have been properly configured, by clicking “Next”, the Kunak Device Configurator will launch a Communication Test where the device will try to connect to Kunak Cloud server to verify that cellular communication works properly. This test may take up a few minutes to complete. If the SIM has been properly configured the test will succeed and the device is ready to operate, otherwise please check the error code displayed by Kunak Device Configurator and go back to the SIM configuration window to check the external SIM configuration.

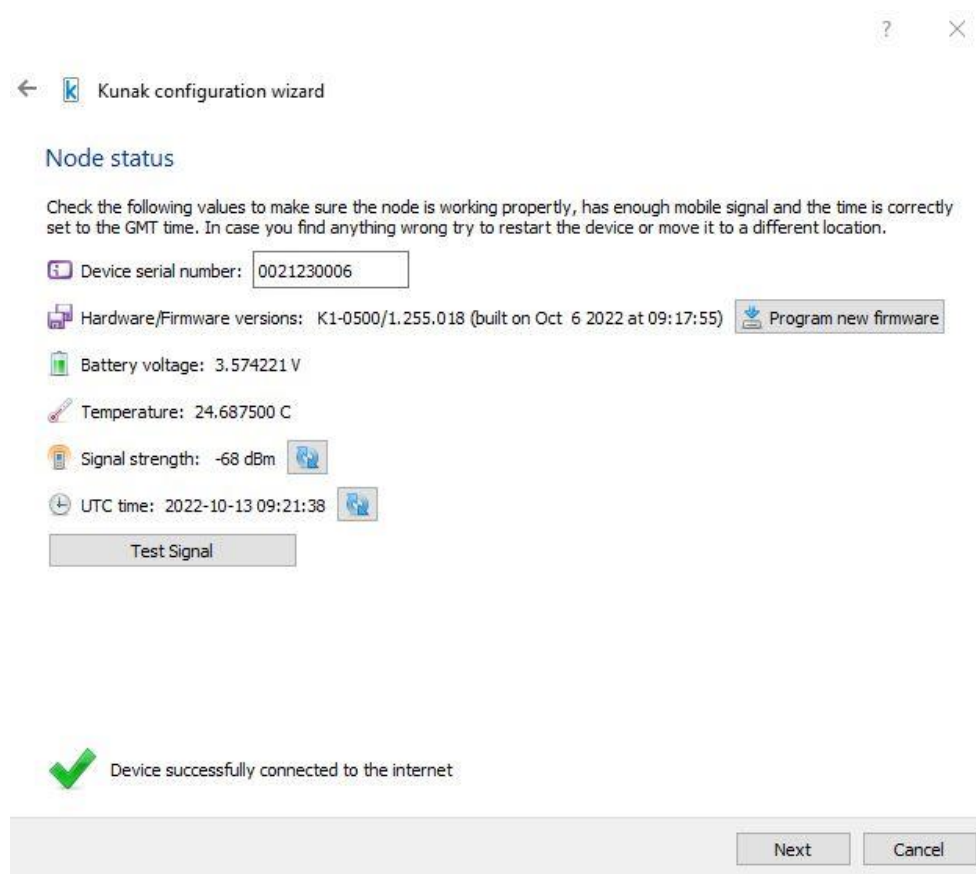


Figure 6 – Device configuration: node status

To store the configurations into Kunak Air Pro device and start normal operation, please skip through the Kunak Device Configurator windows by clicking "**Next**" until you reach the end.