TECHNICAL NOTEEDITION ANGLAISE



OCTOBER 2003 77 11 327 962



Type

S/Section

Twingo

C06 X

81B

81B

INTERIOR LIGHTS

Engine: XXXGearbox: XXX


Basic manual: Workshop Repair Manual **305**

This Technical Note describes the method for removal-refitting of the interior lights.

[&]quot;The repair methods given by the manufacturer in this document are based on the technical specifications current when it was prepared.


INTERIOR LIGHTING Interior lights

REMOVAL

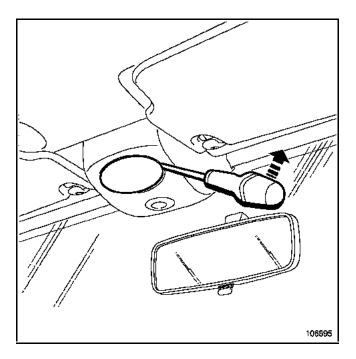

Unclip the air vent in the right section using a flat screwdriver.

Remove the bulb.

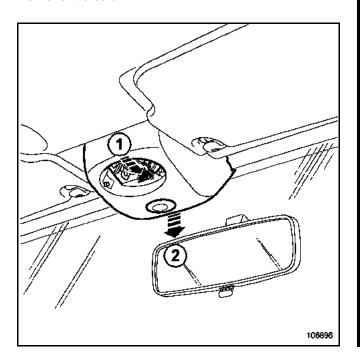

Unclip:

- the console in (1) then in (2),
- the connector.

REFITTING


Clip the connector.

Insert the connector in the guide.

Position the console.

Clip the console.

Position the bulb.

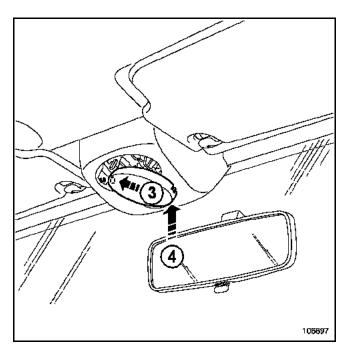

Position the air vent on the lug section of the console in (3).

Clip the air vent in (4).