UPS Monitoring with NUT and Homarr

PWR-NUT | Study Guide & Vocabulary | Created by Mr. Beaird

Visual Reference - System Components / Workflow

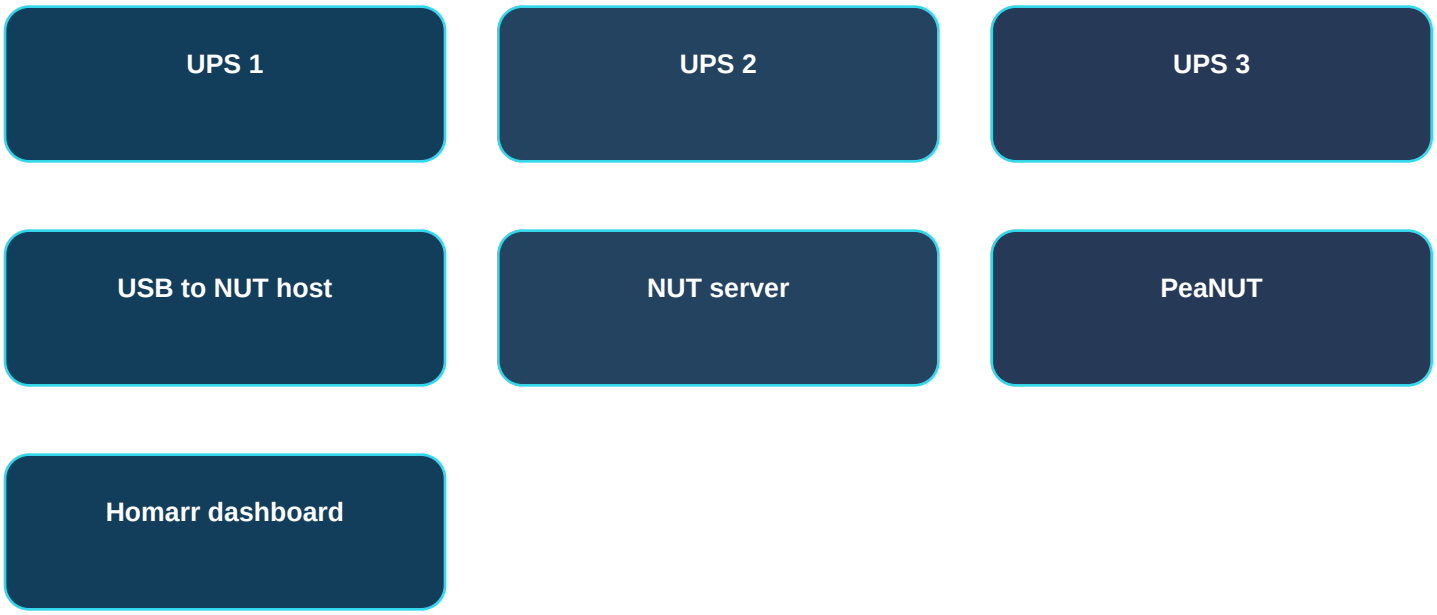

Preparation Checklist

- Connect UPS USB monitoring cables to the designated NUT host.
- Assign unique UPS names in NUT configuration; test each driver.
- Verify the NUT server and authorized monitor credentials before clients.
- Display voltage, battery charge and status on the dashboard.

Training reference diagram; not a vendor-specific photograph or configuration screenshot.

UPS Monitoring with NUT and Homarr

PWR-NUT | Study Guide & Vocabulary | Created by Mr. Beaird

Vocabulary and Technical Reference

UPS
Battery-backed uninterruptible power supply.

NUT
Network UPS Tools; monitors supported UPS hardware.

upsd
NUT daemon providing UPS state to clients.

upsmon
Monitor for UPS state and shutdown policies.

USB HID
Common protocol for UPS telemetry over USB.

PeaNUT
Dashboard/bridge software for NUT-compatible data.

Homarr
Self-hosted dashboard for service widgets.

Battery runtime
Estimated time available on remaining charge.

Review and Troubleshooting

[ ] What observable evidence confirms the objective was completed?

[ ] What two common configuration or hardware errors could cause failure?

[ ] Which tool, indicator, or command would you check first?

Student: _____ Date: _____