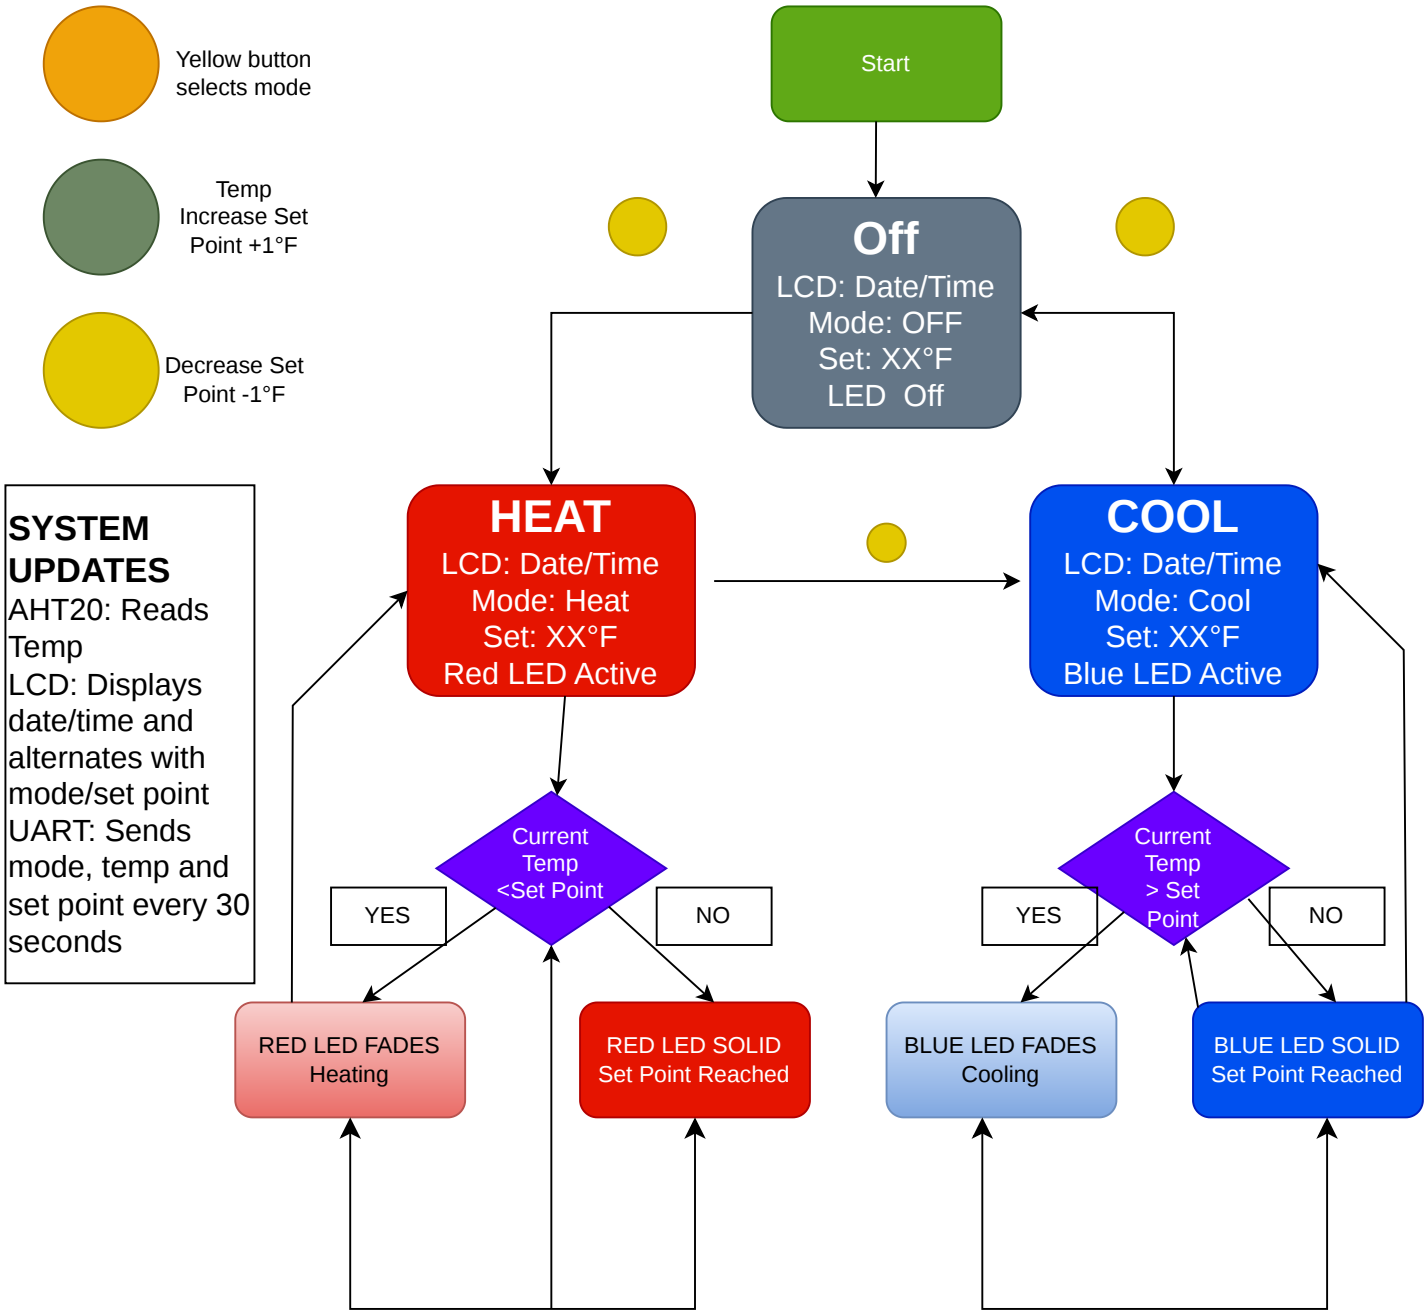
Yellow button selects mode
Temp Increase Set Point +1°F
Decrease Set Point -1°F
Start
Off
LCD: Date/Time
Mode: OFF
Set: XX°F
LED Off
HEAT
LCD: Date/Time
Mode: Heat
Set: XX°F
Red LED Active
COOL
LCD: Date/Time
Mode: Cool
Set: XX°F
Blue LED Active
SYSTEM UPDATES
AHT20: Reads Temp
LCD: Displays date/time and alternates with mode/set point
UART: Sends mode, temp and set point every 30 seconds
Current Temp <Set Point
YES
NO
Current Temp > Set Point
YES
NO
RED LED FADES Heating
RED LED SOLID Set Point Reached
BLUE LED FADES Cooling
BLUE LED SOLID Set Point Reached