
Generic Arduino Driver Installation Process

Step 1: Connect the Arduino to any USB Port of your laptop or system and upload the code. If you encounter this error

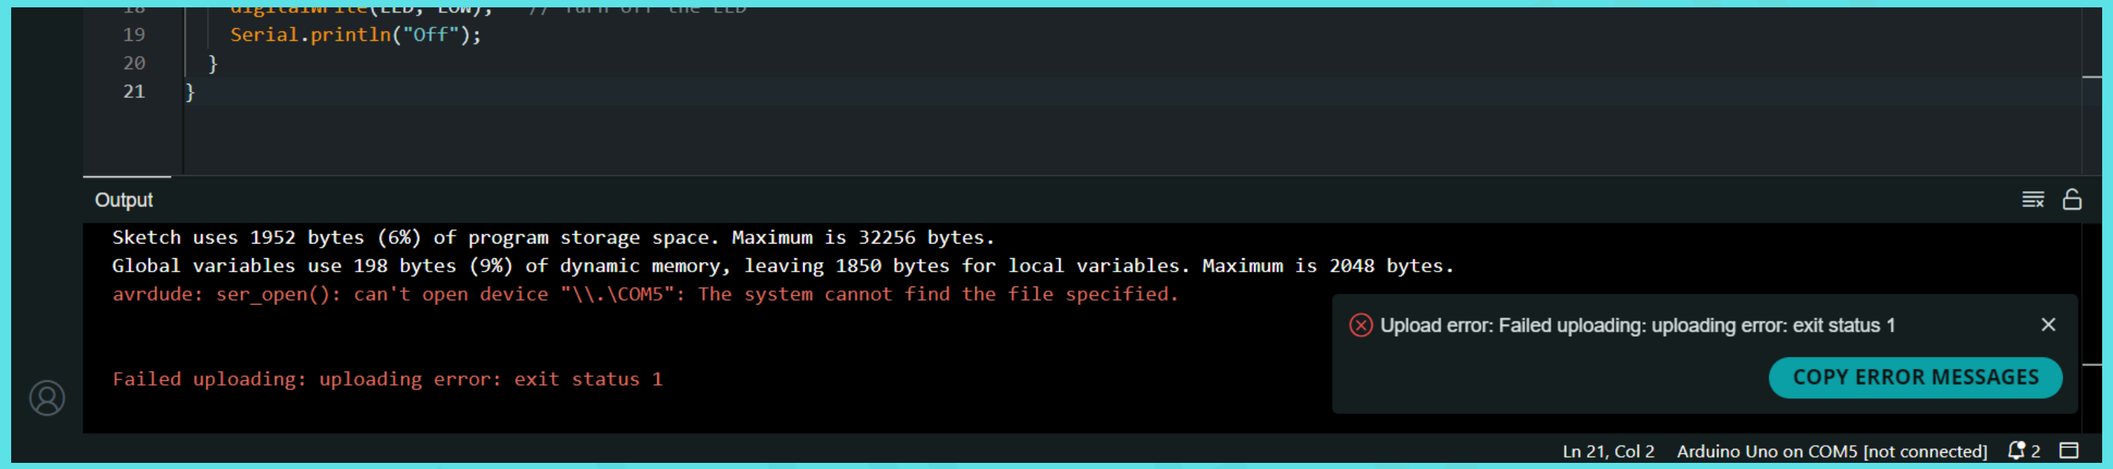


Reasons why we get this error - "Upload error: Failed uploading error: exit status 1"

- We get this error if we upload the code without connecting Arduino
- If we get this error even after connecting Arduino to system, **Install the driver**

Follow upcoming steps to install the driver →


Copyright by ScienceUtsav. All rights reserved

Step 2: Open this named CH341SER

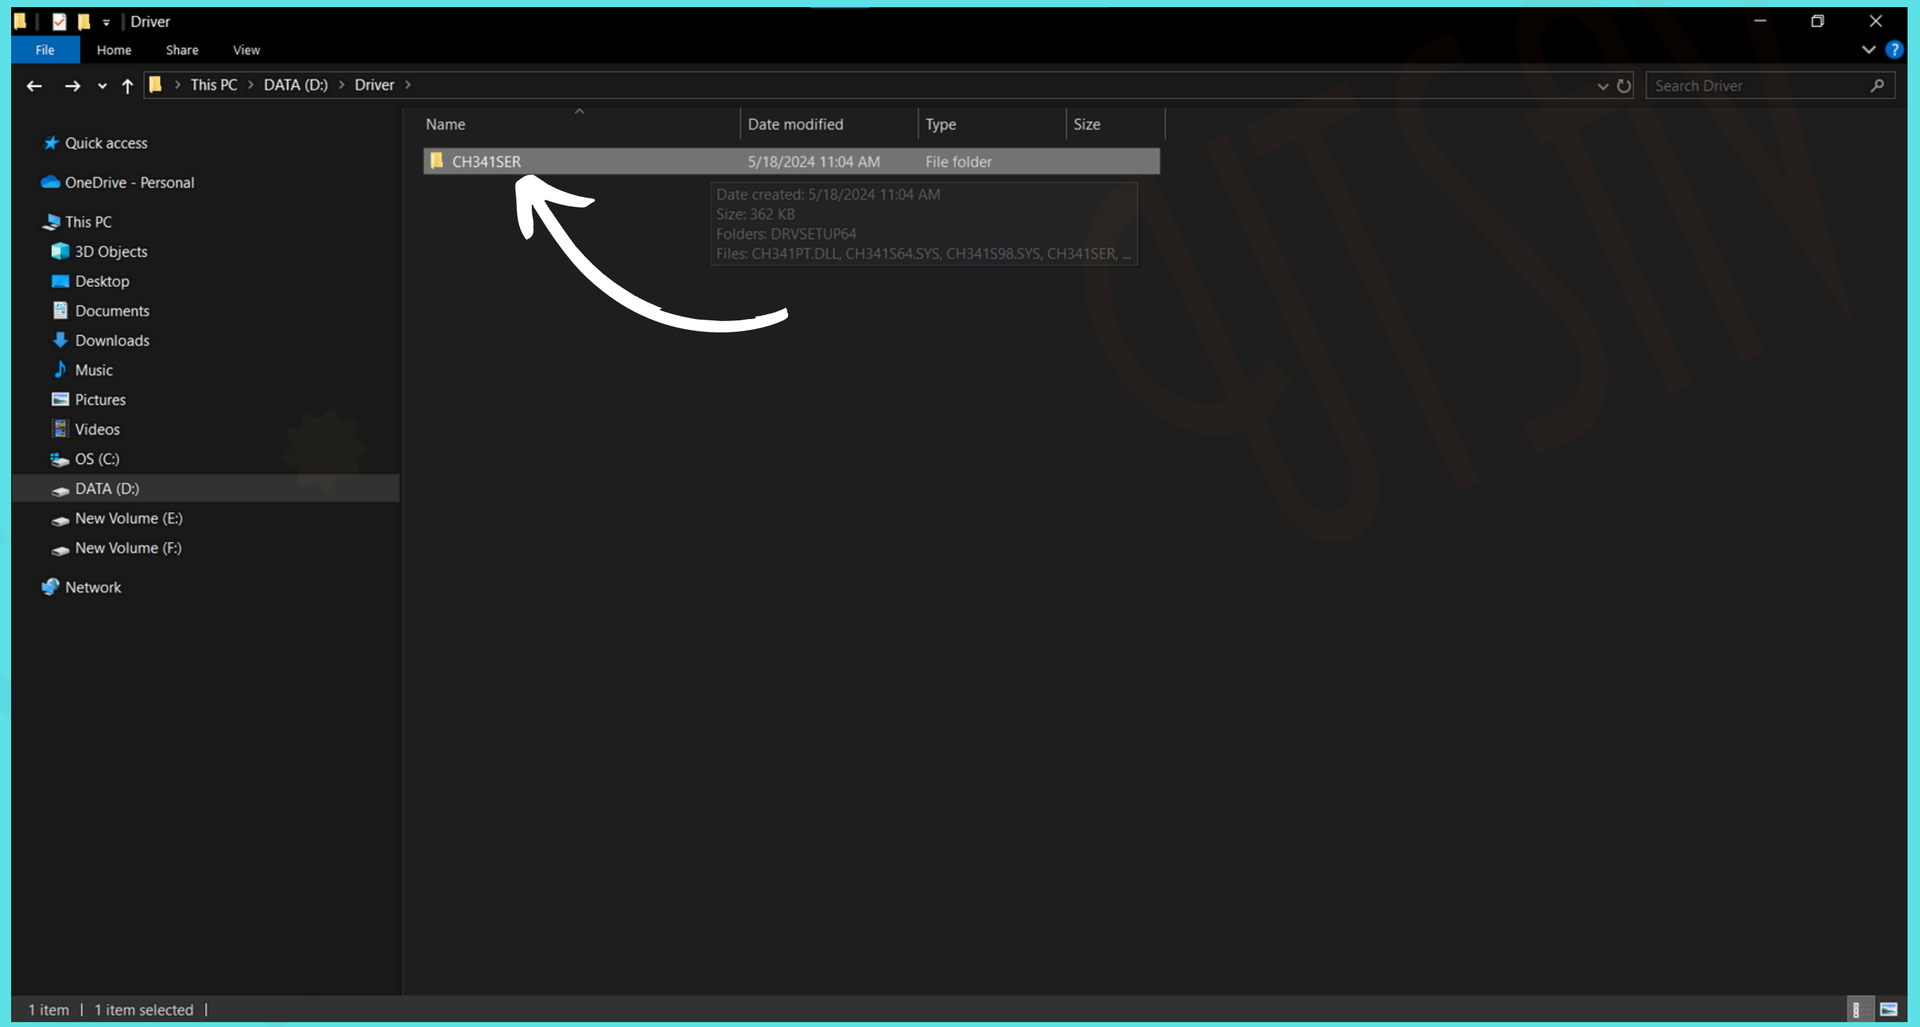


Copyright by ScienceUtsav. All rights reserved

Step 3: Open the SETUP file

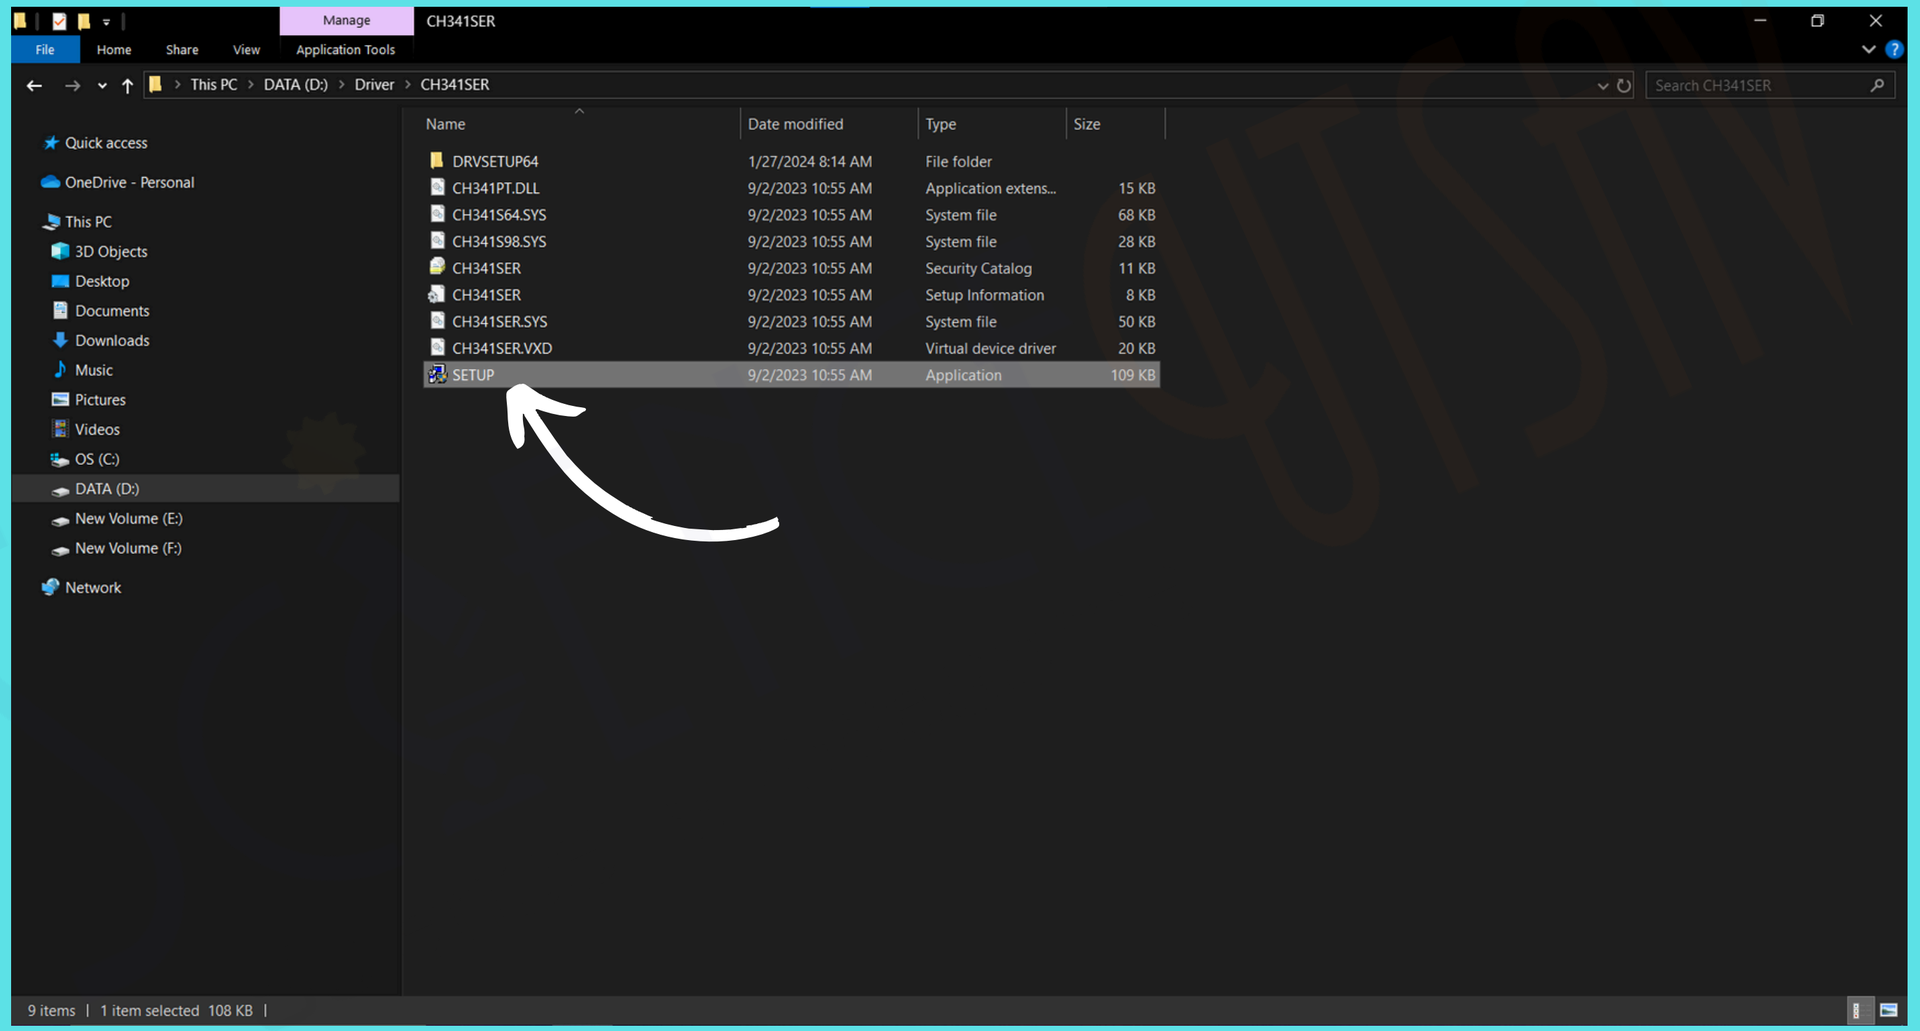


Copyright by ScienceUtsav. All rights reserved

Step 4: Click on YES

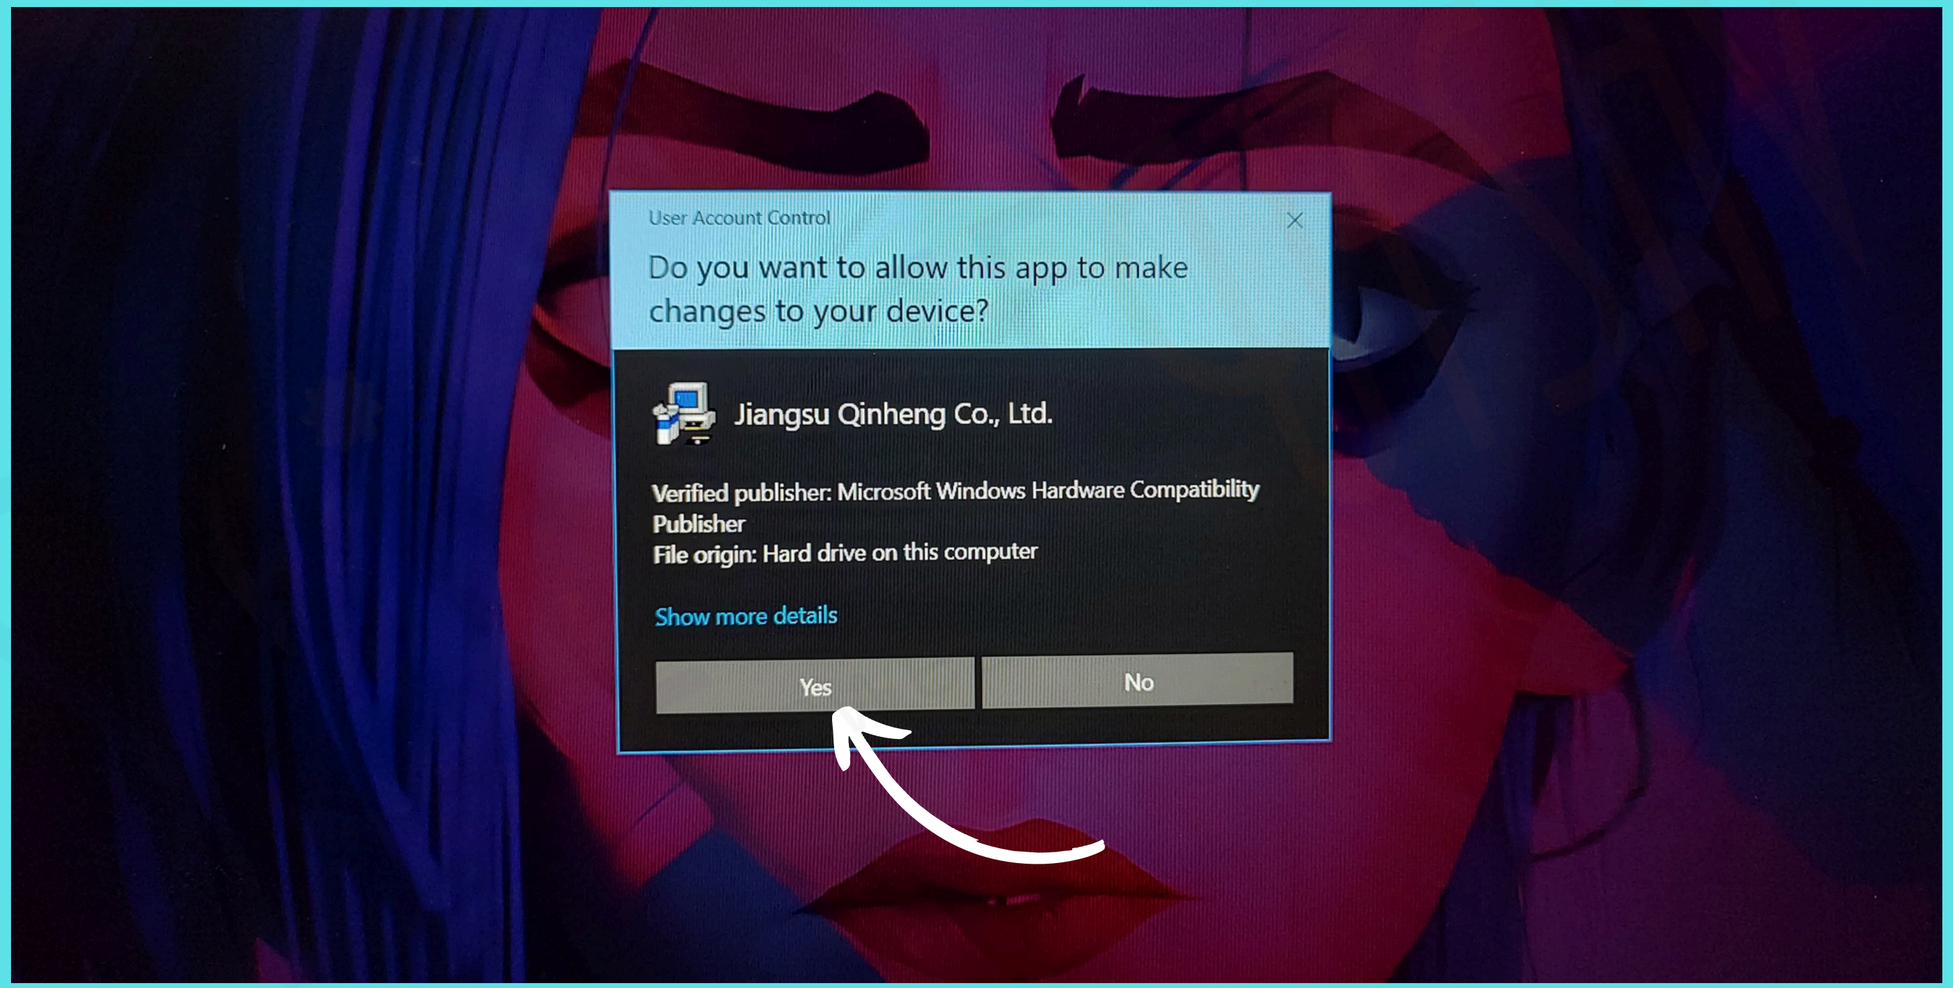


Copyright by ScienceUtsav. All rights reserved

Step 5: Click on INSTALL

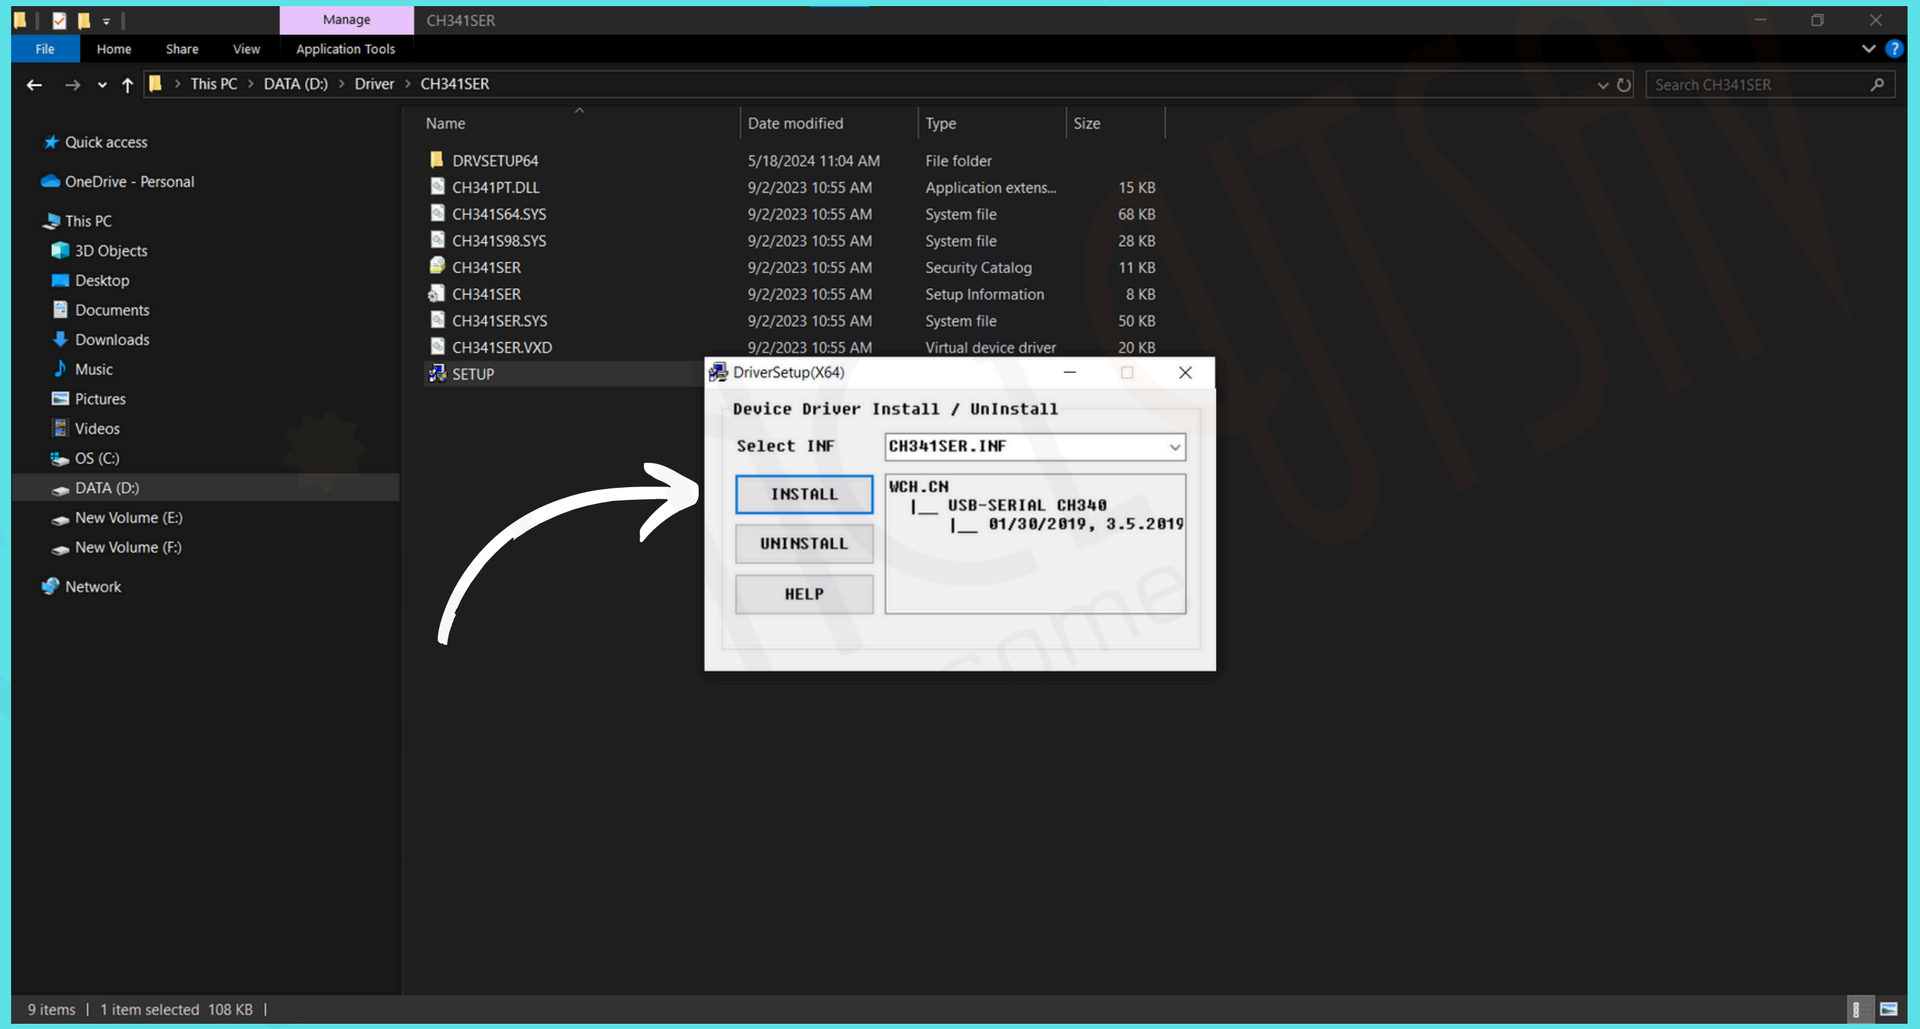


Copyright by ScienceUtsav. All rights reserved

Step 6: If the install is successful it opens the window with the message “ Driver install success! ”

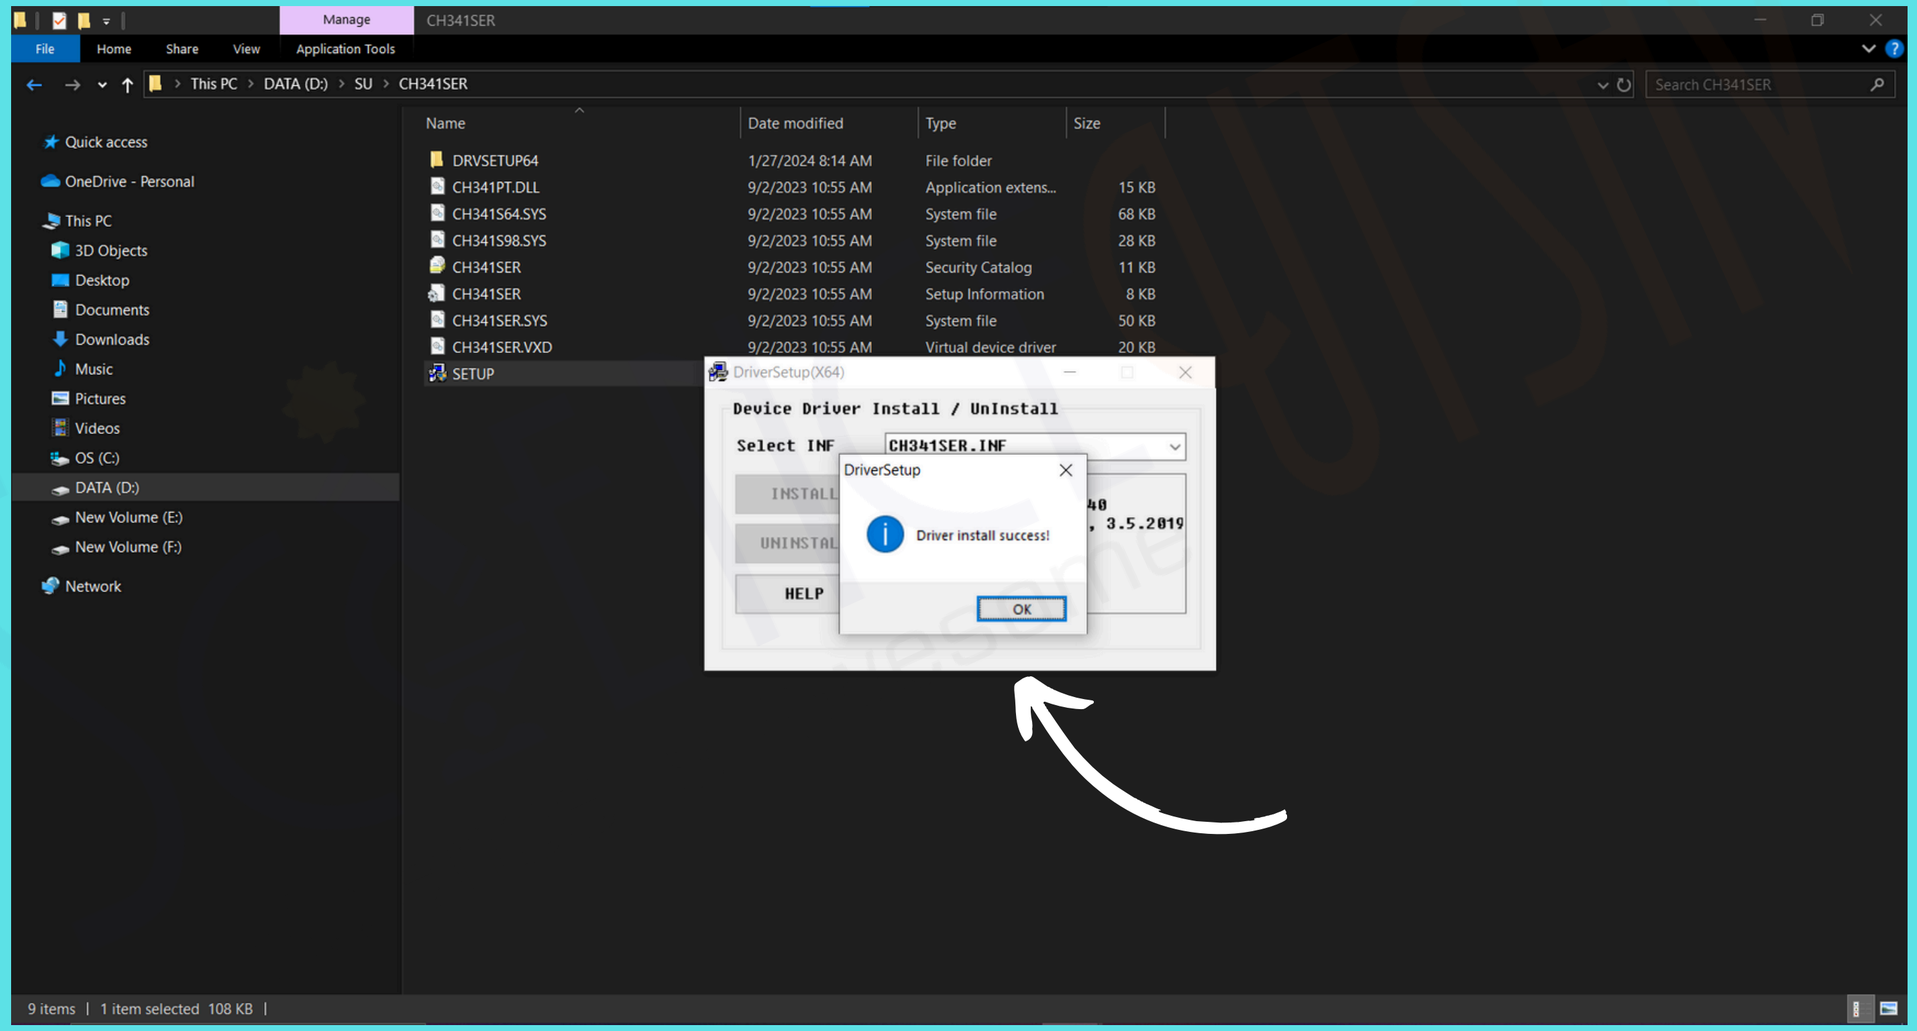

Copyright by ScienceUtsav. All rights reserved

Step 7: If the install is unsuccessful it opens the window with the message “ Driver install failure! ”

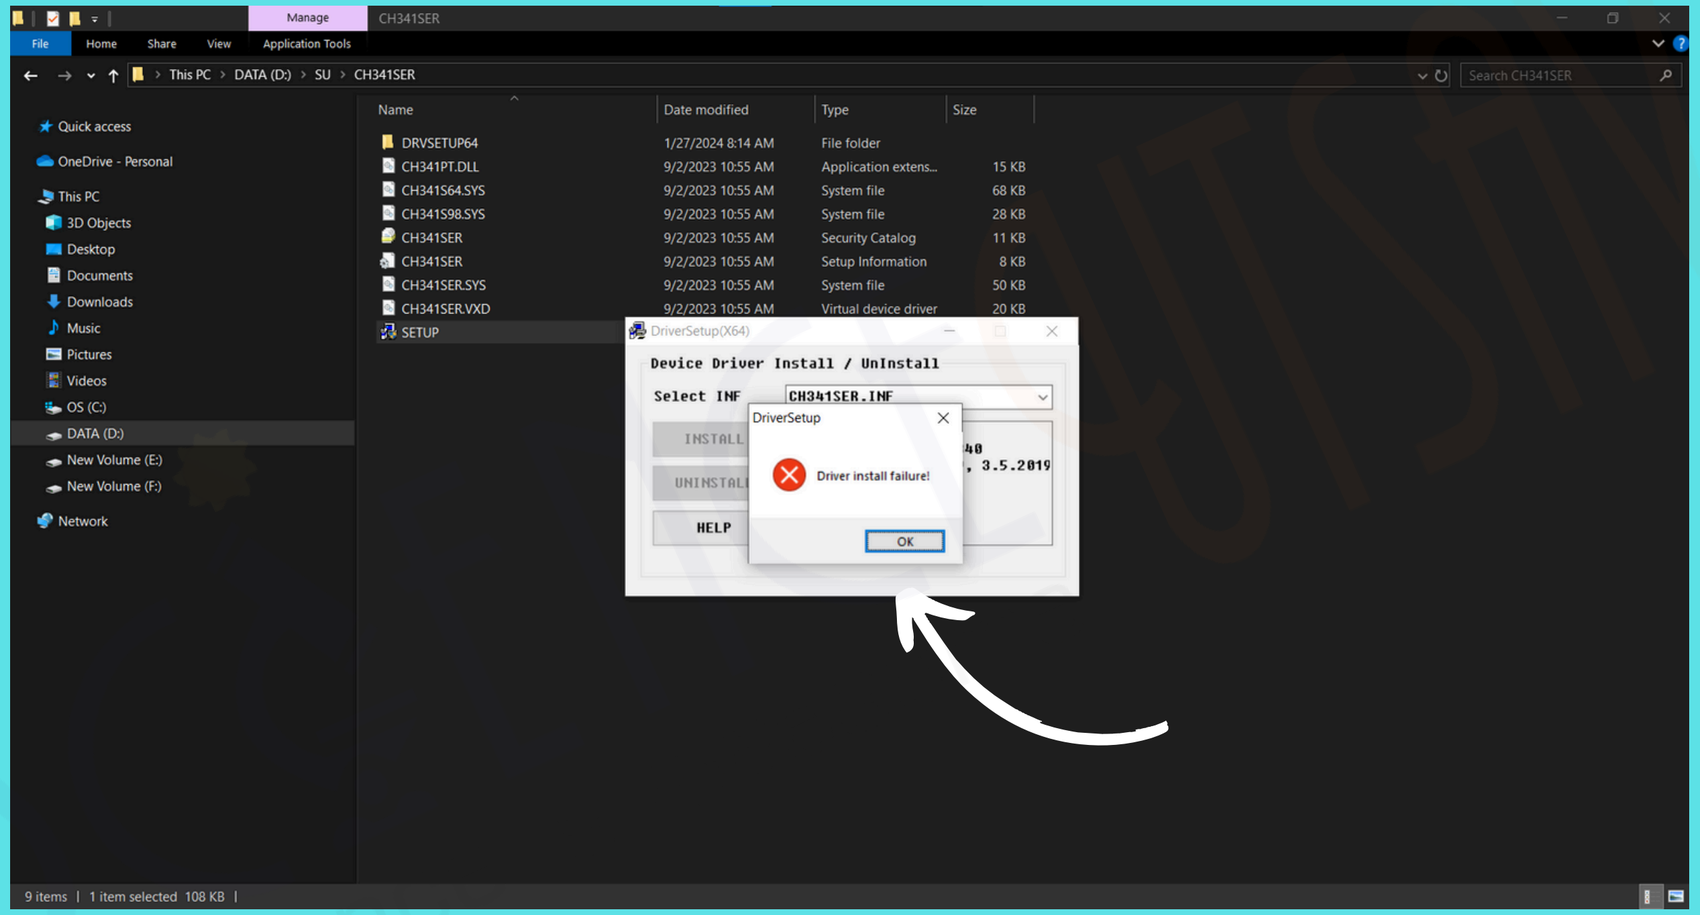

Note: Most of the time we get this message if the Arduino UNO is not connected to system while installing the driver.

Copyright by ScienceUtsav. All rights reserved