
Click on Search



Open IDE

Type **Arduino** and click on **Open**

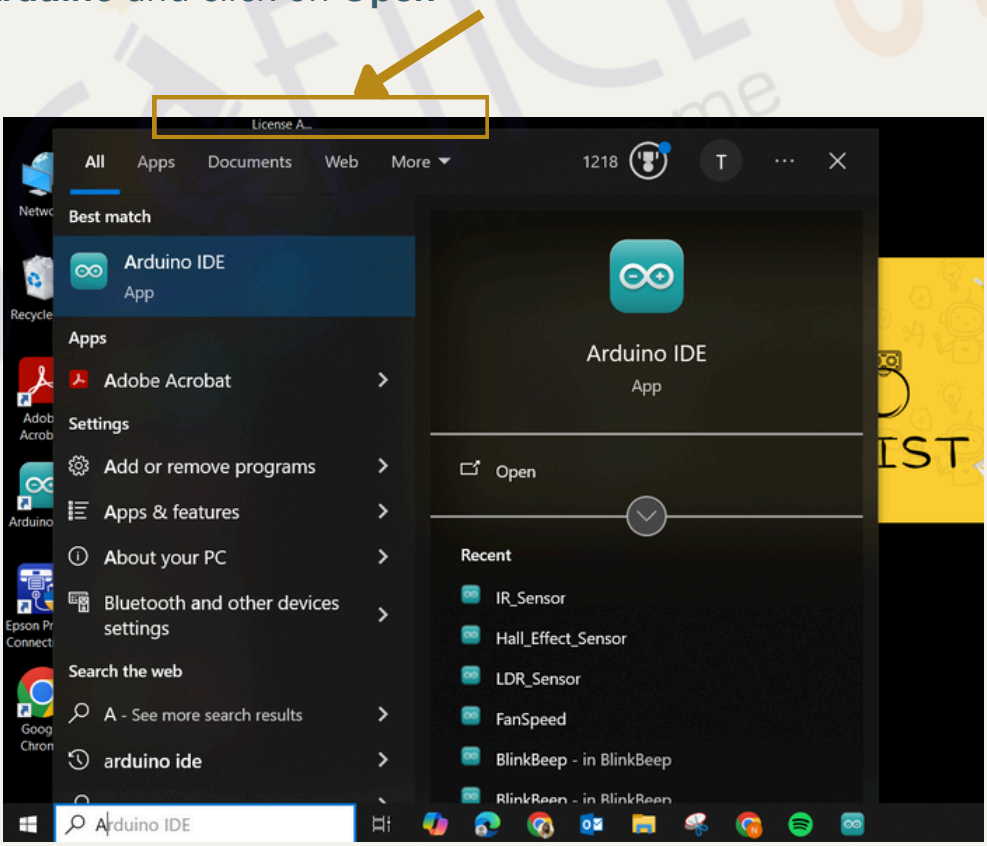

Copyright by ScienceUtsav. All rights reserved

Program Structure

An Arduino program must include two essential functions: void setup() and void loop().

- The keyword "**void**" means the function does not return any values.
- **void setup()**:
  - Executes once when the Arduino is powered on.
  - Used to define settings such as pin modes (input/output), baud rate for serial communication, or library initialization.
  - The setup() function is where you make program configurations.
- **void loop()**:
  - Contains the code to be repeatedly executed, as long the board is powered.
  - Examples include toggling a lamp based on input or taking a sensor reading at set intervals.

How to upload code


Choose the dropdown **Arduino Uno** or **Select the board and port**




Copyright by ScienceUtsav. All rights reserved

How to upload code


Click on **Select other board and port**

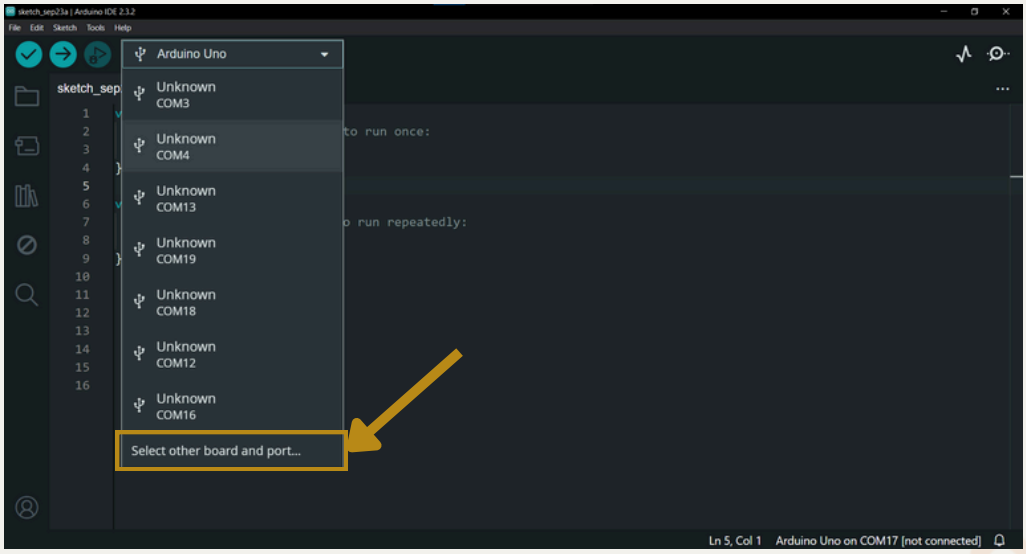

Select **Board - Arduino UNO** and **Ports - USB** and then click on **OK**

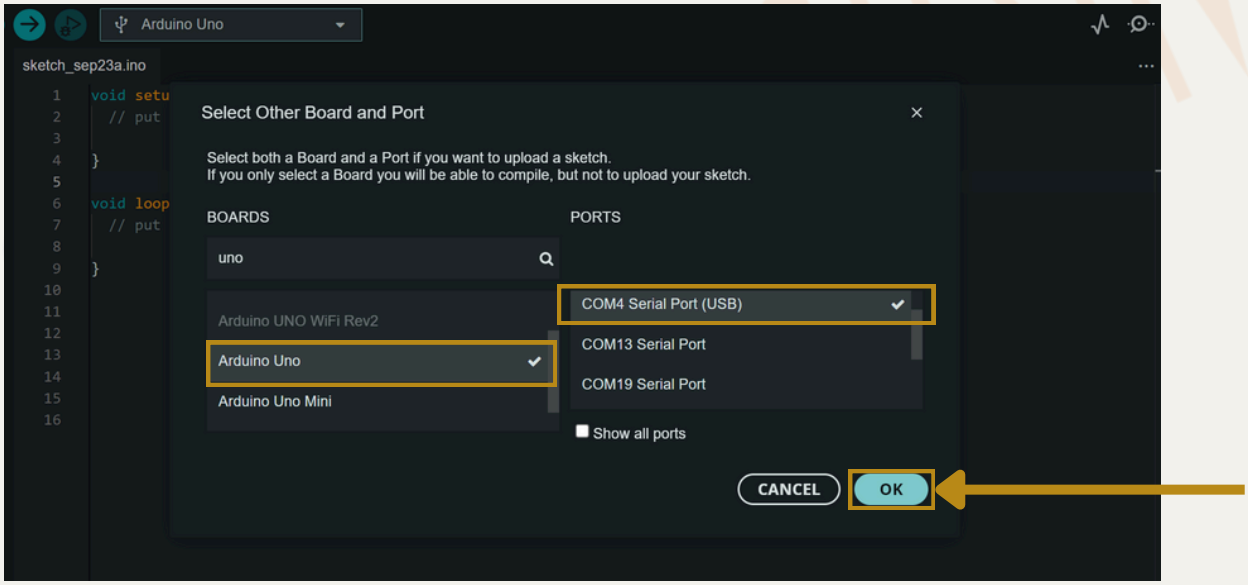


You will see the **Arduino UNO** in bold

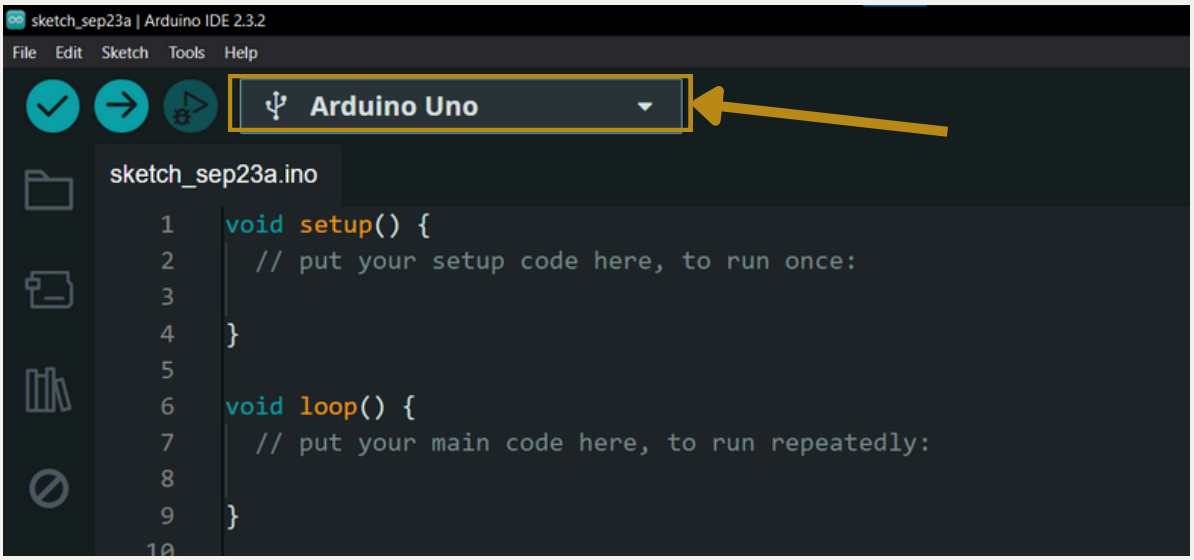

Copyright by ScienceUtsav. All rights reserved

How to upload code


Click on the **Upload** to compile the code and once the compilation is successful, the code can be uploaded to your board.

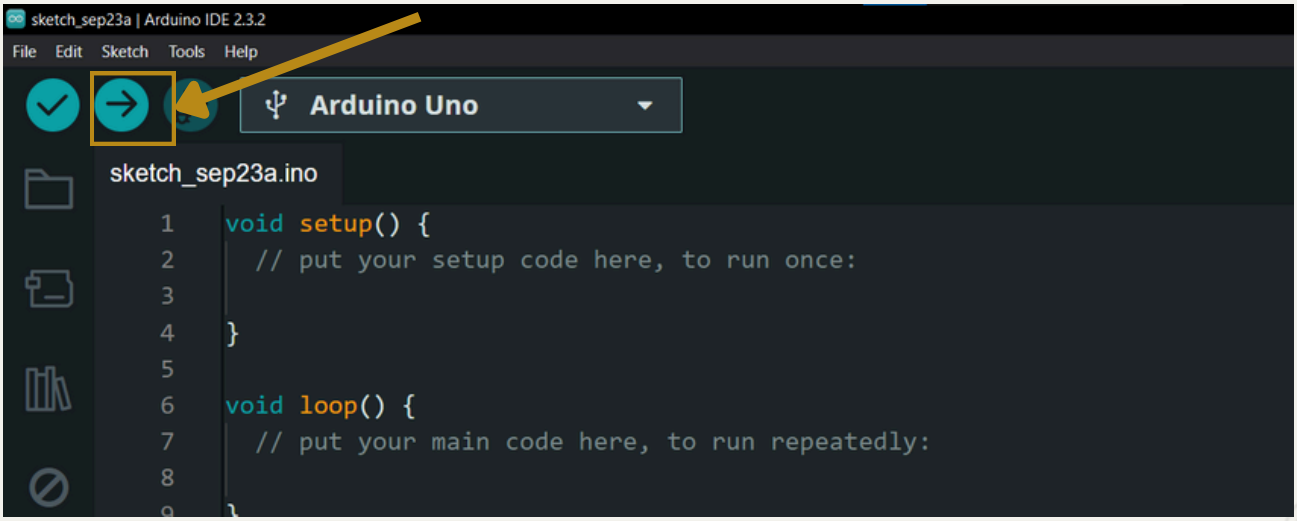

Write the code below in the IDE and upload to the board. To see the **Serial Monitor,** click as shown below



The click on **Serial Monitor.** Observe the output as seen below

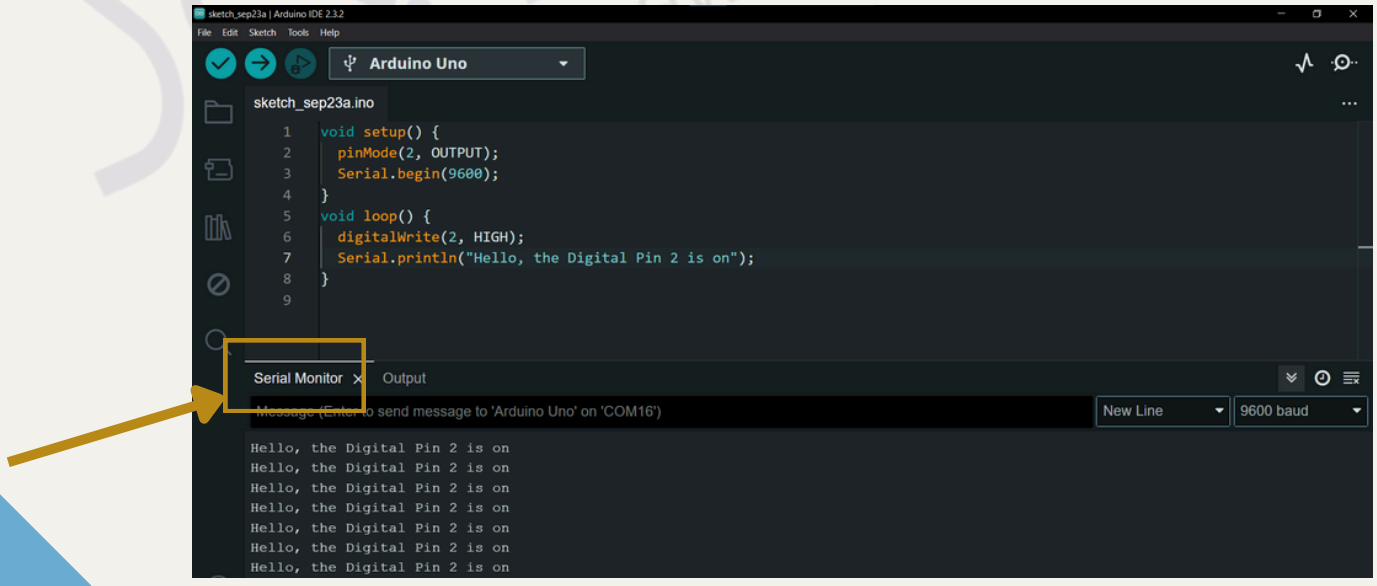

Copyright by ScienceUtsav. All rights reserved