
To use the Serial Monitor in the Arduino IDE:

1. Open the Arduino IDE and select your board and port in the "Tools" menu.
2. Upload your sketch to the microcontroller.
3. Open the Serial Monitor with "Ctrl+Shift+M" (Windows/Linux) or "Cmd+Shift+M" (Mac).
4. Ensure the baud rate in your code matches the one in the Serial Monitor, Typically, this rate is set to 9600, 115200, or a value specified in your code.
5. Send data to the microcontroller by typing in the input field and pressing "Enter."
6. Receive data from the microcontroller in the Serial Monitor.
7. Use it for debugging and monitoring your code.
8. Close the Serial Monitor when done.

Click here to access serial monitor

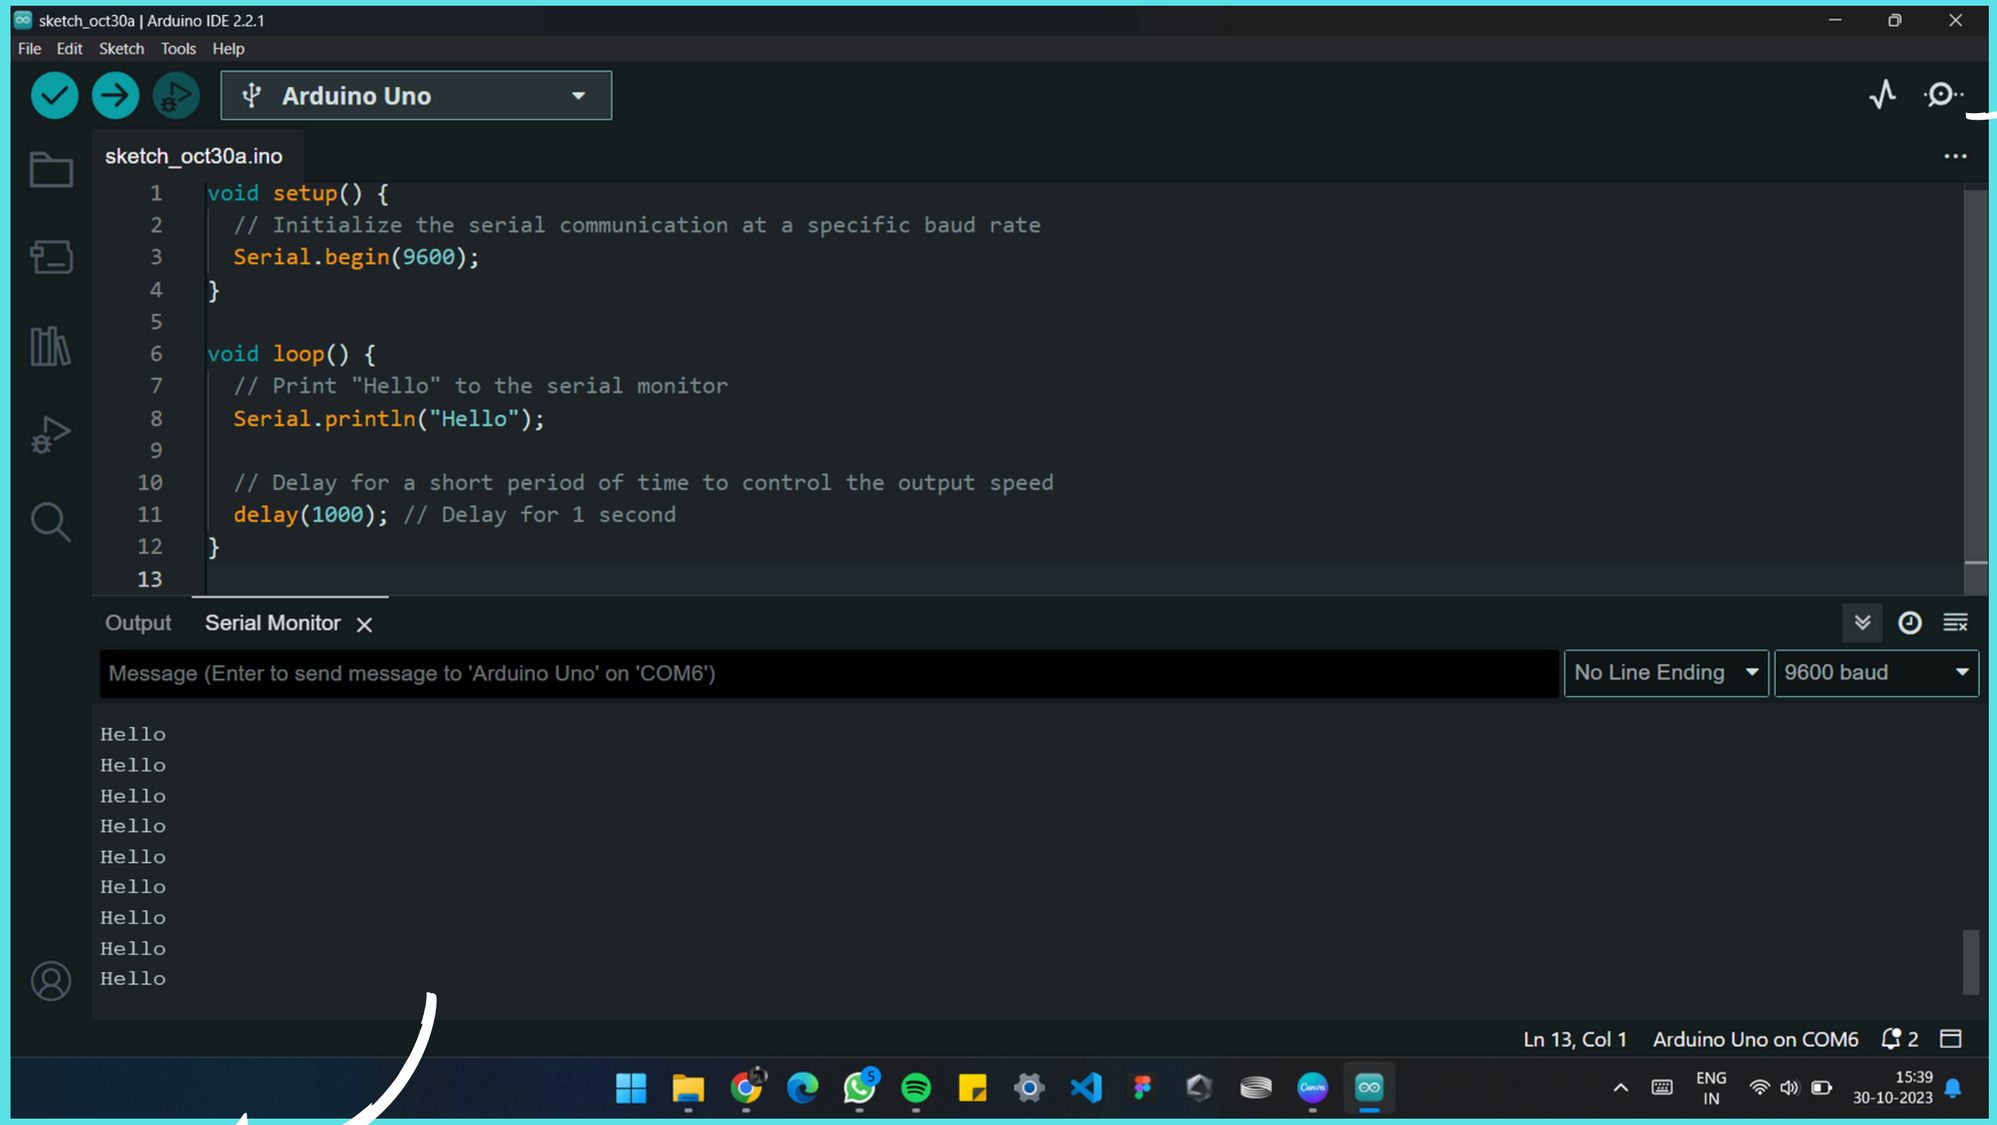

Serial monitor

How to troubleshoot the File uploading error:

Issue: Error occurs while uploading the code.

1. Do not write anything unwanted in the code, otherwise it will give compilation errors.
2.Disconnect the cable and connect once again. Make sure that you selected the board as arduino Uno and valid COM port, now try to upload the code.