


MIDI SWITCH

Arduino Nano → Line 6 M5


Two footswitches • two digits • one MIDI OUT • pin assignments preserved from the original project

1 LED DISPLAY - COMMON ANODE

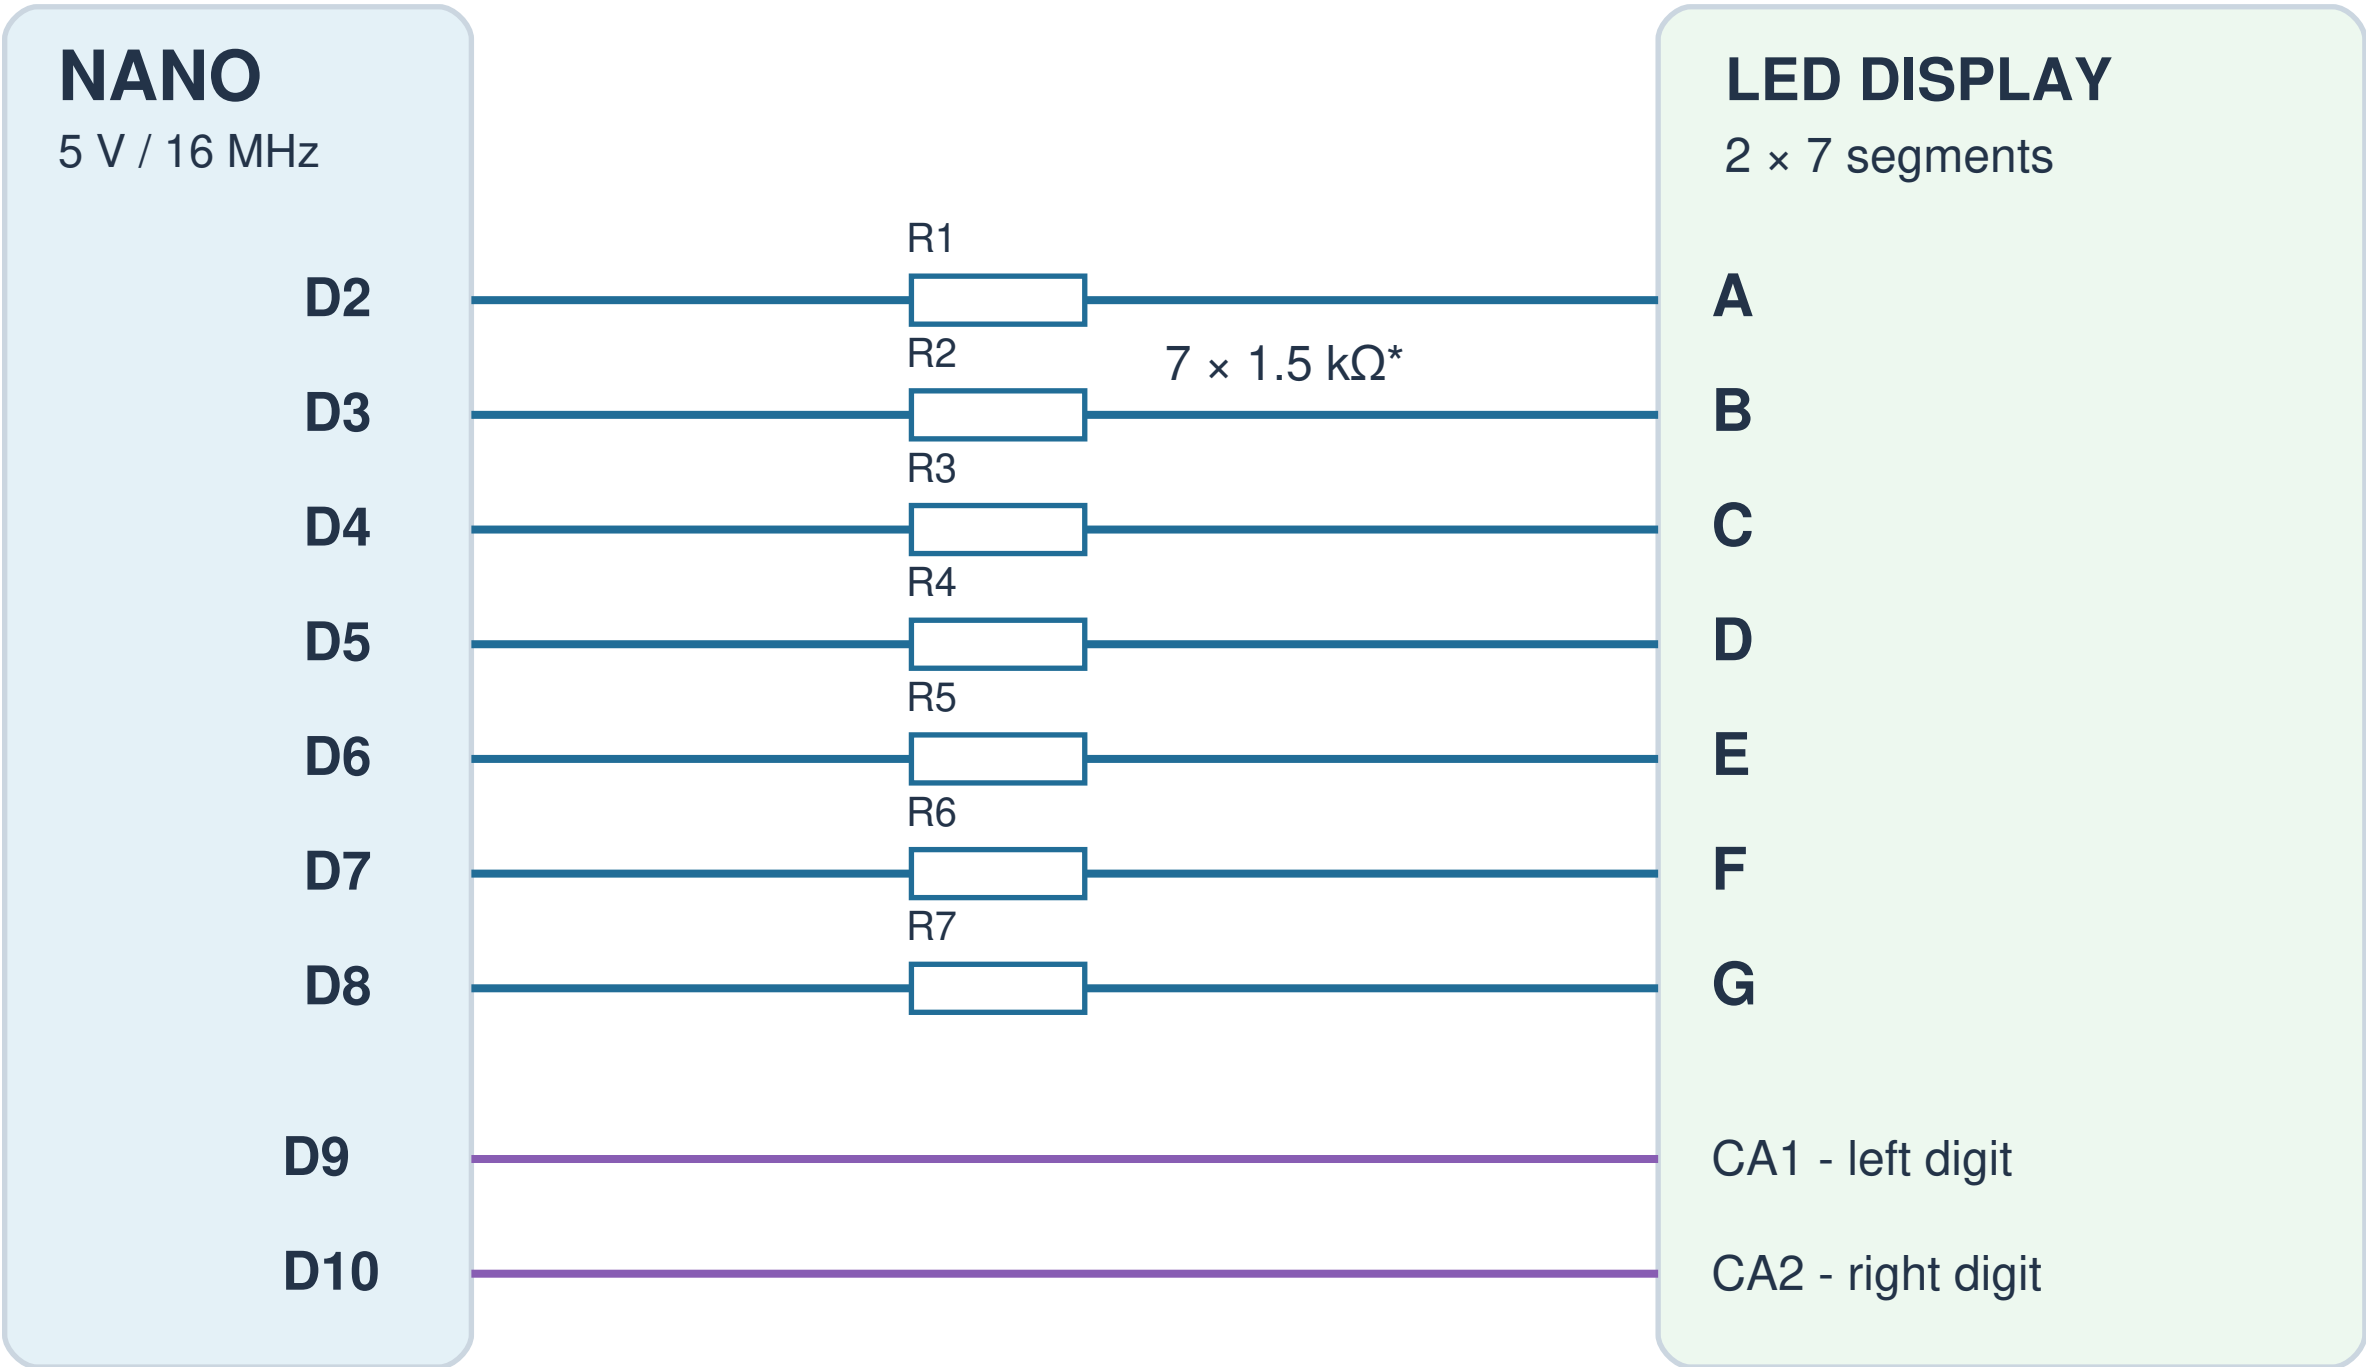

A-G: connect matching segments of both digits. DP (decimal point): leave unconnected.

2 FOOTSWITCHES

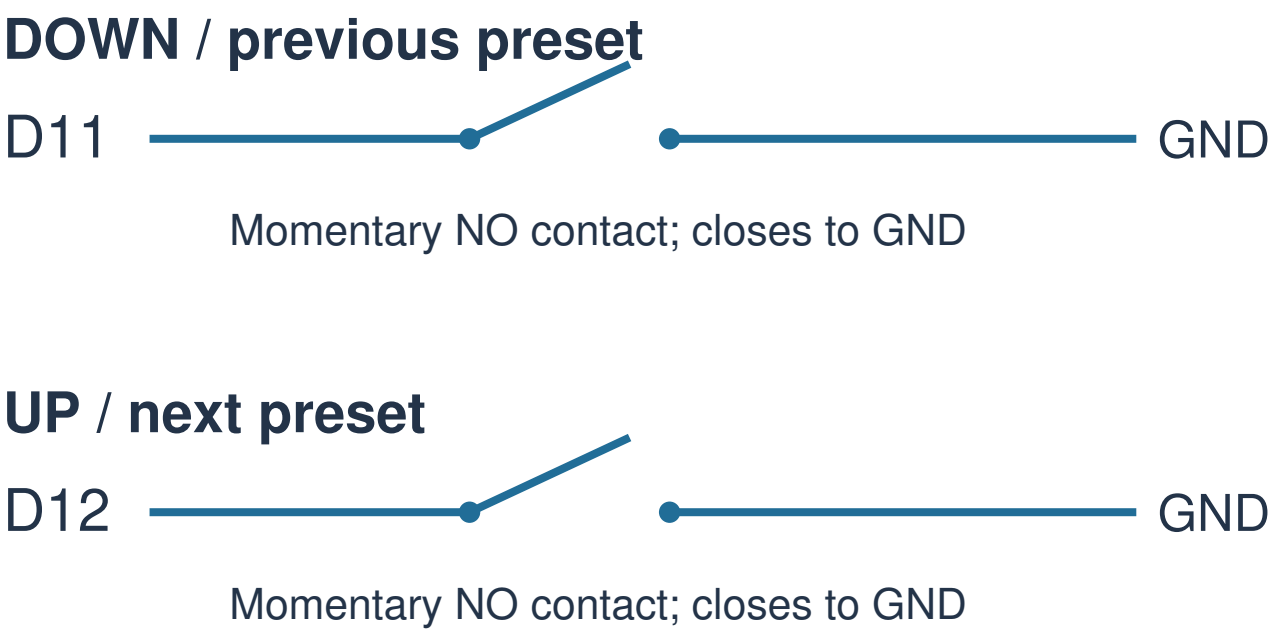


INPUT_PULLUP enabled in firmware.
No external pull-up resistors
are required for the switches.

Press both: effect bypass.
The next preset selection enables the effect.
Hold either switch to scroll through presets.

Display range: 01-24.

3 MIDI OUT - 5-PIN DIN / 180° SOCKET

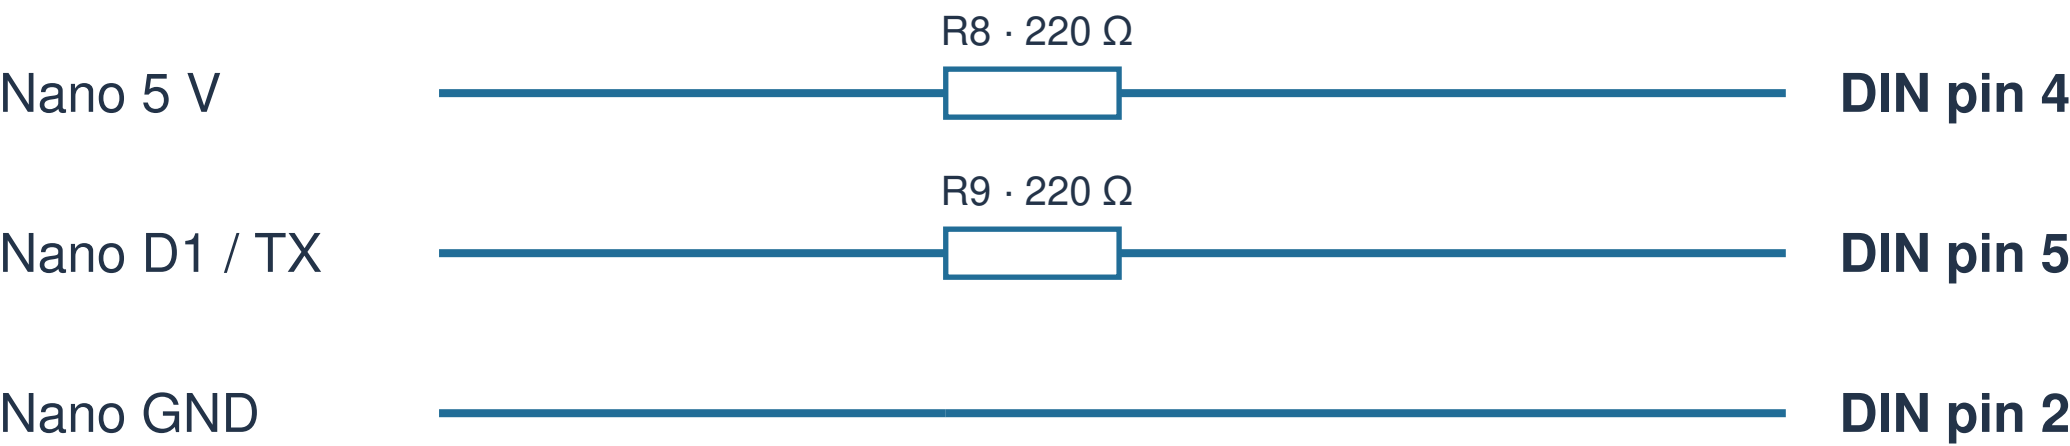

DIN pins 1 and 3: unconnected. Connect switch MIDI OUT → M5 MIDI IN.

4 NANO POWER SUPPLY

+9 V DC → VIN
DC negative → GND

Alternatively, power the Nano via USB.
Do not connect 9 V to the 5 V pin.
Check DC jack polarity with a multimeter.

* 1.5 kΩ: conservative values for direct anode drive from D9/D10. Verify display brightness on the actual unit.
Check existing resistors before replacing them. This drawing shows electrical connections, not physical board pin locations.
LED lead numbers depend on the display model. Use DIN contact numbers: the solder-side view is mirrored.
Revision 2026-09-12 • MIDI OUT only • Detailed connection table and notes (Polish): hardware/POLACZENIA.md