PD-KLP-USA-1

PRINTDECK

INSTRUCTION BOOKLET

For the Printdeck touch screen and Klipper printers



Printdeck is free software: AGPL-3.0, with the Go port of Klipper under GPL-3.0.
The deck draws every picture of this booklet.

https://github.com/beetlebugorg/printdeck

Contents

SET UP

Connect to Wi-Fi 3
Choose your printer 5
Install the Klipper firmware 7

MEET YOUR PRINTDECK

The deck 8
The display of the printer 9
The deck in a browser 10

PRINT A PART

Send a file from the slicer 11
Start a print 12
Watch the print 14
Print in two colors 20
Look around during a print 21
Make a time lapse 22

YOUR IPHONE AND APPLE WATCH

The iPhone and Apple Watch apps 25

CHANGE THE FILAMENT

Change the filament 26

MOVE AND HEAT

Move the head and heat 31

LEVEL AND CALIBRATE

Level and calibrate 33

LOOK AFTER THE PRINTER

Look after the printer 37
Update the Printdeck 46
Back up your data 47
Try the deck with a simulated printer 48

WHEN SOMETHING GOES WRONG

When something goes wrong 49
Settings 50

Notes

Settings


The file printdeck.txt on the PRINTDECK partition holds the settings. Put the SD card in a computer to change it. The deck reads it at each start, and clears the Wi-Fi password in it.

`wifi_ssid, wifi_password, wifi_country`	The Wi-Fi network
`hostname, timezone`	The name on the network, and the time zone
`display_rotate`	The screen turn: 90 or 270 turns a wide display to tall, 0 or 180 keeps the native shape. Empty is 0 for a tall display (the Touch Display 2) and 270 for a wide display
`touch_invert_x, touch_invert_y, touch_swap_xy`	1 turns an axis of the touch screen
`preheat_tool, preheat_bed`	The temperatures of Preheat with no filament set
`night_from, night_to`	The hours of the night colors
`printer.cfg (a file)`	A Klipper config. The deck imports it at the next start.

Connect to Wi-Fi


1. Switch on the Printdeck. The setup opens.
2. Tap your Wi-Fi network, then type its password.
3. Wait until the deck is connected, then tap Next.
4. Write down the address and the password, then tap Finish.

The setup: step 1

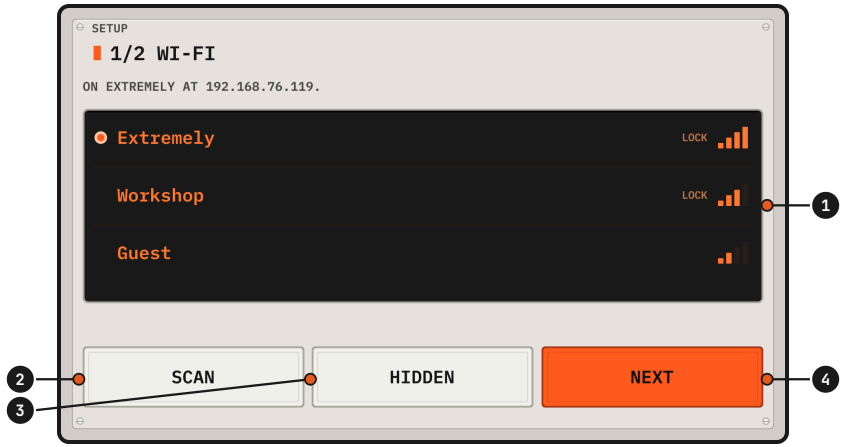

1. **Networks.** Tap your network, then type its password.
2. **Scan.** Scans for the networks again.
3. **Hidden.** For a hidden network: type its name and its password.
4. **Next.** Goes to the summary when the deck is connected.

The setup: step 2

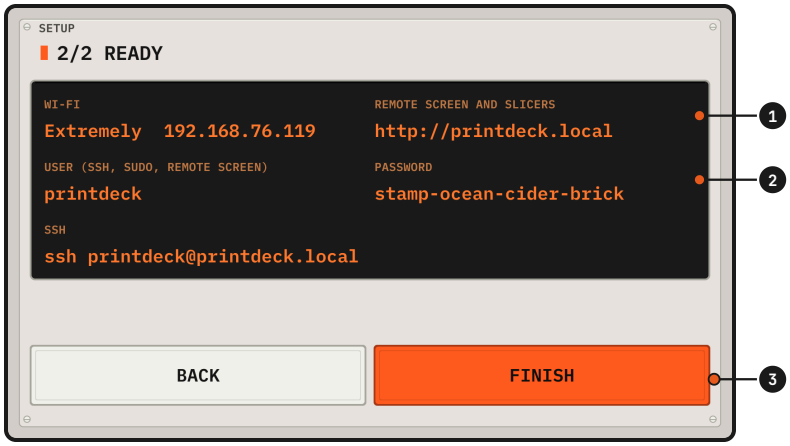

1. **Address.** The address of the deck. Open it in a browser.
2. **Password.** The password of the web pages. Machine > Wi-Fi and help shows it again.
3. **Finish.** Closes the setup. The setup shows only at the first start.


> To set the Wi-Fi before the first start, put the SD card in a computer. Fill in printdeck.txt on the PRINTDECK partition.

When something goes wrong

When Klipper stops with an error, the deck shows the message.

1. Read the message. It often names the setting in printer.cfg.
2. After a stop or a power cut of the printer, tap Firmware restart.
3. After a change to printer.cfg, tap Restart Klipper.

A Klipper error

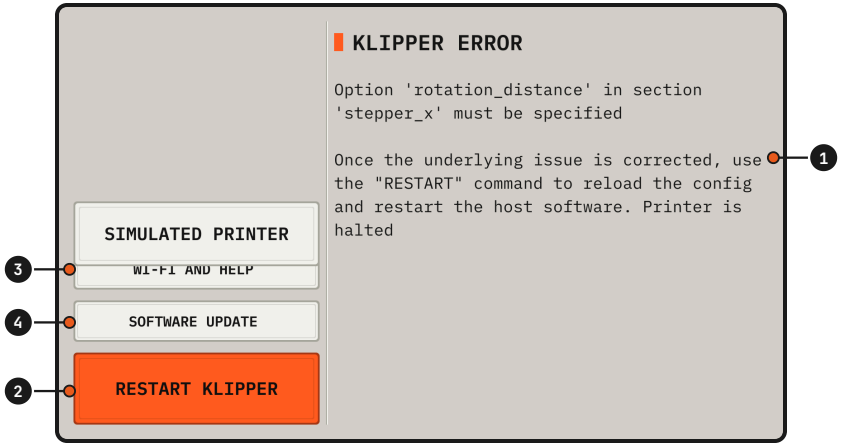

1. **Message.** The Klipper error.
2. **Restart Klipper.** Reads printer.cfg again.
3. **Wi-Fi and help.** The network, the address and the password.
4. **Software update.** Installs a new version. It can fix the problem.

Try the deck with a simulated printer

The simulated printer heats, homes, probes and prints in real time, and no motor moves. Use it to learn the deck or to test a file.

Your printer.cfg stays as printer.cfg.real until you tap Real printer.

1. Open Machine, then Simulated printer. The setup screen also has this key.
2. Tap the printer to simulate, then Simulate. Klipper restarts with the simulated printer.
3. Print as on a real printer: send a file from the slicer, or tap Print a file.
4. To stop the simulation, open Machine, then Simulated printer, and tap Real printer, then Go back. Klipper restarts with your printer.cfg.

A simulated printer in use




1. **Simulated.** An orange band shows a simulated printer.
2. **Real printer.** Puts your printer.cfg back and restarts Klipper.
3. **Simulated LulzBot TAZ Workhorse.** A probe on four washers, and bed tilt. Here it is in use.
4. **Simulated LulzBot Mini 2.** A probe on four washers, and bed tilt.
5. **Simulated Creality CR-10 V3.** Endstops on each axis, and no probe.

Choose your printer

A new Printdeck has no printer config, so it shows the printer setup.


1. Connect the printer to the Printdeck with a USB cable, and switch the printer on.
2. Wait until the deck finds the board. If the board is missing, tap Search again.
3. Tap Choose printer. The printers of the brand of your board are at the top.
4. Tap your printer, then Use. Klipper restarts with its config.

No printer yet

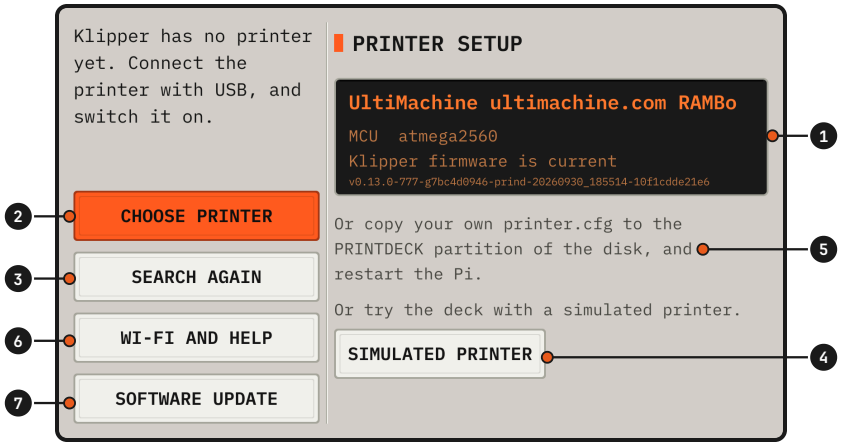

1. **Board.** The board on USB and its firmware.
2. **Choose printer.** Opens the list of Klipper example configs.
3. **Search again.** Looks for the board again.
4. **Simulated printer.** Runs a simulated printer, with no real printer.
5. **Your own config.** Or copy your printer.cfg to the PRINTDECK partition, and restart.
6. **Wi-Fi and help.** The network, the address and the password.
7. **Software update.** Installs a new version. It can fix the problem.

Choose your printer

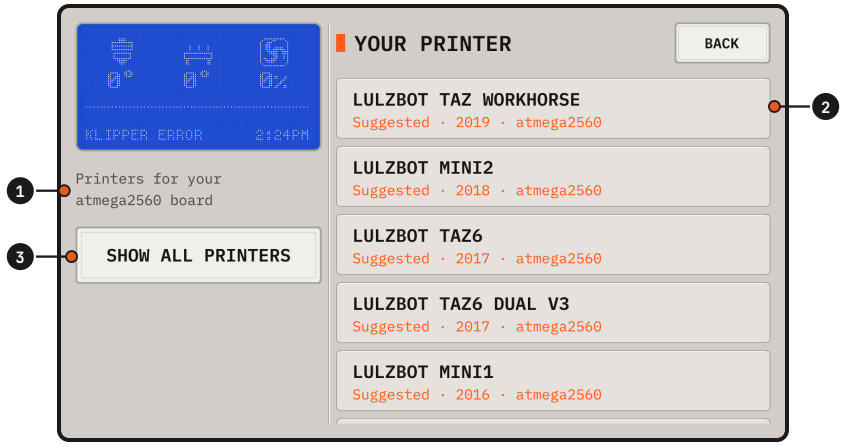

1. **Chip.** The printers with the chip of your board.
2. **Printer.** Tap your printer. The deck writes printer.cfg and restarts Klipper. The old file stays as printer.cfg.bak.
3. **Show all printers.** Shows the printers for all chips.

Back up your data

A backup is one file with your rolls, history, settings, API keys, paired phones and Klipper config. Make a backup before you change the SD card.

Keep the backup password safe. Without it, no one can restore the backup.

The backup excludes the deck password and the Wi-Fi network.

1. Open http://printdeck.local/system in a browser, and log in with the password of the deck.
2. Under Backup, type a backup password of 8 characters or more, two times. To add the G-code files, select Include the G-code files.
3. Click Download the backup. The browser saves a file with the name printdeck-backup-NAME-DATE.pdbk.
4. To restore, open the same page when no print runs. Under Restore, type the backup password, choose the file, then click Restore.
5. Klipper and the Printdeck restart. A wrong password or a damaged file changes no data.


Update the Printdeck

The deck checks for a new version once a day. Machine then shows Software update in orange.

The deck installs only a signed version. If the new system fails to start, the deck goes back to the old one.

1. Open Machine, then Software update.
2. Read the notes of the new version, then tap Install. The deck installs only when no print runs.
3. Wait for the download. The deck restarts into the new version.

Software update

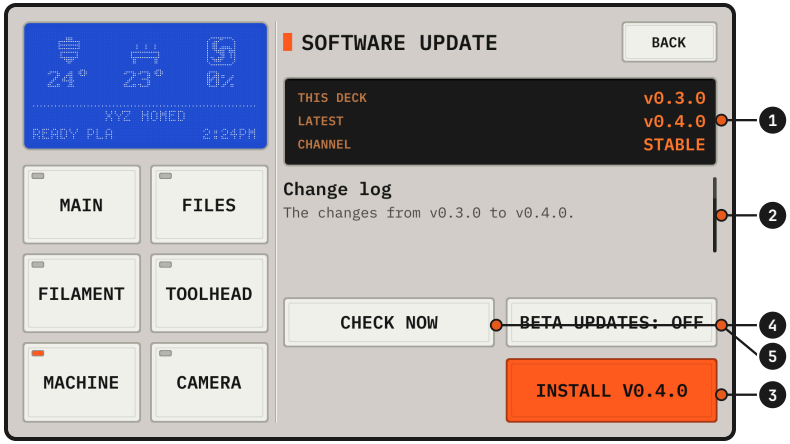


1. **Versions.** This version and the newest version.
2. **Notes.** What the new version changes.
3. **Install.** Installs the new version, after a question. The deck restarts.
4. **Check now.** Checks for a new version now.
5. **Beta updates.** On: the deck also gets beta versions.

Install the Klipper firmware

The printer board must run the Klipper firmware of this Printdeck.

1. Open Machine, then Maintenance, then tap Firmware. A new board shows Install Klipper firmware on the setup screen.
2. Tap Write. Keep the printer on until the deck shows the result.
3. Tap OK. Klipper restarts and connects to the board.

The firmware flash

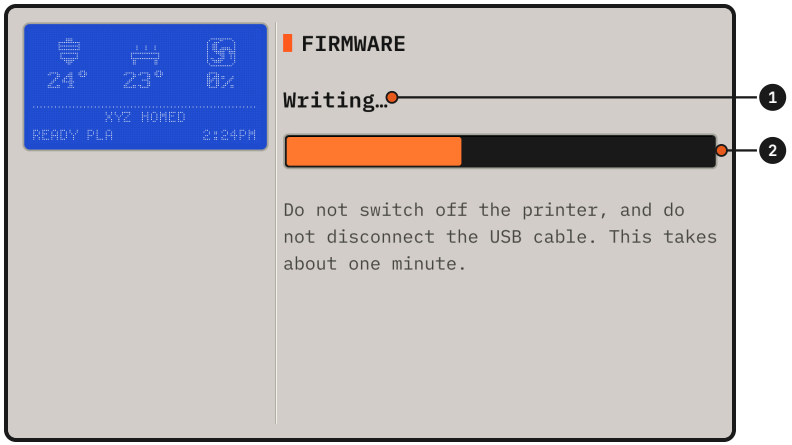

1. **Step.** Starting the bootloader, Writing, then Checking.
2. **Progress.** The part of the firmware that is done.


> The deck stops Klipper, writes the firmware, checks it, and starts Klipper again. Printdeck flashes atmega2560 boards with an STK500v2 bootloader, for example RAMBo and RAMPS.

The deck

The deck shows the idle screen when no print runs. A key with an LED is on while its LED is lit. A key with no LED does an action.


The printer display and the key panel are at the left. The open page is at the right, with Back at the top and its actions at the bottom.

The idle screen

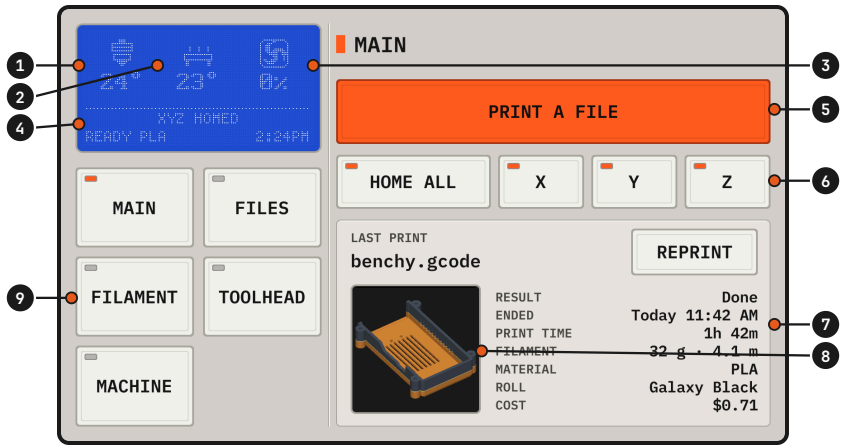

1. **Nozzle.** The nozzle temperature and its target. Tap it to set the temperature.
2. **Bed.** The same for the bed.
3. **Fan.** The part cooling fan. Its blades turn at its speed.
4. **Status.** The head position, the printer state, the loaded filament and the clock.
5. **Print a file.** Opens the files. See Files.
6. **Home all, X, Y, Z.** Homes all axes, or one axis. A lit LED shows a homed axis.
7. **Last print.** The last print and its cost. Reprint starts it again. Preheat and Cool down are on the Filament page.
8. **Model.** Tap it to open the print in the history.
9. **Pages.** The lit LED shows the open page.


The System monitor

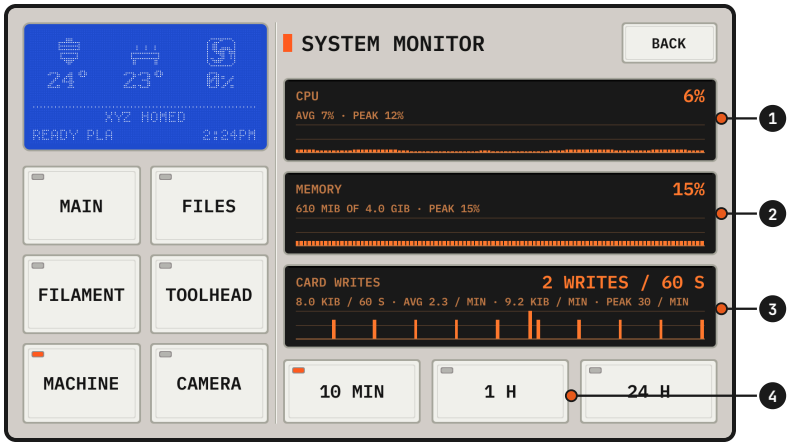

1. **CPU.** The CPU use.
2. **Memory.** The memory in use.
3. **Writes.** The SD card writes a minute.
4. **1 h.** 10 minutes, 1 hour or 24 hours.

> The samples stay in memory. A restart clears them.


A print of the history

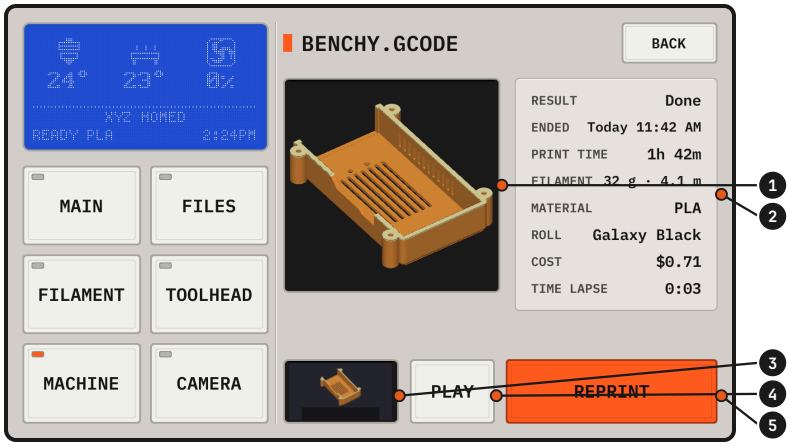

1. **Model.** The model of the print.
2. **Details.** The result, the time, the filament and the time lapse video.
3. **Still.** The last frame of the time lapse video.
4. **Play.** Opens the player.
5. **Reprint.** Prints the file again.

The deck keeps the last 3 videos. The record of an older print shows Removed.

The console

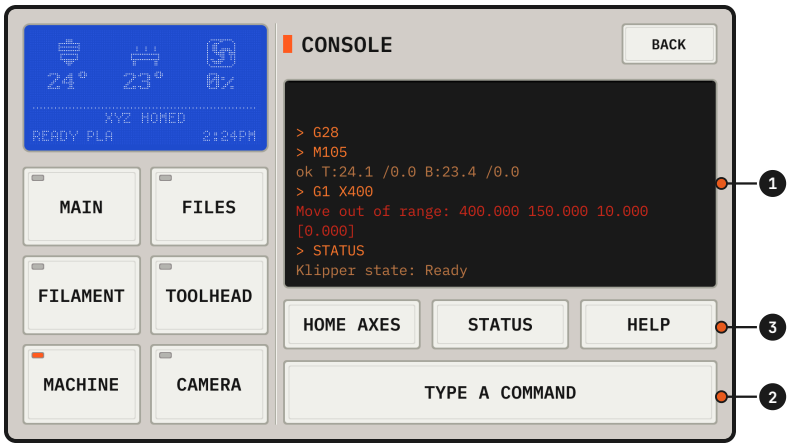

1. **Replies.** Your commands, the replies, and errors in red.
2. **Type a command.** Opens the keyboard.
3. **Quick keys.** Home (G28), Status (STATUS) and Help (HELP).


The display of the printer

The deck draws the printer display. The display shows the same status as the deck.


Turn or click the knob to open the menu. The menu has the same pages and keys as the touch screen. A click taps the key. The top item goes back, and a long click also goes back. After 20 seconds with no turn, the display shows the status screen again.




THE STATUS SCREEN

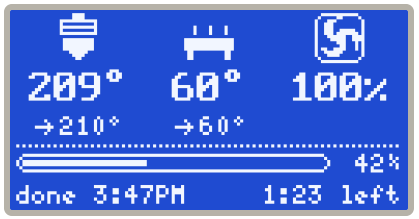


DURING A PRINT

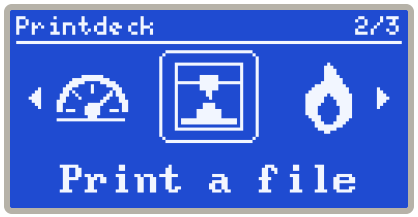

THE HOME MENU: TURN THE KNOB TO CHOOSE

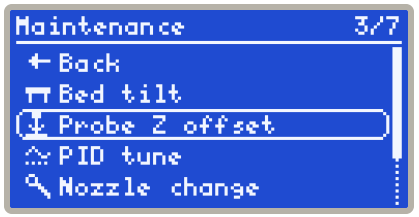

A PAGE: MAINTENANCE

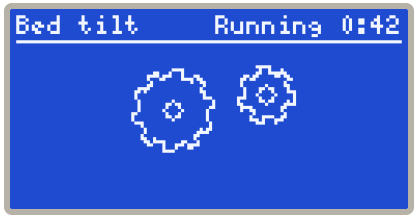

AN ACTION RUNS


The deck in a browser

Open http://printdeck.local in a browser on the same network. Log in with the password of the deck. The browser shows the screens of the touch screen. Each browser has its own screens.

On a phone, tap Add to Home Screen. The deck then opens as an app.


The page http://printdeck.local/system shows the version, the logs and the API key for slicers. It also installs an update file, and makes a backup. See Back up your data.

Statistics

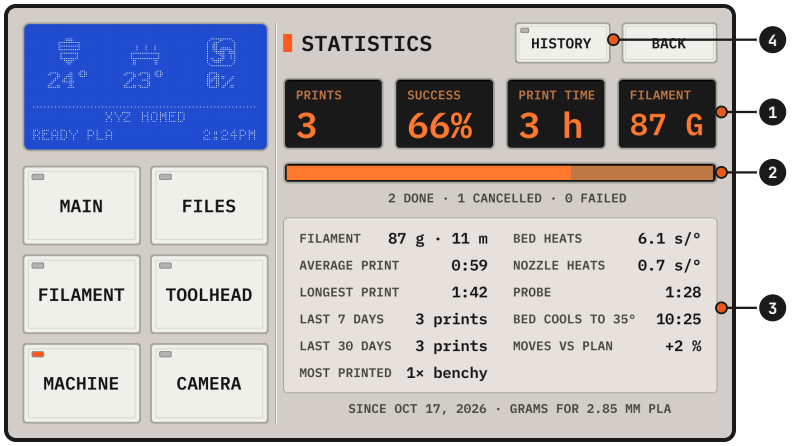


1. **Totals.** The prints, the success rate, the time and the filament.
2. **Results.** Done (amber), cancelled and failed (red).
3. **Details.** The filament, the average and longest print, and the recent prints.
4. **History.** Each print with its result. Tap a print to see it or print it again.

The Cameras page

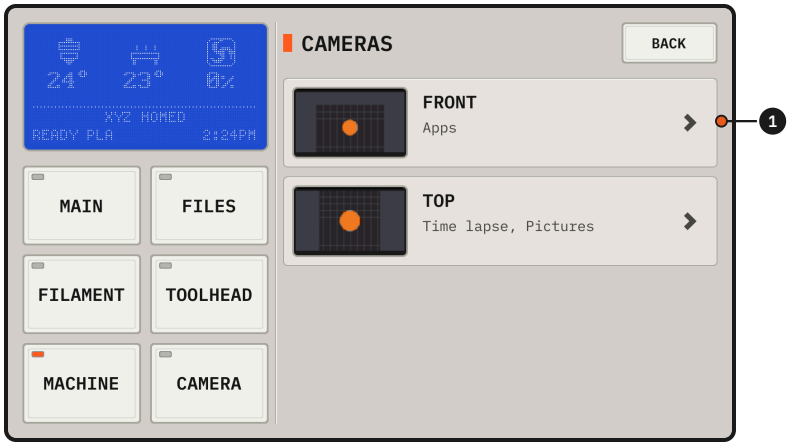

1 **Front.** Each camera, with its uses. Tap a camera to change it.

The settings of one camera

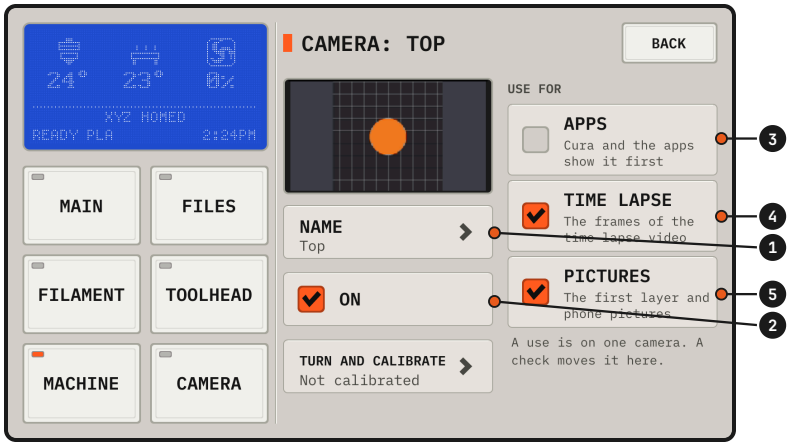

1 **Name.** Type a name, such as Top.

2 **On.** Turns the camera on or off. Its uses move to another camera.

3 **Apps.** Cura and the apps show this camera first.

4 **Time lapse.** The camera of the time lapse.

5 **Pictures.** The first layer picture, and the pictures on the phone.

Each use is on one camera. To move a use, check it on the other camera.

Send a file from the slicer

The deck uses the OctoPrint API, so slicers can send files and start prints.

Cura: add the deck with the OctoPrint Connection plugin. The deck asks "Allow Cura to use the Printdeck?". Tap Allow.

OrcaSlicer or PrusaSlicer: add a printer of the type OctoPrint, with the address http://printdeck.local and the API key of the system page.


The webcam is the camera with the use Apps: http://printdeck.local/webcam/stream and /webcam/snapshot, with the API key. Add camera=2 for the second camera, w=320 for smaller pictures, or fps=2 for fewer frames. With no camera, the webcam shows the deck screen.

Start a print

The newest file is at the top. Each file shows the print time, the filament and the layer height from the slicer. Cura, PrusaSlicer, OrcaSlicer and Bambu Studio write this data.

1. Tap Print a file on the idle screen.
2. Tap the file. Check the print time, the filament and the temperatures.
3. Tap Print, then Print again.


The file list

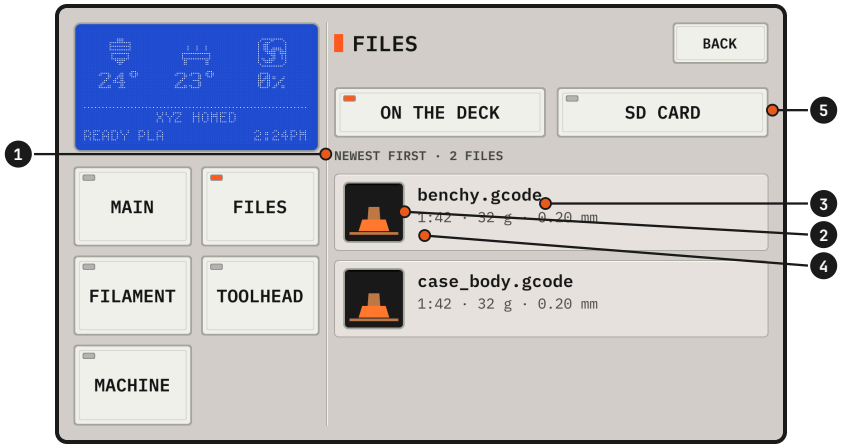

1. **Count.** The number of files.
2. **Picture.** The thumbnail.
3. **File.** The name and the slicer data.
4. **Date.** When the file arrived.
5. **On the deck, SD card.** The files on the deck, or on the SD card of the printer display ([printdeck_sdcard]).

Tap a file to open it.

The Camera page

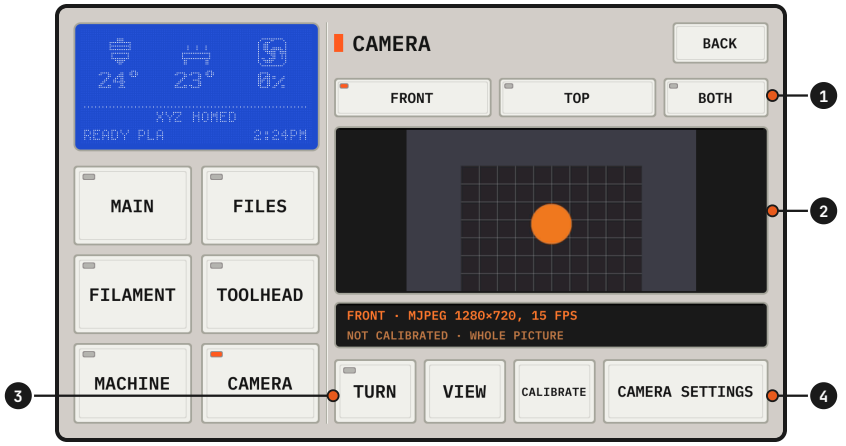


1. **Tabs.** A tab for each camera that is on. Both shows all the cameras.
2. **Picture.** Use it to aim the camera at the bed.
3. **Turn.** Turns the picture 180°.
4. **Camera settings.** The name, on or off, and the uses of this camera.

A camera runs only while somebody looks at it. With no camera, the apps show the deck screen.


If a camera shows too little USB bandwidth, move it to another USB port.

The Settings page, at the bottom

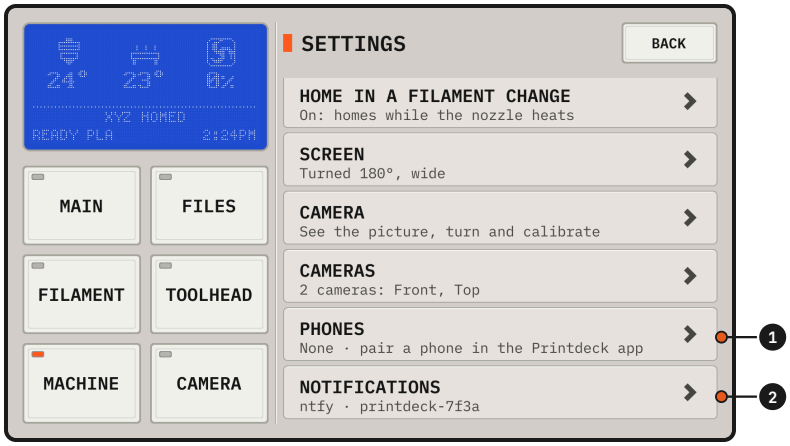


1. **Phones.** The phones that get push messages. Tap a phone in the list to remove it.
2. **Notifications.** Push messages through ntfy. In the ntfy app, subscribe to a topic with a name that is hard to guess. Type the same topic here. An empty topic turns the messages off.

A file

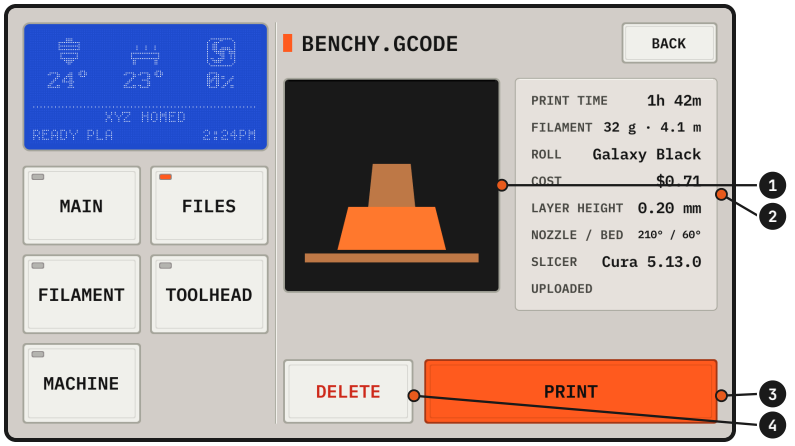

1. **Picture.** The thumbnail.
2. **Slicer data.** The data from the slicer.
3. **Print.** Starts the print.
4. **Delete.** Removes the file.

The SD card of the printer

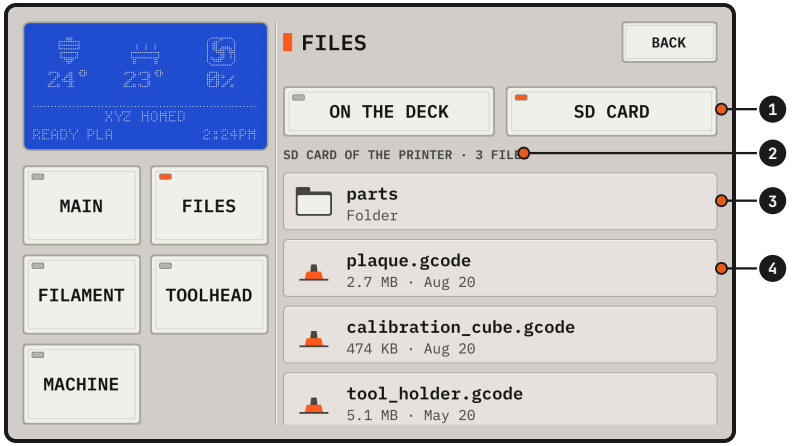

1. **On the deck, SD card.** The files on the card, or on the deck.
2. **Count.** The open folder.
3. **Folder.** Tap a folder to open it.
4. **File.** Tap a file to copy it to the deck.


Stop ends the copy.

Watch the print

The deck shows a screen for each phase of the print.


1. Watch the first layer. Use − and + to set the nozzle height.
2. Tap Save to keep the Z offset for the next prints.
3. Use Tune to change the speed, the flow or the fan.
4. When the print is done, wait for the bed to cool. Then remove the part.

Preparing

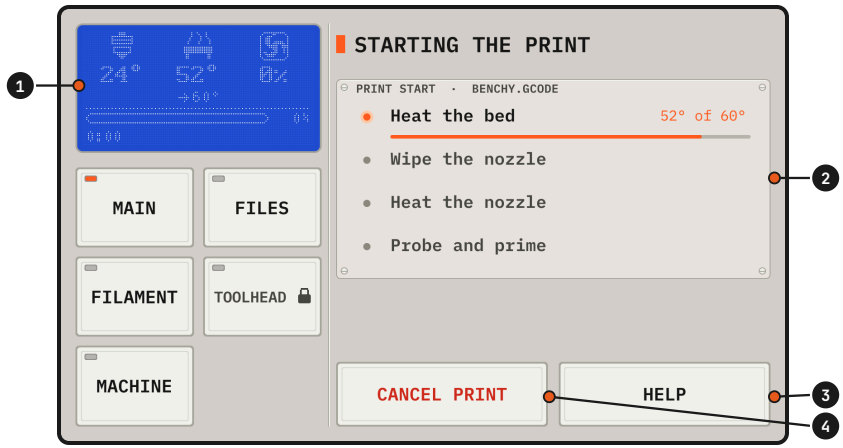


1. **Display.** The printer display. Tap the nozzle or the bed to set its temperature.
2. **Steps.** The steps of the start macro. The step that runs has a lit LED.
3. **Help.** The network, the address and the password.
4. **Cancel print.** Stops the print.

The Settings page

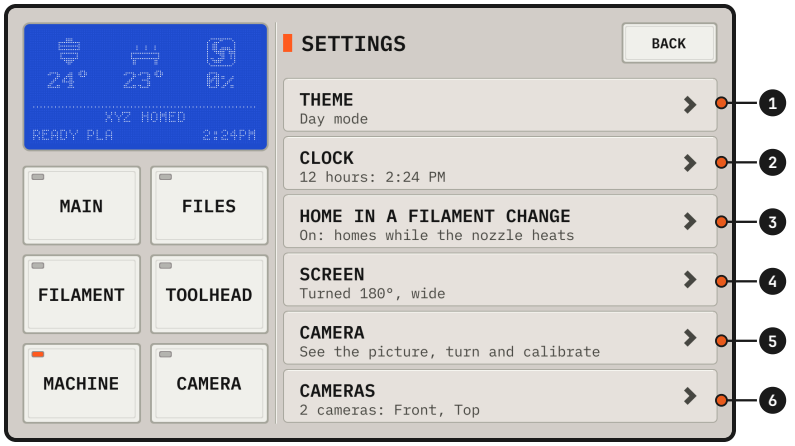


1. **Theme.** Day, night, or auto.
2. **Clock.** 12 or 24 hours.
3. **Home in a filament change.** On: the printer homes while the nozzle heats for a filament change.
4. **Screen.** Tap it to turn the screen a quarter turn. The deck restarts, and a print continues. This setting overrides display_rotate.
5. **Camera.** Opens the live picture, as the Camera key does.
6. **Cameras.** Names the cameras and sets their uses.

The Machine page, further down

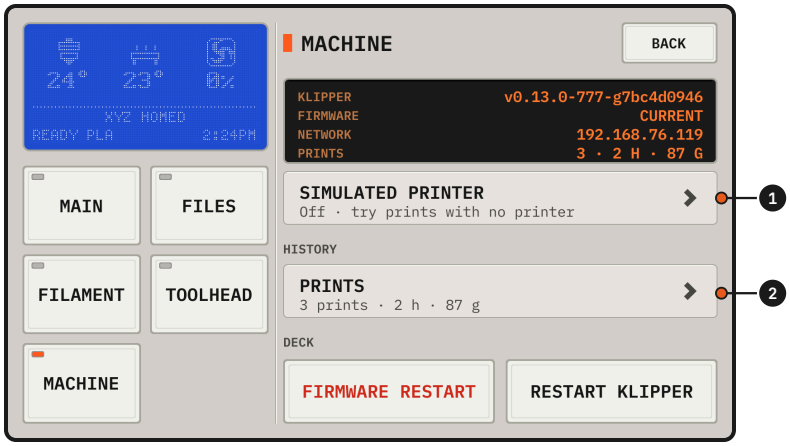


1. **Simulated printer.** Runs a simulated printer.
2. **Prints.** The totals and the history of all prints.

The Machine page, at the bottom

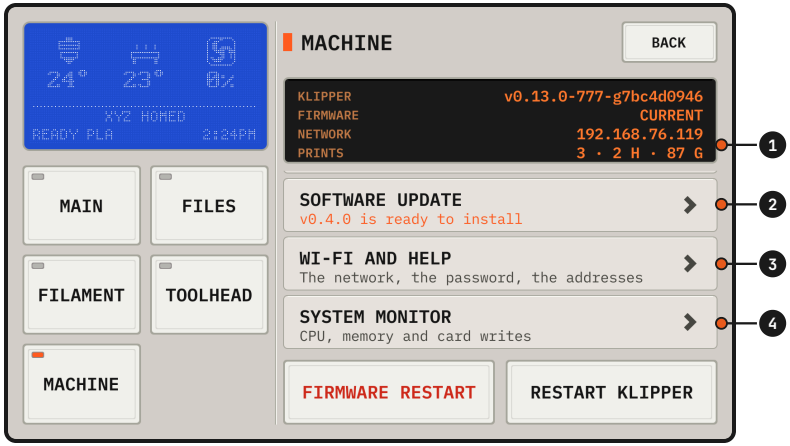


1. **Settings.** The theme, the clock, the screen, the cameras and the messages.
2. **Software update.** Shows and installs a new version.
3. **Wi-Fi and help.** The network, the password and the addresses.
4. **System monitor.** Graphs of the CPU, the memory and the SD card.

The first layer

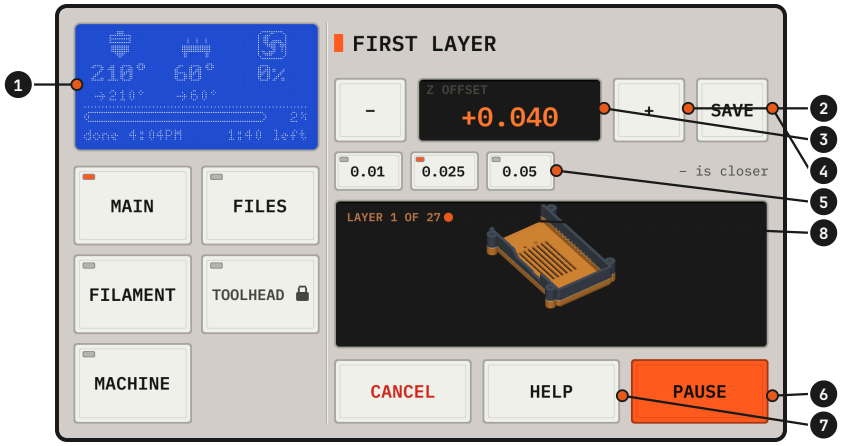

1. **Display.** The printer display. Tap the nozzle or the bed to set its temperature.
2. **– and +.** A round, thin line needs – (closer). A flat, rough line needs + (farther).
3. **Z offset.** The nozzle height above its normal height.
4. **Save.** Keeps the Z offset for the next prints.
5. **Step.** How far one tap moves the nozzle, in mm.
6. **Pause, Cancel.** Pauses the print, or stops it after a question.
7. **Help.** The network, the address and the password.
8. **Layer.** The first layer of the model.

Printing

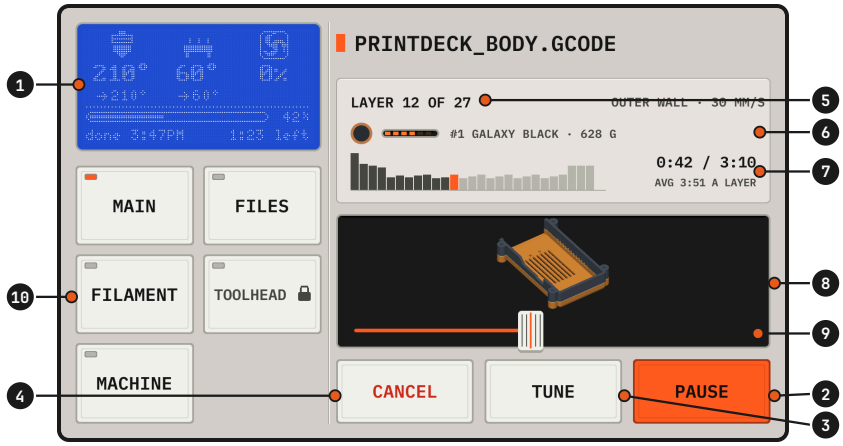


1. **Display.** The printer display. Tap the nozzle or the bed to set its temperature.
2. **Pause.** Pauses the print.
3. **Tune.** Changes the speed, the flow and the fan.
4. **Cancel.** Stops the print.
5. **Layer.** The layer now and the head speed.
6. **Roll.** The roll in the printer and its filament.
7. **Layer times.** A bar for each layer. Done layers are dark, the layer now is orange, and the next layers are light.
8. **Model.** The model up to the layer now.
9. **Layer slider.** Drag it to see another layer. Live goes back to the layer that prints.
10. **Pages.** During a print, Main goes back to the print.

Look after the printer

Machine has the information of the printer, the history of the prints, the macros, the console and the settings.

The Machine page

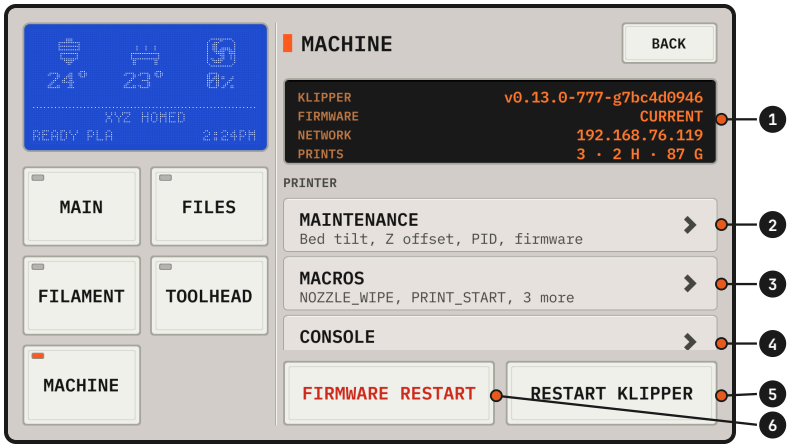


1. **Information.** The versions, the address and the totals.
2. **Maintenance.** The calibrations and the firmware.
3. **Macros.** Tap a macro to run it.

> Drag the list up to see more rows.

4. **Console.** The G-code console.
5. **Restart Klipper.** Reads printer.cfg again.
6. **Firmware restart.** Restarts the board, for example after a stop.


The paper test

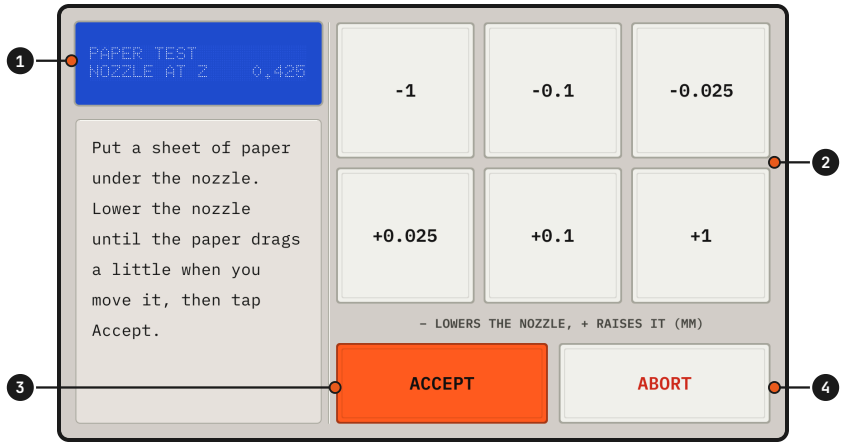

1. **Height.** The height of the nozzle now.
2. **Steps.** Moves the nozzle down (−) or up (+).
3. **Accept.** Keeps the height. Then tap Save config.
4. **Abort.** Stops the test with no change.


This screen opens by itself for each paper test, also from a macro.

Tune

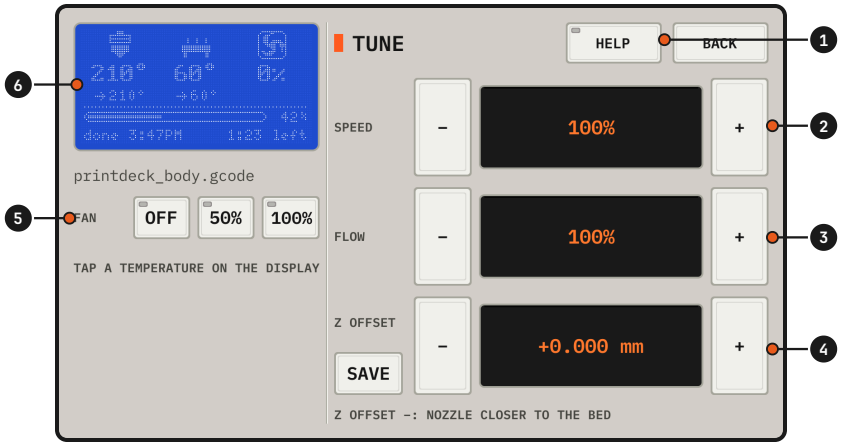


1. **Help.** The network, the address and the password.
2. **Speed.** The print speed, in percent of the slicer speed.
3. **Flow.** The amount of plastic, in percent.
4. **Z offset.** The nozzle height above its normal height. Save keeps it.
5. **Fan.** The part cooling fan.
6. **Display.** Tap the nozzle or the bed on the display to change its temperature.

Paused

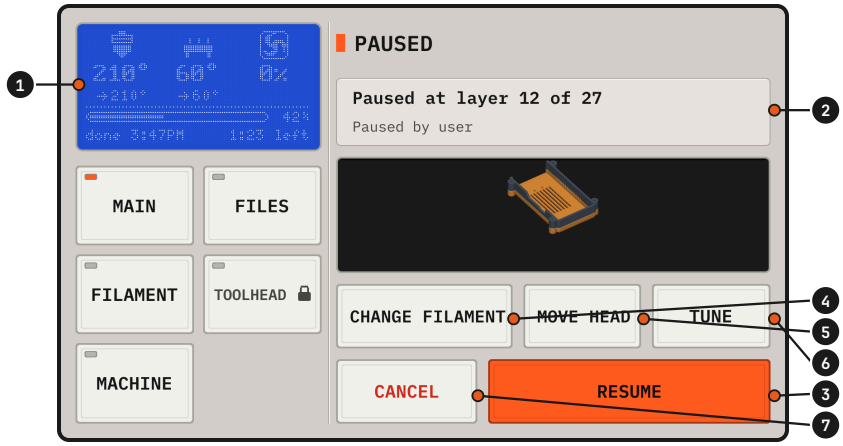


1. **Display.** The printer display. Tap the nozzle or the bed to set its temperature.
2. **Where.** The layer and the message.
3. **Resume.** Continues the print.
4. **Change filament.** For a new color.
5. **Move head.** Opens Toolhead.
6. **Tune.** Changes the print.
7. **Cancel.** Stops the print.

A pause of the file

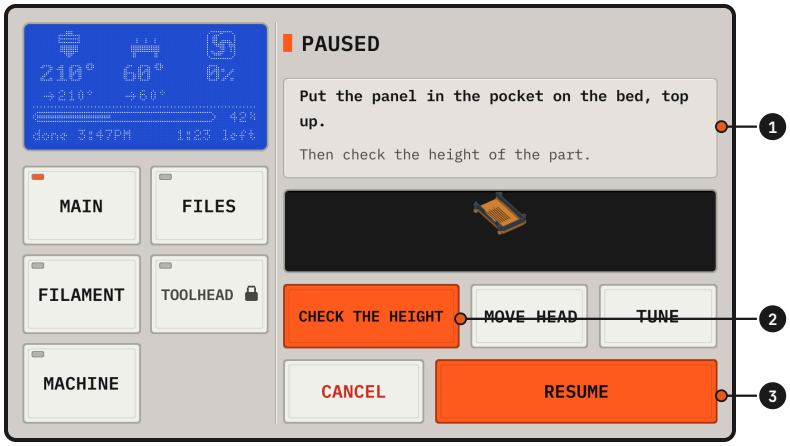


1. **Where.** The message of the file.
2. **Check the height.** A paper test on the part.
3. **Resume.** Primes the nozzle and continues.

The Maintenance page, further down

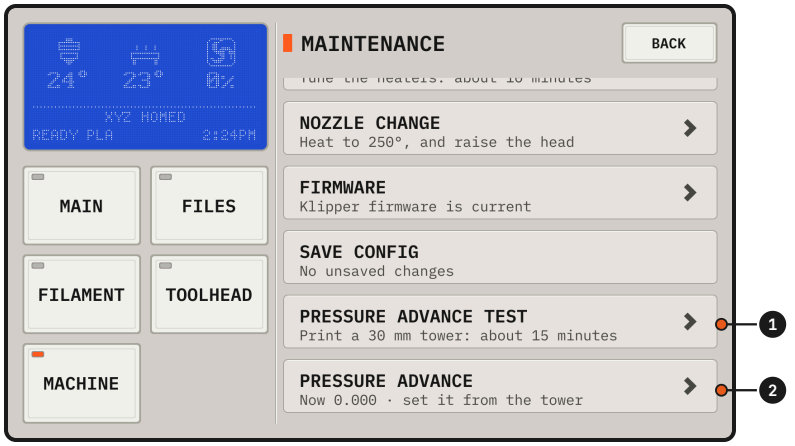

1. **Pressure advance test.** Prints a 30 mm tower. The pressure advance goes up 0.005 for each mm. Measure the height of the sharpest corners.
2. **Pressure advance.** Type the height of the sharpest corners. The deck writes the value in printer.cfg.


An action runs

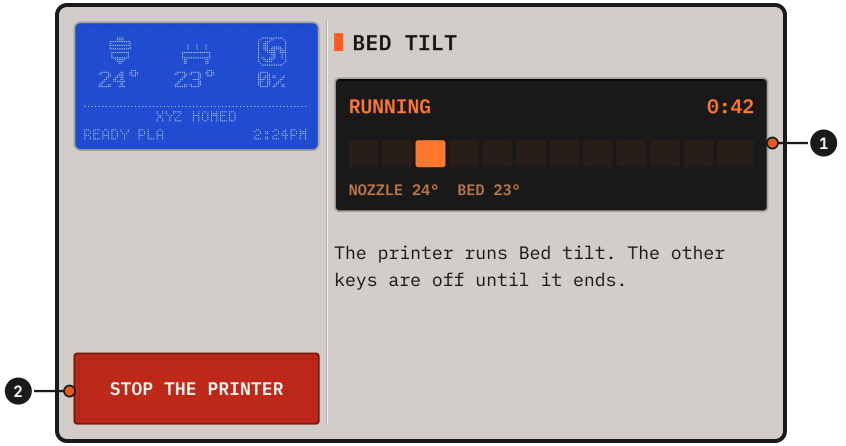

1. **Action.** The time since the start.
2. **Stop the printer.** Stops the printer at once. Then tap Firmware restart.


> The other keys are locked while an action runs. If the action fails, the deck shows the Klipper error until you tap OK.

The Maintenance page

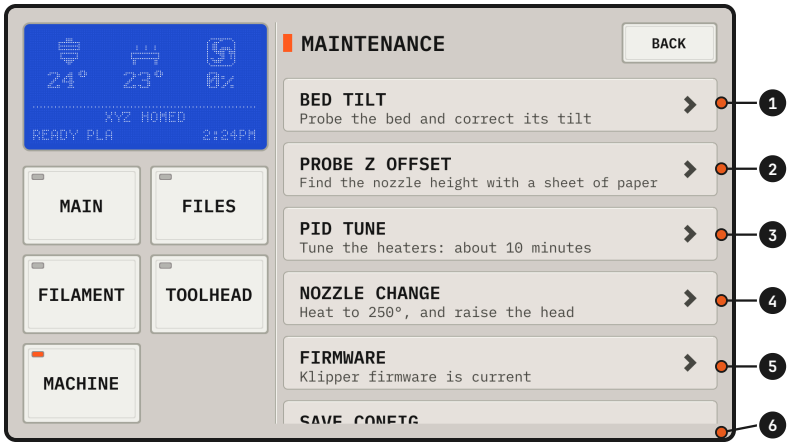


1. **Bed tilt.** Probes the bed and corrects its tilt. A printer with a bed mesh shows Bed mesh.
2. **Probe Z offset.** The paper test for the nozzle height.
3. **PID tune.** Heats the nozzle to 210° and the bed to 60°, and tunes each heater.
4. **Nozzle change.** Heats the nozzle to 250° and raises the head.
5. **Firmware.** Writes the Klipper firmware. Orange text shows old firmware.
6. **Save config.** Writes the results into printer.cfg. Klipper restarts. Orange text shows unsaved results.

The end of the print

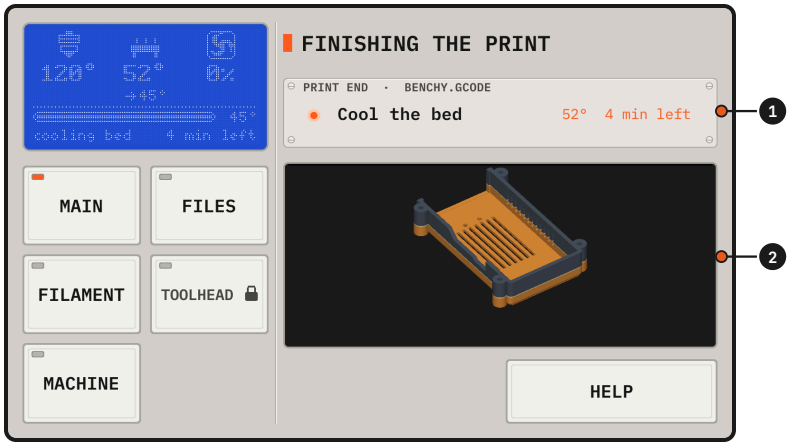

1. **Steps.** The steps of the end macro.
2. **Model.** The finished model.

Done

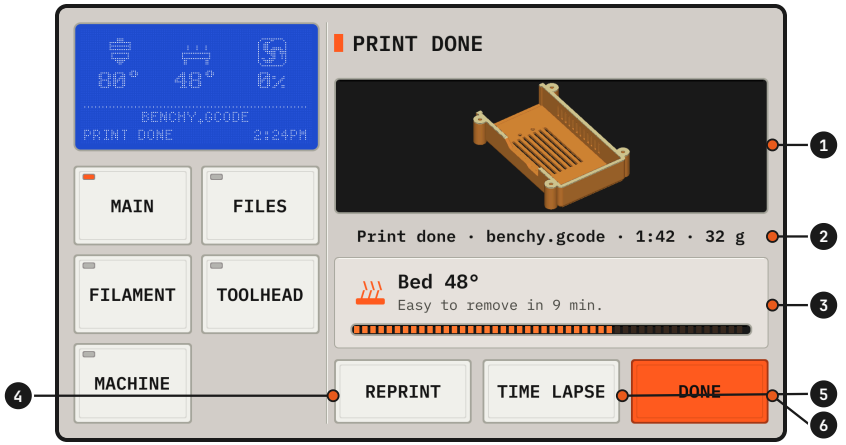

1. **Model.** The model of the print.
2. **Result.** Done, Cancelled or Failed.
3. **Bed.** The time until the part comes off easily (35°).
4. **Reprint.** Prints the file again.
5. **Time lapse.** Plays the time lapse video of the print. It shows Saving... while the deck writes the video.
6. **Done.** Closes this screen.


Time lapse shows only for a print with a time lapse.

Print in two colors

The Colors tool of the Cura plugin gives a model a roll of another color. The print pauses at the first layer of that model.

1. In Cura, put the letters on the part. Select the letters, open the Colors tool, and tap their roll.
2. Print. At the first layer of the letters, the printer parks and the deck shows Change filament in orange.
3. Tap Change filament. Unload, load the roll of the letters, and tap Done.
4. Pull the ooze off the nozzle with tweezers, then tap Resume.

A color change

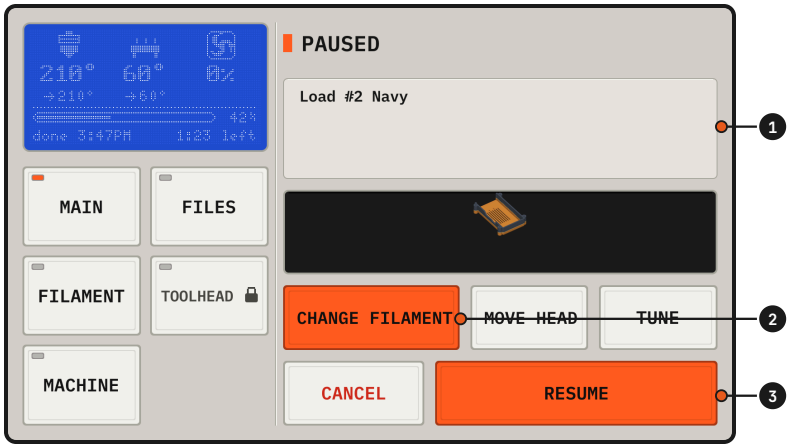


1. **Where.** The roll of the next color.
2. **Change filament.** Opens the filament change with that roll.
3. **Resume.** Primes the nozzle at the front of the bed, then continues.

Level and calibrate

Maintenance lists the calibrations of your printer. Open it from Machine.

1. Open Machine, then Maintenance.
2. Tap Bed tilt or Bed mesh to probe the bed. The deck shows the action until it ends.
3. Tap Probe Z offset for the paper test. Move the nozzle down until a sheet of paper drags a little, then tap Accept.
4. Tap PID tune after you change a heater or a fan. A PID tune runs for about 10 minutes.
5. Tap Save config to write the results. Klipper restarts.
6. Tap Pressure advance test to print the tower. Then tap Pressure advance, and type the height of its sharpest corners.

The keypad of a temperature

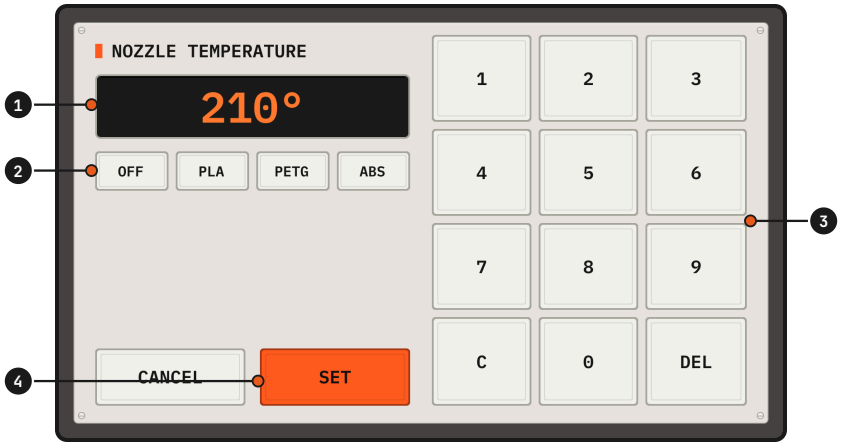


1. **Value.** The value.
2. **Presets.** Off, and the material temperatures.
3. **Keys.** C clears, DEL removes a digit.
4. **Set.** Sets the heater.

Look around during a print

During a print, the other screens are read only. The deck goes back to the print after 2 minutes with no touch.

During a print, Main is the print. The key panel opens the other pages.

Filament during a print

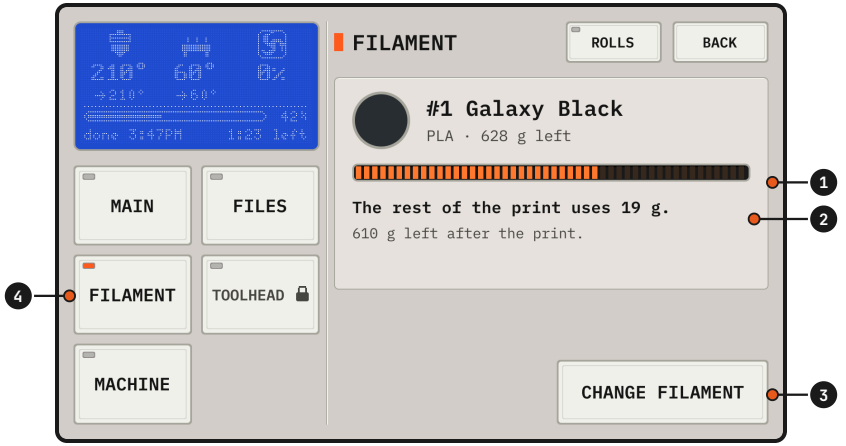

1. **Roll.** The roll in the printer and its filament.
2. **Lasts.** The filament left after the print. Red text shows a roll that runs out.
3. **Change filament.** Pauses the print and opens the filament change. Then tap Resume.
4. **Pages.** The key panel opens each page.

Make a time lapse

The deck camera captures a picture at each layer change. At the end of the print, the deck makes a video.


For each picture, the printer retracts, lifts the nozzle and moves the head to the left side. A bed that moves in Y goes to the middle of the part, so the bed is at the same place in each frame. On the TAZ Workhorse the nozzle goes to Z 10 mm or more, over the bed washers. Each picture adds a few seconds.

1. Aim the camera: Settings, then Camera.
2. Open Settings, then Time lapse.
3. Tap Time lapse to turn it on.
4. With two cameras, open Settings, then Cameras. Tap a camera, and check Time lapse or Pictures.
5. Tap First layer for a picture of the first layer, or a picture and a pause. At a pause, check the layer, then tap Resume.
6. Print. After the first layer, the deck shows its picture.
7. At the end of the print, tap Time lapse on the done screen. The video plays.
8. To see it later, open Machine, then Statistics, then History. Tap the print, then Play.
9. To download the video, open http://printdeck.local/system in a browser. The Time lapse part has the video. Click its name.

Move the head and heat


1. Open Toolhead, and tap Home all after each start of the printer.
2. Hold the joystick to move the head. Use Z for the height.
3. Tap a temperature on the idle screen to set it with the keypad.

The Toolhead page

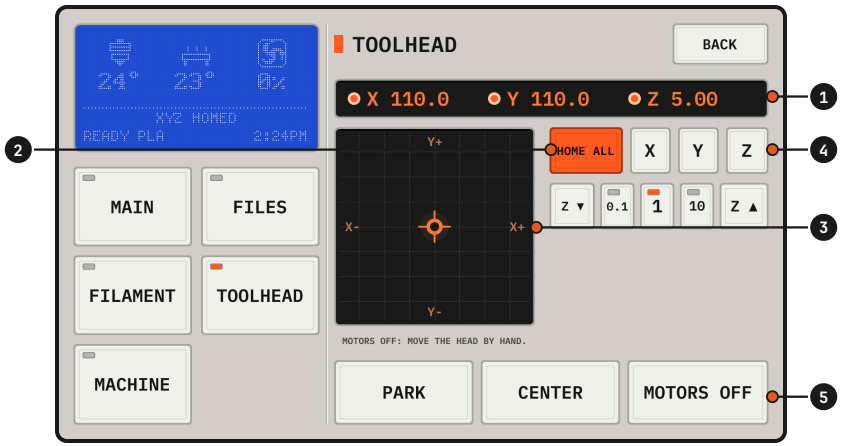

1. **Position.** A lit LED shows a homed axis.
2. **Home.** Home after each start of the printer.
3. **Joystick.** Hold a finger on the pad to move the head in X and Y.
4. **Z.** Moves Z by the step: 0.1, 1 or 10 mm.
5. **Park, Center, Motors off.** Park lifts the nozzle 10 mm and moves the head to the back left. Center moves it to the bed center. Motors off frees the head.

The color of a roll

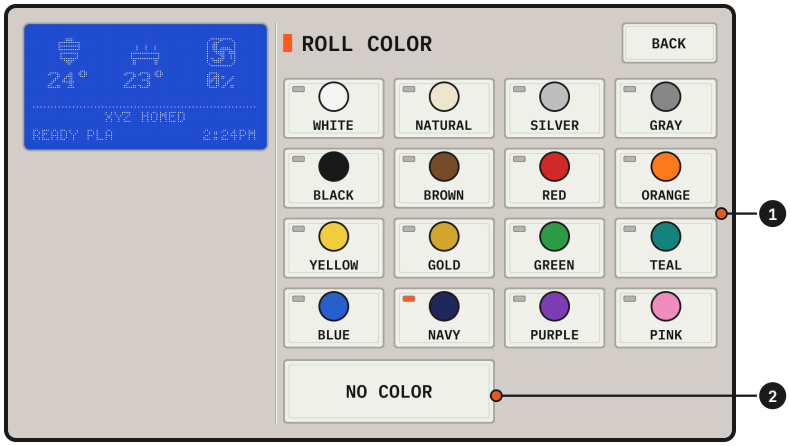


1 **Colors.** Tap a color.

2 **No color.** Removes the color.

Tap a color to set it. The Cura plugin gives the roll material in Cura the same color.

A print of the history

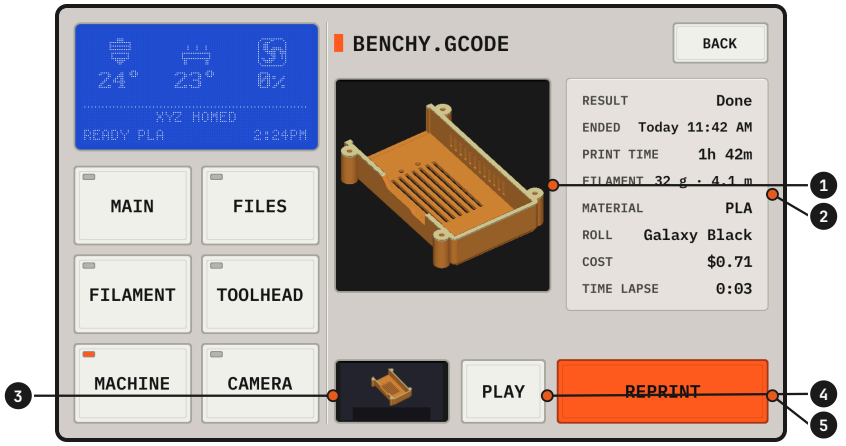

1 **Model.** The model of the print.

2 **Details.** The result, the time, the filament and the time lapse video.


3 **Still.** The last frame of the time lapse video.

4 **Play.** Opens the player.

5 **Reprint.** Prints the file again.

The deck keeps the last 3 videos. The record of an older print shows Removed.


The time lapse player

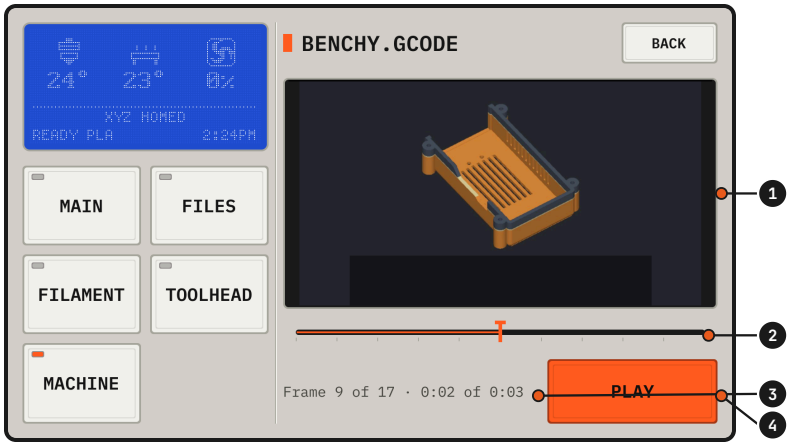

1. **Video.** The video, as large as it fits.
2. **Position.** Tap or drag to go to a frame.
3. **Frames.** The frame, the count of frames, the time and the length.
4. **Play.** Plays the video, or pauses it.

> The video plays only while this page shows. Back returns to the page that opened it.


One roll

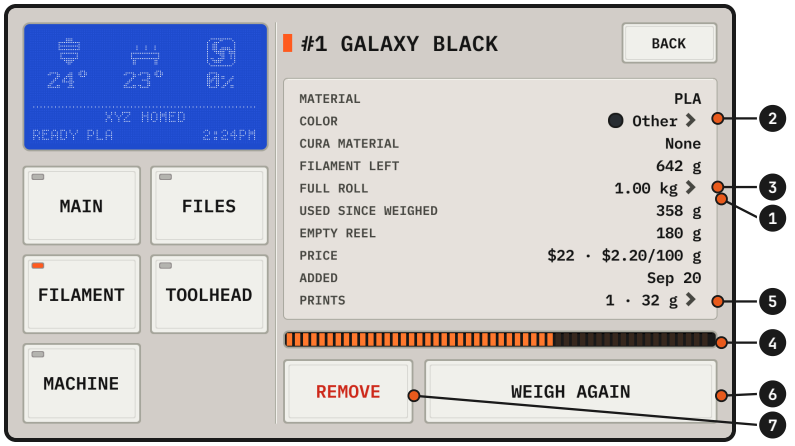

1. **Details.** The filament left, the filament used, and the price.
2. **Color.** Tap it to choose a color. The print screen and Cura show it.
3. **Full roll.** The filament of a full roll: 1 kg by default. Tap it to change it.
4. **Left.** The part of a full roll that is left.
5. **Prints.** Tap it for the prints that used the roll.
6. **Weigh again.** Sets the filament from a new weight.
7. **Remove.** Removes an empty roll from the list.


> Each roll has a number, for example #3. For QR code labels, open printdeck.local/rolls/labels and print the sheet on 2 inch round labels (Avery 22807). A phone camera on a label opens the page of the roll. Load there opens the filament change on the deck.

A new roll

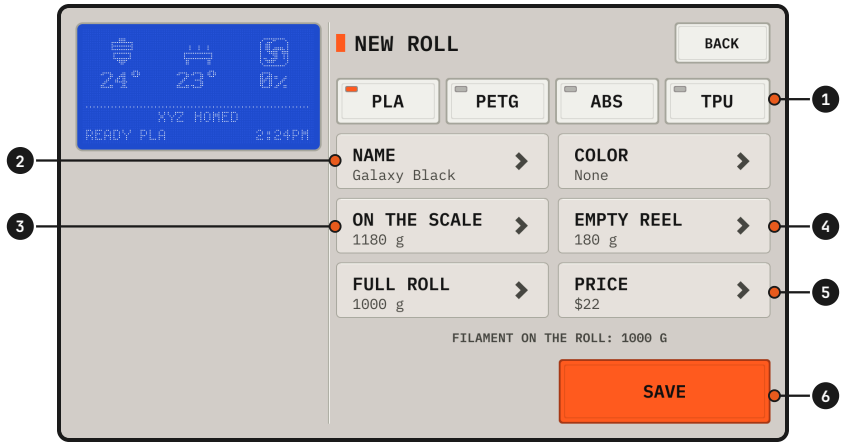

1. **Material.** The material of the roll.
2. **Name.** For example the color and the brand.
3. **On the scale.** The weight of the roll with its reel.
4. **Empty reel.** The weight of an empty reel of the same brand.
5. **Price.** The roll price, for the cost of each print.
6. **Save.** Adds the roll as the loaded roll.

The rolls

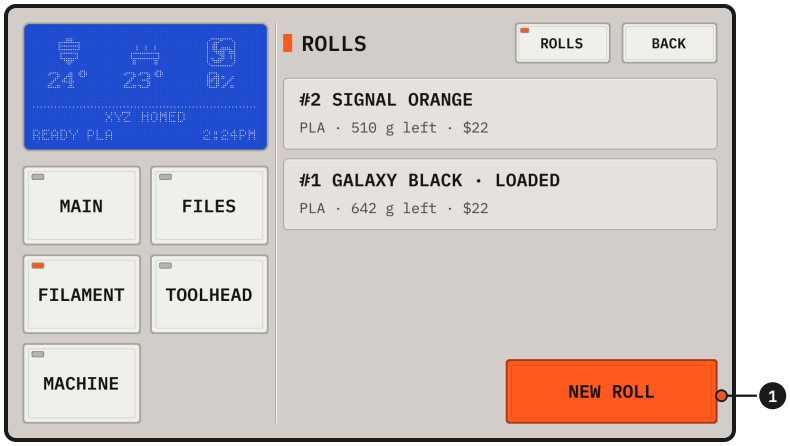

1. **New roll.** Adds a roll with no filament change.

The iPhone and Apple Watch apps

The iPhone app shows the deck and controls the print. The watch app shows the print.

The apps use the local network. The watch connects on Wi-Fi, or through the iPhone.

1. Open Printdeck on the iPhone. It finds the deck on the network. Tap Connect.
2. Tap Allow on the deck.
3. For push messages, open Menu, then Notifications, and tap Pair for notifications. Allow the notifications.
4. To add the complication, edit the watch face and choose Printdeck.
5. To add a widget, touch and hold the Home Screen or the Lock Screen, tap Edit, and choose Printdeck.


iPhone app	The deck screen and its keys. With two cameras, tap a camera name on the camera page, or swipe, to switch. The watch shows the same camera.
Watch app	The progress and the time left. Tap for Pause, Resume or Cancel.
Complications	The progress on the watch face.
Home Screen widgets	The status of the print.
Lock Screen widgets	The same as the complications.
Live Activity	The print on the Lock Screen and in the Dynamic Island.
Notifications	Print done, print failed, paused, first layer done, and a roll that runs short.

Change the filament

Set the loaded filament here, so Preheat uses its temperatures. The deck keeps a list of your rolls. Each print subtracts its filament from the roll in the printer.


1. Open Filament, then tap Change filament.
2. Tap the roll that goes in, or tap New roll and weigh it. The nozzle heats for its material.
3. Tap Unload, and hold the filament lightly while it comes out.
4. Push the new filament into the extruder until it stops, then tap Load.
5. Check that clean plastic of the new color comes out, then tap Done.

The Filament page

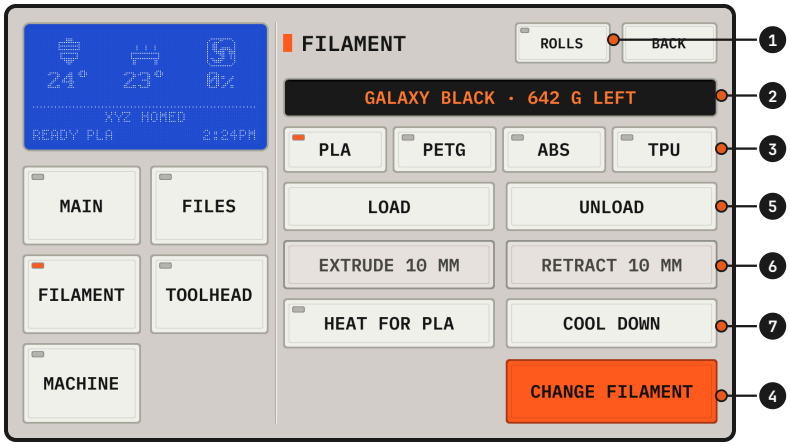

1. **Rolls.** Opens the list of your rolls.
2. **Loaded.** The roll or the material in the printer.
3. **Material.** Tap the material in the printer.
4. **Change filament.** The guided change: choose, heat, unload, insert, load, check.
5. **Load, Unload.** Only the load, or only the unload.
6. **Extrude, Retract.** Pushes or pulls 10 mm. The nozzle must be at 170° or more.
7. **Heat, Cool down.** Heats the nozzle, or turns the heaters off.

The guided change, step 1

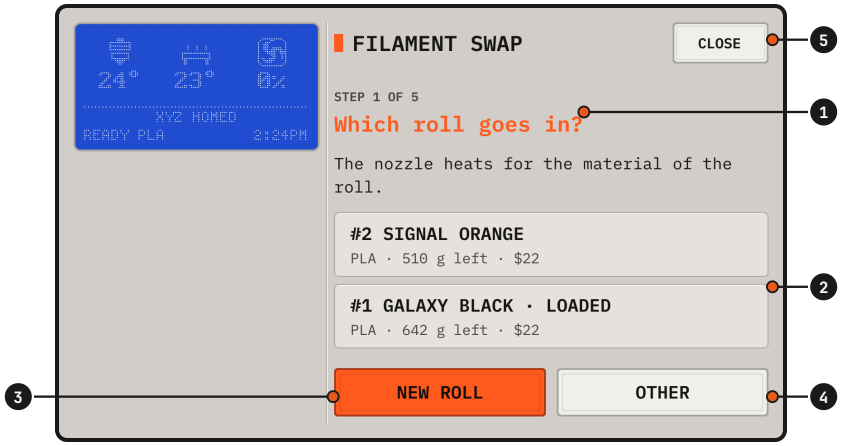

1. **Step.** The step now.
2. **Rolls.** Tap the roll that goes in.
3. **New roll.** Adds a roll and weighs it.
4. **Other.** A filament with no roll.
5. **Close.** Stops the change and turns off the nozzle.