PD-TAZ-WH-1

# PRINTDECK


## UPGRADE KIT

*For the LulzBot TAZ Workhorse*



INTRODUCING PRINTDECK FOR THE TAZ WORKHORSE

# *Your Workhorse called. It wants a dashboard.*

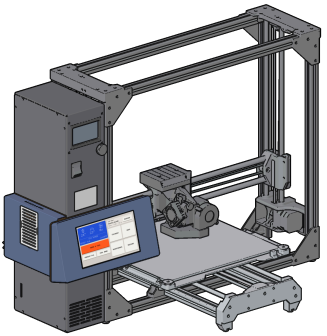

NOW WITH TOUCH!

Let's be honest. Your TAZ Workhorse works fine. It prints. It has a knob. Nobody asked you to change a thing.

That is exactly why you should.

Printdeck puts a seven-inch touch screen on the front of the printer, in a case that you print on the very printer you upgrade. The printer builds its own upgrade. If that is not the future, we do not know what is.

Inside is Klipper, ported to Go, in one program. It plans every move with the same look-ahead as the printer, so the time left is the real time left. Not a guess. Not a mood.

It updates itself. It flashes the firmware of the printer for you. It even takes over the old display of the printer and puts the same menus on it, so the knob gets a promotion too.

No drilling. No nuts in the rail. Two cover screws and two printed clips. If you can turn a hex key, you are qualified.

- ✔ 7-inch color touch screen, mounted wide
- ✔ The Klipper host, in Go, in one program
- ✔ Time left from the motion planner
- ✔ Signed updates that install themselves
- ✔ 311 g of PLA, 15 h 02 min, no supports

***YES! Upgrade my Workhorse. I have no good reason.***

☐ Because I can ☐ Because I can ☐ Both

Name _____ Printer _____

Mail to: your own printer. Allow 15 h 02 min for delivery.

Printdeck is free software (AGPL-3.0). Printer not included. LulzBot and TAZ Workhorse are names of their owner. Printdeck is not made by LulzBot and is not connected with LulzBot. The time left is exact for the moves of the file; the heating and your pauses are your own business.

# Contents


UPGRADE THE WORKHORSE

What you build ..... 4
Print the parts ..... 5
What you need ..... 7
Before you start ..... 9
Prepare the drive ..... 11

BUILD THE MOUNT

Build the mount ..... 12
Connect and start ..... 20

SET UP

Connect to Wi-Fi ..... 22
Choose your printer ..... 24
Install the Klipper firmware ..... 26

MEET YOUR PRINTDECK

The deck ..... 27
The display of the printer ..... 28
The deck in a browser ..... 29

PRINT A PART

Send a file from the slicer ..... 30
Start a print ..... 31
Watch the print ..... 33

CHANGE THE FILAMENT

Change the filament ..... 39

MOVE AND HEAT

Move the head and heat ..... 41

LEVEL AND CALIBRATE

Level and calibrate ..... 43

LOOK AFTER THE PRINTER

Look after the printer ..... 47
Update the Printdeck ..... 50


WHEN SOMETHING GOES WRONG

When something goes wrong ..... 51
Settings ..... 52

# What you build

This kit puts the Printdeck on the front left of your TAZ Workhorse. The 7 inch touch screen is in a wide head below the TAZ Workhorse logo, and the Raspberry Pi 5 is in a pod on the left side of the electronics chassis. The head leans back 15 degrees, so you see the screen from the front of the printer.

You print the parts on the Workhorse itself. Two printed clips hold on the front rail with printed twist nuts, and two screws of the side cover hold the plate. You drill no hole in the printer, and you put no metal nut in the rail.

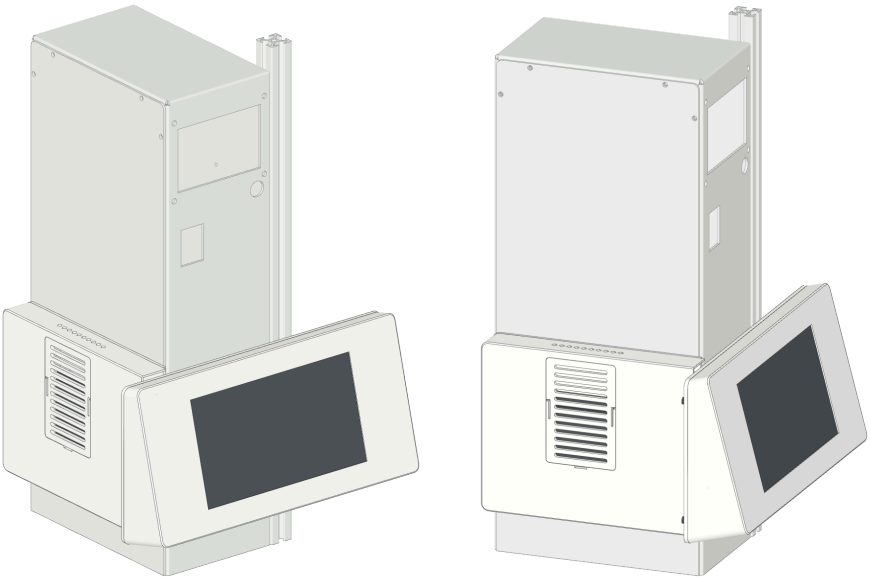

`9 printed parts` `311 g of PLA` `15 h 02 min of printing`

`No supports` `No holes in the printer`

The deck screens in this booklet are the wide screens: the display is mounted wide in the head.

# Print the parts

The STL files are in lulzbot/stl/, in their print orientation. Load them as they are. The numbers come from slices with the Cura profiles of the mount: LulzBot TAZ Workhorse, SE tool head, 0.5 mm nozzle, 2.85 mm PLA.

| | PART | COLOUR | FILAMENT | TIME | COST |
|---|---|---|---|---|---|
|  | **head**<br>`stl/head.stl` | Navy | 87 g | 4 h 28 min | $2.00 |
|  | **pod**<br>`stl/pod.stl` | Navy | 75 g | 3 h 45 min | $1.72 |
|  | **back**<br>`stl/back.stl` | Orange | 69 g | 3 h 16 min | $1.59 |
|  | **plate**<br>`stl/plate.stl` | Orange | 58 g | 2 h 11 min | $1.33 |
|  | **clip** (2 ×)<br>`stl/clip.stl` | Orange | 8 g | 0 h 36 min | $0.18 |
|  | **clip nut** (2 ×)<br>`stl/clip_nut.stl` | Orange | 2 g | 0 h 04 min | $0.05 |
|  | **grille**<br>`stl/grille.stl` | White | 12 g | 0 h 42 min | $0.28 |

Total: 311 g of PLA (39 m), 15 h 02 min of printing, $7.15 at $22.99 a kilogram. The fit test of the screen opening (stl/fit_display.stl, 22 g, 1 h 10 min) is optional.

Print the fit test first, and check the display in it: the display pocket has 0.3 mm of clearance at each side. Then print the head and the back panel: steps 2 to 4 need them. Then print the plate, the clips and the nuts, the pod and the grille.

## SETTINGS

| | |
|---|---|
| **Profiles** | One Cura profile for each part: run python3 cura/make_profiles.py --install with Cura closed, then pick “Printdeck - LulzBot ...”. |
| **Printer** | LulzBot TAZ Workhorse, SE tool head, 0.5 mm nozzle |
| **Material** | PLA, 2.85 mm |
| **Head, pod, grille** | 0.3 mm layers, 1.5 mm walls, 1.2 mm top and bottom, 15 % grid infill, skirt |
| **Back panel, plate** | 0.4 mm layers (a 0.3 mm first layer), 1.5 mm walls, 15 % grid infill, skirt |
| **Clip, twist nut** | 0.3 mm layers, 100 % infill. The clip has a brim. |
| **Speeds** | Infill 75 mm/s (60 mm/s with 0.4 mm layers), inner walls 60 mm/s, outer walls 35 mm/s (30 mm/s on a face that shows), travel 200 mm/s. The flow stays at 12 $mm^3$/s or less. |
| **Supports** | Off for all parts. Every hole, pocket, and hook has 45° faces. A slice of each part with supports on (60°, everywhere) adds 0 g of support. |

# What you need

## HARDWARE

| | ITEM | WHERE |
|---|---|---|
| 6 × | M3 × 10 socket cap head | 2 × plate on the cover (upper pair of PP-FP0164); 4 × back panel into the head |
| 2 × | M3 × 12 socket cap head | 2 × plate flange into the back panel |
| 12 × | M3 × 6 socket cap head | 4 × display board (it cuts its thread); 4 × Pi (it cuts its thread); 4 × drive on the back panel |
| 4 × | M3 × 8 socket cap head | 2 × pod onto the plate; 2 × rail clip into its twist nut |
| 2 × | M3 washer | 2 × under the cover screws |
| 2 × | M3 × 4 heat-set insert | 2 × twist nuts (3 to 4 mm fits) |
| 2 × | M3 × 5 heat-set insert | 2 × plate, pod screw blocks (3 to 5 mm fits) |
| 6 × | M3 × 7 heat-set insert | 4 × head, back screws (3 to 7 mm fits); 2 × back panel, flange screws (3 to 7 mm fits) |

All the screws are M3 socket cap screws, for a 2.5 mm hex key. A shorter or a longer heat-set insert fits, up to the length in brackets.


### ELECTRONICS AND CABLES

- 1 × Raspberry Pi 5 (from the Slate build)
- 1 × Raspberry Pi Active Cooler, max. 10.5 mm high (buy, if you do not have one)
- 1 × Adafruit 7 inch HDMI display with touch, product 2407 (from the Slate build)
- 1 × 2.5 inch SATA drive with its USB adapter board, the boot drive (from the Slate build)
- 1 × HDMI cable: micro HDMI to HDMI, straight plugs, a flat ribbon of 30 cm or more (the route is 24 cm). The ribbon kit of the Slate fits.
- 1 × Micro USB to USB-A cable, straight plugs, max. 3.5 mm thick, 15 cm or more (the route is 12 cm).
- 1 × USB 3 cable for the drive: micro-B SuperSpeed to USB-A, 15 to 20 cm (the route is 13 cm).
- 1 × USB-A to USB-B cable for the printer: 31 cm in the pod, plus the run behind the printer to the USB socket of the printer board.
- 1 × USB-C power cable: 9 cm in the pod, plus the run behind the printer to the Raspberry Pi 27 W USB-C power supply.

### TOOLS

- Drill with a 3.2 mm bit (for the four holes of the Pi)
- Soldering iron with a heat-set insert tip, at 220 °C
- 2.5 mm hex key (M3 socket cap screws)
- One strip of 2 mm foam tape, between the panel and the display board

# *Before you start*

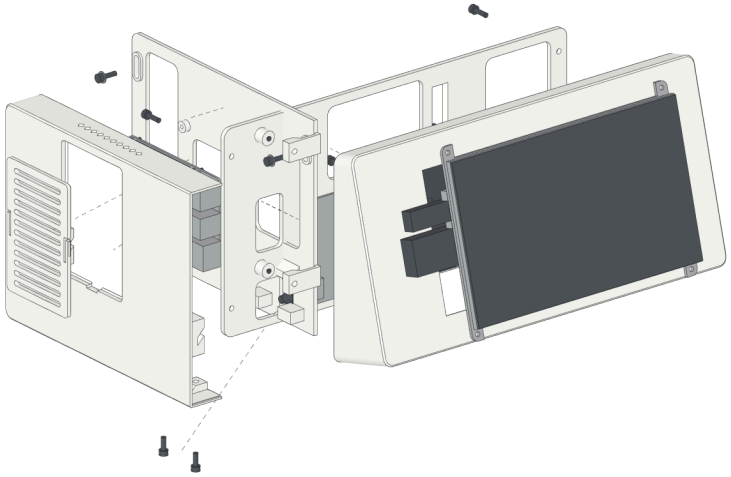

The mount uses two screws of the printer and the front rail. The upper pair of screws of the side cover (PP-FP0164) holds the plate. Two printed clips on the front slot of the front left rail hold the right end of the head: a printed twist nut turns behind the lips of the slot, and an M3 × 8 screw pulls it up. Two screws through a flange of the plate hold up the head, and the pod slides onto two hooks of the plate.

## CHECK ON YOUR PRINTER

1. Check the rear screw of the upper pair on the cover: 237.3 mm above the bottom edge of the cover, and about 3.6 mm from the rear edge of the cover. The design uses the value of the LulzBot drawing.
2. Measure the TAZ Workhorse logo on the front of the chassis. The top of the head is 260 mm above the bottom of the chassis; the LulzBot drawing gives the logo at 264 mm, and the drawing is not to scale.
3. Look at the front slot of the front left rail. The clips need a free slot from 150 to 230 mm above the bottom of the chassis: remove the dust cover there, if the rail has one.
4. Move the bed to the front and the X axis to the bottom. Check that the head is clear of the bed, the print, and the tool head: it is 72 to 324 mm to the right of the left face of the chassis, and 125 to 260 mm above the bottom of the chassis.
5. Check behind the printer: the printer USB cable and the power cable leave the pod at the rear face of the chassis, 128 to 149 mm above its bottom.

# Prepare the drive

The Printdeck starts from the 2.5 inch drive. Write the Printdeck image to it before you build the mount: the drive goes into the head in step 3.

1. Build the image on a computer with Docker: run os/build.sh in the Printdeck repository. It writes os/out/printdeck.img.xz.
2. Connect the drive to the computer with its USB adapter. Write printdeck.img.xz to the drive with Raspberry Pi Imager (Use custom) or balenaEtcher.
3. Open the PRINTDECK partition of the drive, and open printdeck.txt in a text editor.
4. Set display_rotate=180. The display is upside down in the head, so the deck turns its picture. A width larger than the height gives the wide layout.
5. Fill in the name and the password of your Wi-Fi network, if you want to skip the Wi-Fi setup. The deck reads the file at each start, and then clears the password in it.


> If the picture is upside down at the first start, set display_rotate=0.

# Build the mount

Each step names the parts and the hardware that it needs. The parts from an earlier step have the number of that step.

## 1 Drill the Pi

Pi 5 | 3.2 mm drill

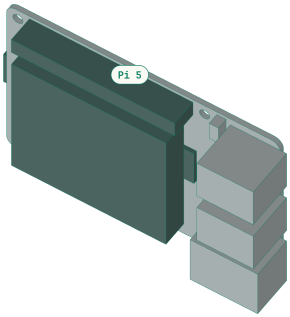



1. The mounting holes of the Pi 5 are 2.7 mm, for M2.5. Drill the four holes to 3.2 mm for M3.
2. Drill slowly, from the top of the board, with the board flat on a piece of wood.
3. Keep the drill straight. Stay inside the plated ring of each hole: do not touch the tracks or the parts around it.
4. Remove all the dust from the board with a brush or with air before you continue.

> Skip this step if your Pi already has 3.2 mm holes.

# 2 *Display into the head*

head · display · foam tape · 4 × M3 × 7 insert · 4 × M3 × 6

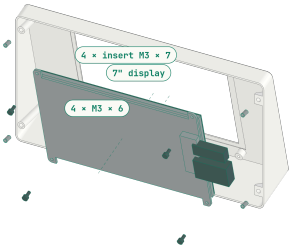



1. Press the four M3 × 7 inserts into the two columns and the two blocks at the back of the head. Use a soldering iron at 220 °C. Stop when the insert is flush.
2. Put the head face down on a soft cloth.
3. Put the display glass down into the pocket: the sockets of the board at the left (seen from the front), the FPC edge of the panel at the top.
4. Put the foam tape on the back of the panel. Put the board on the four bosses, and attach it with four M3 × 6 screws. They cut their own thread in the bosses: turn them until they are snug, and no more.
5. Connect the HDMI cable and the micro USB cable to the board. Both plugs point to the left.

> The screen opening is at the centre of the face: the border is the same at the left and the right.

## 3 Drive on the back panel


back panel · drive · 2 × M3 × 7 insert · 4 × M3 × 6

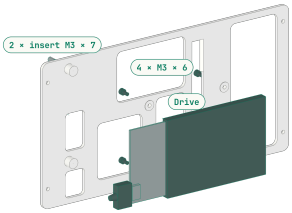


1. Press the two M3 × 7 inserts into the two bosses on the front face of the back panel, from the rear.
2. Put the drive on the four pads on the front face of the back panel: the adapter toward the left (the pod side), the M3 holes on the pads.
3. Attach it with four M3 × 6 screws from the rear face of the panel.
4. Connect the micro-B plug of the drive cable to the adapter.

## 4 Back panel onto the head

head (step 2) · back panel (step 3) · 4 × M3 × 10

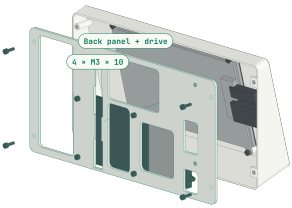



1. Put the display cables through the upper window at the left of the back panel, and the drive cable through the lower window.
2. Put the back panel on the head. Attach it with four M3 × 10 screws from the rear face, into the inserts.

> The heads of the screws stay on the rear face. They are behind the head, and they do not show.

## 5 *Plate on the cover*

`plate` `2 × M3 × 5 insert` `2 × M3 × 10` `2 × M3 washer`

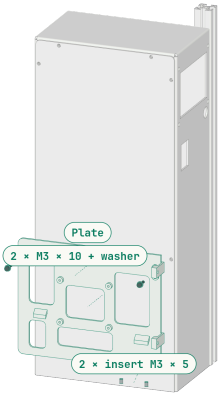



1. Press the two M3 × 5 inserts into the two blocks at the bottom of the plate (from below).
2. The cover is PP-FP0164, with 10 screws. Remove its upper pair of screws from the left side of the chassis: the front one and the rear one, 237.3 mm above the bottom edge of the cover.
3. Put the plate on the cover, with the slots of the two pads over the two holes. Attach it with two M3 × 10 screws, each with a washer.

> The slots in the pads let the plate fit 5 mm up or down and 0.5 mm to the front or the rear. The pad is 4 mm thick, so the M3 × 10 goes 3.5 mm into the nut of the chassis (the old screw went 4.0 mm).

## 6 *Pi on the plate*


`Pi 5 (step 1)` `Active Cooler` `4 × M3 × 6`

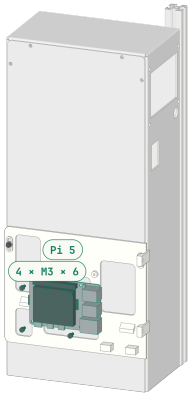


1. Put the Active Cooler on the Pi, and connect its cable to the fan connector.
2. Put the Pi on the four bosses: the USB ports toward the front of the printer, the USB-C and HDMI ports down.
3. Attach it with four M3 × 6 screws. They cut their own thread in the bosses: turn them until they are snug, and no more.

# 7 Clips in the rail

2 × rail clip | 2 × twist nut | 2 × M3 × 4 insert | 2 × M3 × 8

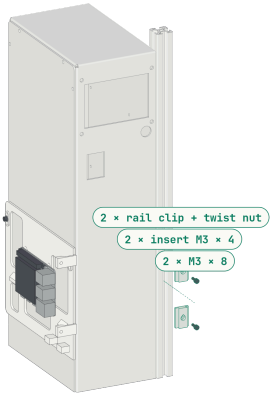



1. Press an M3 × 4 insert into the hole of each twist nut, from the narrow face. Stop when it is flush.
2. Put an M3 × 8 screw into the counterbore in the key of each clip, and turn it two turns into a nut. The wide face of the nut points to the clip.
3. Hold the back panel on the front face of the front left rail, with its bottom edge 125 mm above the bottom of the chassis. Mark the top of the two long slots in the panel on the rail.
4. Turn a clip a quarter turn, so that the nut is along the slot. Push the nut into the front slot of the rail at a mark. Turn the clip back until the key is along the rail: the nut turns with it, behind the lips.
5. Tighten the screw until the clip is tight on the rail. Do the same with the second clip.

> The nut is wider than the opening of the slot when it is across the slot. If the nut does not turn with the clip, hold the clip and turn the screw back a little, then try again.

# 8 *Hang the head*


`head (step 4)` `2 × M3 × 12`

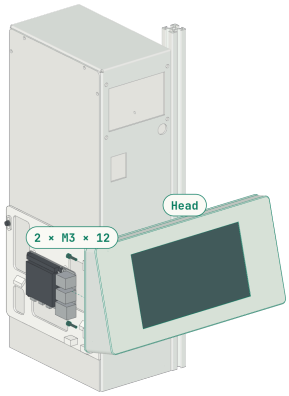


1. Hold the head 30 mm above its place, with the two windows of the back panel over the two clip keys. Push the back panel against the clips.
2. Let the head drop 30 mm. The keys go into the dovetail slots.
3. Lead the display cables and the drive cable out of the windows into the pod.
4. From inside the pod, put the two M3 × 12 screws through the flange of the plate into the back panel.

> The two screws through the flange hold up the head. The clips hold its right end against the rail.

# 9 Cables

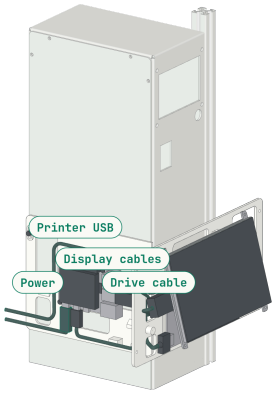



1. Connect the HDMI cable to the HDMI 0 port (next to the USB-C port).
2. Connect the touch cable to the upper USB 3 port (blue), and the drive cable to the lower USB 3 port.
3. Connect the printer cable to the lower USB 2 port. Lead it up the front of the pod, over the Pi, down at the rear end of the Pi, and out of the upper notch in the rear wall.
4. Connect the power cable to the USB-C port. Lead it down and to the rear, out of the lower notch.
5. Behind the printer, connect the printer cable to the USB socket of the printer board, and the power cable to the power supply.

> No cable goes through a hole in the printer, and no cable shows on the front or the side.

# 10 *Grille and pod*

grille · pod · 2 × M3 × 8

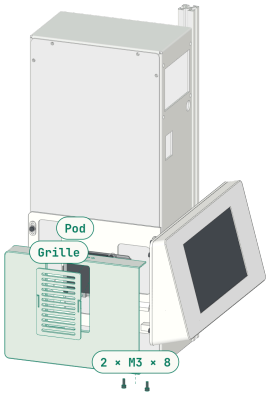



1. Push the grille into the pocket of the pod from the outside, with the fingernail notch at the bottom. Push both sides until the two tabs click. The grille is flush with the pod.

2. Hold the pod about 6 mm low and 6 mm out from its place, and 4 mm to the rear. Move it 4 mm to the front, then push it up and in at 45° onto the two hooks of the plate. The rear wall goes over the two cables.

3. Put the two M3 × 8 screws up through the bottom of the pod into the plate. They pull the pod up, and the 45° hooks pull it onto the plate.

> To remove the grille, put a fingernail or a small screwdriver into the notch at its bottom edge, and lift.

# Connect and start

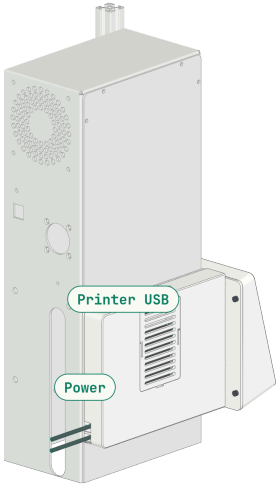


| CABLE | LENGTH | ROUTE |
|---|---|---|
| **HDMI** | 24 cm | HDMI 0 port to the display, plug to plug |
| **Touch USB** | 12 cm | upper USB 3 port to the display, plug to plug |
| **Drive** | 13 cm | lower USB 3 port to the drive, plug to plug |
| **Printer USB** | 31 cm | lower USB 2 port to the rear face of the chassis |
| **Power** | 9 cm | USB-C port to the rear face of the chassis |

1. Connect the power cable to the Raspberry Pi 27 W USB-C power supply behind the printer.
2. Connect the printer cable to the USB socket of the printer board.
3. Turn on the printer and the power supply. The deck starts from the drive and opens the setup. The guides after this page show the setup.

### TO OPEN THE MOUNT


1. Remove the two screws under the pod. Move the pod down and out at 45 degrees, off the hooks, then 4 mm to the rear and out. To remove the grille, lift it at the fingernail notch.
2. Disconnect the cables from the Pi. Remove the two flange screws from inside the pod.
3. Lift the head 30 mm and pull it off the clip keys. The display and the drive come off with it.
4. To get to the display or the drive, remove the four screws from the rear of the back panel.

# Connect to Wi-Fi

At the first start, the deck makes its password and opens the setup.


1. Switch on the Printdeck. The setup opens.
2. Tap your Wi-Fi network, then type its password.
3. Wait until the deck is connected, then tap Next.
4. Write down the address and the password, then tap Finish.

## The setup: step 1

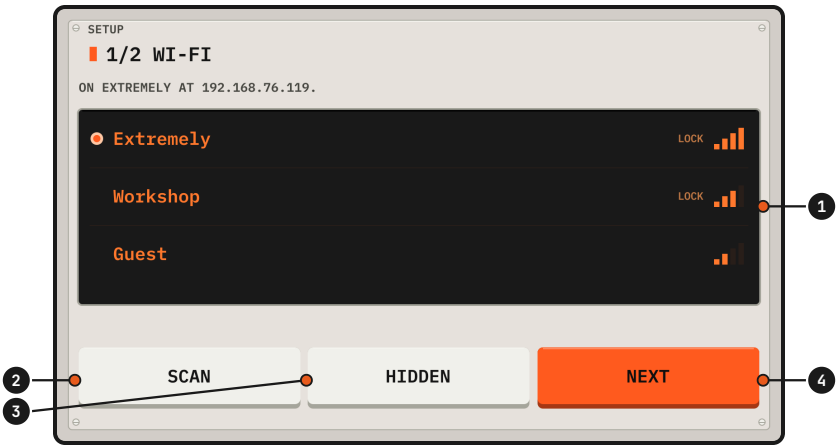


1. **Networks.** The Wi-Fi networks near the deck, with the signal. A lock shows a network with a password. Tap a network, then type its password.
2. **Scan.** Looks for the networks again. The list also scans by itself.
3. **Hidden.** For a network that does not show its name: type the name and the password.
4. **Next.** Goes to the summary when the deck is connected.

## *The setup: step 2*

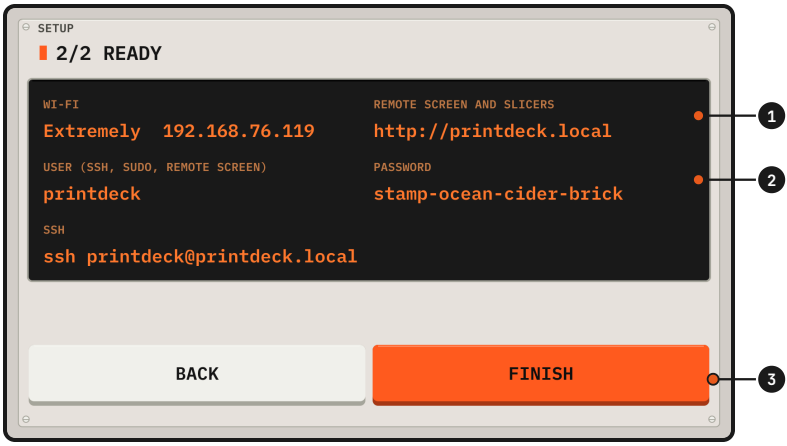


1. **Address.** The address of the deck on your network. Open it in a browser for the web pages.
2. **Password.** The password of the web pages. To see it again, open Machine > Wi-Fi and help.
3. **Finish.** Closes the setup. The deck does not open it again.

> You can also set the Wi-Fi before the first start: put the disk in a computer, and fill in printdeck.txt on the PRINTDECK partition.

# Choose your printer

A new Printdeck has no printer config. The deck then shows the printer setup.


1. Connect the printer to the Printdeck with a USB cable, and switch the printer on.
2. Wait until the deck finds the board. Tap Search again if it does not show.
3. Tap Choose printer. The printers of the brand of your board are at the top.
4. Tap your printer, then Use. Klipper restarts with its config.

## No printer yet




1. **Board.** The board that the deck found on USB, its MCU, and its Klipper firmware.
2. **Choose printer.** Opens the list of Klipper's example configs. See below.
3. **Search again.** Looks for the board again, for example after you connect the printer.
4. **Your own config.** You can also copy your own printer.cfg to the PRINTDECK partition, and start the deck again.
5. **Wi-Fi and help.** The network, the address and the password of the deck.
6. **Software update.** Installs a new version of Printdeck OS. A new version can fix the problem.

# *Choose your printer*

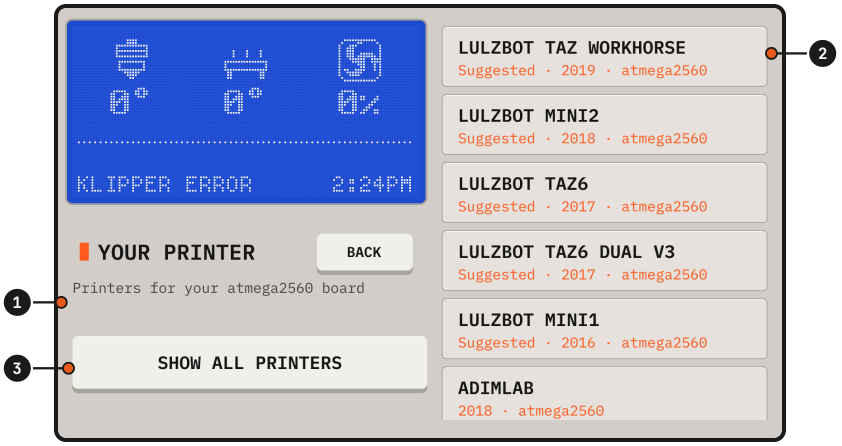



1. **Chip.** The list shows the printers with the same chip as your board.
2. **Printer.** The brand, the model, the year and the chip. Tap your printer. The deck writes its config as printer.cfg, with the port of your board, and restarts Klipper. The old printer.cfg stays as printer.cfg.bak.
3. **Show all printers.** Shows the printers for all chips.

# Install the Klipper firmware

The board of the printer must run the Klipper firmware of this Printdeck. The deck writes it through the USB cable.

1. Open Maintenance, then tap Firmware. A new board shows Install Klipper firmware on the setup screen.
2. Tap Write. Do not switch off the printer until the deck shows the result.
3. Tap OK. Klipper restarts and connects to the board.

## The firmware flash

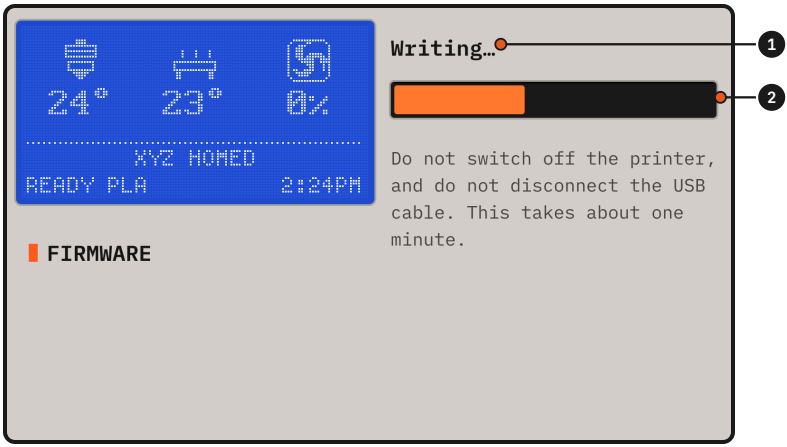


1. **Step.** Starting the bootloader, Writing, then Checking.
2. **Progress.** The part of the firmware that is done.


The deck stops Klipper, resets the board into its bootloader, writes the firmware, and reads it back to check it. Then Klipper starts again. The setup screen and the Klipper error screen also show this key when the board has no Klipper firmware or old firmware. Printdeck can flash boards with an atmega2560 and an STK500v2 bootloader now, for example the RAMBo and RAMPS boards.

# The deck

Printdeck is a touch screen for a 3D printer that runs Klipper. It shows the print, and it controls the printer.

The deck shows the display of the printer at the top of each screen. When the printer does not print, it shows the idle screen. The largest key is the action that you need most: Print a file.

## The idle screen

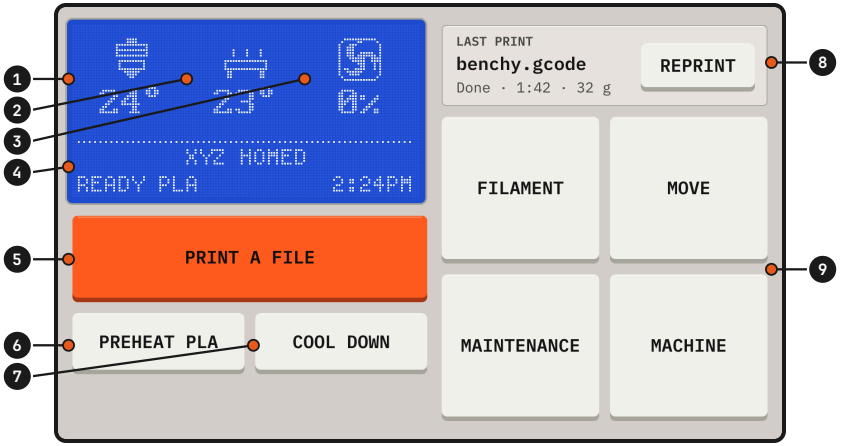


1. **Nozzle.** The nozzle now, and its target under it while the heater is on. The icon is filled while the heater is on, and waves rise while it heats. Tap it to set the temperature.
2. **Bed.** The same for the bed.
3. **Fan.** The part cooling fan. Its blades turn at its speed.
4. **Status.** The position of the head, the state of the printer with the loaded filament, and the clock. This is the status screen of the display of the printer: the same picture on both screens.
5. **Print a file.** Opens the files. See Files.
6. **Preheat.** Heats the nozzle and the bed for the loaded filament.
7. **Cool down.** Turns off both heaters.
8. **Last print.** The last print and its result. Reprint starts it again, after a question.
9. **Pages.** Filament, Move, Maintenance and Machine. Each page has its own section.

# The display of the printer


When the printer has a display, the deck draws it. The display shows the status screen, the same picture as the idle screen of the deck.

Turn or click the knob to open the menu. The menu has the same pages and keys as the touch screen: the knob moves the cursor, and a click taps the key. The touch screen shows the cursor with an orange ring. The top item goes back: Status on the home menu, Back on a page. A long click also goes back. With no turn for 20 seconds, the display shows the status screen again.


While an action runs, the display shows an animation.





THE STATUS SCREEN

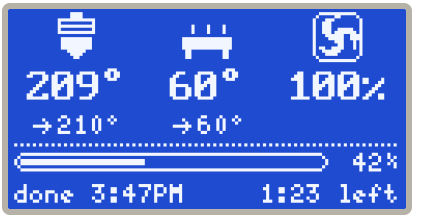



DURING A PRINT

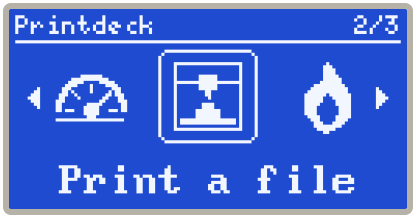


THE HOME MENU: TURN THE KNOB TO CHOOSE

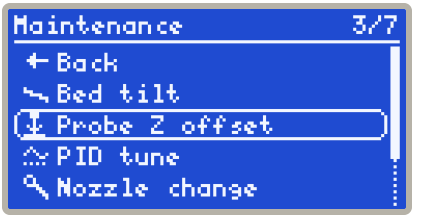


A PAGE: MAINTENANCE

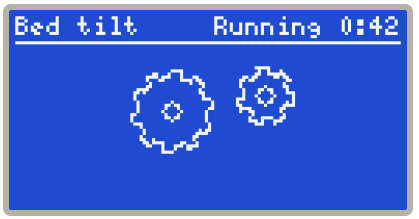


AN ACTION RUNS

# The deck in a browser

Open http://printdeck.local in a browser on the same network, and log in with the password of the deck. The browser shows the same screens as the touch screen, sharp at the pixel density of the phone. Each browser has its own screens, so a phone can show the files while the deck shows the print.

On a phone, use Add to Home Screen: the deck then opens as an app, with no browser bars.

The page http://printdeck.local/system shows the version, the services, the logs and the API key for slicers. It also installs an update: choose the update file, then Install. The deck writes the other system slot and restarts into it. If the new system does not start, the deck goes back to the old one.

# *Send a file from the slicer*

The deck answers the OctoPrint API that slicers use to send files and to start prints.

In Cura, add the deck with the OctoPrint Connection plugin. The deck asks "Allow Cura to use the Printdeck?". Tap Allow.

In OrcaSlicer or PrusaSlicer, add a printer of the type OctoPrint with the address http://printdeck.local, and the API key of the system page.


# Start a print

The files are the G-code files that the slicer sent, or that you uploaded in the browser. The newest file is at the top.

Each file shows what the slicer wrote into it: the print time, the filament and the layer height. Cura, PrusaSlicer, OrcaSlicer and Bambu Studio write this data. A thumbnail shows when the slicer adds one.

1. Tap Print a file on the idle screen.
2. Tap the file. Check the print time, the filament and the temperatures.
3. Tap Print, then Print again.


## The file list

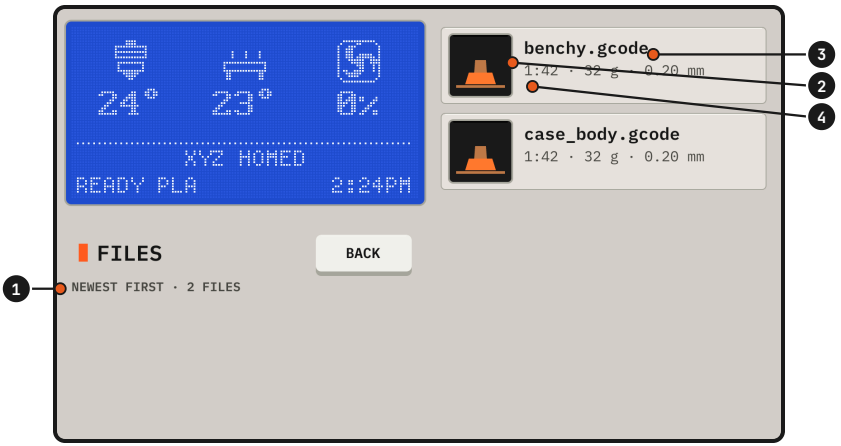


1. **Count.** The number of files.
2. **Picture.** The thumbnail of the slicer, or the shape of a part.
3. **File.** The name, the print time, the filament and the layer height.
4. **Date.** When the file arrived.

Drag the list up and down. Tap a file to open it.

## *A file*

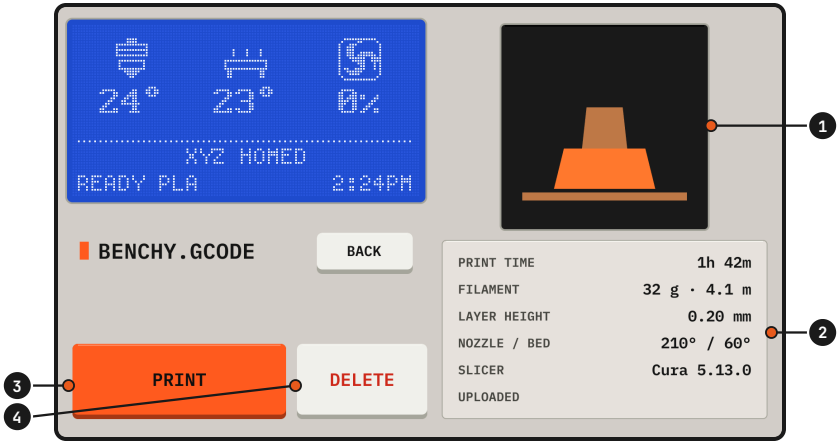



1. **Picture.** The thumbnail of the file.
2. **Slicer data.** The print time, the filament, the layer height, the temperatures, the slicer and the date.
3. **Print.** Starts the print, after a question.
4. **Delete.** Removes the file, after a question. The file that prints now cannot be removed.

# Watch the print

During a print, the deck shows the screen of the phase of the print. The deck knows the phase from the printer and from the G-code of the file.


1. Watch the first layer. Use − and + to set the height of the nozzle while it prints.
2. Tap Save to keep the Z offset for the next prints.
3. Use Tune to change the speed, the flow or the fan while the print runs.
4. When the print is done, wait for the bed to cool, then take the part off.

## Preparing

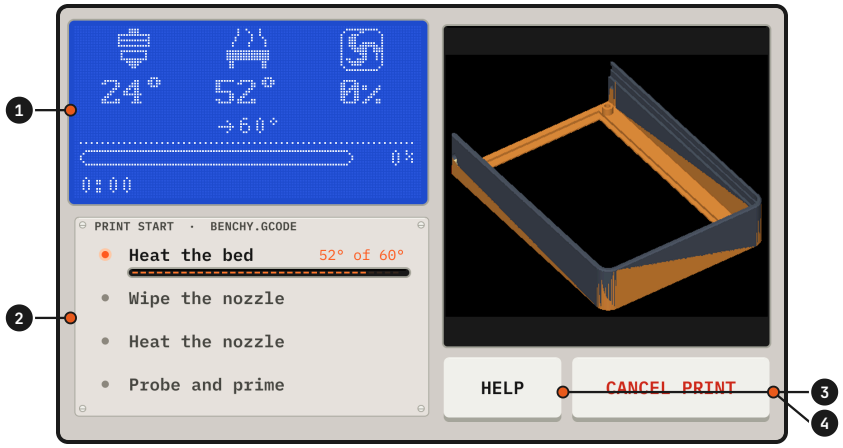



1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time left, and the time on the clock when the print ends. Tap the nozzle or the bed to set its temperature.
2. **Steps.** The steps of the start macro of your printer, in its order. The deck follows the commands that the printer runs: the step that runs has a lit LED, and a done step has a dot.
3. **Help.** Opens Wi-Fi and help: the network, the address and the password of the deck.
4. **Cancel print.** Stops the print, after a question.

## *The first layer*

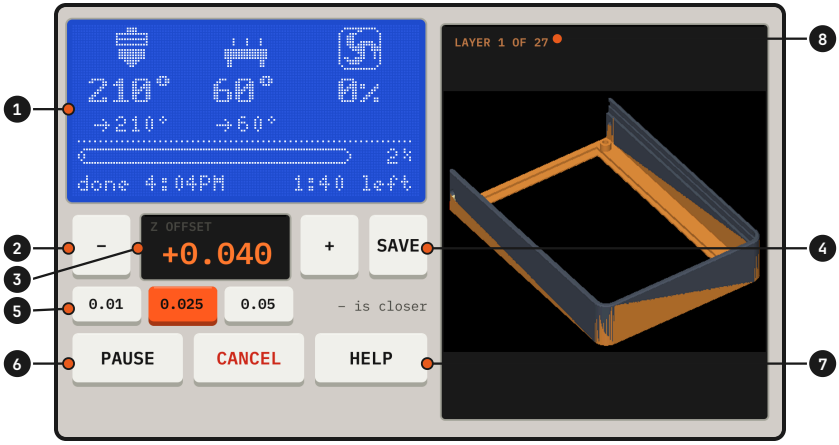



1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time left, and the time on the clock when the print ends. Tap the nozzle or the bed to set its temperature.
2. **− and +.** − moves the nozzle closer to the bed, + away from it. A line that is too round and thin needs −. A line that is flat and rough needs +.
3. **Z offset.** The height of the nozzle above its normal height. Watch the first lines while they print.
4. **Save.** Writes the Z offset into the config of the printer. Save config in Maintenance then writes the file.
5. **Step.** How far one tap moves the nozzle, in mm.
6. **Pause, Cancel.** Pauses the print, or stops it after a question.
7. **Help.** Opens Wi-Fi and help: the network, the address and the password of the deck.
8. **Layer.** The first layer of the model.

## *Printing*

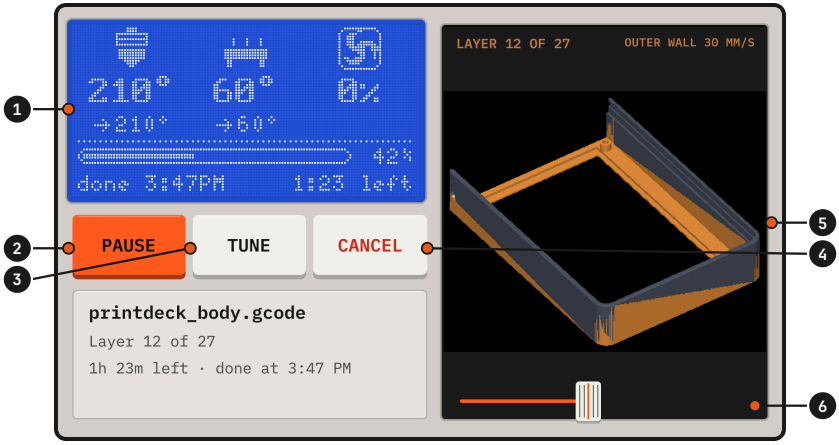



1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time left, and the time on the clock when the print ends. Tap the nozzle or the bed to set its temperature.
2. **Pause.** Pauses the print.
3. **Tune.** Changes the print while it runs. See Tune.
4. **Cancel.** Stops the print, after a question.
5. **Model.** The model up to the layer that prints now, with the move now and its speed at the top right.
6. **Layer slider.** Drag it to look at another layer. Live goes back to the layer that prints.

## *Tune*

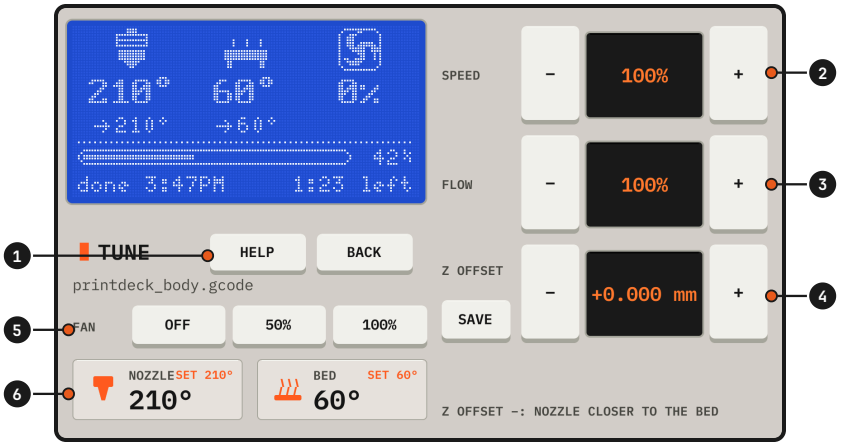



1. **Help.** Opens Wi-Fi and help: the network, the address and the password of the deck.
2. **Speed.** The speed of the print, in percent of the speed of the slicer.
3. **Flow.** The amount of plastic, in percent.
4. **Z offset.** The height of the nozzle above its normal height. Save writes it into the config of the printer, as on the first layer screen.
5. **Fan.** The part cooling fan.
6. **Temperatures.** Tap a card to change its temperature.

## *Paused*

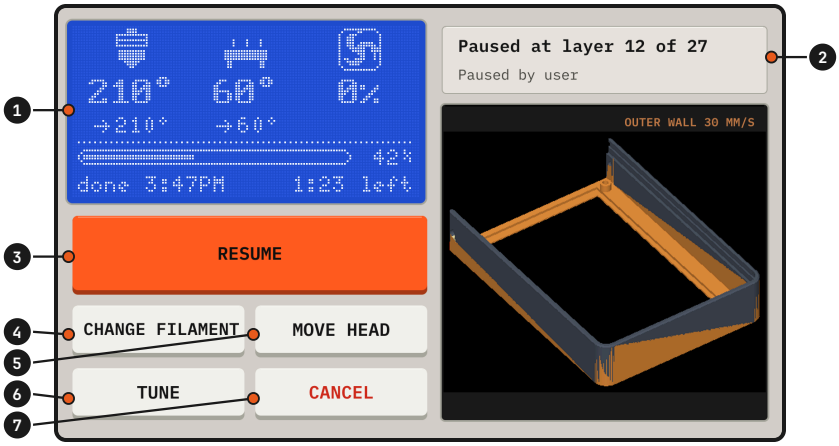


1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time left, and the time on the clock when the print ends. Tap the nozzle or the bed to set its temperature.
2. **Where.** The layer of the pause, and the message of the printer.
3. **Resume.** Continues the print.
4. **Change filament.** The guided filament change, for a new color. See Change the filament.
5. **Move head.** Opens Move, to move the head out of the way.
6. **Tune.** Changes the print.
7. **Cancel.** Stops the print, after a question.

## *Done*

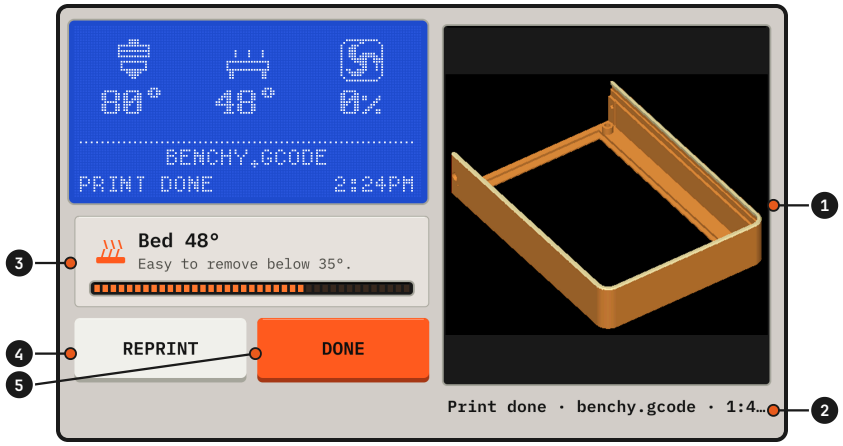



1. **Model.** The model of the print.
2. **Result.** Done, Cancelled or Failed, the file, the time and the filament of the print.
3. **Bed.** The temperature of the bed. The bar is full when the part comes off easily (35°).
4. **Reprint.** Prints the file again.
5. **Done.** Closes this screen.

# Change the filament

Set the loaded filament here, so that Preheat uses its temperatures. The guided change heats the nozzle, unloads the old filament and loads the new one.


1. Open Filament, then tap Change filament.
2. Tap the new filament. The nozzle heats to its temperature.
3. Tap Unload, and hold the filament lightly while it comes out.
4. Push the new filament into the extruder until it stops, then tap Load.
5. Check that clean plastic of the new color comes out, then tap Done.

## The Filament page

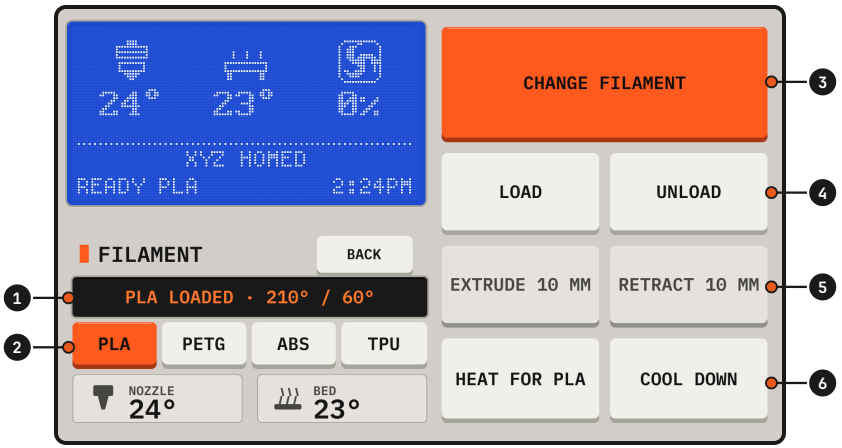


1. **Loaded.** The filament that is in the printer, and its temperatures.
2. **Material.** Tap the material that is in the printer.
3. **Change filament.** The guided change: choose, heat, unload, insert, load, check.
4. **Load, Unload.** Only the load, or only the unload.
5. **Extrude, Retract.** Pushes or pulls 10 mm. The nozzle must be at 170° or more.
6. **Heat, Cool down.** Heats the nozzle for the loaded filament, or turns the heaters off.

## *The guided change, step 1*

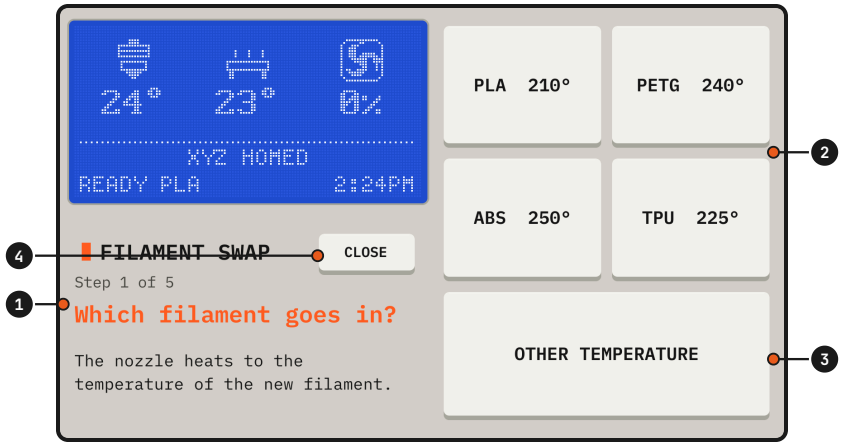



1. **Step.** The step of the change.
2. **Materials.** The new filament. The nozzle heats to its temperature, and the deck sets it as the loaded filament.
3. **Other temperature.** A temperature that you type.
4. **Close.** Stops the change. During a pause, the nozzle goes back to the temperature of the print.

# Move the head and heat


1. Open Move, and tap Home all after each start of the printer.
2. Hold the joystick to move the head. Use Z for the height.
3. Tap a temperature on the idle screen to set it with the keypad.

## The Move page

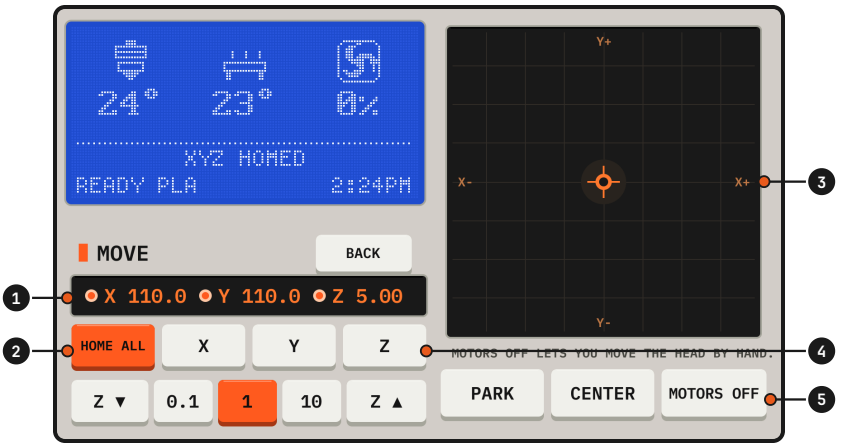


1. **Position.** X, Y and Z of the head. A lit LED shows a homed axis.
2. **Home.** Homes all axes, or one axis. Home after each start of the printer.
3. **Joystick.** Hold a finger on the pad to move the head in X and Y. The farther from the middle, the faster it moves.
4. **Z.** Moves Z up or down by the step: 0.1, 1 or 10 mm.
5. **Park, Center, Motors off.** Park moves the head to the back left. Center moves it to the middle of the bed. Motors off lets you move the head by hand. During a pause, Home, Center and Motors off are off, so that the print can continue. Park lifts the nozzle 10 mm before it moves.

## *The keypad of a temperature*

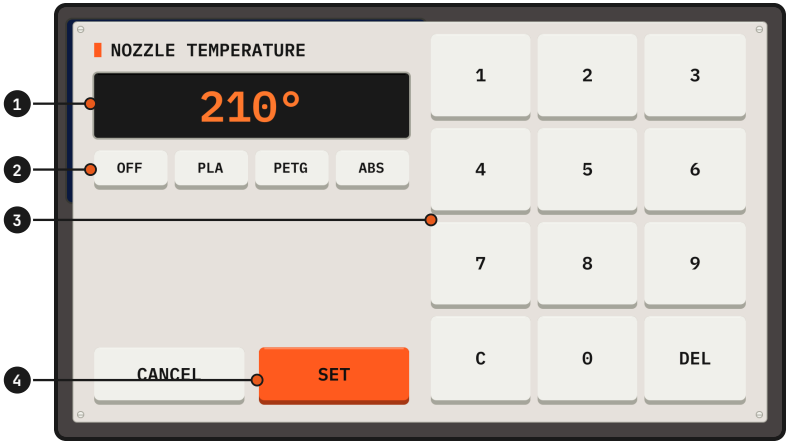



1. **Value.** The temperature that you type.
2. **Presets.** Off, and the temperatures of the materials.
3. **Keys.** The digits. C clears the value, DEL removes the last digit.
4. **Set.** Sets the heater. Cancel closes the keypad with no change.

# Level and calibrate

Maintenance lists the calibrations that your printer has. The list comes from the config of the printer.


1. Open Maintenance.
2. Tap Bed tilt or Bed mesh to probe the bed. The deck shows the action until it ends.
3. Tap Probe Z offset for the paper test. Move the nozzle down until a sheet of paper drags a little, then tap Accept.
4. Tap PID tune after you change a heater or a fan. A PID tune runs for about 10 minutes.
5. Tap Save config to write the results. Klipper restarts.

## *The Maintenance page*

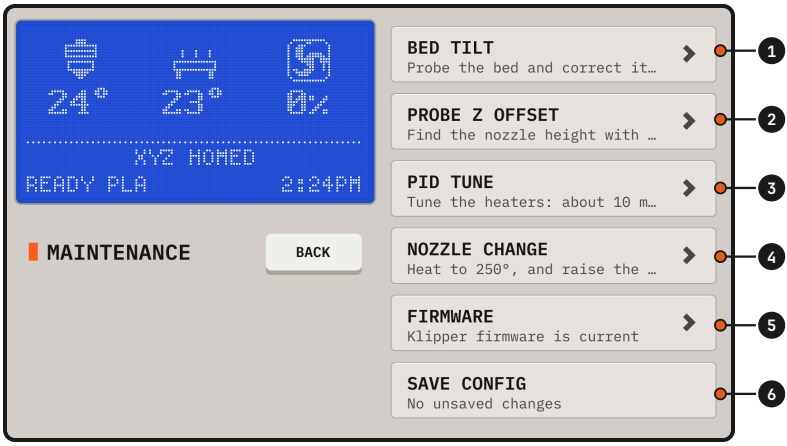


1. **Bed tilt.** Probes the bed, and corrects its tilt (BED_TILT_CALIBRATE). A printer with a bed mesh shows Bed mesh.
2. **Probe Z offset.** The paper test for the height of the nozzle (PROBE_CALIBRATE).
3. **PID tune.** Heats the nozzle to 210° and the bed to 60°, and finds the PID settings of each heater (PID_CALIBRATE). Save config then writes them.
4. **Nozzle change.** Heats the nozzle to 250° and raises the head, to change the nozzle.
5. **Firmware.** Writes the Klipper firmware of this Printdeck to the board of the printer. Orange text shows old firmware. See below.
6. **Save config.** Writes the results of the calibrations into printer.cfg. Klipper restarts. Orange text shows unsaved results.

## An action runs

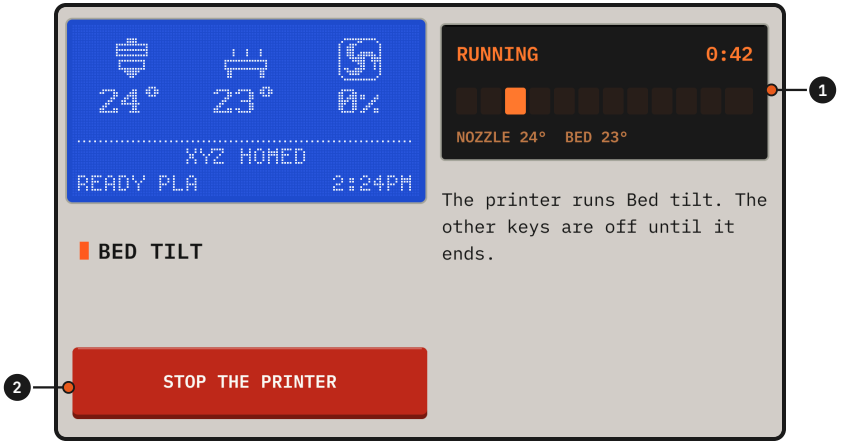



1 **Action.** The time since the start, a bar that moves while the action runs, and the temperatures.

2 **Stop the printer.** Stops the printer at once, after one question. Then use Firmware restart.

While an action runs, the deck shows it on the deck and in each browser, and the other keys are off. The display of the printer shows the name of the action and a moving bar. When the action ends, a short message says that it is done. When it fails, the deck shows the error of Klipper until you tap OK.

## *The paper test*

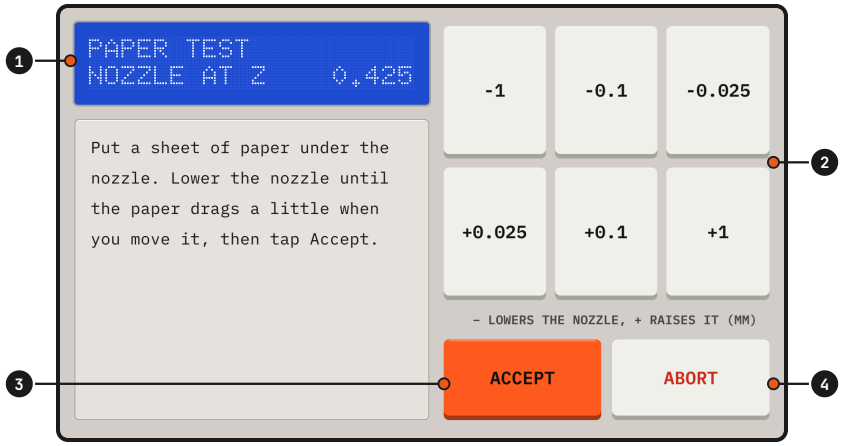



1. **Height.** The height of the nozzle now.
2. **Steps.** Moves the nozzle down (−) or up (+), in mm.
3. **Accept.** Takes the height. Save config then writes it.
4. **Abort.** Stops the test with no change.

> This screen shows by itself while Klipper runs a paper test, also when it started from a macro.

# Look after the printer


Machine has the information of the printer, the history of the prints, the macros and the console.

## The Machine page

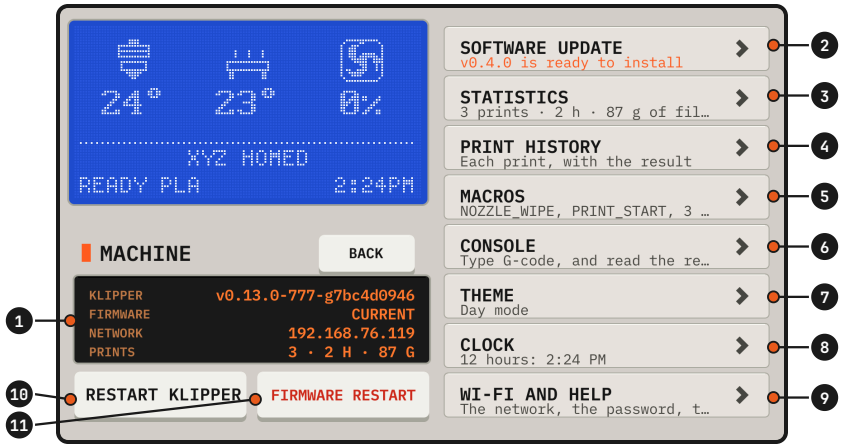



1. **Information.** The version of Klipper, the state of the firmware of the board, the network address, and the totals.
2. **Software update.** The version of the deck, and a new version when there is one. See Update the Printdeck.
3. **Statistics.** The totals of all prints.
4. **Print history.** Each print, with its result. Tap a print to see its model, its time and its filament, and to print it again.
5. **Macros.** The macros of the printer. Tap one to run it.
6. **Console.** The G-code terminal of Klipper. See below.
7. **Theme.** The colors of the screen: day, night, or auto (night from 20:00 to 7:00). Tap it to change them.
8. **Clock.** The clock of the screens and the display of the printer: 12 hours (2:24 PM) or 24 hours (14:24). Tap it to change it.
9. **Wi-Fi and help.** The network, the password and the addresses.
10. **Restart Klipper.** Restarts the Klipper host, which reads printer.cfg again.
11. **Firmware restart.** Restarts the firmware of the board, for example after a stop.

## *Statistics*

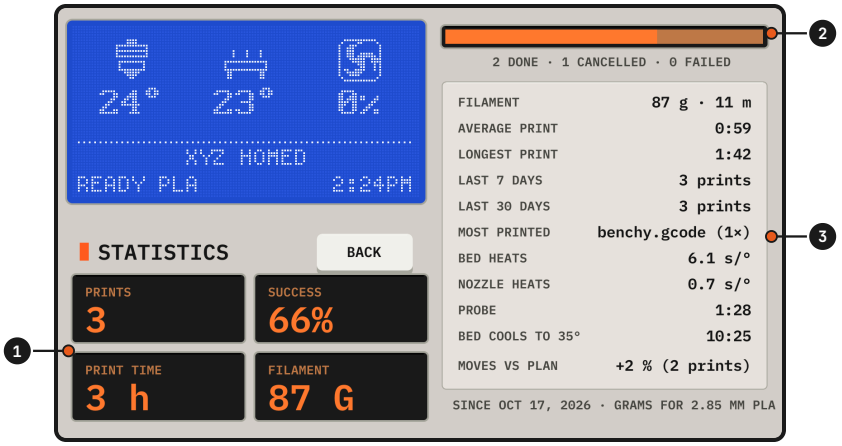


1. **Totals.** The number of prints, the success rate, the print time and the filament.
2. **Results.** Done (amber), cancelled and failed (red).
3. **Details.** The filament in grams (for 1.75 mm PLA), the average and the longest print, the prints of the last 7 and 30 days, and the file that you print most.

## The console

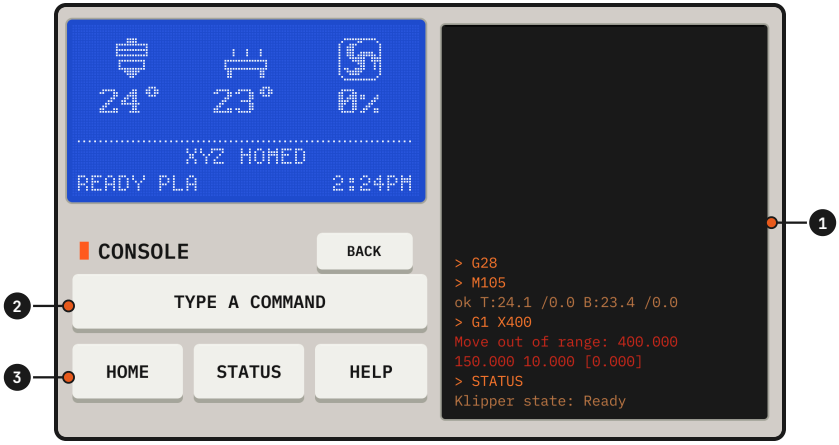


1. **Replies.** Your commands (amber, after >), the replies of Klipper, and errors (red). Drag down to read older lines.
2. **Type a command.** Opens the keyboard. It shows your last command, so you can change it and send it again.
3. **Quick keys.** Home (G28), Status (STATUS) and Help (HELP, the list of the commands).


# Update the Printdeck

The deck checks for a new version once a day. Machine then shows Software update in orange.

Each version has a signature. The deck installs only a version with a valid signature of Printdeck. It writes the other system slot and restarts into it. If the new system does not start, the deck goes back to the old one.

1. Open Machine, then Software update.
2. Read the notes of the new version, then tap Install. The deck does not install during a print.
3. Wait while the deck downloads and writes the update. It restarts into the new version.

## Software update

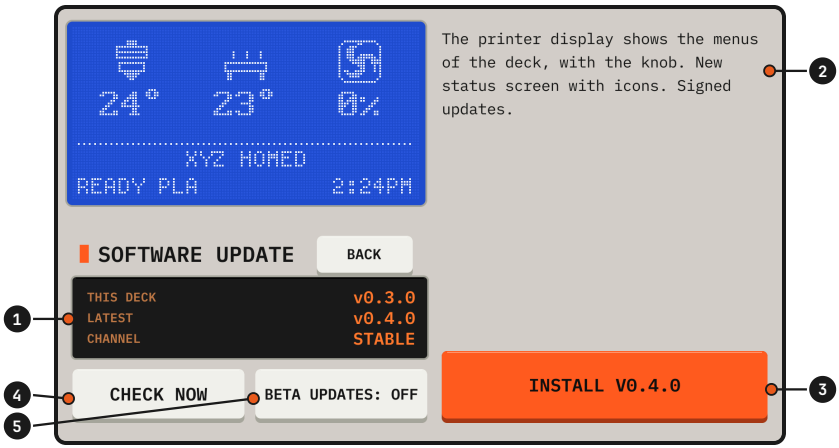



1. **Versions.** The version of this deck, the newest version, and the channel.
2. **Notes.** What the new version changes.
3. **Install.** Downloads the new version, checks it, and installs it, after a question. The deck restarts.
4. **Check now.** Checks for a new version now.
5. **Beta updates.** On: the deck also gets the betas, the versions with new features for tests. Off: only the stable versions.

# When something goes wrong

When Klipper stops with an error, the deck shows all the lines of its message.

1. Read the message. It often names the setting in printer.cfg.
2. After a stop or a power cut of the printer, tap Firmware restart.
3. After a change to printer.cfg, tap Restart Klipper.

## A Klipper error

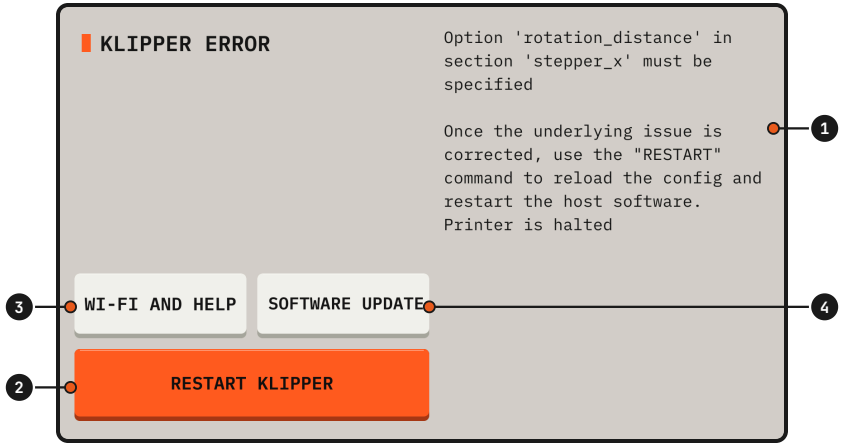


1. **Message.** What Klipper reports, with all its lines.
2. **Restart Klipper.** Restarts Klipper. It reads printer.cfg again.
3. **Wi-Fi and help.** The network, the address and the password of the deck.
4. **Software update.** Installs a new version of Printdeck OS. A new version can fix the problem.

# Settings

The file printdeck.txt on the PRINTDECK partition holds the settings. Put the disk in a computer to change it. The deck reads it at each start, then clears the Wi-Fi password in it.

| | |
|---|---|
| `wifi_ssid, wifi_password, wifi_country` | The Wi-Fi network |
| `hostname, timezone` | The name on the network, and the time zone |
| `display_rotate` | 90 or 270 for a display that is mounted tall, 0 or 180 for one that is mounted wide |
| `touch_invert_x, touch_invert_y, touch_swap_xy` | 1 turns an axis of the touch screen |
| `preheat_tool, preheat_bed` | The temperatures of Preheat with no filament set |
| `night_from, night_to` | The hours of the night colors |
| `printer.cfg (a file)` | A Klipper config. The deck takes it at the next start. |

# Notes

# Notes

# Notes

Printdeck is free software: AGPL-3.0, with the Go port of Klipper under GPL-3.0. The deck draws every picture of this booklet.

https://github.com/beetlebugorg/printdeck