PD-KLP-USA-1

# PRINTDECK

## INSTRUCTION BOOKLET

*For the Printdeck touch screen and Klipper printers*

# Contents


SET UP

Connect to Wi-Fi ..... 3

Choose your printer ..... 6

Install the Klipper firmware ..... 9

MEET YOUR PRINTDECK

The deck ..... 11

The display of the printer ..... 14

The deck in a browser ..... 16

PRINT A PART

Send a file from the slicer ..... 17

Start a print ..... 18

Watch the print ..... 21

CHANGE THE FILAMENT

Change the filament ..... 29

MOVE AND HEAT

Move the head and heat ..... 32

LEVEL AND CALIBRATE

Level and calibrate ..... 35

LOOK AFTER THE PRINTER

Look after the printer ..... 40

Update the Printdeck ..... 45

WHEN SOMETHING GOES WRONG

When something goes wrong ..... 47

Settings ..... 49


# Connect to Wi-Fi

At the first start, the deck makes its password and opens the setup.

1. Switch on the Printdeck. The setup opens.
2. Tap your Wi-Fi network, then type its password.
3. Wait until the deck is connected, then tap Next.
4. Write down the address and the password, then tap Finish.

## *The setup: step 1*

1. **Networks.** The Wi-Fi networks near the deck, with the signal. A lock shows a network with a password. Tap a network, then type its password.
2. **Scan.** Looks for the networks again. The list also scans by itself.
3. **Hidden.** For a network that does not show its name: type the name and the password.
4. **Next.** Goes to the summary when the deck is connected.

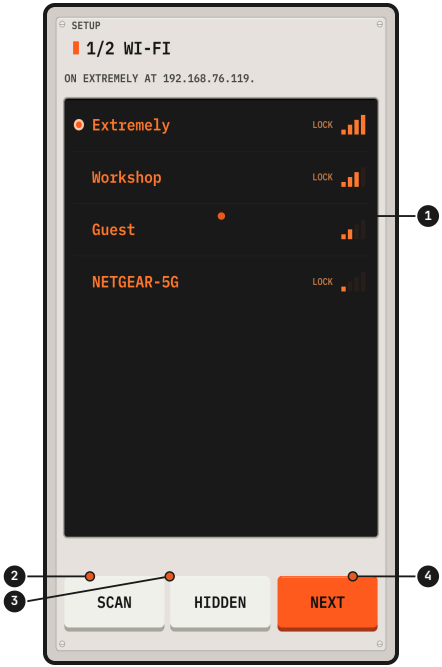

## *The setup: step 2*

1. **Address.** The address of the deck on your network. Open it in a browser for the web pages.
2. **Password.** The password of the web pages. To see it again, open Machine > Wi-Fi and help.
3. **Finish.** Closes the setup. The deck does not open it again.

> You can also set the Wi-Fi before the first start: put the disk in a computer, and fill in printdeck.txt on the PRINTDECK partition.




# Choose your printer

A new Printdeck has no printer config. The deck then shows the printer setup.

1. Connect the printer to the Printdeck with a USB cable, and switch the printer on.
2. Wait until the deck finds the board. Tap Search again if it does not show.
3. Tap Choose printer. The printers of the brand of your board are at the top.
4. Tap your printer, then Use. Klipper restarts with its config.


## *No printer yet*

1. **Board.** The board that the deck found on USB, its MCU, and its Klipper firmware.
2. **Choose printer.** Opens the list of Klipper's example configs. See below.
3. **Search again.** Looks for the board again, for example after you connect the printer.
4. **Your own config.** You can also copy your own printer.cfg to the PRINTDECK partition, and start the deck again.

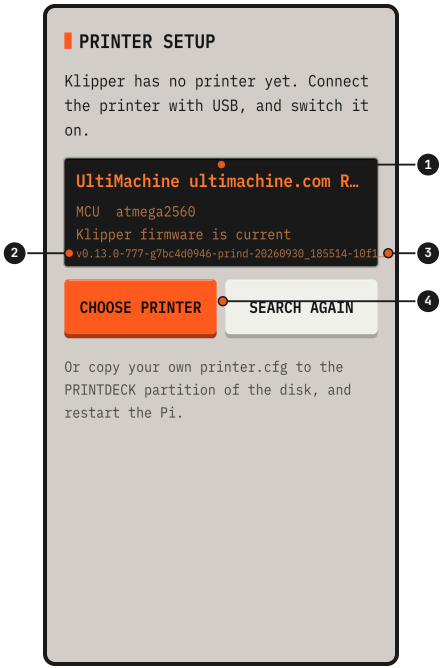

## *Choose your printer*

1. **Chip.** The list shows the printers with the same chip as your board.
2. **Printer.** The brand, the model, the year and the chip. Tap your printer. The deck writes its config as printer.cfg, with the port of your board, and restarts Klipper. The old printer.cfg stays as printer.cfg.bak.
3. **Show all printers.** Shows the printers for all chips.

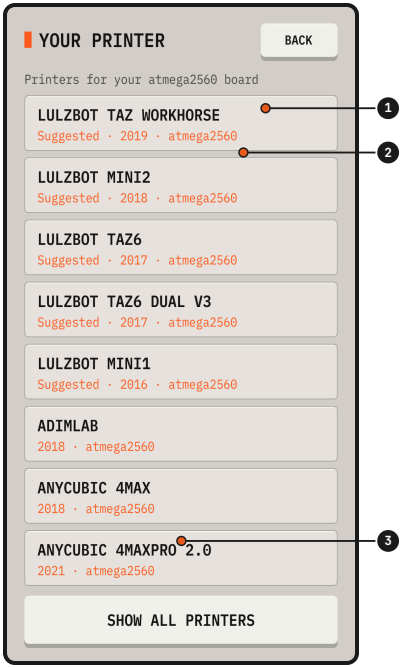

# *Install the Klipper firmware*


The board of the printer must run the Klipper firmware of this Printdeck. The deck writes it through the USB cable.

1. Open Maintenance, then tap Firmware. A new board shows Install Klipper firmware on the setup screen.
2. Tap Write. Do not switch off the printer until the deck shows the result.
3. Tap OK. Klipper restarts and connects to the board.

## *The firmware flash*

1. **Step.** Starting the bootloader, Writing, then Checking.
2. **Progress.** The part of the firmware that is done.

> The deck stops Klipper, resets the board into its bootloader, writes the firmware, and reads it back to check it. Then Klipper starts again. The setup screen and the Klipper error screen also show this key when the board has no Klipper firmware or old firmware. Printdeck can flash boards with an atmega2560 and an STK500v2 bootloader now, for example the RAMBo and RAMPS boards.

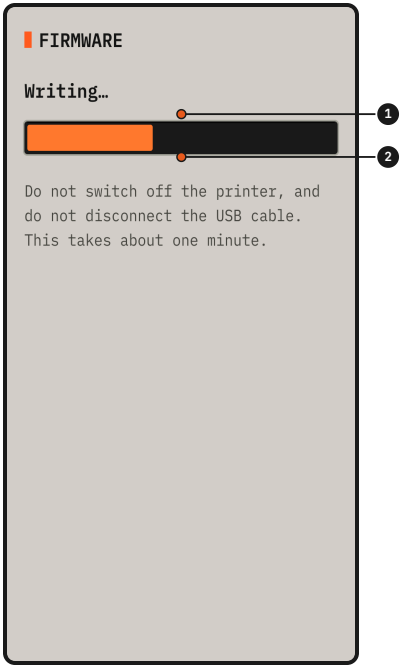


# The deck

Printdeck is a touch screen for a 3D printer that runs Klipper. It shows the print, and it controls the printer.

The deck shows the display of the printer at the top of each screen. When the printer does not print, it shows the idle screen. The largest key is the action that you need most: Print a file.


## *The idle screen*

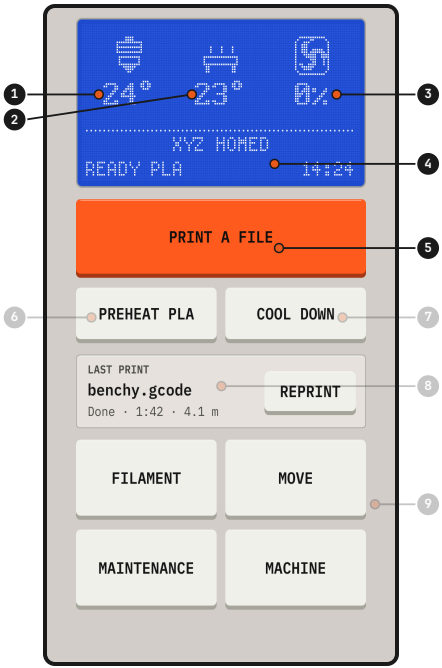


1. **Nozzle.** The nozzle now, and its target under it while the heater is on. The icon is filled while the heater is on, and waves rise while it heats. Tap it to set the temperature.
2. **Bed.** The same for the bed.
3. **Fan.** The part cooling fan. Its blades turn at its speed.
4. **Status.** The position of the head, the state of the printer with the loaded filament, and the clock. This is the status screen of the display of the printer: the same picture on both screens.
5. **Print a file.** Opens the files. See Files.

## *The idle screen (more)*

6. **Preheat.** Heats the nozzle and the bed for the loaded filament.
7. **Cool down.** Turns off both heaters.
8. **Last print.** The last print and its result. Reprint starts it again, after a question.
9. **Pages.** Filament, Move, Maintenance and Machine. Each page has its own section.

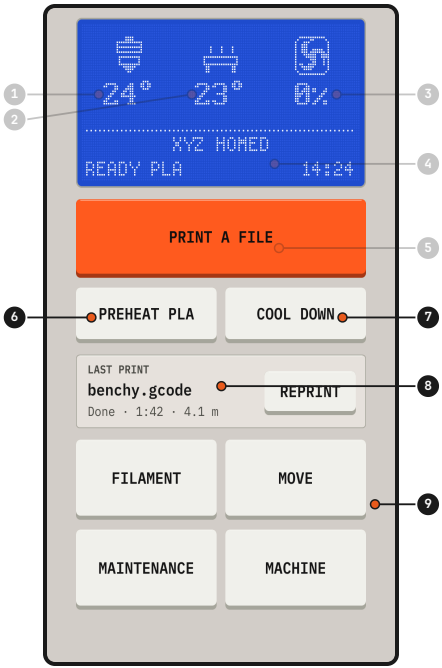

# The display of the printer

When the printer has a display, the deck draws it. The display shows the status screen, the same picture as the idle screen of the deck.

Turn or click the knob to open the menu. The menu has the same pages and keys as the touch screen: the knob moves the cursor, and a click taps the key. The touch screen shows the cursor with an orange ring. The top item goes back: Status on the home menu, Back on a page. A long click also goes back. With no turn for 20 seconds, the display shows the status screen again.

While an action runs, the display shows an animation.


# The display of the printer





THE STATUS SCREEN





DURING A PRINT

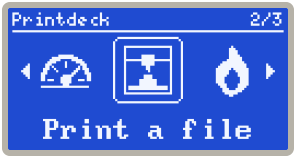


THE HOME MENU: TURN THE KNOB TO CHOOSE

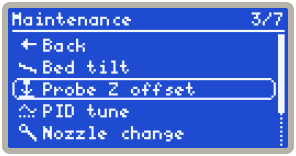


A PAGE: MAINTENANCE

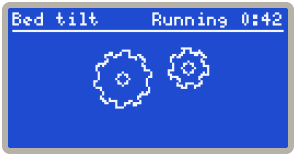


AN ACTION RUNS

## *The deck in a browser*

Open http://printdeck.local in a browser on the same network, and log in with the password of the deck. The browser shows the same screens as the touch screen, sharp at the pixel density of the phone. Each browser has its own screens, so a phone can show the files while the deck shows the print.

On a phone, use Add to Home Screen: the deck then opens as an app, with no browser bars.

The page http://printdeck.local/system shows the version, the services, the logs and the API key for slicers. It also installs an update: choose the update file, then Install. The deck writes the other system slot and restarts into it. If the new system does not start, the deck goes back to the old one.

## *Send a file from the slicer*

The deck answers the OctoPrint API that slicers use to send files and to start prints.

In Cura, add the deck with the OctoPrint Connection plugin. The deck asks "Allow Cura to use the Printdeck?". Tap Allow.

In OrcaSlicer or PrusaSlicer, add a printer of the type OctoPrint with the address http://printdeck.local, and the API key of the system page.

# Start a print

The files are the G-code files that the slicer sent, or that you uploaded in the browser. The newest file is at the top.


Each file shows what the slicer wrote into it: the print time, the filament and the layer height. Cura, PrusaSlicer, OrcaSlicer and Bambu Studio write this data. A thumbnail shows when the slicer adds one.

1. Tap Print a file on the idle screen.
2. Tap the file. Check the print time, the filament and the temperatures.
3. Tap Print, then Print again.

## *The file list*


1. **Count.** The number of files.
2. **Picture.** The thumbnail of the slicer, or the shape of a part.
3. **File.** The name, the print time, the filament and the layer height.
4. **Date.** When the file arrived.

Drag the list up and down. Tap a file to open it.

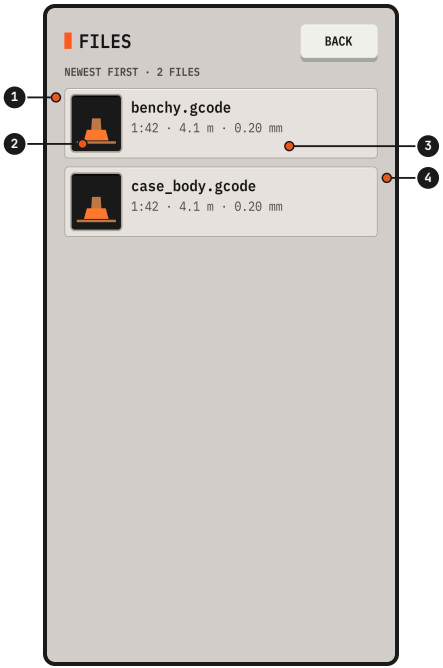

## *A file*

1. **Picture.** The thumbnail of the file.
2. **Slicer data.** The print time, the filament, the layer height, the temperatures, the slicer and the date.
3. **Print.** Starts the print, after a question.
4. **Delete.** Removes the file, after a question. The file that prints now cannot be removed.

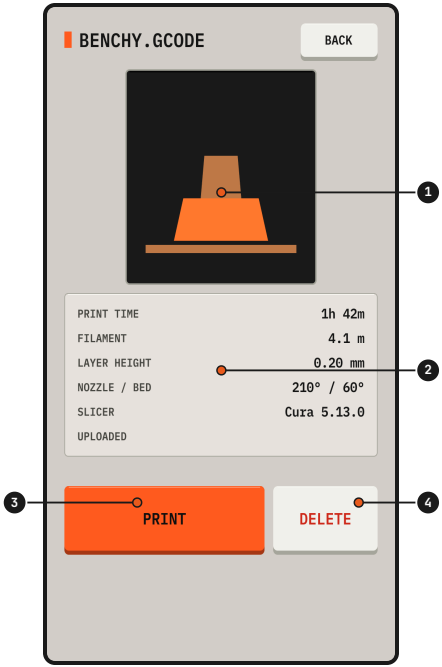


# Watch the print

During a print, the deck shows the screen of the phase of the print. The deck knows the phase from the printer and from the G-code of the file.

1. Watch the first layer. Use − and + to set the height of the nozzle while it prints.
2. Tap Save to keep the Z offset for the next prints.
3. Use Tune to change the speed, the flow or the fan while the print runs.
4. When the print is done, wait for the bed to cool, then take the part off.

## *Preparing*

1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time of the print and the time left. Tap the nozzle or the bed to set its temperature.
2. **Steps.** The steps of the start macro of your printer, in its order. The deck follows the commands that the printer runs: the step that runs has a lit LED, and a done step has a dot.
3. **Cancel print.** Stops the print, after a question.

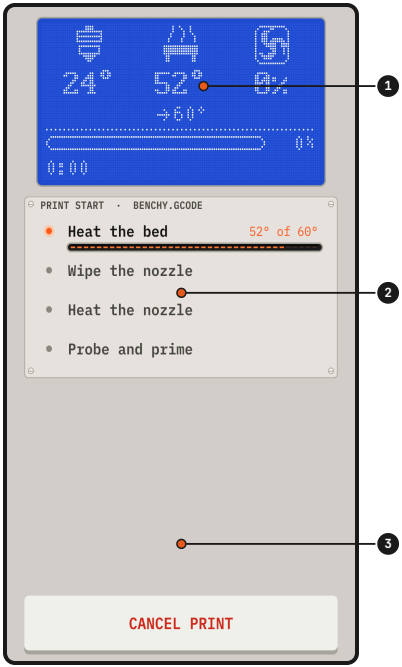


## *The first layer*

1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time of the print and the time left. Tap the nozzle or the bed to set its temperature.
2. **− and +.** − moves the nozzle closer to the bed, + away from it. A line that is too round and thin needs −. A line that is flat and rough needs +.
3. **Z offset.** The height of the nozzle above its normal height. Watch the first lines while they print.
4. **Save.** Writes the Z offset into the config of the printer. Save config in Maintenance then writes the file.



## *The first layer (more)*

5. **Step.** How far one tap moves the nozzle, in mm.
6. **Pause, Cancel.** Pauses the print, or stops it after a question.
7. **Layer.** The first layer of the model.

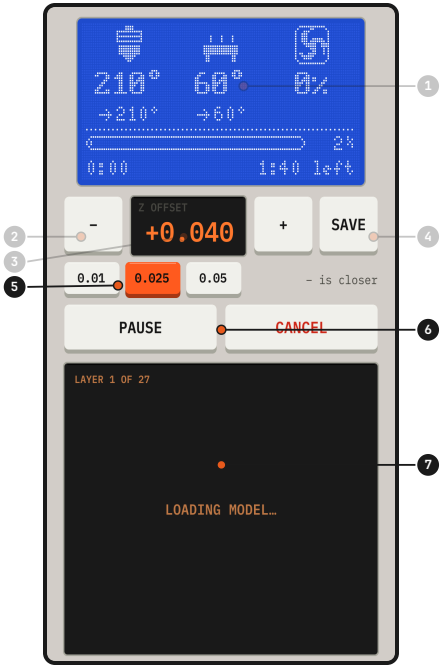


## *Printing*

1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time of the print and the time left. Tap the nozzle or the bed to set its temperature.
2. **Pause.** Pauses the print.
3. **Tune.** Changes the print while it runs. See Tune.
4. **Cancel.** Stops the print, after a question.
5. **Model.** The model up to the layer that prints now, with the move now and its speed at the top right.
6. **Layer slider.** Drag it to look at another layer. Live goes back to the layer that prints.




## *Tune*

1. **Speed.** The speed of the print, in percent of the speed of the slicer.
2. **Flow.** The amount of plastic, in percent.
3. **Z offset.** The height of the nozzle during the print.
4. **Fan.** The part cooling fan.
5. **Temperatures.** Tap a card to change its temperature.

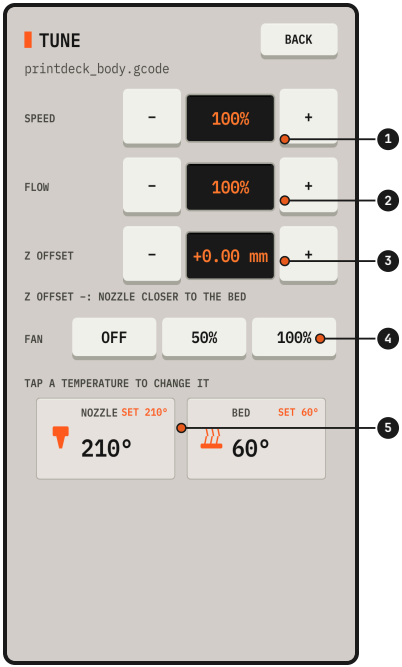


## *Paused*

1. **Display.** The status screen of the printer display: the nozzle, the bed and the fan, the progress, the time of the print and the time left. Tap the nozzle or the bed to set its temperature.
2. **Where.** The layer of the pause, and the message of the printer.
3. **Resume.** Continues the print.
4. **Change filament.** The guided filament change, for a new color. See Change the filament.
5. **Move head.** Opens Move, to move the head out of the way.
6. **Tune.** Changes the print.
7. **Cancel.** Stops the print, after a question.

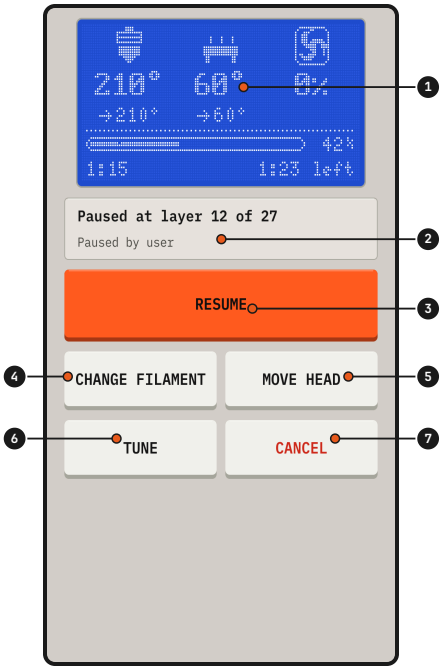

## *Done*

1. **Model.** The model of the print.
2. **Result.** Done, Cancelled or Failed, the file, the time and the filament of the print.
3. **Bed.** The temperature of the bed. The bar is full when the part comes off easily (35°).
4. **Reprint.** Prints the file again.
5. **Done.** Closes this screen.

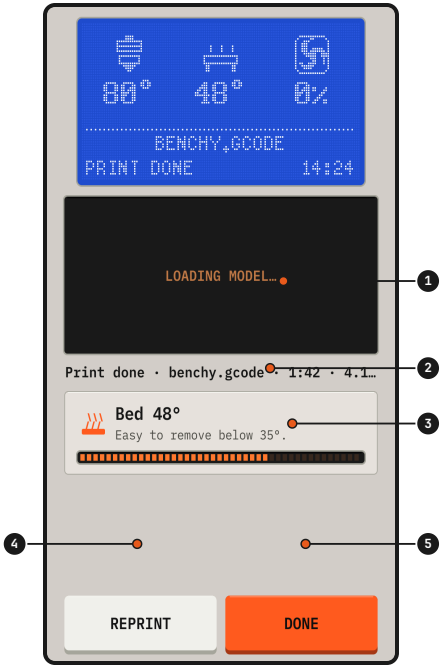


# Change the filament

Set the loaded filament here, so that Preheat uses its temperatures. The guided change heats the nozzle, unloads the old filament and loads the new one.

1. Open Filament, then tap Change filament.
2. Tap the new filament. The nozzle heats to its temperature.
3. Tap Unload, and hold the filament lightly while it comes out.
4. Push the new filament into the extruder until it stops, then tap Load.
5. Check that clean plastic of the new color comes out, then tap Done.


## *The Filament page*

1. **Loaded.** The filament that is in the printer, and its temperatures.
2. **Material.** Tap the material that is in the printer.
3. **Change filament.** The guided change: choose, heat, unload, insert, load, check.
4. **Load, Unload.** Only the load, or only the unload.
5. **Extrude, Retract.** Pushes or pulls 10 mm. The nozzle must be at 170° or more.
6. **Heat, Cool down.** Heats the nozzle for the loaded filament, or turns the heaters off.

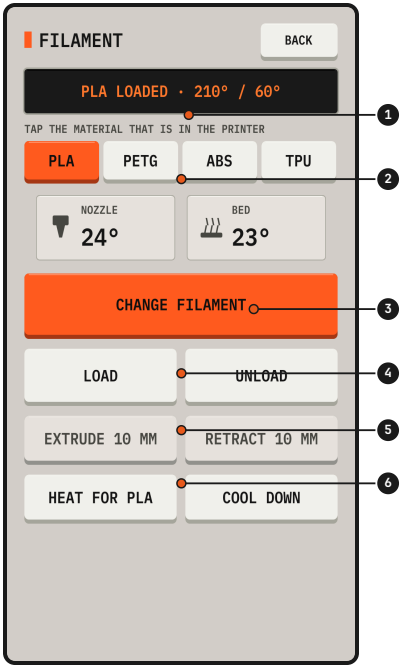

## *The guided change, step 1*

1. **Step.** The step of the change.
2. **Materials.** The new filament. The nozzle heats to its temperature, and the deck sets it as the loaded filament.
3. **Other temperature.** A temperature that you type.
4. **Close.** Stops the change.

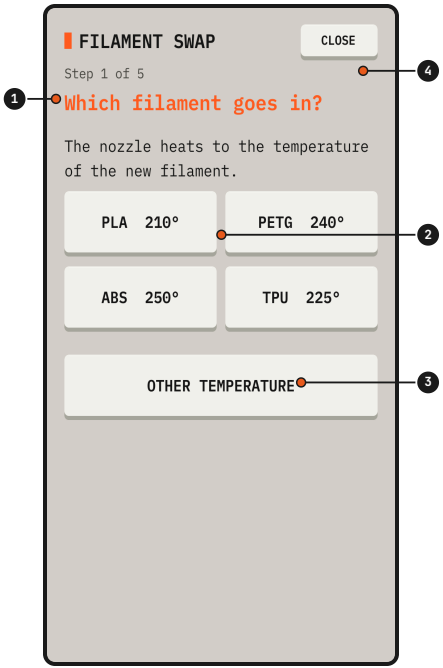


# Move the head and heat

1. Open Move, and tap Home all after each start of the printer.
2. Hold the joystick to move the head. Use Z for the height.
3. Tap a temperature on the idle screen to set it with the keypad.

## *The Move page*

1. **Position.** X, Y and Z of the head. A lit LED shows a homed axis.
2. **Home.** Homes all axes, or one axis. Home after each start of the printer.
3. **Joystick.** Hold a finger on the pad to move the head in X and Y. The farther from the middle, the faster it moves.
4. **Z.** Moves Z up or down by the step: 0.1, 1 or 10 mm.
5. **Park, Center, Motors off.** Park moves the head to the back left. Center moves it to the middle of the bed. Motors off lets you move the head by hand.

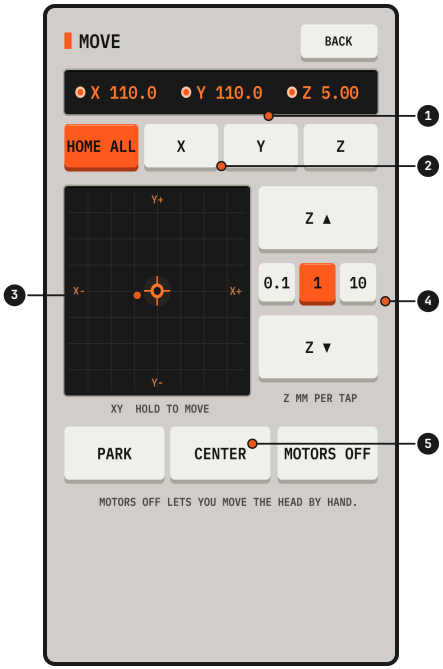

## *The keypad of a temperature*

1. **Value.** The temperature that you type.
2. **Presets.** Off, and the temperatures of the materials.
3. **Keys.** The digits. C clears the value, DEL removes the last digit.
4. **Set.** Sets the heater. Cancel closes the keypad with no change.




# Level and calibrate

Maintenance lists the calibrations that your printer has. The list comes from the config of the printer.

1. Open Maintenance.
2. Tap Bed tilt or Bed mesh to probe the bed. The deck shows the action until it ends.
3. Tap Probe Z offset for the paper test. Move the nozzle down until a sheet of paper drags a little, then tap Accept.
4. Tap PID tune after you change a heater or a fan. A PID tune runs for about 10 minutes.
5. Tap Save config to write the results. Klipper restarts.


## *The Maintenance page*

1. **Bed tilt.** Probes the bed, and corrects its tilt (BED_TILT_CALIBRATE). A printer with a bed mesh shows Bed mesh.
2. **Probe Z offset.** The paper test for the height of the nozzle (PROBE_CALIBRATE).
3. **PID tune.** Heats the nozzle to 210° and the bed to 60°, and finds the PID settings of each heater (PID_CALIBRATE). Save config then writes them.
4. **Nozzle change.** Heats the nozzle to 250° and raises the head, to change the nozzle.
5. **Firmware.** Writes the Klipper firmware of this Printdeck to the board of the printer. Orange text shows old firmware. See below.

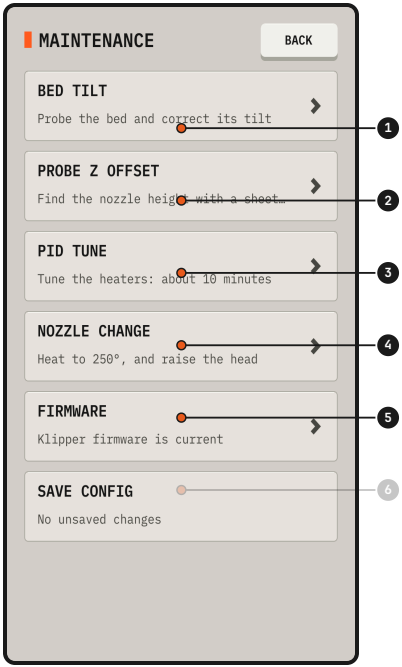

## *The Maintenance page (more)*


6 **Save config.** Writes the results of the calibrations into printer.cfg. Klipper restarts. Orange text shows unsaved results.

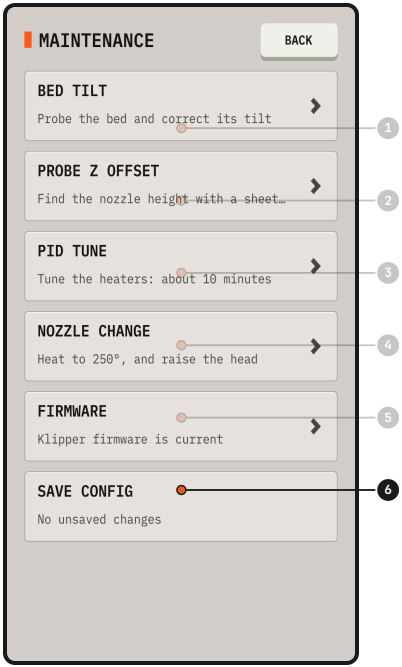

## *An action runs*

1. **Action.** The time since the start, a bar that moves while the action runs, and the temperatures.
2. **Stop the printer.** Stops the printer at once, after one question. Then use Firmware restart.


While an action runs, the deck shows it on the deck and in each browser, and the other keys are off. The display of the printer shows the name of the action and a moving bar. When the action ends, a short message says that it is done. When it fails, the deck shows the error of Klipper until you tap OK.

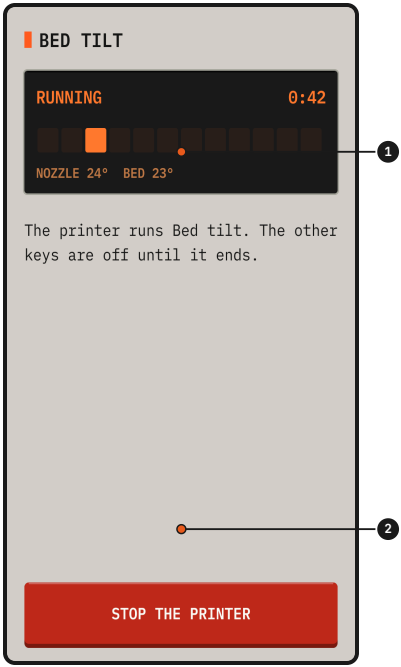

## *The paper test*

1. **Height.** The height of the nozzle now.
2. **Steps.** Moves the nozzle down (−) or up (+), in mm.
3. **Accept.** Takes the height. Save config then writes it.
4. **Abort.** Stops the test with no change.

> This screen shows by itself while Klipper runs a paper test, also when it started from a macro.

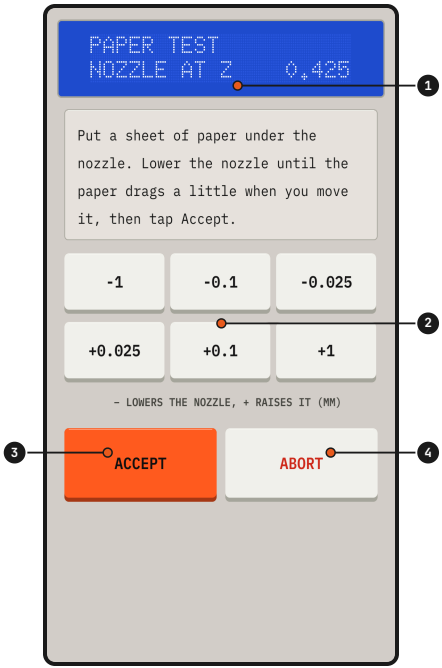

# *Look after the printer*

Machine has the information of the printer, the history of the prints, the macros and the console.


## *The Machine page*

1. **Information.** The version of Klipper, the state of the firmware of the board, the network address, and the totals.
2. **Software update.** The version of the deck, and a new version when there is one. See Update the Printdeck.
3. **Statistics.** The totals of all prints.
4. **Print history.** Each print, with its result. Tap a print to print it again.
5. **Macros.** The macros of the printer. Tap one to run it.
6. **Console.** The G-code terminal of Klipper. See below.




## *The Machine page (more)*

7. **Theme.** The colors of the screen: day, night, or auto (night from 20:00 to 7:00). Tap it to change them.
8. **Wi-Fi and help.** The network, the password and the addresses.
9. **Restart Klipper.** Restarts the Klipper host, which reads printer.cfg again.
10. **Firmware restart.** Restarts the firmware of the board, for example after a stop.

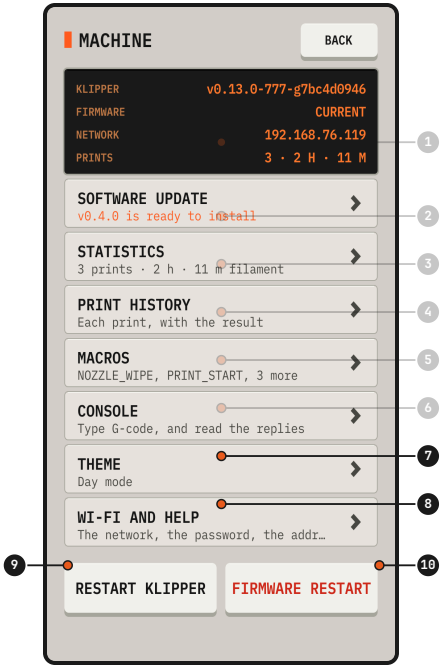


## *Statistics*

1. **Totals.** The number of prints, the success rate, the print time and the filament.
2. **Results.** Done (amber), cancelled and failed (red).
3. **Details.** The filament in grams (for 1.75 mm PLA), the average and the longest print, the prints of the last 7 and 30 days, and the file that you print most.

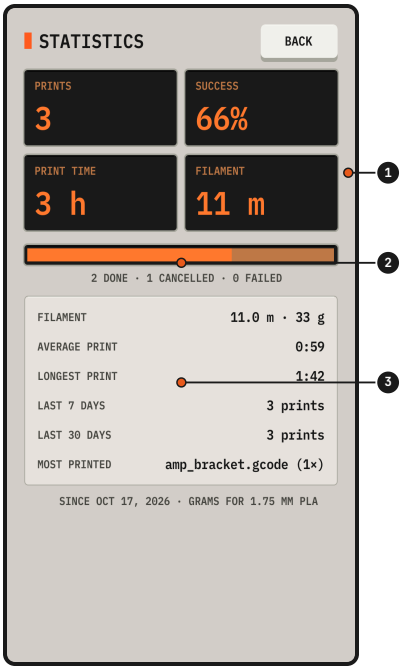

## *The console*

1. **Replies.** Your commands (amber, after >), the replies of Klipper, and errors (red). Drag down to read older lines.
2. **Type a command.** Opens the keyboard. It shows your last command, so you can change it and send it again.
3. **Quick keys.** Home (G28), Status (STATUS) and Help (HELP, the list of the commands).

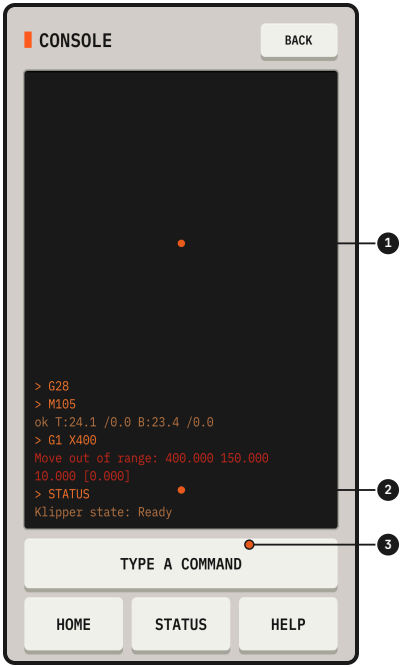

# Update the Printdeck


The deck checks for a new version once a day. Machine then shows Software update in orange.

Each version has a signature. The deck installs only a version with a valid signature of Printdeck. It writes the other system slot and restarts into it. If the new system does not start, the deck goes back to the old one.

1. Open Machine, then Software update.
2. Read the notes of the new version, then tap Install. The deck does not install during a print.
3. Wait while the deck downloads and writes the update. It restarts into the new version.

## *Software update*

1. **Versions.** The version of this deck, the newest version, and the channel.
2. **Notes.** What the new version changes.
3. **Install.** Downloads the new version, checks it, and installs it, after a question. The deck restarts.
4. **Check now.** Checks for a new version now.
5. **Beta updates.** On: the deck also gets the betas, the versions with new features for tests. Off: only the stable versions.

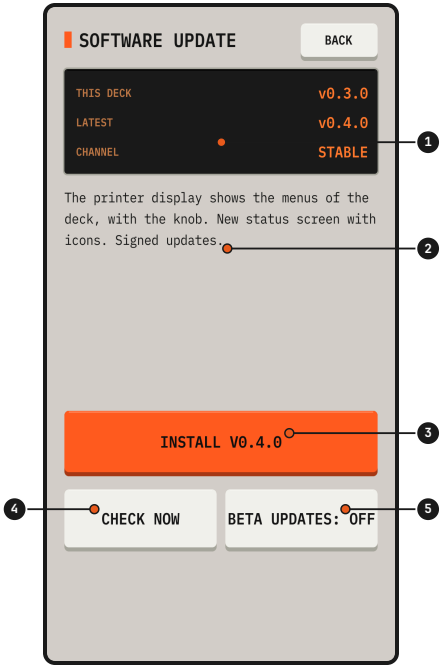

# When something goes wrong

When Klipper stops with an error, the deck shows all the lines of its message.

1. Read the message. It often names the setting in printer.cfg.
2. After a stop or a power cut of the printer, tap Firmware restart.
3. After a change to printer.cfg, tap Restart Klipper.

## *A Klipper error*

1. **Message.** What Klipper reports, with all its lines.
2. **Restart Klipper.** Restarts Klipper. It reads printer.cfg again.



## Settings

The file printdeck.txt on the PRINTDECK partition holds the settings. Put the disk in a computer to change it. The deck reads it at each start, then clears the Wi-Fi password in it.

## Settings

| | |
|---|---|
| `wifi_ssid, wifi_password, wifi_country` | The Wi-Fi network |
| `hostname, timezone` | The name on the network, and the time zone |
| `display_rotate` | 90 or 270 for a display that is mounted in portrait |
| `touch_invert_x, touch_invert_y, touch_swap_xy` | 1 turns an axis of the touch screen |
| `preheat_tool, preheat_bed` | The temperatures of Preheat with no filament set |
| `night_from, night_to` | The hours of the night colors |
| `printer.cfg (a file)` | A Klipper config. The deck takes it at the next start. |

## Notes

Printdeck is free software: AGPL-3.0, with the Go port of Klipper under GPL-3.0. The deck draws every picture of this booklet.

https://github.com/beetlebugorg/printdeck