

PharmaSuite®



DATA MANAGER

RELEASE 8.4 **USER MANUAL**

PUBLICATION PSDM-UM004E-EN-E-DECEMBER-2017 Supersedes publication PSDM-UM004D-EN-E





Contact Rockwell See contact information provided in your maintenance contract.

Copyright Notice © 2017 Rockwell Automation Technologies, Inc. All rights reserved.

This document and any accompanying Rockwell Software products are copyrighted by Rockwell Automation Technologies, Inc. Any reproduction and/or distribution without prior written consent from Rockwell Automation Technologies, Inc. is strictly prohibited. Please refer to the license agreement for details.

Trademark Notices FactoryTalk, PharmaSuite, Rockwell Automation, Rockwell Software, and the Rockwell Software logo are registered trademarks of Rockwell Automation, Inc.

The following logos and products are trademarks of Rockwell Automation, Inc.:

FactoryTalk Shop Operations Server, FactoryTalk ProductionCentre, FactoryTalk Administration Console, FactoryTalk Automation Platform, and FactoryTalk Security. Operational Data Store, ODS, Plant Operations, Process Designer, Shop Operations, Rockwell Software CPGSuite, and Rockwell Software AutoSuite.

Other Trademarks ActiveX, Microsoft, Microsoft Access, SOL Server, Visual Basic, Visual C++, Visual SourceSafe, Windows, Windows 7 Professional, Windows Server 2008, Windows Server 2012, and Windows Server 2016 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

> Adobe, Acrobat, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

ControlNet is a registered trademark of ControlNet International.

DeviceNet is a trademark of the Open DeviceNet Vendor Association, Inc. (ODVA).

Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox Corporation.

OLE for Process Control (OPC) is a registered trademark of the OPC Foundation.

Oracle, SQL*Net, and SQL*Plus are registered trademarks of Oracle Corporation.

All other trademarks are the property of their respective holders and are hereby acknowledged.

Warranty This product is warranted in accordance with the product license. The product's performance may be affected by system configuration, the application being performed, operator control, maintenance, and other related factors. Rockwell Automation is not responsible for these intervening factors. The instructions in this document do not cover all the details or variations in the equipment, procedure, or process described, nor do they provide directions for meeting every possible contingency during installation, operation, or maintenance. This product's implementation may vary among users.

> This document is current as of the time of release of the product; however, the accompanying software may have changed since the release. Rockwell Automation, Inc. reserves the right to change any information contained in this document or the software at any time without prior notice. It is your responsibility to obtain the most current information available from Rockwell when installing or using this product.

Rockwell Software PharmaSuite® - Data Manager

Contents

Chapter 1	Data Manager	1
	Typographical Conventions	2
	Screen Layout	3
	Panel Management	4
	Dialogs	6
	Mismatch Details	6
	Help Access	7
	About PharmaSuite	9
	Editors	. 11
	BigDecimal Editor	. 12
	BigDecimal Editor for Double Data Types in Automation	. 15
	BigDecimal Editor for Float Data Types in Automation	. 18
	BigDecimal Editor for Integer Data Types in Automation	. 22
	BigDecimal Editor for Historian	. 25
	Boolean Editor for Automation	. 26
	CleaningRules Editor	. 28
	Date/Time Picker Editor	. 29
	Duration Editor	. 30
	Expression Editor	. 31
	Expression Editor for Transition Conditions	. 31
	Expression Editor for Transition Actions	. 33
	Expression Panel	. 34
	Operators	. 43
	Functions	. 49
	FlexibleAttributeDefinition Editor	. 55

Chapter

· '

	FlexibleStateModel Editor	<mark>57</mark>
	FlexibleTagDefinition Editor for Automation	58
	GraphStatusChange Editor	60
	Label Layout Selection Editor	60
	Measured Value Editor	61
	Multi-line Text Editor	61
	Ranges Editor	62
	ScaleConfiguration Editor	63
	ScaleTestAndCalibration Editor	67
	Searchable Option List Editor	69
	String Editor for Automation	<mark>7</mark> 0
	String Editor for Historian	<mark>7</mark> 1
	Graphical Elements	<mark>7</mark> 2
	Toolbar Buttons	<mark>7</mark> 2
	Action Buttons	7 4
	Marker Icons	<mark>7</mark> 7
	Cursors	<mark>78</mark>
	Expression Editor Icons	<mark>78</mark>
	Keyboard Operation	80
	Framework Navigation Shortcuts	80
	Action Shortcuts	81
	Expression Editor Shortcuts	83
	Basic Operations	88
	Start, Login, Logout, and Password Change	88
	Searching	92
	Editing	101
	Signature Requests	103
	Exporting Objects	104
	Importing Objects	107
2	Managing Equipment	115
	What Is an Equipment Requirement?	

	What Is an Equipment Class?	115
	What Is a Template Equipment Entity?	116
	What Is an Equipment Entity?	116
	What Is an Equipment Graph?	119
	What Is a Property Type?	119
	Status Handling of Equipment	119
	Equipment Class Statuses	120
	Template Equipment Entity Statuses	121
	Equipment Entity Statuses	122
	Equipment Graph Statuses	123
	Changing the Status of Equipment	123
	Mass Change Operations on (Template) Entities	125
	Usage Lists of Classes	131
	Managing Equipment - Smart Search	133
	Menus and Toolbars	133
	Detail Data	146
	Managing Equipment - Basic Search	194
	Menus and Toolbars	194
	Detail Data	207
Chapter 3	Managing Work Centers	255
	What Is a Work Center?	255
	What Is a Station?	255
	Menus and Toolbars	255
	Menus	255
	Toolbars	260
	Detail Data	260
	Work Center	261
	Station	267

Index

Rockwell Software PharmaSuite $^{\scriptsize \$}$ - Data Manager

viii PSDM-UM004E-EN-E, 1.0

Figures

Figure 1: Screen layout of Data Manager - Equipment - Smart Search3
Figure 2: Screen layout of Data Manager - Equipment - Basic Search
Figure 3: Screen layout of Data Manager - Work Center4
Figure 4: Mismatch warning dialog6
Figure 5: Data Manager with help window7
Figure 6: Help window navigation8
Figure 7: About PharmaSuite9
Figure 8: PharmaSuite Installation Details
Figure 9: BigDecimal editor for property type
Figure 10: BigDecimal editor for property of equipment class
Figure 11: BigDecimal editor for property of equipment entity
Figure 12: Automation BigDecimal (Double) editor for property type
Figure 13: Automation BigDecimal (Double) editor for property of equipment class
Figure 14: Automation BigDecimal (Double) editor for property of equipment class with verification
Figure 15: Automation BigDecimal (Double) editor for property of equipment entity
Figure 16: Automation BigDecimal (Double) editor for property of equipment entity with verification
Figure 17: Automation BigDecimal (Float) editor for property type
Figure 18: Automation BigDecimal (Float) editor for property of equipment class 19
Figure 19: Automation BigDecimal (Float) editor for property of equipment class with verification
Figure 20: Automation BigDecimal (Float) editor for property of equipment entity 20
Figure 21: Automation BigDecimal (Float) editor for property of equipment entity with verification
Figure 22: Automation BigDecimal (Integer) editor for property type

• '

Figure 23: Automation BigDecimal (Integer) editor for property of equipment class
Figure 24: Automation BigDecimal (Integer) editor for property of equipment class with verification
Figure 25: Automation BigDecimal (Integer) editor for property of equipment entity
Figure 26: Automation BigDecimal (Integer) editor for property of equipment entity with verification
Figure 27: Historian BigDecimal editor for property of equipment class
Figure 28: Historian BigDecimal editor for property of equipment entity
Figure 29: Automation Boolean editor for property of equipment class
Figure 30: Automation Boolean editor for property of equipment entity
Figure 31: CleaningRules editor for property type
Figure 32: CleaningRules editor for property
Figure 33: Date/Time Picker editor
Figure 34: Date/Time Picker editor
Figure 35: Duration editor
Figure 36: Expression editor for transition conditions
Figure 37: Expression editor for transition actions
Figure 38: Expression with comment
Figure 39: Expression with sections (all open)
Figure 40: Expression with sections (all closed)
Figure 41: Expression panel with comment and auto-completion
Figure 42: Expression panel with errors and message tooltip
Figure 43: Three-valued truth table
Figure 44: Truth table - A AND B
Figure 45: Truth table - A OR B
Figure 46: Truth table - NOT A
Figure 47: FlexibleAttributeDefinition editor for property type
Figure 48: FlexibleAttributeDefinition editor for property of equipment class 56
Figure 49: FlexibleAttributeDefinition editor for property of equipment entity 56
Figure 50: FlexibleStateModel editor for property type
Figure 51: FlexibleStateModel editor for property57
Figure 52: Automation FlexibleTagDefinition editor for property type

Figure 53: Automation FlexibleTagDefinition editor for property of equipment class
Figure 54: Automation FlexibleTagDefinition editor for property of equipment entity
Figure 55: GraphStatusChange editor for graph of entity
Figure 56: Label Layout Selection editor
Figure 57: Measured Value editor
Figure 58: Multi-line Text editor
Figure 59: ScaleRanges editor for property
Figure 60: ScaleConfiguration editor for property of class
Figure 61: ScaleConfiguration editor for property of entity
Figure 62: ScaleTestAndCalibration editor for property
Figure 63: Searchable Option List editor
Figure 64: Automation String editor for property of equipment class
Figure 65: Automation String editor for property of equipment entity
Figure 66: Historian String editor for property of equipment class
Figure 67: Historian String editor for property of equipment entity71
Figure 68: PharmaSuite webstart page
Figure 69: Login form
Figure 70: PharmaSuite welcome page90
Figure 71: Change password91
Figure 72: Search tabs with Close button
Figure 73: Card of equipment class
Figure 74: Card of work center93
Figure 75: Tile of equipment class with tooltip94
Figure 76: Tile of work center with tooltip95
Figure 77: Mini tile of equipment class with tooltip95
Figure 78: Mini tile of work center with tooltip96
Figure 79: Search criteria panel - Equipment - Smart Search
Figure 80: Search criteria panel - Work Center
Figure 81: Search criteria panel - Equipment - Basic Search100
Figure 82: Single electronic signature
Figure 83: Double electronic signature to support witness role103

Figure 84: Export dialog for class	106
Figure 85: Export dialog for entity	106
Figure 86: Log dialog of class export	107
Figure 87: Import dialog	111
Figure 88: Import Content dialog	112
Figure 89: Import Checks dialog	113
Figure 90: Log dialog of import	114
Figure 91: Change Status dialog	124
Figure 92: Change Status dialog with warnings	125
Figure 93: Change Status dialog with errors	125
Figure 94: Update (Template) Entities - Expected Changes	126
Figure 95: Update (Template) Entities - Update Results	128
Figure 96: Usage List dialog	132
Figure 97: Example graph	181
Figure 98: Example graph	242

Data Manager

Data Manager of PharmaSuite is a graphical workbench for creating and maintaining master data. With its function for change control, it covers the entire life cycle of master data. It is available in two modes. As Data Manager - Equipment, it allows to create and maintain equipment classes, template equipment entities, equipment entities, property types, and equipment graphs and their assignments between one another. As Data Manager - Work Center, it allows to create and maintain work center and station objects and the hierarchical relationship that exists between a work center and its station or stations.

This section contains important information about the basic principles of working with Data Manager. Please read this section carefully, because it provides a solid background for all operations you may wish to perform with your system.

Later sections will explain how to perform the specific tasks in the system. We assume you are familiar with the conventions described in the following sections and the fundamentals of working with a personal computer.

Typographical Conventions

This documentation uses typographical conventions to enhance the readability of the information it presents. The following kinds of formatting indicate specific information:

Bold typeface	Designates user interface texts, such as	
	window and dialog titles	
	menu functions	
	panel, tab, and button names	
	box labels	
	• object properties and their values (e.g. status).	
Italic typeface	Designates technical background information, such as	
	path, folder, and file names	
	methods	
	classes.	
CAPITALS	Designate keyboard-related information, such as	
	key names	
	keyboard shortcuts.	
Monospaced typeface	Designates code examples.	

TIP

Instructions in this manual are based on Windows 7. Select the appropriate commands if you are using a different operating system.

Screen Layout

The basic screen layout of Data Manager holds the following user interface components:

- menus and toolbars for accessing the functions of Data Manager
- Search window with search criteria panel and search results panel
- Details window for viewing and editing the data of objects selected from the search results
- status bar with general information such as the logged-in user with his full name, the database name, and the local time and time zone information.

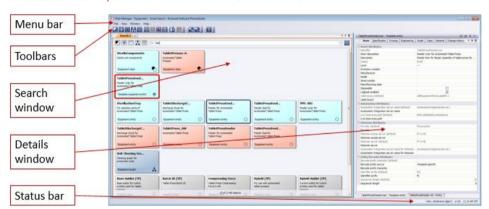


Figure 1: Screen layout of Data Manager - Equipment - Smart Search

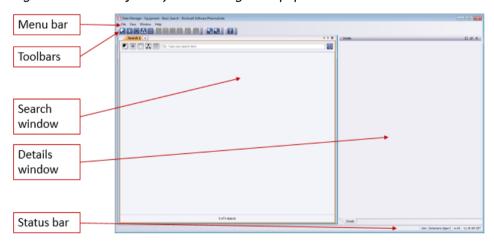


Figure 2: Screen layout of Data Manager - Equipment - Basic Search

Menu bar

Toolbars

Toolbars

Search
window

Details
window

Details
window

Toolbars

Figure 3: Screen layout of Data Manager - Work Center

Panel Management

Status bar

When you start Data Manager for the first time, it opens with the default screen layout, which holds the dockable main menu bar and main toolbars at the top, the Search window taking up the left and center part of the screen, and the Details window on the right. You can, however, rearrange the panels if you prefer a different layout.

When you exit the system, Data Manager saves the current panel layout and will start your next session with this layout. You can, however, always revert back to the default layout (page 5).

To change the position and size of the panels, click a panel header bar and drag the panel to the desired position on the screen. The system displays the new panel size and position with a gray preview frame. Panels can be

- free floating
- docked horizontally or vertically
- nested into another panel, accessible for switching by tab.

TIP

To move a menu bar or a toolbar you have to use their drag handles, which are located at the left margins of horizontal bars and at the top margins of vertical bars. If you pull a toolbar out as floating panel, you can close the panel.

To reopen it, proceed as follows:

- Right-click anywhere on the menu bar to open a shortcut menu.
- Select the toolbar. The system displays it again at the location where you closed it before.

With the other functions of the shortcut menu you can configure if the bars are Rearrangable, Hidable, or Floatable.

Each panel header provides a toolbar for further panel resizing and movements:

Maximizes a panel at its current position or restores it to its original size.

☐ ☐ Toggle floating

Floats or unfloats a panel. An unfloated panel reverts to its original position and size.

Toggle auto-hide

Auto-hides a docked panel. It can be accessed by tab. If you revoke the auto-hide, the panel reverts to its original position and size.

Close

Closes a panel. To reopen it, open the **View** menu and select the panel for display.

When the number of open tabs on a tab bar exceeds the available width of the tab bar, the system displays the following buttons to support your navigation:

Scroll backward

Scrolls the tab bar to the left.

Scroll forward

Scrolls the tab bar to the right.

Close

Displays a list of all open tabs from which you can select a tab you wish to close. The currently active tab is indicated by bold font.

To manage your screen layout changes, the system provides the **Window** menu with the following functions:

- Load user layout
 Loads the last layout you have saved on this computer with the Save user layout
- Redo layout change

function.

Redoes the last layout change you have revoked with the **Undo layout change** function. You can redo up to 100 actions, thus you can step by step redo the last 100 layout changes you have revoked. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Redo resizing** or **Redo dragging**.

Reset layout

Resets the window layout to the system-defined default layout. This function does not affect the saved user layout, which can be restored with the **Load user layout** function.

- Save user layout Saves the current window layout and overwrites the layout that was last saved by you on this computer.
- Undo layout change
 Revokes the last layout change you have performed. You can undo up to 100
 actions, thus you can step by step revoke the last 100 layout changes you have
 performed. Once you have performed a layout change, the menu function changes
 to a more precise description of the undo action, such as Undo resizing or Undo
 dragging.

Dialogs

Data Manager uses dialogs or pop-up windows on top of its basic screen areas to cover a variety of functions:

- Error and warning dialog (page 6) for indicating mismatching data
- Context-sensitive Help system (page 7)
- About dialog (page 9) for further information on PharmaSuite and its system environment.

Mismatch Details

To prevent data inconsistencies that may result from unsuitable assignments between objects, Data Manager runs a series of consistency checks whenever you save an object. As long as at least one of the affected objects is in an editable status, such as **Draft**, so that mismatches are still solvable, the system reports mismatch warnings.

An object's unresolved mismatch warnings can prevent the object from changing its status to a non-editable status, such as **Verification**.

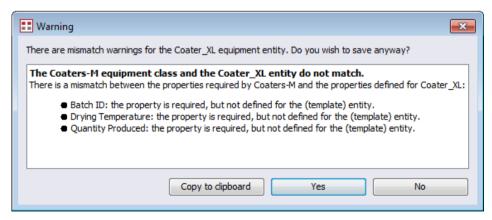


Figure 4: Mismatch warning dialog

TIP

If the consistency checks return several issues, click the **Copy to clipboard** button to copy the list and then paste it into a system-external text editor. This way you can keep the list open to address the individual issues one after another.

To quickly locate an affected object, copy its identifier and paste it into the **Search** box.

Help Access

The help system of Data Manager is context-sensitive on panel and window level. This means that clicking the help button or pressing the F1 key will open a help window that displays information relevant to the panel you have currently focused. The help window is non-modal and resizable.

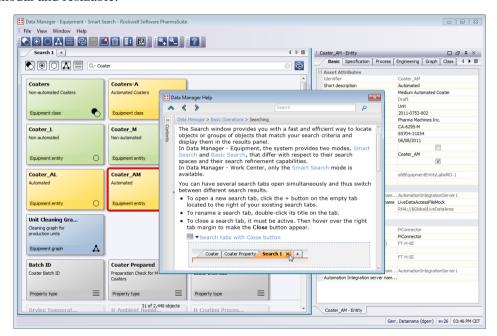


Figure 5: Data Manager with help window

In order to access other topics than the one directly related to the current context, use the navigation arrows located at the top of the help page, or related topic links located at the bottom of the page, if available.

The following additional features support your use of the help system:

- To access an overview of all available topics open the **Contents** tab in the **Contents and Index** frame. The system additionally provides **Expand all** and **Collapse all** buttons to facilitate easier navigation in the contents tree.
- To access the index, open the **Index** tab in the **Contents and Index** frame.
- To use the **Search** function

- 1. type the term you are looking for in the **Search** box and
- click the **Search** button or press the ENTER key.
 The system will display all occurrences of the search term in a third tab in the **Content and Index** frame.
- To print the page that is currently displayed in the help window, click the **Print this page** button. The system displays a print preview of the page along with the default Windows **Print** dialog.

TIP

Please note that printing is only available from the stand-alone format of the help system and not from within the application.

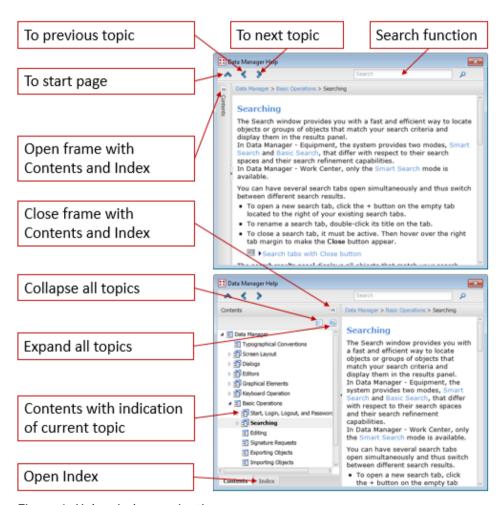


Figure 6: Help window navigation

About PharmaSuite

The **About PharmaSuite** function opens the **About PharmaSuite** dialog to display system-related information, such as the current system version and build, the logged-in user, work center, and database-related information.

TIP

Please note that the dialog also indicates the **EBR server state**. Only when the EBR server is available can orders or workflows be processed in PharmaSuite for Production Execution.

Click the **Details** button to view more specific technical information on the system and its environment.

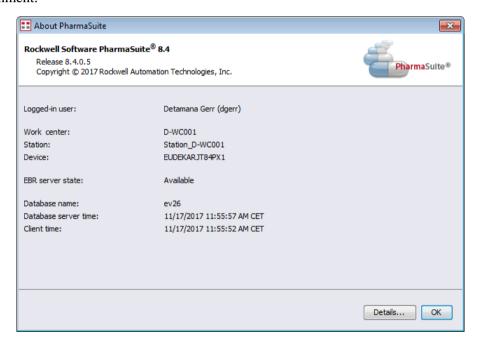


Figure 7: About PharmaSuite

DETAILS

From the **PharmaSuite Installation Details** dialog, you can copy the listed detail data to the clipboard.

TIP

Please note that the path to the PharmaSuite log files is given in the last section of the listed detail data.

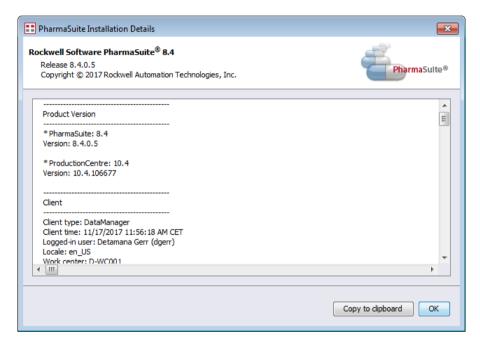


Figure 8: PharmaSuite Installation Details

Editors

Data Manager provides a number of editors to facilitate easy editing of properties that make use of specific data types.

TIP

Please note that some editors are only available in the **Equipment** mode as they are specific to the data types of equipment objects.

- BigDecimal (page 12) floating point number, used for numbers and ranges. It is suitable for handling numbers qualified by a unit of measure.
- BigDecimal for automation integration accommodating three **Live Data types**:
 - Double (page 15)
 - Float (page 18)
 - Integer (page 22) (signed and unsigned)
- BigDecimal (page 25) for historical data access
- Boolean (page 26) for automation integration
- CleaningRules (page 28)
 used for defining the cleaning rules and cleaning demands of equipment, such as
 rooms.
- Date/Time (page 29) used for entering a date with or without time.
- Duration (page 30)
 used for displaying time spans and for time-related calculations.
- Expression (page 31)
 used for creating transition conditions and actions.
- FlexibleAttributeDefinition (page 55) used for defining a bundle of runtime attributes.
- FlexibleStateModel (page 57) status graph with statuses that are linked by transitions. Several individual statuses form a status group, which represents a collection of semantically connected statuses.
- FlexibleTagDefinition (page 58) for automation integration used to define a group of automation-relevant values to communicate as value bundle from an equipment entity for monitoring purposes.

- GraphStatusChange (page 60) used for changing graph-controlled statuses of entities including their expiry dates.
- Label Layout Selection (page 60) used for selecting a label layout for barcode labels of entities.
- Measured Value (page 61) used for entering values with a unit of measure.
- Multi-line Text (page 61) used for texts that typically exceed the length of a regular input box.
- Ranges (page 62)
 used for defining up to three weighing ranges per scale equipment.
- ScaleConfiguration (page 63)
 used for defining driver and connection data of a scale equipment.
- ScaleTestAndCalibration (page 67)
 used for defining test weight and operator instructions for scale tests and
 calibration.
- Searchable Option List (page 69)
 used for option lists with a large number of selectable items.
- String (page 70) for automation integration
- String (page 71) for historical data access

BigDecimal Editor

The BigDecimal editor supports you with entering a number or a range between two numbers. It allows to define a unit of measure for the value or range.

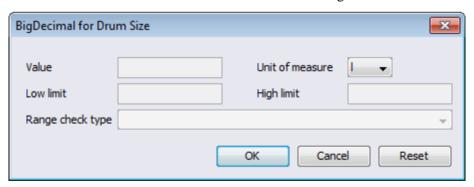


Figure 9: BigDecimal editor for property type



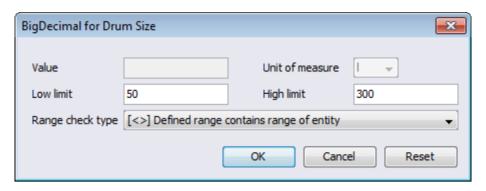


Figure 10: BigDecimal editor for property of equipment class

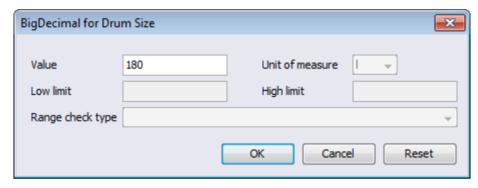


Figure 11: BigDecimal editor for property of equipment entity

- When you define a property type you can only select a unit of measure. If your property type is not based on a measured value or its unit of measure is not included as option in the list of available units of measure, you can leave the box blank.
 - All other definitions need to be made when you assign the property type to a class or entity.
- When you define a property for an equipment class, you can either give an exact value or a range including its range check type. The unit of measure is specified with the property type and cannot be changed.
 - You can leave non-required boxes blank.
 - To save your value and close the BigDecimal editor, click the **OK** button.
- When you define a property for an equipment entity, you can fill the text boxes as required, either giving an exact value or a range. The unit of measure is specified with the property type and cannot be changed.

You can leave non-required boxes blank.

TIP

Please note that you cannot define any values for properties of the **Runtime** usage. All input boxes are read-only then.

TIP

When defining a range you can set the range's low and high limits and specify how the defined range is matched against the actual value or range provided by an equipment entity identified during execution:

- [<>] Defined range contains range of entity The option provides for equipment requirements where the actual value or range of an equipment entity must lie within the defined limits of minimum and maximum values.
 - This check type would be suitable to cover a situation when you have an equipment unit that can be run with vessels of various sizes. Your requirement would, for example, specify a range between 300 l and 500 l and the volume of the identified vessel would have to be within this range. So vessels with a volume of 350 l or 500 l could be identified successfully, whereas a vessel with a volume of 550 l would cause an exception.
- []> Defined range is contained in range of entity
 The option provides for equipment requirements where the actual range of an
 equipment entity must at least be able to cover the defined range.
 This check type would be suitable to cover a situation when you have a mixer that
 can run with a wide range of speeds. Your requirement would, for example,
 specify a range between 300 rpm and 600 rpm since the volatile material to be
 processed must be treated with mixing cycles at 350, 450, and 550 rpm but not at
 a lower speed to prevent lumping and not at a higher speed to prevent
 overheating. So a mixer capable of running between 50 rpm and 2000 rpm would
 be identified successfully, whereas a mixer that runs at ranges between 200 rpm
 and 550 rpm would cause an exception.
 - To save your data and close the BigDecimal editor, click the **OK** button.
 - To close the BigDecimal editor without saving your changes, click the **Cancel** button.
 - To reset your value or range to their last saved form, click the **Reset** button.

BigDecimal Editor for Double Data Types in Automation

The BigDecimal editor supports you with entering a number or a range between two numbers. It allows to define a unit of measure for the value or range. To ensure a correct match with the automation tags provided by individual equipment entities, you need to indicate a suitable Live Data type (**Double**, **Float**, **Integer**). In addition, you can select verification schemas for tags that verify a value's tag health, its simulation status, or its maintenance status.

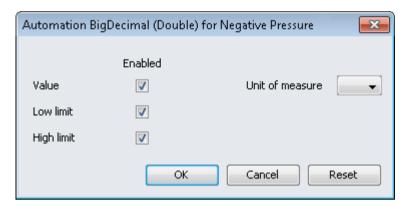


Figure 12: Automation BigDecimal (Double) editor for property type

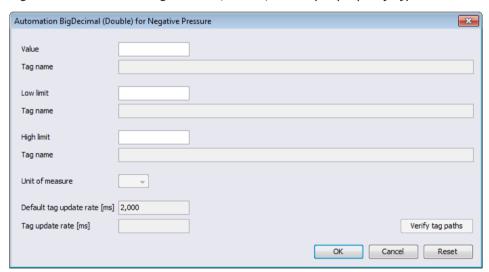


Figure 13: Automation BigDecimal (Double) editor for property of equipment class

Automation BigDecimal (Double) for Negative Pressure (V)

Value

Tag name

Unit of measure

Health verification
Health indicator tag

Simulation verification
Simulation indicator tag

Maintenance verification
Maintenance indicator tag

Default tag update rate [ms] 2,000

Tag update rate [ms]

OK Cancel Reset

Figure 14: Automation BigDecimal (Double) editor for property of equipment class with verification

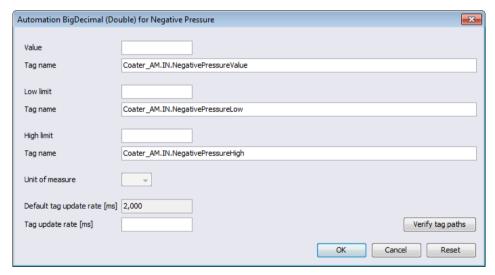


Figure 15: Automation BigDecimal (Double) editor for property of equipment entity



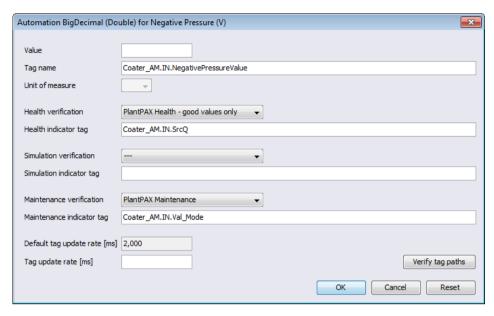


Figure 16: Automation BigDecimal (Double) editor for property of equipment entity with verification

When you define a property type, you need to specify which of the theoretically available values of an equipment entity (Value, High limit, Low limit) are actually going to be used during processing.
Additionally, you can select a unit of measure. If your property type is not based

on a measured value or its unit of measure is not included as option in the list of available units of measure, you can leave the box blank.

TIP

If you wish to use verification schemas to check the health, simulation status, and maintenance status of your tags, make sure to select **Value** as the only option. The system does not provide the verification feature for high and low limits.

When you define a property for an equipment class, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. This data, however, only has informational value and is neither matched against the data defined for entities of the class nor against data defined with a property requirement during recipe or workflow design.

The unit of measure is specified with the property type and cannot be changed.

When you define a property for an equipment entity, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. The unit of measure is specified with the property type and cannot be changed. At this point you need to define to which tags of your equipment you wish to map the defined value, range, or schema and with which update rate the system is to access the tags.

TIP

To see the list of tags available at your equipment, you can use the Live Data Test Client to browse to the equipment using the Live Data Area path defined with the Automation attributes on the **Basic** tab (page 161) of the equipment.

You can leave non-required boxes blank.

To check if the indicated tag names correspond to existing tag names on the equipment entity, click the **Verify tag paths** button.

- To save your data and close the Automation BigDecimal editor, click the **OK** button.
- To close the Automation BigDecimal editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

BigDecimal Editor for Float Data Types in Automation

The BigDecimal editor supports you with entering a number or a range between two numbers. It allows to define a unit of measure for the value or range. To ensure a correct match with the automation tags provided by individual equipment entities, you need to indicate a suitable Live Data type (**Double**, **Float**, **Integer**). In addition, you can select verification schemas for tags that verify a value's tag health, its simulation status, or its maintenance status.

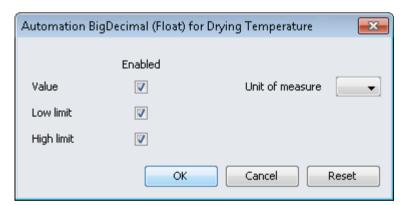


Figure 17: Automation BigDecimal (Float) editor for property type



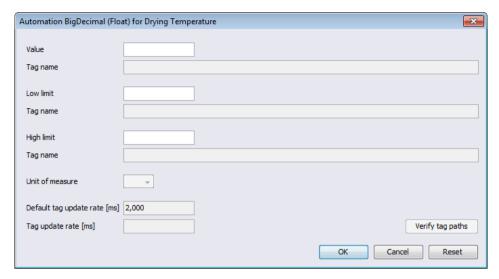


Figure 18: Automation BigDecimal (Float) editor for property of equipment class

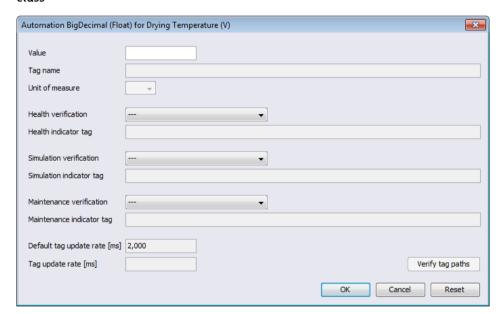


Figure 19: Automation BigDecimal (Float) editor for property of equipment class with verification

Automation BigDecimal (Float) for Drying Temperature Value Coater_AM.IN.DryingTemperatureValue Tag name Low limit Coater_AM.IN.DryingTemperatureLow Tag name High limit Tag name Coater_AM.IN.DryingTemperatureHigh Unit of measure Default tag update rate [ms] 2,000 Tag update rate [ms] Verify tag paths OK Cancel Reset

Figure 20: Automation BigDecimal (Float) editor for property of equipment entity

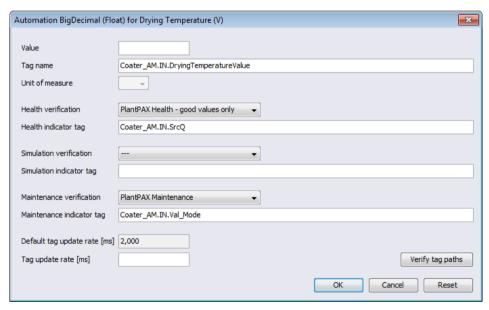


Figure 21: Automation BigDecimal (Float) editor for property of equipment entity with verification

When you define a property type, you need to specify which of the theoretically available values of an equipment entity (Value, High limit, Low limit) are actually going to be used during processing.

Additionally, you can select a unit of measure. If your property type is not based on a measured value or its unit of measure is not included as option in the list of available units of measure, you can leave the box blank.

TIP

If you wish to use verification schemas to check the health, simulation status, and maintenance status of your tags, make sure to select **Value** as the only option. The system does not provide the verification feature for high and low limits.

- When you define a property for an equipment class, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. This data, however, only has informational value and is neither matched against the data defined for entities of the class nor against data defined with a property requirement during recipe or workflow design.
 - The unit of measure is specified with the property type and cannot be changed.
- When you define a property for an equipment entity, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. The unit of measure is specified with the property type and cannot be changed. At this point you need to define to which tags of your equipment you wish to map the defined value, range, or schema and with which update rate the system is to access the tags.

TIP

To see the list of tags available at your equipment, you can use the Live Data Test Client to browse to the equipment using the Live Data Area path defined with the Automation attributes on the **Basic** tab (page 161) of the equipment.

You can leave non-required boxes blank.

To check if the indicated tag names correspond to existing tag names on the equipment entity, click the **Verify tag paths** button.

- To save your data and close the Automation BigDecimal editor, click the **OK** button.
- To close the Automation BigDecimal editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

BigDecimal Editor for Integer Data Types in Automation

The BigDecimal editor supports you with entering a number or a range between two numbers. It allows to define a unit of measure for the value or range. To ensure a correct match with the automation tags provided by individual equipment entities, you need to indicate a suitable Live Data type (**Double**, **Float**, **Integer**). In addition, you can select verification schemas for tags that verify a value's tag health, its simulation status, or its maintenance status.

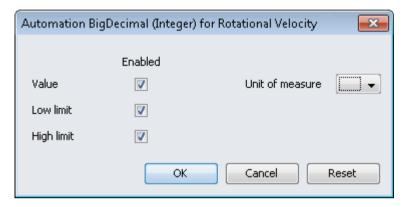


Figure 22: Automation BigDecimal (Integer) editor for property type

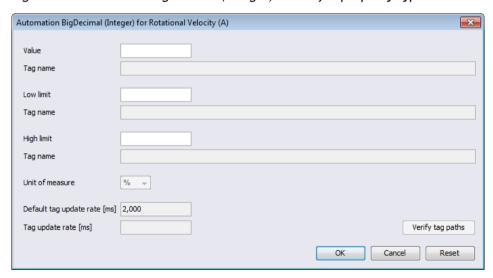


Figure 23: Automation BigDecimal (Integer) editor for property of equipment class

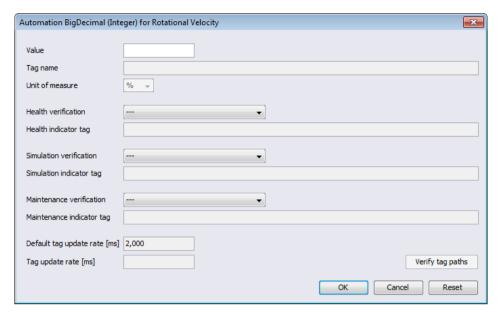


Figure 24: Automation BigDecimal (Integer) editor for property of equipment class with verification

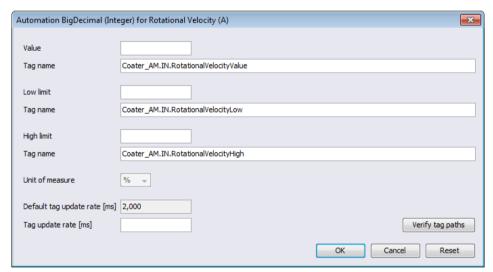


Figure 25: Automation BigDecimal (Integer) editor for property of equipment entity

Ro

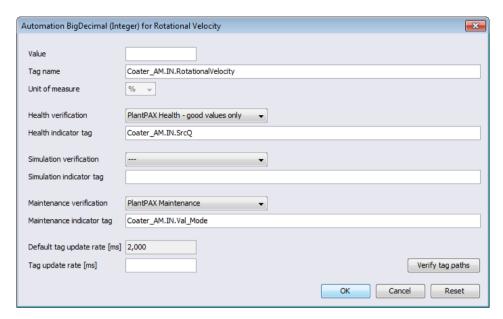


Figure 26: Automation BigDecimal (Integer) editor for property of equipment entity with verification

When you define a property type, you need to specify which of the theoretically available values of an equipment entity (Value, High limit, Low limit) are actually going to be used during processing.

Additionally, you can select a unit of measure. If your property type is not based on a measured value or its unit of measure is not included as option in the list of available units of measure, you can leave the box blank.

TIP

If you wish to use verification schemas to check the health, simulation status, and maintenance status of your tags, make sure to select **Value** as the only option. The system does not provide the verification feature for high and low limits.

- When you define a property for an equipment class, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. This data, however, only has informational value and is neither matched against the data defined for entities of the class nor against data defined with a property requirement during recipe or workflow design.
 - The unit of measure is specified with the property type and cannot be changed.
- When you define a property for an equipment entity, you can fill the text boxes for all the values specified with the property type. If the property type only considers the **Value** without limits, you can also select verification schemas. The unit of measure is specified with the property type and cannot be changed. At this point you need to define to which tags of your equipment you wish to map the defined value, range, or schema and with which update rate the system is to access the tags.

TIP

To see the list of tags available at your equipment, you can use the Live Data Test Client to browse to the equipment using the Live Data Area path defined with the Automation attributes on the **Basic** tab (page 161) of the equipment.

You can leave non-required boxes blank.

To check if the indicated tag names correspond to existing tag names on the equipment entity, click the **Verify tag paths** button.

- To save your data and close the Automation BigDecimal editor, click the **OK** button.
- To close the Automation BigDecimal editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

BigDecimal Editor for Historian

The BigDecimal editor for Historian supports you with retrieving numeric values from a historical data archive. It allows to define a unit of measure for the values.

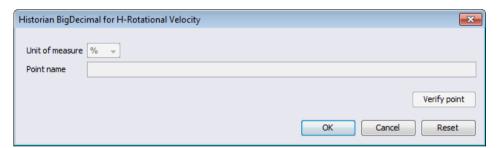


Figure 27: Historian BigDecimal editor for property of equipment class

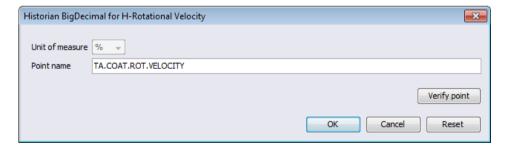


Figure 28: Historian BigDecimal editor for property of equipment entity

■ When you define a property for an equipment class, you can only view the unit of measure defined with the property type.

- When you define a property for an equipment entity, you need to define which point of your Historian server you wish access to retrieve values. The unit of measure is specified with the property type and cannot be changed. To check if the indicated point name corresponds to an existing point defined on the Historian server, click the **Verify point** button.
- To save your data and close the Historian BigDecimal editor, click the **OK** button.
- To close the Historian BigDecimal editor without saving your changes, click the Cancel button.
- To reset your data to its last saved form, click the **Reset** button.

Boolean Editor for Automation

The Boolean editor supports you with handling boolean values (Yes, No, and N/A), for example to define specific true/false conditions for an equipment entity like "Transport Vessel docked", which need to be communicated to or from an automated equipment entity. In addition, you can select verification schemas for tags that verify a value's tag health, its simulation status, or its maintenance status.

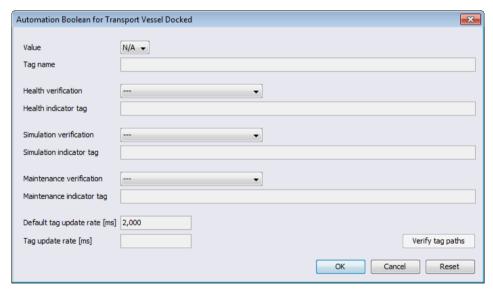


Figure 29: Automation Boolean editor for property of equipment class

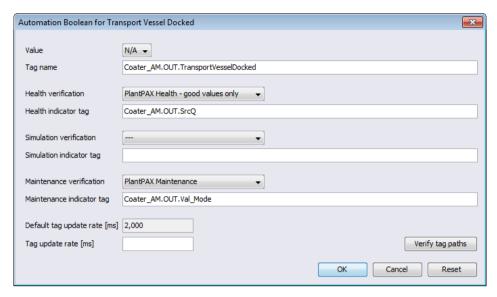


Figure 30: Automation Boolean editor for property of equipment entity

- When you define a property for an equipment class, you can set a value and select verification schemas. The data only has informational value, however and is neither matched against the data defined for entities of the class nor against data defined with a property requirement during recipe or workflow design.
- When you define a property for an equipment entity, you can set a value and select verification schemes. At this point you also need to define to which tags of your equipment you wish to map the defined value and schemes and with which update rate the system is to access the tags.

TIP

To see the list of tags available at your equipment, you can use the Live Data Test Client to browse to the equipment using the Live Data Area path defined with the Automation attributes on the **Basic** tab (page 161) of the equipment.

To check if the indicated tag name corresponds to an existing tag name on the equipment entity, click the **Verify tag paths** button.

- To save your data and close the Automation Boolean editor, click the **OK** button.
- To close the Automation Boolean editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

CleaningRules Editor

The CleaningRules editor supports you with defining which of the available cleaning rules are to apply to an entity and which cleaning demand they involve.

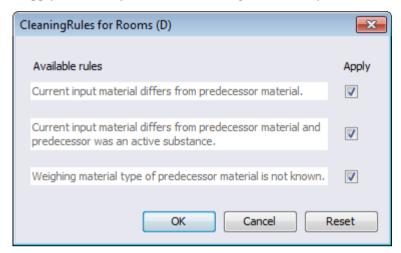


Figure 31: CleaningRules editor for property type

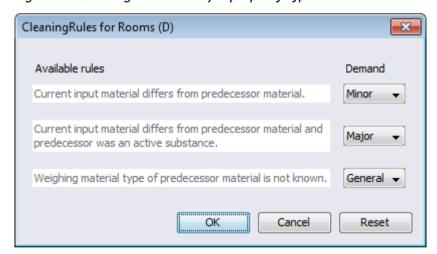


Figure 32: CleaningRules editor for property

- When you define a property type, you need to specify which of the available pre-defined rules are relevant to the intended use of the property and select them to apply.
- When you define a property for an equipment class or entity, you can set the cleaning demand (**None**, **Minor**, **Major**, **General**) that must be fulfilled when one of the rules applies during execution.
- To save your data and close the CleaningRules editor, click the **OK** button.
- To close the CleaningRules editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

Date/Time Picker Editor

The Date/Time Picker editor supports you with entering a date with or without a time. You can either type the date or time directly in the input box or open the calendar control to pick it. Depending on the data expected by the input box you are about to fill, the calendar either only provides date picking or it holds an additional spin control to pick a time as well. The calendar opens with the date (and time) that is currently displayed in the input box. It highlights the selected date in orange and displays the current date with a red border. When you have selected a date (and time), the calendar control closes automatically.

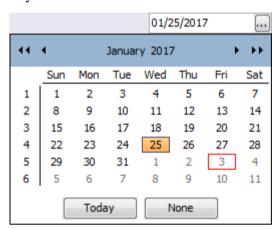


Figure 33: Date/Time Picker editor

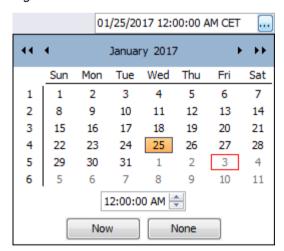


Figure 34: Date/Time Picker editor

- To navigate the calendar to other months or years, use the controls in the calendar header.
 - Months: SINGLE ARROW keys or option list that appears when you click the current month name.
 - Years: DOUBLE ARROW keys or spin control that appears when you click the current year.
- To edit a time, click the position (hours, minutes, seconds) in the time text box you wish to change. Then use the spin control or the UP and DOWN ARROW keys to increase or decrease the number.
- In the Date Picker, to select the current date, click the **Today** button.
- In the Date and Time Picker, to select the current date and time, click the **Now** button.
- To clear the date and or time from the input box, click the **None** button.
- To close the calendar control without changing the date or time, click anywhere in the dialog outside the calendar control or press the ESC key.

Duration Editor

The Duration editor supports you with entering a duration with days as largest and milliseconds as smallest unit.

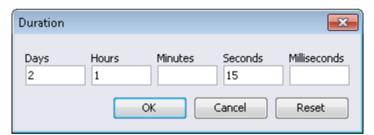


Figure 35: Duration editor

Fill the text boxes as required. You can leave non-required boxes blank. To save your value and close the Duration editor, click the **OK** button or press the ENTER key.

TIP

Please note that the system does not allow you to type values for the various time units that exceed the maximum number of each time unit and would move it to the next higher unit. Thus, for hours the maximum is 23, for minutes and seconds it is 59, and for milliseconds it is 999.

- To close the Duration editor without saving your changes, click the **Cancel** button or press the ESC key.
- To reset your duration values to their last saved form, click the **Reset** button.

Expression Editor

The Expression editor supports you with defining

- conditions of graph transitions (page 31), which determine if the expected circumstances are met so that the transition can be executed.
- actions of graph transitions (page 33), which are performed along with the transition.

Expression Editor for Transition Conditions

The Expression editor for transitions conditions consists of

- the dialog frame for expression meta data
- the expression panel (page 34) that holds an expression with a boolean result that determines if a transition is executed or not:
 - if the result is **undefined**, the transition cannot be executed and leads to an error.

TIP

This can happen if the condition references a runtime property that has not yet been initialized with a value. Unless you are sure that the property has been initialized before the system executes the condition, make it more robust by using the **nvl** function (page 50).

Example:

nvl({Usage Counter}, OBDecimal) < 5BDecimal

if the result is **true**, the transition is executed.

TIP

Please note that an empty condition returns **true**, which executes the transition.

- if the result is **false**, the transition is not executed.
- two resizable tree panels that list available operators (page 43) and functions (page 49).

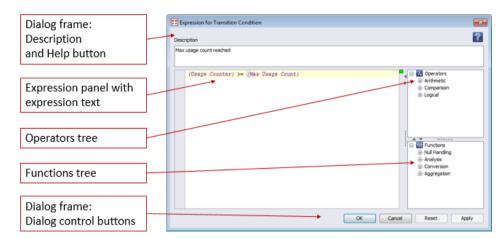


Figure 36: Expression editor for transition conditions

Above the expression panel, the frame provides a text box where you can type a textual description of the condition. The system shows the description in the respective table cell on the **Transition** tab of a graph's Details window.

The **Help** button opens the context-sensitive help system.

Below the expression panel, the dialog control buttons provide the following actions:

- To save your expression and close the Expression editor, click the **OK** button.
- To close the Expression editor without saving your changes, click the Cancel button.
- To reset your expression to its last saved form, click the **Reset** button.
- To save your expression without closing the Expression editor, click the **Apply** button.

Expression Editor for Transition Actions

The Expression editor for transitions actions consists of

- the dialog frame for expression meta data
- the expression panel (page 34) that holds an action expression with a command and a reference to the property type value to be affected by the command.
- two resizable tree panels that list available operators (page 43) and functions (page 49).

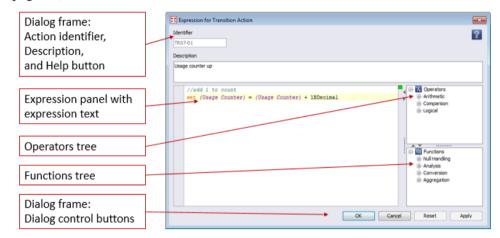


Figure 37: Expression editor for transition actions

Above the expression panel, the frame provides the following elements:

- The **Identifier** box shows the system-generated identifier, which is created when you save the expression for the first time and cannot be edited. The system also displays the identifier in the **ID** column of the action sub-table on the **Transition** tab of the graph's Details window.
- In the **Description** box, you can type a textual description of the transition action. The system also displays the description in the action sub-table on the **Transition** tab of the graph's Details window.
- The **Help** button opens the context-sensitive help system.

Below the expression panel, the dialog control buttons provide the following actions:

- To save your expression and close the Expression editor, click the **OK** button.
- To close the Expression editor without saving your changes, click the **Cancel** button.
- To reset your expression to its last saved form, click the **Reset** button.
- To save your expression without closing the Expression editor, click the **Apply** button.

Expression Panel

The expression panel represents the work area of the Expression editor and is basically an enhanced text editor that supports editing of expressions and references with concurrent syntax and semantics validation.

To format your expressions for better readability you can use blanks, tabs, and line breaks. Your formatting is retained when you save an expression.

The editor supports text manipulation by keyboard with common shortcuts (page 83).

TIP

Please note the following notation conventions for numbers in expressions:

- "." is the only permitted decimal separator as in 678.934
- There are no digit grouping symbols, as in 69352990478.749

You can build expressions by using the following elements:

CONSTANTS (PAGE 39)

OPERATORS (PAGE 43)

FUNCTIONS (PAGE 49)

BRACKETS

- Only round brackets (parentheses) are allowed in expressions as well as the identifiers of referenced attributes. You can use them to override or simply to clarify the precedence of the operators used in an expression.
- Square brackets are not allowed in expressions, but within object identifiers or attributes.
- Pointy brackets cannot be used in expressions, since they would be interpreted as inequality signs (greater than, smaller than). They are allowed within phase and output identifiers.
- Curly brackets (braces) are always interpreted as start or end delimiter of a referenced attribute and are therefore not allowed within the identifiers or attributes.

COMMENTS

You can add comments to your expressions, which the system will disregard when it processes the expression:

- Use // to introduce a single-line comment.
- Use /* ... */ to enclose a multi-line comment.

```
//add 1 to count
set {Usage Counter} = {Usage Counter} + 1BDecimal
```

Figure 38: Expression with comment

SECTIONS

To add further structuring to your expressions, you can convert comments into sections:

- Use //> to start a section.
- Use //+ to continue a section.
- Use //< to close a section.

Figure 39: Expression with sections (all open)

```
PT counter
relation
PT max count
```

Figure 40: Expression with sections (all closed)

REFERENCES TO ATTRIBUTE VALUES OF PROPERTY TYPES

An attribute reference consists of the identifier of the property type whose attribute value needs to be retrieved.

For property types that only have one attribute to provide a value, the system automatically retrieves the value. Property types of the FlexibleAttributeDefinition data type, however can have several attributes. Similarly, Specification property types of the BigDecimal data type can provide a minimum and a maximum in addition to a value. The property type identifiers and attributes are enclosed in curly brackets (braces) with a period as separator between a property type and its attribute. Examples:

- reference to a property type that provides only one value, such as a Runtime property type of the String data type. {Batch ID}
- reference to a property type that provides value, minimum, and maximum, such as a Specification property type of the BigDecimal data type {Drum Size}.{minValue}
- reference to a property type that provides more than one value, such as a Runtime property type of the FlexibleAttributeDefinition data type {Coater Prepared}.{Target Vessel ID}

TIP

When you hover over a reference, the system displays a tooltip that also shows the usage and the data type of the referenced object.

COMMANDS

Commands are only suited for use in transition actions. They represent the set of instructions available for manipulating the values of runtime property types. In the Expression editor they are displayed in orange.

TIP

Please note that an action must only contain one command.

The following commands are available:

set

allows to change the value of a property type, either to a constant or to a calculated value.

Example:

set $\{Usage\ Counter\} = \{Usage\ Counter\} + 1BDecimal$

Increases the given usage counter by 1.

This command example can be used as action in a status transition such as from "In use" to "In use" until the maximum count has been reached and the status transition must not be repeated.

TIP

If the right part of the equation is **undefined**, the action cannot be executed and leads to an error.

This can happen if it references a runtime property that has not yet been initialized with a value. Unless you are sure that the property has been initialized before the system executes the action, make it more robust by using the nvl function (page 50).

Example:

set {Usage Counter} = nvl({Usage Counter}, OBDecimal) + 1BDecimal

clear

allows to delete the value of a property type, setting it to **undefined**.

Example:

clear {Usage Counter}

Resets the value of the given usage counter.

This command example can be used as action in a status transition such as from "Maintenance required" to "Maintenance performed" so that a new usage counter can be started with the next use of the equipment.

archive

forces the current entity to change its status to Archived.

Example:

archive

This command is intended for use with generated entities that are to be archived after use.

For inserting expression elements, you can either type the texts yourself or make use of the intelligent auto-completion feature provided by the editor:

- 1. When you start typing, the system displays all available, suitable, and matching elements in a drop-down option list. The search is not case-sensitive and the available options are sorted by their element types.
- 2. To open the full list of available expression elements, place your cursor in the empty expression panel and press the CTRL+SPACEBAR keyboard shortcut.
- Click the element you wish to insert or use the ARROW UP or ARROW DOWN
 keys to select it and then press the ENTER key to insert it.
 To close the drop-down list without inserting an option, click anywhere
 outside of the list or press the ESC key.
- 4. You can edit your expression manually at all times. Click anywhere in the expression panel to place your cursor and then type or delete characters as required.

TIP

Output identifiers are listed along with their respective data types. This information can help you to avoid using non-matching data types accidentally.

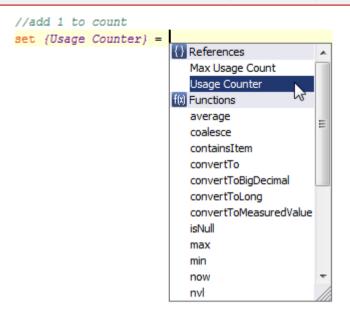


Figure 41: Expression panel with comment and auto-completion

The editor validates your input as you type and marks errors with a wavy, red underline as soon as they occur. Additionally, the editor displays an error icon to the left of the affected line.

Another indicator is the global error status marker in the top-right corner of the expression panel that turns red and expands downward to mark individual error positions if the expression contains errors.

To see a more explicit error message, hover your mouse cursor over any of the error indicators. The editor will then display the error message in a tooltip.

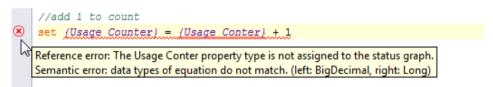


Figure 42: Expression panel with errors and message tooltip

CONSTANTS

Constants are differentiated by their data types:

Long used for integral numbers:

12345

■ Float

floating point number, can be used for fractional numbers, but needs a specific markup (**Float**) to be interpreted correctly by the system:

123.45Float

BigDecimal

floating point number that allows calculating with greater precision than Float. By default, the system interprets fractional numbers as BigDecimal, so a markup (**BDecimal**) is only necessary when you use an integral number, but want it to be treated as BigDecimal:

123.45 or **123BDecimal** or **12.3e42** (where **e** represents the exponential notation, and stands for "times ten raised to the power of").

TIP

BigDecimal values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

Boolean

with the values **true** and **false**.

String

used for displaying any sequence of characters, such as

"Read instruction text:"

TIP

Please note that a string constant must be enclosed in quotes.

Timestamp

used for displaying dates and times and for time-related calculations. Its full format is **dd-MMM-yyyy@H:M:s.S**, but you can leave out the either entire time section, or the seconds/milliseconds section, or just the milliseconds:

- 11-Jan-2013@12:13:54.232
- 3-Mar-2015
- 02-Sep-2013@12:13
- **2**9-May-2012@12:13:17

TIP

Please note that timestamp constants always refer to UTC time (Coordinated Universal Time, which is the equivalent to GMT), to make timestamp constants independent of time zones.

Duration

used for displaying time spans and for time-related calculations.

It supports the following time units: days (d), hours (h), minutes (min), seconds (s), and milliseconds (ms).

The following specifics apply to using durations in your expressions:

- Make sure to write the duration as consecutive string of characters without blanks, since otherwise, the system will not be able to interpret it correctly.
- You can leave out any units you do not need for specifying your duration, so instead of **0d6h0min30s0ms** you can write **6h30s**.
- You have to observe the order of the units, which means, for instance, that the system cannot interpret a duration that starts with seconds, followed by minutes and hours.
- The values you specify for the various time units must not exceed the maximum number of each time unit that would move it to the next higher unit. Thus, for hours (h) the maximum is 23, for minutes (min) and seconds (s) it is 59, and for milliseconds (ms) it is 999.

 This restriction, however, does not apply to the highest unit you specify, which means that the system allows a duration such as 49h30min15s, whereas typing 48h89min75s in this context would not be valid.
- MeasuredValue used for displaying numeric values qualified by a unit of measure.

TIP

MeasuredValue values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

The following specifics apply to using measured values in your expressions:

Make sure to write a measured value as string of characters without blanks as in

280kg or **29gal**

If a unit of measure itself contains a blank, you have to replace it with an underscore " " as in

125fl oz

■ You cannot use the MeasuredValue data type for time-related constants, use the Duration data type instead.

For calculations that have a measured value as result, the system returns the result in the unit of measure of the operand that is expected to provide greater accuracy, either because of the unit's finer granularity or due to a greater precision on account of the number of fractional digits:

$$1kg + 100g = 1100g$$

 $1.000kg + 100g = 1.100kg$

- The precision of plus and minus operations between measured values depends on the number of fractional digits given with the operand that has the unit of measure with the greater accuracy. Thus, the result of 1kg + 100.00g = 1100.00g whereas 1.00kg + 100g = 1100g.
- The precision of division operations between a measured value and a number or another measured value is established by adding the second operand's (divisor) base-10 logarithm to the number of fractional digits of the first operand (dividend):

 $<\!\!\text{number of fractional digits of dividend}\!\!>\!\!+\log(<\!\!\text{divisor}\!\!>\!\!).$

This means that the system calculates $3 + \log(100) = 5$ to determine the number of fractional digits for 10.000g / 100, and consequently returns 0.10000g.

The same calculation is used to establish the number of fractional digits in 10.000g / 100g = 0.10000.

■ Similarly, the precision of multiplication operations between a measured value and a number is established by subtracting the number's base-10 logarithm from the number of fractional digits of the measured value: <number of fractional digits of measured value> + log(<number>). So the system calculates 3 - log(100) = 1 to determine the number of fractional digits for 10.000g * 100 and returns 1000.0g.

TIP

Please note that the system generally rounds logarithms up, so that log(100) = 2, whereas log(101) = 3.

The calculation sequence of operators with the same precedence (page 43) is strictly left to right in pairs. Thus $\mathbf{a}+\mathbf{b}+\mathbf{c}+\mathbf{d}$ is interpreted as $((\mathbf{a}+\mathbf{b})+\mathbf{c})+\mathbf{d}$.

TIP

It is generally recommended to avoid mixing metric and US customary units of measure in calculations, since the results of these calculation depend on the units of measure, the precision of the individual operands, and their sequence.

Specific to these types of implicit conversion calculations is that after the system has determined the result unit of measure (that of the operand with the greater accuracy) it converts the other operand to match the result unit of measure. For converting, it uses the system-defined conversion relation. After having converted the operand, the system rounds the converted operand to the same precision it had in its initial unit of measure.

Mixed unit examples:

1 kg + 1000 g + 1000000 mg + 1.000 lb is interpreted as ((1 kg + 1000 g) + 1000000 mg) + 1.000 lb and returns 3453600 mg.

- In this case, the first two calculations increase the precision to milligrams and return **3000000mg**.
- The third calculation thus is **3000000mg** + **1.000lb** and the system performs the following steps:
 - 1. It determines the result unit of measure: **mg** (has the finer granularity).
 - It performs the conversion, using the system-defined relation 1lb = 0.453592370kg. This means a twofold conversion needs to take place: lb » kg and kg » mg (conversion relation 1mg = 0.000001000kg)
 1.000 * 0.453592370 / 0.000001000 = 453592.370000000000, which is then rounded to 453600 to have the same (4-digit) precision as the lb value. So the result of the conversion is 453600mg.
 - It performs the calculation:
 3000000mg + 453600mg = 3453600mg

No further changes to the precision are required.

1.000lb + 1kg + 1000g + 1000000mg is interpreted as ((1.000lb + 1kg) + 1000g) + 1000000mg and returns 3360900mg.

- In this case, each of the three calculations also involves a conversion.

 The first calculation is **1.000lb** + **1kg** and the system runs the three steps:
 - 1. Result unit of measure: **lb**
 - Conversion: lb » kg with conversion relation: llb = 0.453592370kg
 1 * 1.000000000 / 0.453592370 = 2.204622622, rounded to 2. So the result of the conversion is 2lb.
 - 3. Calculation:

1.000lb + 2lb = 3.000lb

The result has a precision of three fractional digits.

- The second calculation is **3.000lb** +**1000g**:
 - 1. Result unit of measure: **lb**
 - 2. Conversion: $\mathbf{g} \gg \mathbf{kg}$ and $\mathbf{kg} \gg \mathbf{lb}$ with conversion relations $1\mathbf{g} = 0.0000100000\mathbf{kg}$ and $11\mathbf{b} = 0.453592370\mathbf{kg}$ 1000 * 0.001000000 / 0.453592370 = 2.204622622, rounded to 2.205. So the result of the conversion is 2.2051b.
 - 3. Calculation:

3.000lb + 2.205lb = 5.205lb

The result has a precision of three fractional digits.

- The third calculation is **5.205lb** + **1000000mg**:
 - 1. Result unit of measure: mg
 - Conversion: twofold, lb » kg and kg » mg with conversion relations
 1mg = 0.000001000kg 1lb = 0.453592370kg and 1mg = 0.000001000kg
 5.205 * 0.453592370 / 0.000001000 = 2360948.285850000000, rounded to
 2360900. So the result of the conversion is 2360900mg.
 - 3. Calculation:

2360900mg + 1000000mg = 3360900mg

No further changes to the precision are required.

Operators

Operators apply to operands, like in $\mathbf{A} + \mathbf{B}$, where \mathbf{A} and \mathbf{B} are the operands to which the + operator applies.

A **unary** operator applies to only one operand, whereas a **binary** operator applies to two operands.

When it comes to evaluating expressions, it is important to be aware of the precedence rule that applies to the operations and defines the order in which the operations of an expression are performed. The following list shows the order of operations, starting with the highest-precedence operation:

- 1. unary plus (+) and minus (-)
- 2. multiply (*) and divide (/)
- 3. binary plus (+) and minus (-)
- 4. all comparison operators:
 - equal to (==)
 - not equal to (!=)
 - less than (<)
 - less than or equal to (<=)

- greater than (>)
- greater than or equal to (>=)
- 5. logical NOT
- 6. logical AND
- 7. logical OR

TIP

When your expression contains a sequence of operations that have the same precedence, it is recommended to use parentheses to disambiguate the order in which they are processed.

To insert an operator at the current cursor position in the expression panel (page 34), double-click its node in the tree.

ARITHMETIC OPERATORS

Arithmetic operators allow you to perform calculations between numeric values.

■ Plus (+)

binary, is used for additions or string concatenations:

({Check ph value 01}.{instance count} + {Check ph value 02}.{instance count}) <= 4

"Date of execution: " + convertToDisplayString(now())

Operations with binary plus for time-related operands, measured values, and strings and their results:

Left Operand	Right Operand	Operation Result
Duration	Duration	Duration
Timestamp	Duration	Timestamp
MeasuredValue	MeasuredValue	MeasuredValue (can return Undefined)
String	String	String

TIP

Please note that an operation with incompatible operands, such as lengths (e.g. meters) and weights (e.g. pounds) returns **Undefined** as result.

■ Plus (+)

unary, is rarely used, since numbers without a sign are assumed to be positive.

Operations with unary plus for time-related operands and/or measured values and their results:

Left Operand	Right Operand	Operation Result
N/A	Duration	Duration
N/A	MeasuredValue	MeasuredValue

■ Minus (-)

binary, is used for subtractions:

 $\label{eq:count} \mbox{- \{Check ph value 01\}.\{instance count\} >= -1}$

Operations with binary minus for time-related operands and/or measured values and their results:

Left Operand	Right Operand	Operation Result
Duration	Duration	Duration
Timestamp	Duration	Timestamp
Timestamp	Timestamp	Duration
MeasuredValue	MeasuredValue	MeasuredValue (can return Undefined)

TIP

Please note that an operation with incompatible operands, such as lengths (e.g. meters) and weights (e.g. pounds) returns **Undefined** as result.

■ Minus (-)

unary, is used for negations:

{Adjust ph value}.{instance count} - {Check ph value 01}.{instance count} >= -1

Operations with unary minus for time-related operands and/or measured values and their results:

Left Operand	Right Operand	Operation Result
N/A	Duration	Duration
N/A	MeasuredValue	MeasuredValue

■ Multiply (*)

binary, is used for multiplications:

 ${Adjust\ ph\ value}.{instance\ count}*2 \le {Check\ ph\ value\ 01}.{instance\ count}$

Multiplication operations with time-related operands and/or measured values and their results:

Left Operand	Right Operand	Operation Result
Number (Long, Float, BigDecimal)	Duration	Duration
Duration	Number (Long, Float, BigDecimal)	Duration
MeasuredValue	Number (Long, Float, BigDecimal)	MeasuredValue
Number (Long, Float, BigDecimal)	MeasuredValue	MeasuredValue

TIP

Please note that you can turn a Number data type into a MeasuredValue by multiplying the numeric value with 1<unit of measure>.

Example:

20 * 1kg = 20kg

■ Divide (/)

binary, used for divisions:

{Adjust ph value}.{instance count} / {Check ph value 01}.{instance count} > 1

TIP

Please note that when the right operand of your division is a reference that returns **0** or **undefined**, the result of the division is also **undefined**.

Division operations with time-related operands and/or measured values and their results:

Left Operand	Right Operand	Operation Result
Duration	Duration	BigDecimal
Duration	Number (Long, Float, BigDecimal)	Duration
MeasuredValue	MeasuredValue	BigDecimal (can return Undefined)
MeasuredValue	Number (Long, Float, BigDecimal)	MeasuredValue

TIP

Please note that an operation with incompatible operands, such as lengths (e.g. meters) and weights (e.g. pounds) returns **Undefined** as result.

COMPARISON OPERATORS

Comparison operators are necessarily all binary, since they compare two operands.

TIP

Please note that if one or both of the operands are **undefined**, the result of the comparison itself is **undefined**.

- Equal to (==)
 {Read instruction}.{out} == OK
- Not equal to (!=)
 {Read instruction}.{out} != OK
- Less than (<) {Adjust ph value}.{instance count} < 3</p>
- Less than or equal to (<=)
 {Check ph value}.{value} <= 5.5
- Greater than (>)
 {Adjust ph value}.{instance count} > 3
- Greater than or equal to (>=) {Check ph value}.{value} >= 5.5

LOGICAL OPERATORS

Logical operators always return **true**, **false**, or **undefined** as result. **Undefined** (null) can happen, for instance, when one of the operands of the logical operation is **undefined**.

TIP

Please note the order of precedence that applies to logical operations, with NOT preceding AND and OR, which has the lowest precedence. This means that NOT A OR B is interpreted as (NOT A) OR B.

The results of logical operations correspond to the three-valued logic used by SQL.

Α	В	NOTA	A OR B	A AND B	A = B
true	true	false	true	true	true
true	false		true	false	false
true	undefined		true	undefined	undefined
false	true	true	true	false	false
false	false		false	false	true
false	undefined		undefined	false	undefined
undefined	true	undefined	true	undefined	undefined
undefined	false		undefined	false	undefined
undefined	undefined		undefined	undefined	undefined

Figure 43: Three-valued truth table

■ Conjunction (AND) binary, an expression **A AND B** returns true only if both A and B are true.

А	В	A AND B
true	true	true
true	false	false
true	undefined	undefined
false	true	false
false	false	false
false	undefined	false
undefined	true	undefined
undefined	false	false
undefined	undefined	undefined

Figure 44: Truth table - A AND B

■ Disjunction (OR)

binary; an expression $\bf A$ $\bf OR$ $\bf B$ returns true if either $\bf A$ or $\bf B$ or both $\bf A$ and $\bf B$ are true.

•
•
•
•
•

Α	В	A OR B
true	true	true
true	false	true
true	undefined	true
false	true	true
false	false	false
false	undefined	undefined
undefined	true	true
undefined	false	undefined
undefined	undefined	undefined

Figure 45: Truth table - A OR B

■ Negation (NOT)

unary, an expression $\operatorname{\mathbf{NOT}}$ A returns true for any value (not undefined) other than A.

Α	NOTA
true	false
false	true
undefined	undefined

Figure 46: Truth table - NOT A

Functions

The Expression editor provides a number of functions whose implementation with the available operators would either lead to very complex expressions or would not be possible at all.

A function consists of its name typically followed by one or more comma-separated arguments in parentheses:

function_name(arg1, arg2, ...)

TIP

Please note that you can also use references as arguments. This may, however, cause an argument to be **undefined**.

- To insert a function with sample arguments at the current cursor position in the expression panel (page 34), double-click its node in the tree.
- To view a function with sample arguments, hover your mouse cursor over the function. The system displays the entire function as tooltip.

NULL HANDLING FUNCTIONS

Null handling functions provide the means for dealing with phases that return **undefined** as output.

- Undefined one of two (nvl) inserted as **nvl(arg1, arg2)**It has the following characteristics:
 - It expects exactly two arguments of the same data type.
 - It evaluates the arguments from left to right and returns the first argument that is not **undefined** as result.
 - If all arguments are **undefined**, its result is also **undefined**.
- Undefined one of many (coalesce) inserted as coalesce(arg1, arg2, ...)It has the following characteristics:
 - It expects at least two arguments of the same data type.
 - It evaluates the arguments from left to right and returns the first argument that is not **undefined** as result.
 - If all arguments are undefined, its result is also undefined.
- Is undefined (isNull) inserted as isNull(arg1)It has the following characteristics:
 - It expects exactly one argument of any data type.
 - It returns **true** as result if the argument is **undefined**. In all other cases it returns **false** as result.

ANALYSIS FUNCTIONS

Analysis functions are a collection of functions for retrieving and inserting external information, such as a timestamp, or for parsing external information to return a result.

Current Date and Time (now) inserted as now()It has the following characteristics:

- It does not expect any argument.
- At evaluation time, i.e. during execution, it returns a Timestamp data type, which provides the then current time of the database server.
- Contains Item (containsItem)
 inserted as containsItem(arg1, arg2 [, arg3])
 It has the following characteristics:
 - It expects at least two arguments of the String data type. The third argument is optional.
 - It parses a separator-delimited list (arg1) for occurrences of a specified list item (arg2).
 - By default, it uses semicolon (;) as separator character. With **arg3**, however, you can declare another separator character.
 - If it locates an occurrence of arg2, it returns true, if not, it returns false.
 - If either of the three arguments is **undefined**, its result is also **undefined**.

TIP

This function is especially suited to deal with lists of tags returned from automated equipment. For these purposes, you would use the full list of potential return values of a FlexibleTagDefinition property as **arg1** and the identifier of the tag you wish to monitor as **arg2**.

Examples:

containsItem("AlarmHighTemp;AlarmLowPressure;AlarmEmergencyShutOff", "AlarmLowPressure") returns **true**

containsItem("AlarmHighTemp:AlarmLowPressure:AlarmEmergencyShutOff", "AlarmPressureLimit", ":") returns false

CONVERSION FUNCTIONS

Conversion functions are a collection of functions that allow to convert the data type of a value to another data type.

Convert to Unitless Number (convertTo) inserted as convertTo(arg1, arg2)
 It has the following characteristics:

■ It expects a measured value or a duration as first argument and as second argument a suitable, convertible unit of measure given as string. It returns a BigDecimal data type.

TIP

Please note that some phases may return measured values without a unit of measure. Even though these values look like a BigDecimal, their data type is still MeasuredValue, which you need to convert to BigDecimal in order to allow calculations. In this case, you have to provide an empty string as second argument.

Examples:

- convertTo(15m, "m") returns 15
- convertTo(1h5min, "s") = 3900
- \blacksquare convertTo(12min,"h") = 0.2
- convertTo({<phase identifier>}.{<output>}, "") returns the unitless value from the phase output as BigDecimal value.
- If the unit of measure defined for the second argument does not exist, the result is undefined.
- If one of the arguments is **undefined**, its result is also **undefined**.
- Convert to BigDecimal (convertToBigDecimal) inserted as convertToBigDecimal(arg1)
 It has the following characteristics:
 - It expects an argument of a numeric data type, such as a Long or Float and converts it to a BigDecimal data type.

Examples:

- convertToBigDecimal(12345) returns 12345BDecimal
- convertToBigDecimal(123.45Float) returns 123.45
- If the argument is **undefined**, its result is also **undefined**.

Convert to Long (convertToLong) inserted as **convertToLong(arg1, arg2)**

It has the following characteristics:

- It expects a fractional number, typically a BigDecimal, as first argument and as second argument a rounding mode, given as string.
- The following rounding modes are available:
 - HALF_UP: rounds towards the nearest integral number, unless there are two integrals at exactly the same distance. In this case it rounds away from zero.
 - CEILING: always rounds up.
 - FLOOR: always rounds down.

Examples:

- convertToLong(2.5, "HALF_UP") returns 3
- convertToLong(-1.6, "HALF_UP") returns -2
- convertToLong(1.3, "CEILING") returns 2
- convertToLong(-1.7, "CEILING") returns -1
- convertToLong(2.6, "FLOOR") returns 2
- convertToLong(-1.1, "FLOOR") returns -2
- If either or both arguments are **undefined**, its result is also **undefined**.
- Convert to MeasuredValue (convertToMeasuredValue) inserted as convertToMeasuredValue(arg1 [, arg2]) It has the following characteristics:
 - It expects at least one argument of a numeric data type (Long, Float, or BigDecimal) as first argument and as second argument a unit of measure given as string. The second argument is optional.
 - It converts the numeric value into a MeasuredValue data type with the unit of measure indicated as **arg2**. If you do not define the second argument, the system still converts the numeric value, so that it returns MeasuredValue without unit of measure.

Examples:

- convertToMeasuredValue(15, "m") returns 15 m
- convertToMeasuredValue(34.8) returns 34.8

■ If the unit of measure defined for the second argument does not exist, the result is **undefined**.

■ If the numeric value argument (arg1) is undefined, its result is also undefined.

AGGREGATION FUNCTIONS

Aggregation functions provide the means to evaluate two and more output values to determine the highest, lowest, or the average of all values.

Average (average)

inserted as average(arg1, arg2, ...)

It has the following characteristics:

- It expects at least two arguments of the same numeric data type.
- It ignores arguments that are **undefined**.
- It calculates the average of all usable (not **undefined**) arguments.
- If only one argument is usable, its result equals the argument.
- If all arguments are **undefined**, its result is also **undefined**.

TIP

When you use the **Average** function with arguments of the MeasuredValue data type, the system returns the result in the unit of measure of the first operand.

■ Maximum (max)

inserted as max(arg1, arg2, ...)

It has the following characteristics:

- It expects at least two arguments of the same, comparable data type.
- It ignores arguments that are undefined.
- It determines the largest of all usable (not **undefined**) arguments.
- If only one argument is usable, its result equals the argument.
- If all arguments are **undefined**, its result is also **undefined**.

- Minimum (min)inserted as min(arg1, arg2, ...)It has the following characteristics:
 - It expects at least two arguments of the same, comparable data type.
 - It ignores arguments that are **undefined**.
 - It determines the smallest of all usable (not **undefined**) arguments.
 - If only one argument is usable, its result equals the argument.
 - If all arguments are **undefined**, its result is also **undefined**.

FlexibleAttributeDefinition Editor

The FlexibleAttributeDefinition editor supports you with creating and configuring a bundle of runtime attributes.

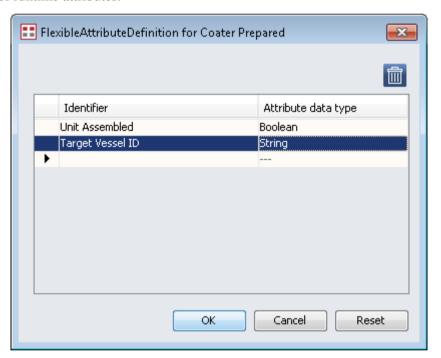


Figure 47: FlexibleAttributeDefinition editor for property type

FlexibleAttributeDefinition for Coater Prepared

Identifier Value Attribute data type
Unit Assembled N/A Boolean
Target Vessel ID

OK Cancel Reset

Figure 48: FlexibleAttributeDefinition editor for property of equipment class

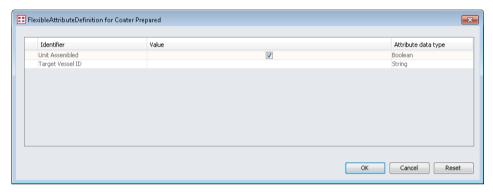


Figure 49: FlexibleAttributeDefinition editor for property of equipment entity

■ When you define a property type, you need to create the list of runtime attributes you wish to group. For each property you have to specify an identifier and set its attribute data type (Boolean, DateTime, Duration, Long, MeasuredValue, String).

TIP

Please note that the identifier you define is displayed later during processing to the operator on the shop floor. So it makes sense to create a human-readable, non-cryptic identifier.

- When you define a property for an equipment class, you can only view the list of attributes defined with the property type.
- When you define a property for an equipment entity, you can set values for the individual attributes.
 - The identifiers and attribute data types are specified with the property type and cannot be changed.
- To save your data and close the FlexibleAttributeDefinition editor, click the **OK** button.
- To close the FlexibleAttributeDefinition editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

FlexibleStateModel Editor

The FlexibleStateModel editor supports you with defining a status graph to govern an equipment entity and with setting the required status the equipment entity must have to be suitable for use.

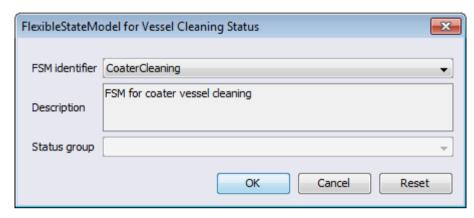


Figure 50: FlexibleStateModel editor for property type



Figure 51: FlexibleStateModel editor for property

- When you define a property type you can only select the FlexibleStateModel and thus the status graph with its semantic status groups.
- When you assign the property type to a class or entity, you cannot make any further definitions on the property. Selecting a status group is only available when you turn the property into a requirement by using it during recipe or workflow design.
- To save your data and close the FlexibleStateModel editor, click the **OK** button.
- To close the FlexibleStateModel editor without saving your changes, click the Cancel button.
- To reset the FlexibleStateModel definition to its last saved form, click the **Reset** button.

FlexibleTagDefinition Editor for Automation

The FlexibleTagDefinition editor supports you with creating and configuring a bundle of automation properties mapped to individual tags of an equipment entity.

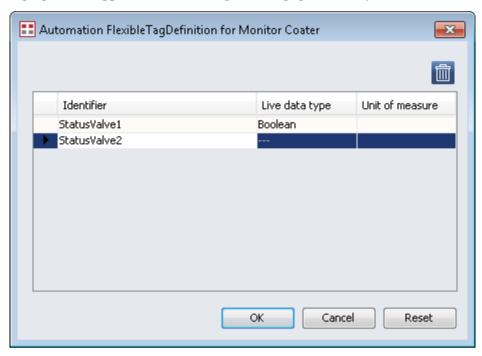


Figure 52: Automation FlexibleTagDefinition editor for property type

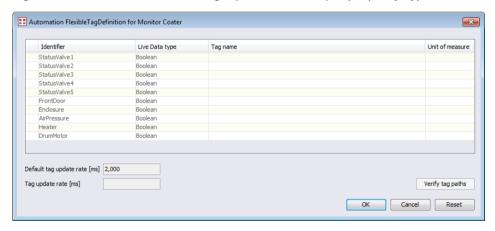


Figure 53: Automation FlexibleTagDefinition editor for property of equipment class



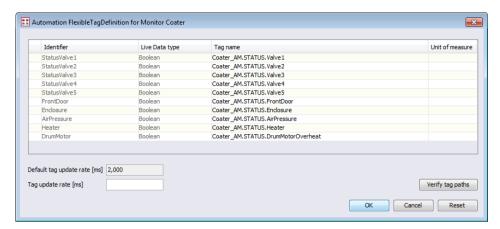


Figure 54: Automation FlexibleTagDefinition editor for property of equipment entity

When you define a property type, you need to create the list of properties you wish to monitor on the equipment. For each property you have to specify an identifier, set its Live Data type (**Boolean**, **Double**, **Float**, **Integer**, **String**), and select a unit of measure, if necessary. If there is no suitable unit available in the option list, you can leave the cell blank.

TIP

Please note that the identifier you define is displayed later during processing to the operator on the shop floor. So it makes sense to create a human-readable, non-cryptic identifier.

- When you define a property for an equipment class, you can only view the list of properties defined with the property type.
- When you define a property for an equipment entity, you need to specify to which tags of your equipment you wish to map the properties defined in your list and with which update rate the system is to access the tags.
 - To check if the indicated tag names correspond to existing tag names on the equipment entity, click the **Verify tag paths** button.
 - The identifiers, Live Data types, and units of measure are specified with the property type and cannot be changed.
- To save your value and close the FlexibleTagDefinition editor, click the **OK** button.
- To close the FlexibleTagDefinition editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

GraphStatusChange Editor

The GraphStatusChange editor supports you with changing the current status of an entity along with the expiry date of the status, if it can expire.

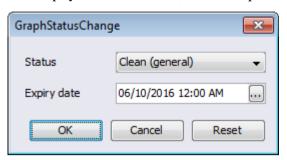


Figure 55: GraphStatusChange editor for graph of entity

- To save the status changes and close the GraphStatusChange editor, click the **OK** button.
- To close the GraphStatusChange editor without saving the status changes, click the **Cancel** button.
- To reset the status to its last saved form, click the **Reset** button.

Label Layout Selection Editor

The Label Layout Selection editor supports you with selecting the layout for the labels of entities.

TIP

Please note that the available label layouts are maintained outside of PharmaSuite as Report Design objects in FactoryTalk ProductionCentre Process Designer.

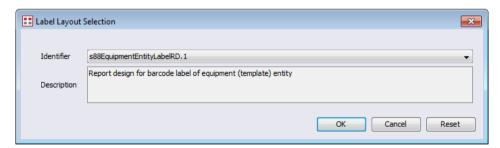


Figure 56: Label Layout Selection editor

- To save your selection and close the Label Layout Selection editor, click the **OK** button.
- To close the Label Layout Selection editor without saving your changes, click the Cancel button.
- To reset your selection to its last saved form, click the **Reset** button.

Measured Value Editor

The Measured Value editor supports you when you enter a value with a unit of measure. **Scale** indicates the number of fractional digits.

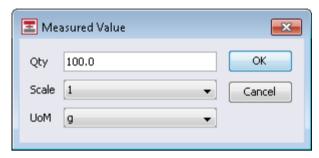


Figure 57: Measured Value editor

- To save your value and close the Measured Value editor, click the **OK** button.
- To close the Measured Value editor without saving your changes, click the Cancel button.

Multi-line Text Editor

The Multi-line Text editor supports you when you need to write text that is too long for a simple input box.

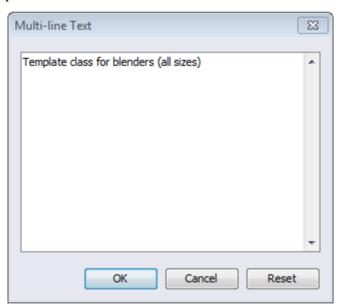


Figure 58: Multi-line Text editor

- To save your text and close the Multi-line Text editor, click the **OK** button.
- To close the Multi-line Text editor without saving your changes, click the **Cancel** button.
- To reset your text to its last saved form, click the **Reset** button.

Ranges Editor

The Ranges editor supports you with defining the ranges of your equipment. You can define up to three ranges per equipment by specifying the high and low limits, the resolution, and the unit of measure of each range.

TIP

Please note that the system expects the same unit of measure for all ranges of an equipment object.

When used with a scale equipment entity during execution, the system evaluates the ranges defined for the connected scales and proposes the scale and range that is best suited to weigh the target quantity.

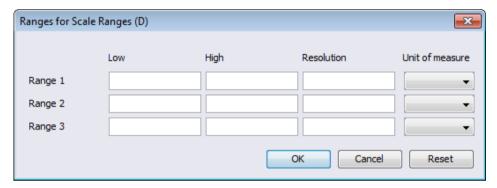


Figure 59: ScaleRanges editor for property

■ When you define a property for an equipment class, you can set all values. The system checks that entities of the class match the defined values.

TIP

If you set attribute values to **Undefined**, for example by leaving an input box blank, the entities assigned to the class can have any value.

- When you define a property for an equipment entity, you can set all values and thus provide the information necessary for using the entity during execution.
- To save your data and close the Ranges editor, click the **OK** button.
- To close the Ranges editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

ScaleConfiguration Editor

The ScaleConfiguration editor supports you with entering scale driver and scale connection data.

Manual scale

Select this option if the scale is always operated manually and never connected to the system.

TIP

Please note that the only data you need to configure for a manual scale is its **Resolution factor** setting (page 64). All other settings or options are ignored by the system.

Scale driver

Select the scale driver to be used.

TIP

Make sure to select a driver that supports all driver features you need to select.

COM port

The COM port number.

TIP

If the scale connects to the system by Ethernet (TCP/IP protocol), the COM port must be left blank.

TCP server / port

The TCP server and port number of the device that connects the scale to the system. This can either be the scale itself or the terminal to which the scale connects.

TIP

If the scale connects to the system by COM port, the TCP server and port must be left blank.

Terminal number

If the scale connects directly to the computer at the work center, the setting typically is 0. If the work center setup includes a terminal that connects to several scales, the terminal number reflects the scale number within the terminal.

Resolution factor

Must be greater than 0 and less than 1000 and has a default value of 10. The factor is used in **Release scale** phases of Weighing or Dispense operations to calculate the tolerance around 0 that determines if a release scale check passes or fails. The factor is multiplied with the resolution defined for the lowest range of the scale that is about to be released.

Example:

During the **Weigh** phase of a Dispense operation the scale range used has a resolution of 0.02, by definition in the **Range** property (page 62) of the scale. The resolution factor is 5.

When executing the release scale check of the subsequent **Release scale** phase, the system calculates 0.02 * 5 = 0.1 and derives a tolerance range of -0.1 to 0.1 from the result. If the scale value received from the scale is within this range, the release check passes; if not, it fails.

Zeroing

Select this option if the scale can zero.

TIP

This feature is required to zero a scale after the **Select scale** phase of a Weighing ode Dispense operation has completed.

Manual tare

Select this option if the scale supports manual taring, which means that a tare value can be sent to the scale.

TIP

This feature is required for the **Gross** and **Pallet** weighing methods of a Weighing or Dispense operation.

Tare

Select this option if the scale can process tare commands.

TIP

This feature is required for the **Net** and **Net removal** weighing methods of a Weighing or Dispense operation.

Weighing

Select this option if the scale can process weigh commands. This option controls, for example, if the scale control continuously updates the displayed scale value.

TIP

This feature is required for all weighing methods of a Weighing or Dispense operation.

Get serial number Select this option if the scale can be identified by its serial number when it is accessed.

TIP

Please note that the **Select scale** phase of a Weighing or Dispense operation does not support this feature.

- Scale keyboard lockable
 Select this option if the scale's keyboard can be locked and its driver has the control of this option implemented. It is a required feature if you wish to select the **Disable scale keyboard** option (page 65).
- Disable scale keyboard

 Select this option if the scale keyboard is to be disabled when the scale is used during execution. For this configuration the scale driver must also support the Scale keyboard lockable feature (page 65).
- Send nominal value
 Select this option if the scale can receive nominal values to display them.
- Calibration with adjustment
 Select this option if the scale performs calibration with subsequent adjustment.
- Calibration without adjustment Select this option if the scale supports a calibration procedure that only establishes the result of the performed test weighing, but does not adjust the scale.

ScaleConfiguration for Scale Config (D) × Supported driver features Manual scale N/A → No Zeroing • Scale driver Manual tare No COM port Tare No • Weighing No • TCP server / port Get serial number Scale keyboard lockable No Terminal number Disable scale keyboard No • Resolution factor Send nominal value • Calibration without adjustment No Calibration with adjustment No OK Cancel Reset

Figure 60: ScaleConfiguration editor for property of class

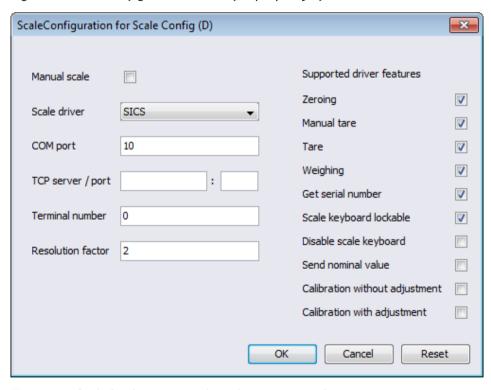


Figure 61: ScaleConfiguration editor for property of entity

■ When you define a property for an equipment class, you can set all values. The system checks that entities of the class match the defined values.

TIP

If you set attribute values to **Undefined**, for example by selecting --- or **N/A** as list option, the entities assigned to the class can have any value.

- When you define a property for an equipment entity, you can set all values and thus provide the information necessary for using the entity during execution.
- To save your data and close the ScaleConfiguration editor, click the **OK** button.
- To close the ScaleConfiguration editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

ScaleTestAndCalibration Editor

The ScaleTestAndCalibration editor supports you with defining the test weights and additional test and calibration information. You can define up to twenty test weights per scale by specifying the where on the scale an operator shall place the weight (**Position**), the **Expected value**, as well as the **Upper tolerance** and the **Lower Tolerance**, in the unit of measure of the value.

TIP

Please note that the system expects the same number of fractional digits for the **Expected value**, the **Lower tolerance**, and the **Upper tolerance** of a test weight.

If required, you can define additional comments for test and calibration, which a recipe or workflow author can choose to display as instructions to operators on the shop floor.

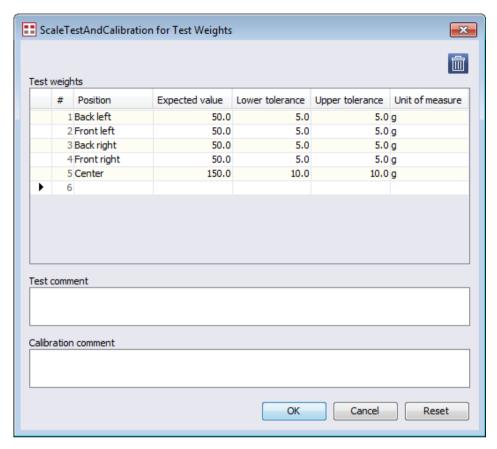


Figure 62: ScaleTestAndCalibration editor for property

■ When you define a property for an equipment class, you can set all values. The system checks that entities of the class match the defined values.

TIP

If you set attribute values to **Undefined**, for example by leaving an input box blank, the entities assigned to the class can have any value.

- When you define a property for an equipment entity, you can set all values and thus provide the information necessary for using the entity during execution.
- To save your data and close the ScaleTestAndCalibration editor, click the **OK** button.
- To close the ScaleTestAndCalibration editor without saving your changes, click the **Cancel** button.
- To reset your data to its last saved form, click the **Reset** button.

Searchable Option List Editor

The Searchable Option List editor supports you with selecting from option lists with a large number of selectable items.

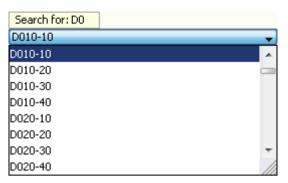


Figure 63: Searchable Option List editor

- To view all options, open the list and use the scroll bar or enlarge the list by dragging the handle in its lower right corner.
- To find specific options, start typing. The system immediately moves the list to the first option that starts with the character you have typed and selects it.
- To refine your search, type again. The system opens a temporary search box, displaying the search string you are typing and also indicates if there are no list options to match the string.

String Editor for Automation

The String editor supports you with handling any sequence of characters, such as a batch identifier, you need to communicate to or from an automated equipment entity. In addition, you can select verification schemas for tags that verify a value's tag health, its simulation status, or its maintenance status.

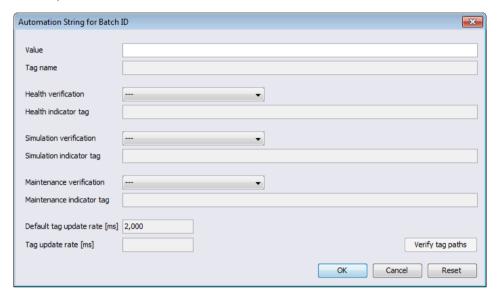


Figure 64: Automation String editor for property of equipment class

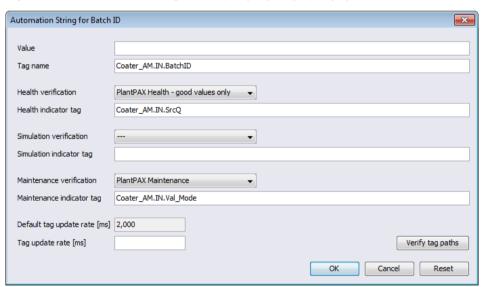


Figure 65: Automation String editor for property of equipment entity

■ When you define a property for an equipment class, you can set a value and select verification schemas. The data only has informational value, however and is neither matched against the data defined for entities of the class nor against data defined with a property requirement during recipe or workflow design.

■ When you define a property for an equipment entity, you can set a value and select verification schemes. At this point you also need to define to which tags of your equipment you wish to map the defined value and schemes and with which update rate the system is to access the tags.

TIP

To see the list of tags available at your equipment, you can use the Live Data Test Client to browse to the equipment using the Live Data Area path defined with the Automation attributes on the **Basic** tab (page 161) of the equipment.

- To check if the indicated tag name corresponds to an existing tag name on the equipment entity, click the **Verify tag paths** button.
- To save your data and close the Automation String editor, click the **OK** button.
- To close the Automation String editor without saving your changes, click the Cancel button.
- To reset your data to its last saved form, click the **Reset** button.

String Editor for Historian

The String editor supports you with handling any sequence of characters, such as a process step descriptor, you wish to display on a historical data chart.

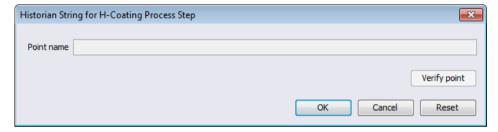


Figure 66: Historian String editor for property of equipment class

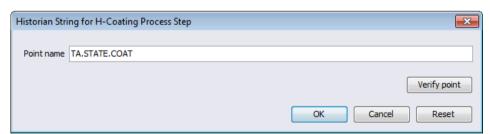


Figure 67: Historian String editor for property of equipment entity

- When you define a property for an equipment class, you cannot set any values.
- When you define a property for an equipment entity, you need to define which point of your Historian server you wish access to retrieve values.

 To check if the indicated point name corresponds to an existing point defined on the Historian server, click the **Verify point** button.

- To save your data and close the Historian String editor, click the **OK** button.
- To close the Historian String editor without saving your changes, click the Cancel button.
- To reset your data to its last saved form, click the **Reset** button.

Graphical Elements

The following lists contain all buttons, marker icons, and cursors used in Data Manager.

Toolbar Buttons

Action buttons displayed in the toolbars:





E Change status

In the Equipment mode of Data Manager, located on the File toolbar, it triggers a status change (page 123) for the object that is currently active in the lower tab bar of the Details window.





Located on the File toolbar, it closes the Details view of the object that is currently active in the lower tab bar.





Located on the File toolbar, it deletes the object that is currently active in the lower tab bar of the Details window.





Located on the Help toolbar, it opens the context-sensitive help system (page 7) of Data Manager.





New equipment class

In the Equipment mode of Data Manager, located on the File toolbar, it creates a new equipment class, thus first opening the New Equipment Class dialog and afterwards a new tab in the lower tab bar of the Details window.





New equipment entity

In the Equipment mode of Data Manager, located on the File toolbar, it creates a new equipment entity, thus first opening the New Equipment Entity dialog and afterwards a new tab in the lower tab bar of the Details window.







A New equipment graph

In the Equipment mode of Data Manager, located on the File toolbar, it creates a new equipment graph, thus first opening the New Equipment Graph dialog and afterwards a new tab in the lower tab bar of the Details window.



New property type

In the Equipment mode of Data Manager, located on the File toolbar, it creates a new property type, thus first opening the **New Property Type** dialog and afterwards a new tab in the lower tab bar of the Details window.





🖳 🖳 New station

In the Work Center mode of Data Manager, located on the File toolbar, it creates a new station, thus first opening the **New Station** dialog and afterwards a new tab in the lower tab bar of the Details window.





New template equipment entity

In the Equipment mode of Data Manager, located on the File toolbar, it creates a new template equipment entity, thus first opening the New Template Equipment Entity dialog and afterwards a new tab in the lower tab bar of the Details window.





New work center

In the Work Center mode of Data Manager, located on the File toolbar, it creates a new work center, thus first opening the New Work Center dialog and afterwards a new tab in the lower tab bar of the Details window.





Print barcode label

In the Equipment mode of Data Manager, only available for equipment entities.

In the Work Center mode of Data Manager, only available for stations.

Located on the File toolbar, it sends the barcode of the equipment entity or station that is currently active in the Details window for printing to a connected printer.





Only available if there are no unsaved changes.

Refreshes the object that is currently active in the lower tab bar of the Details window by retrieving its data again from the database. Thus it updates all runtime data, such as runtime properties, graph statuses or grouping situations, which may have changed due to processing activities on the shop floor.





Located on the File toolbar, it saves all changes made to the object that is currently active in the lower tab bar of the Details window. This action saves all changes made on the object's attributes and properties tabs.





Located on the View toolbar, it zooms in on the currently active search result, switching the display to the next larger view, either tiles or cards.





Zoom out

Located on the View toolbar, it zooms out from the currently active search result, switching the display to the next smaller view, either tiles or mini tiles.

Action Buttons

Action buttons available on the panels of Data Manager:





- For equipment graphs, on their **Status/Trigger** tab, deletes the selected status or trigger.
- For equipment graphs, on their **Transition** tab, deletes the selected transition.





B Display on card

In the Equipment mode of Data Manager, on the dynamic properties tabs of the Details window of equipment classes, toggle button to define if a property is displayed on the card view of the class itself and all entities it styles. You can select a maximum of four properties for display on a card view.





Filter for classes

In the Equipment mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of equipment classes in the search results panel.





Filter for entities

In the Equipment mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of equipment entities in the search results panel.





A Filter for graphs

In the Equipment mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of equipment graphs in the search results panel.





Filter for property types

In the Equipment mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of property types in the search results panel.



Filter for stations

In the Work Center mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of stations in the search results panel.





• Filter for template entities

In the Equipment mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of template equipment entities in the search results panel.





Filter for work centers

In the Work Center mode of Data Manager, located on the search criteria panel (page 92), it toggles the display of work centers in the search results panel.





Move down

In the Equipment mode of Data Manager

- on the dynamic properties tabs of the Details window, for sorting the list of properties. It moves the selected property one row down.
- for equipment classes and entities on their **Graph** tabs, for sorting the list of graphs. It moves the selected graph one row down.
- for equipment graphs on their **Transition** tabs, for sorting the sub-tables for actions. It moves the selected action one row down, thus changing the order in which the actions are executed.





In the Equipment mode of Data Manager

- on the dynamic properties tabs of the Details window, for sorting the list of properties. It moves the selected property one row up.
- for equipment classes and entities on their **Graph** tabs, for sorting the list of graphs. It moves the selected graph one row up.
- for equipment graphs on their **Transition** tabs, for sorting the sub-tables for actions. It moves the selected action one row up, thus changing the order in which the actions are executed.





Print equipment logbook report

In the Equipment mode of Data Manager, on Logbook tabs of the Details window, opens the equipment logbook report in a preview window, from which you can send it to a connected printer.





Open cell editor

Located in a focused table cell of the Details window, it opens a suitable cell editor for editing the content of a cell.





For searching with the Search window and date range filtering in the Change History tabs of the Details window, synchronizes the database snapshot taken at the beginning of the search or filter operation with the central database.

In the Equipment mode of Data Manager, also available for Logbook and Status History tabs of the Details window.





Remove

- On the dynamic properties tabs of the Details window, removes the selected property from the list, thus revoking the assignment of the property type to the object.
- For equipment classes
 - on their **Graph** tabs in the Details window, removes the selected graph from the list, thus revoking the assignment of the graph to the class.
 - on their **Entity** tabs in the Details window, removes the selected equipment entity from the list, thus revoking the assignment of the entity to the class.
- For equipment entities
 - on their **Graph** tabs in the Details window, removes the selected graph from the list, thus revoking the assignment of the graph to the entity.
 - on their **Class** tabs in the Details window, removes the selected equipment class from the list, thus revoking the assignment of the class to the entity.
 - on their **Grouping** tabs in the Details window, removes the selected equipment entity from the list, thus revoking the assignment of the child entity to the entity.
- For equipment graphs on their **Property Type** tabs, removes the selected property type from the list, thus revoking the assignment of the property type to the graph.
- For work centers, on their **Station** tabs in the Details window, removes the selected station from the list, thus revoking the assignment of the station to the work center.

Marker Icons

Marker icon displayed in Data Manager:



O Class

On the card or tile views of an object, indicates that the object is a class, holding a group of entities.







🗟 🖺 🖀 🎽 📤 Displayed on card

On the dynamic properties tabs of the Details window, displayed as overlay on the usage/object type markers (page 77) for Specification, Automation, Runtime, Historian usage types, or the Graph object type to the left of a listed property or object. Indicates that the property or object data has been selected for display on the object's card view.

O Entity

On the card or tile views of an object, indicates that the object is an entity.

Error

Displayed in the Details window of equipment graph objects, on the tables of the Status/Trigger and Transition tabs, it indicates that the marked table row contains an error. To open a tooltip that shows further error details, hover over the icon.

A Graph

On the card or tile views of an object, indicates that the object is a graph.



On the card or tile views of an object, indicates that the object is a property type.



Station

On the card or tile views of an object, indicates that the object is a station.

• Template entity

On the card or tile views of an object, indicates that the object is a template entity.

Usage/object type

On the dynamic properties tabs of the Details window, displayed to the left of a listed property or object. Indicates the usage type of the property or the object type, respectively:

Specification

Automation

Runtime





Work center

On the card or tile views of an object, indicates that the object is a work center.

Cursors

Cursors displayed while editing data objects:



Drop target allowed

Indicates that the object you are currently dragging can be dropped on this tab of the Details window.



Drop target unallowed

Indicates that the object you are currently dragging cannot be dropped on this tab of the Details window.



Select

Indicates that you can double-click to open the Details window of the component over which the cursor hovers.



Wait

Indicates that the system is currently busy.

Expression Editor Icons

Icons displayed in the Expression editor (page 31):



Displayed as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are attributes, such as the attributes of property types.

Constants

Displayed as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are constants.

Commands

Displayed as section heading in the auto-completion feature of the expression panel (page 34), it lists the commands available for transition actions.

Error

Displayed in the expression panel (page 34), it indicates that the expression contains one or more errors. To open a tooltip that lists the errors, hover over the icon.

W Functions

Displayed at the root node of the functions tree (page 49) or as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are functions.

List options

Displayed as section heading in the auto-completion feature of the expression panel (page 34), it indicates the options of a list, such as the available purposes.

4 Operators

Displayed at the root node of the operators tree (page 43) or as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are operators.

References

Displayed as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are references, such as property types.

Separators

Displayed as section heading in the auto-completion feature of the expression panel (page 34), it indicates that the listed options are separators.

Keyboard Operation

Control by keyboard is primarily necessary for navigation and editing purposes.

Framework Navigation Shortcuts

Use the following keyboard shortcuts to navigate the general framework of Data Manager:

■ ALT+F1

Opens the start page of the help system (page 7) of Data Manager - Equipment or Data Manager - Work Center.

■ ALT+F4

Closes the application window.

CTRL+MINUS

Zooms out from the currently active search result, switching the display to the next smaller view, either tiles or mini tiles.

In equipment management, in the Details window, on the **Transition** tab of an equipment graph, collapses all action sub-tables.

CTRI +N

Opens a new Search window to define another set of search criteria and process its search results.

CTRL+PLUS

Zooms in on the currently active search result, switching the display to the next larger view, either tiles or cards.

In equipment management, in the Details window, on the **Transition** tab of an equipment graph, expands all action sub-tables.

CTRL+SHIFT+A

Toggles the display of objects in the **Archived** status in the results panel.

CTRL+T

Toggles the display of the card view as tooltip when you hover over a tile or mini tile.

Action Shortcuts

Use the following keyboard shortcuts to handle the actions available for objects in Data Manager:

■ CTRL+B

Only available for equipment entities.

Sends the barcode of the equipment entity that is currently active in the Details window for printing to a connected printer.

CTRL+F4

Closes the object that is currently active in the lower tab bar of the Details window.

■ CTRL+F12

Opens the **Duplicate <Object Type>** dialog to create a copy of the object that is currently active in the lower tab bar of the Details window. The new object opens as new tab in the lower tab bar of the Details window.

CTRL+R

Only available if there are unsaved changes.

Restores the object that is currently active in the lower tab bar of the Details window to its last saved state, thus undoing all changes made in the meantime.

CTRL+S

Saves all changes made to the object that is currently active in the lower tab bar of the Details window. This action saves all changes made on the object's attributes and properties tabs.

CTRL+SHIFT+C

Creates a new equipment class, thus first opening the **New Equipment Class** dialog and afterwards a new tab in the lower tab bar of the Details window.

■ CTRL+SHIFT+E

Creates a new equipment entity, thus first opening the **New Equipment Entity** dialog and afterwards a new tab in the lower tab bar of the Details window.

CTRL+SHIFT+F4

Closes all objects that are currently open in the lower tab bar of the Details window.

■ CTRL+SHIFT+F12

Only available for template equipment entities or equipment entities.

For template equipment entities

Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.

For equipment entities

Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.

The **Duplicate with classes** function copies all attributes and properties of the original including all of its assignments.

CTRL+SHIFT+G

Creates a new equipment graph, thus first opening the **New Equipment Graph** dialog and afterwards a new tab in the lower tab bar of the Details window.

CTRL+SHIFT+H

Only available for status-controlled objects.

Opens the **Change Status** dialog to perform a status change (page 119) on the object that is currently active in the lower tab bar of the Details window.

CTRL+SHIFT+P

Creates a new property type, thus first opening the **New Property Type** dialog and afterwards a new tab in the lower tab bar of the Details window.

CTRL+SHIFT+S

Saves all changes made to all object that are currently active in the lower tab bar of the Details window. This action saves all changes made on the objects' properties tabs.

CTRL+SHIFT+T

- In the Equipment modes of Data Manager Creates a new template equipment entity, thus first opening the New Template Equipment Entity dialog and afterwards a new tab in the lower tab bar of the Details window.
- In the Work Center mode of Data Manager
 Creates a new station, thus first opening the **New Station** dialog and afterwards a new tab in the lower tab bar of the Details window.

■ CTRL+SHIFT+W

Creates a new work center, thus first opening the **New Work Center** dialog and afterwards a new tab in the lower tab bar of the Details window.

CTRL+UP/DOWN ARROW

On the dynamic properties tabs of the Details window, moves a selected list row up or down in the list.

DEL

On the dynamic properties tabs of the Details window, removes a selected assigned object (property, graph, entity, or class) from the list, thus revoking its assignment.

On the **Status/Trigger** and **Transition** tabs of the Details window for graphs, deletes a selected graph component.

F5

Only available if there are no unsaved changes.

Refreshes the object that is currently active in the lower tab bar of the Details window by retrieving its data again from the database. Thus it updates all runtime data, such as runtime properties, graph statuses or grouping situations, which may have changed due to processing activities on the shop floor.

Expression Editor Shortcuts

Use the following keyboard shortcuts to manipulate text in the expression panel:

ALT+F3

In the expression panel, opens the quick search component.

BACKSPACE

In the expression panel, deletes the character to the left of the cursor.

■ CTRL+A

In the expression panel, selects all characters.

CTRL+B

In the expression panel, selects the current expression segment between the nearest brackets.

■ CTRL+BACKSPACE

In the expression panel, deletes the characters to the left of the cursor up to the next word.

CTRL+C

In the expression panel, copies the selected characters to the clipboard.

■ CTRL+D

In the expression panel, duplicates the selected characters.

CTRL+DEL

In the expression panel, deletes the characters to the right of the cursor up to the next word.

CTRL+END

In the expression panel, moves the cursor to the end of the text.

CTRL+ENTER

In the expression panel, inserts a line break after the current cursor position.

CTRL+F

In the expression panel, opens the **Find Text** dialog.

CTRL+G

In the expression panel, opens the **Go to line number** dialog to move the cursor to a specific line.

■ CTRL+H

In the expression panel, opens the **Replace Text** dialog.

CTRL+HOME

In the expression panel, moves the cursor to the beginning of the text.

CTRL+LEFT ARROW

In the expression panel, moves the cursor to the preceding word to the left.

CTRL+MINUS

In the expression panel, collapses all sections.

CTRL+PLUS

In the expression panel, expands all sections.

■ CTRL+R

In the expression panel, deletes the line in which the cursor is currently positioned.

CTRL+RIGHT ARROW

In the expression panel, moves the cursor to the next word to the right.

CTRL+SHIFT+END

In the expression panel, selects all characters from the current cursor position to the end of the text.

CTRL+SHIFT+HOME

In the expression panel, selects all characters from the current cursor position to the beginning of the text.

CTRL+SHIFT+J

In the expression panel, joins the current line with the following line.

CTRL+SHIFT+LEFT ARROW

In the expression panel, selects the word preceding the cursor position to the left.

CTRL+SHIFT MINUS

In the expression panel, collapses the section in which the cursor is currently positioned.

CTRL+SHIFT+PLUS

In the expression panel, expands the section in which the cursor is currently positioned.

CTRL+SHIFT+RIGHT ARROW

In the expression panel, selects the word following the cursor position to the right.

CTRL+SHIFT+U

In the expression panel, toggles the case of the currently selected letters to all uppercase or all lowercase.

CTRL+SHIFT+V

In the expression panel, opens a dialog to select one of the previous clipboards.

CTRL+SPACEBAR

In the expression panel, opens the intelligent auto-completion feature to list potential references or operators to insert.

CTRL+V

In the expression panel, pastes characters from the clipboard.

■ CTRL+W

In the expression panel, selects the word at the current cursor position.

■ CTRL+X

In the expression panel, cuts the selected characters and writes them to the clipboard.

CTRL+Y

In the expression panel, redoes the last action you have revoked with CTRL+Z. You can redo up to 100 actions, thus you can step by step redo the last 100 actions you have revoked.

CTRL+Z

In the expression panel, revokes the last action you have performed. You can undo up to 100 actions, thus you can step by step revoke the last 100 action you have performed.

DEL

In the expression panel, deletes the character to the right of the cursor.

DOWN

In the expression panel, moves the cursor down to the next lower line.

END

In the expression panel, moves the cursor to the end of the line.

ENTER

In the expression panel, inserts a line break.

F

In the expression panel, searches the next occurrence of the text specified in the **Find Text** dialog.

■ HOME

In the expression panel, moves the cursor to the beginning of the line.

INSERT

In the expression panel, toggles the insert/overwrite input modes.

LEFT ARROW

In the expression panel, moves the cursor to the preceding character to the left.

PAGE DOWN

In the expression panel, moves the cursor one page down.

PAGE UP

In the expression panel, moves the cursor one page up.

■ RIGHT ARROW

In the expression panel, moves the cursor to the next character to the right.

SHIFT+DOWN

In the expression panel, selects all characters from the current cursor position to the next line.

SHIFT+END

In the expression panel, selects all characters from the current cursor position to the end of the line.

■ SHIFT+ENTER

In the expression panel, inserts a new line after the current line.

SHIFT+F3

In the expression panel, searches the previous occurrence of the text specified in the **Find Text** dialog.

SHIFT+HOME

In the expression panel, selects all characters from the current cursor position to the beginning of the line.

■ SHIFT+LEFT ARROW

In the expression panel, selects the character preceding the current cursor position to the left.

■ SHIFT+PAGE DOWN

In the expression panel, selects all characters from the current cursor position one page down.

SHIFT+PAGE UP

In the expression panel, selects all characters from the current cursor position one page up.

■ SHIFT+RIGHT ARROW

In the expression panel, selects the character following the current cursor position to the right.

SHIFT+TAB

In the expression panel, resets the indent of indented lines.

■ SHIFT+UP

In the expression panel, selects all characters from the current cursor position to the preceding line.

TAB

In the expression panel, inserts a tab character. The system provides tab stops at approximately every fifth character.

If you have text selected, the entire line or lines containing the selected text is/are indented.

UP

In the expression panel, moves the cursor up to the next higher line.

Basic Operations

The following sections describe basic and recurring operations and functions in Data Manager.

Start, Login, Logout, and Password Change

Before you can start working with PharmaSuite your system administrator must have created a user account for you. The PharmaSuite administrator will inform you of your login name and initial password.

Depending on your company policy you may be forced to change your password when you log in for the first time. In this case the system will display a message that indicates that your password has expired. Then the system will prompt you to change it (page 91).

START PHARMASUITE

To start PharmaSuite double-click the respective icon on the user interface or select it from the start menu. The system displays the webstart page in a browser window, from which you can select to start the application or view either the help system or the documentation.



Figure 68: PharmaSuite webstart page

LOGIN

When you select to start PharmaSuite it runs through an initialization phase in the course of which you will also see the splash screen of Shop Operations, which is the internal platform of PharmaSuite. As soon as the initialization phase has been completed, the login form for user login appears.

The login form contains two mandatory fields, one for the login name and one for the password. Your login name and your password are unique for all PharmaSuite applications and are linked to your role and user privileges.

Type your login name and password in the respective boxes. Please note that your password is masked by asterisks (*). Click the **OK** button to complete the login procedure. If your login attempt is not successful, a message appears and you have to repeat the procedure.



Figure 69: Login form

After you have successfully logged in, the system displays the PharmaSuite welcome page. From here you can start the Production Execution, Production Management, Data Manager, Recipe and Workflow Designer, and Production Responses applications, change your password and work station, or access the system documentation and help.

Rockwell Software PharmaSuite Detamana Gerr | Station_D-WC001 | 08:52 PM CET Welcome to PharmaSuite® **Production Execution Production Management** Data Manager Recipe and Workflow Designer **Production Responses** Change Password Register at Station **Documentation and Help** Rockwell Software

Figure 70: PharmaSuite welcome page

TIP

Please note that logins can be linked to access rights, which means that you can only start an application if your system administrator has assigned the suitable access privileges to you.

Some logins, especially in the production execution environment, are directly connected to an application and work station. This means that the welcome page will be skipped and the application will start directly after you have successfully logged in.

LOGOUT

In Data Manager, from the **File** menu, select the **Exit** function or use the ALT+F4 keyboard shortcut to quit the application.

On the PharmaSuite welcome page, the **Logout** button is also located in the top right corner. Click it to return to the webstart page.

If you decide to log out from a running application, the system will request you to confirm the decision and also warn you if there is any unsaved data you may want to save before you log out.

PASSWORD CHANGE

You can access the function for changing your password from the PharmaSuite welcome page.

- Click the Change Password link to open the Change Password form.
 When your password expires the system will open the form automatically. This can also happen when you log in for the first time to force you to change the initial password, which your system administrator defined for you.
- 2. On the **Change Password** form, the **User Name** box is output-only and contains your login name.
- 3. Type your current password in the **Old Password** box.
- 4. Type your new password first in the **New Password** box and then in the **Confirm New Password** box.

For security reasons, passwords are masked by asterisks (*).

5. Click the **OK** button to close the form. From now on, use the new password to log in.

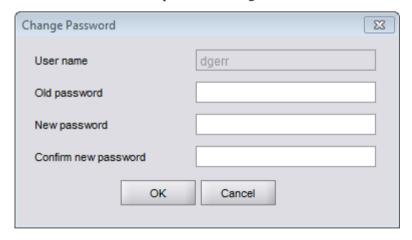


Figure 71: Change password

REQUIRED SERVERS

For providing its full functional scope, PharmaSuite relies on the following servers that are responsible for communication to external systems or between its applications.

- Electronic Batch Recording (EBR) server It controls the execution of EBR recipes and workflows and can process incoming messages from a Distributed Control System.
- Triggered Operation Management (TOM) server It manages event-triggered operations.
- Operation Execution (OE) server
 It controls the execution of server-run operations.
- Automation Integration (AI) server
 It controls the communication with automation-related systems.
- Transition server
 It performs automatic, system-triggered status changes on objects, such as master recipes, master workflows, batches, orders, or workflows and can process incoming messages from an external Quality Management System.

PharmaSuite runs a heartbeat check on the servers to monitor their availability. To see if there are any issues, open the **About PharmaSuite** dialog (page 9), which shows the status of the EBR server. For information on the other servers, open the **Details** dialog and refer to the section that indicates servers with heartbeat issues.

Searching

The Search window provides you with a fast and efficient way to locate objects or groups of objects that match your search criteria and display them in the results panel. In Data Manager - Equipment, the system provides two modes, Smart Search (page 96) and Basic Search (page 99), that differ with respect to their search spaces and their search refinement capabilities.

In Data Manager - Work Center, only the Smart Search (page 96) mode is available.

You can have several search tabs open simultaneously and thus switch between different search results.

- To open a new search tab, click the + button on the empty tab located to the right of your existing search tabs.
- To rename a search tab, double-click its title on the tab.
- To close a search tab, it must be active. Then hover over the right tab margin to make the **Close** button appear.



Figure 72: Search tabs with Close button

The **search results panel** displays all objects that match your search criteria. Objects are also listed as match when their assigned objects match the search criteria. The objects are ordered by object type. In the Equipment modes, the order is equipment classes first, then template equipment entities, equipment entities, equipment graphs, and finally property types. In the Work Center mode, the order is work centers first, stations second. The system displays the number of hits found by your search criteria and the total number of objects in a semi-transparent overlay banner at the bottom of the results panel.

There are three zoom levels available, the card view, the tile view, and the mini tile view. The card view represents an overview of the most basic attributes of an object, such as its identifier, short description, icon (if available), and its object type with object status (if available) and marker icon. In the Equipment modes, you can configure the card view to display up to four of an object's other properties, while in the Work Center mode, the display attributes are not configurable.

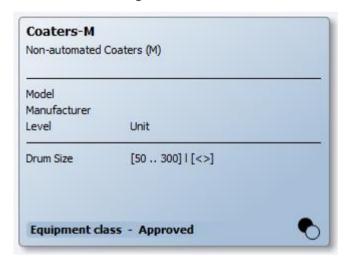


Figure 73: Card of equipment class

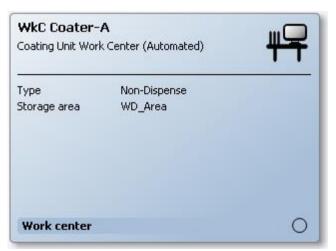


Figure 74: Card of work center

The tile view represents a zoomed-out version of the card view and displays the object's identifier, short description, icon (if available), and object type with marker icon. Hovering over a tile displays the card view as tooltip.

TIP

Please note that you can choose if the system displays the card tooltips. To switch the function off or on, open the **View** menu and unselect or select **Card tooltips** (CTRL+T).

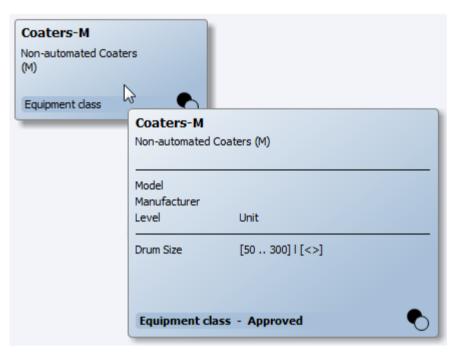


Figure 75: Tile of equipment class with tooltip

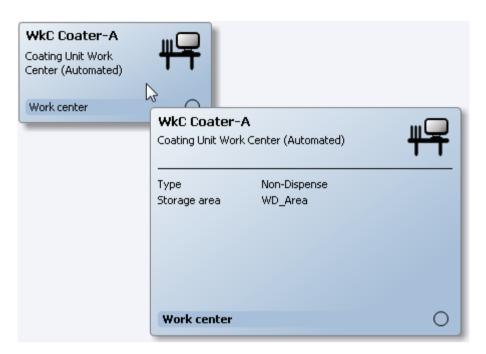


Figure 76: Tile of work center with tooltip

The mini tile view is further zoomed out to provide the best possible overview of the available objects and displays the object's identifier, icon, and type.

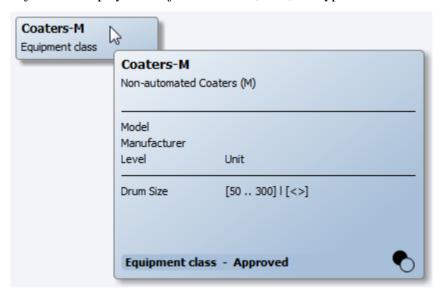


Figure 77: Mini tile of equipment class with tooltip

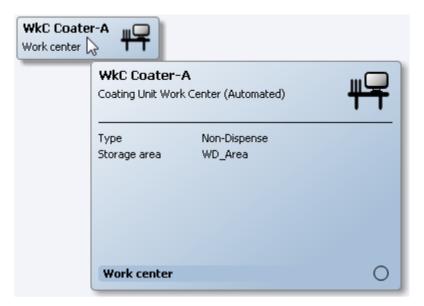


Figure 78: Mini tile of work center with tooltip

To view and edit all attributes and properties of an object, double-click its card or tile. The system opens the object in the Details window (page 101).

SMART SEARCH

The Search window provides you with a fast and efficient way to locate objects or groups of objects that match your search criteria and display them in the results panel. In Data Manager - Equipment, the system provides two modes, Smart Search and Basic Search, that differ with respect to their search spaces and their search refinement capabilities.

The search space of Smart Search consists of

- the values of the **Basic** attributes of all objects
- the identifiers of properties of the objects
- the values of those properties that are selected for display on the card views of the objects
- the identifiers of objects assigned to other objects
- the identifiers of objects that are part of the grouping structure of other objects.

In Smart Search, the system starts up with all data objects loaded and displayed in the results panel, sorted by object type. By refining your search you can reduce the number of objects shown as result.

TIP

Please note that you can choose if the system displays **Archived** objects in the results panel. In the Smart Search mode, **Archived** objects are hidden by default. To switch the function off or on, open the **View** menu and unselect or select **Hide Archived objects** (CTRL+T).

To define your search, the **search criteria panel** supports you with a multi-functional input box, the capability to filter by object type, and a **Refresh** button:

- In the input box, type the string of characters you are looking for. The search becomes effective immediately with the first character you type.
- To clear the input box, click the **Cancel** icon that appears when you have typed the first character in the box.
- To filter your search results by object type, the system provides toggle buttons that allow you to define which types of objects you wish to display as search results:
 - For the Equipment mode: equipment classes, template equipment entities, equipment entities, equipment graphs, or property types.
 - For the Work Center mode: work centers or stations.
- To update your search space from the database, click the **Refresh** button. All objects that have been added or modified by another user since you started your search are then included.

TIP

By default, the search is not case-sensitive and returns results that contain all character strings given in the search box (AND mode) and match anywhere within the text strings contained in the search space.

Click the magnifying glass icon to open an option list for refining your search criteria:

AND mode:

All search strings are contained in the result objects.

OR mode:

Any of the search strings is contained in the result objects. Searches of this mode may return a large number of result objects.

Phrase mode:

The terms typed in the search box are treated as one search string, so the search returns only those objects as result that contain the exact string in the given order and with blanks.

Searches of this mode allow you to search for objects that contain a specific phrase.

- Case-sensitive
- Case-insensitive
- Match from start: Result objects have a property whose value starts with the search string.
- Match exactly:Result objects have a property that is identical with the search string.
- Match anywhere:Result objects have a property whose value contains the search string.

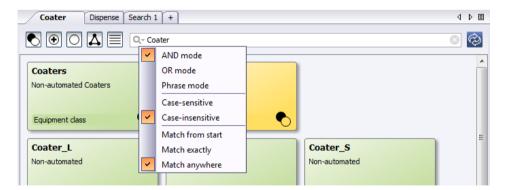


Figure 79: Search criteria panel - Equipment - Smart Search



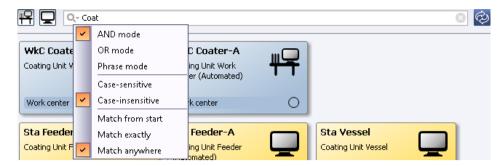


Figure 80: Search criteria panel - Work Center

BASIC SEARCH

The search space of Basic Search only considers object identifiers and starts up with an empty results panel. After entering search criteria you need to trigger the search explicitly by pressing the RETURN key or clicking the **Refresh** button.

TIP

Please note that you can choose if the system displays **Archived** objects in the results panel. In the Basic Search mode, **Archived** objects are displayed by default. To switch the function off or on, open the **View** menu and unselect or select **Hide Archived objects** (CTRL+T).

To define your search, the **search criteria panel** supports you with a multi-functional input box, the capability to filter by object type, and a **Refresh** button:

- In the input box, type the string of characters you are looking for. To start the search, you need to press the RETURN key or click the **Refresh** button.
- To clear the input box, click the **Cancel** icon that appears when you have typed the first character in the box.
- To filter your search results by object type, the system provides toggle buttons that allow you to define which types of objects you wish to display as search results (equipment classes, template equipment entities, equipment entities, equipment graphs, or property types).
- To update your search space from the database, click the Refresh button. All objects that have been added or modified by another user since you started your search are then included.

TIP

By default, the search is not case-sensitive and returns results that contain all character strings given in the search box (AND mode) and match anywhere within the text strings contained in the search space.

Click the magnifying glass icon to open an option list for refining your search criteria:

- AND mode:
 - All search strings are contained in the result objects.
- OR mode:
 - Any of the search strings is contained in the result objects. Searches of this mode may return a large number of result objects.
- Case-sensitive
- Case-insensitive
- Match from start:
 Result objects have a property whose value starts with the search string.
- Match exactly:Result objects have a property that is identical with the search string.
- Match anywhere:
 Result objects have a property whose value contains the search string.

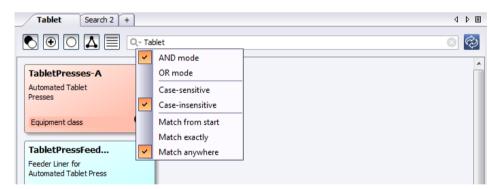


Figure 81: Search criteria panel - Equipment - Basic Search

Editing

The Details window contains all attributes and properties of an object. You can have the detail data of several objects open.

In Data Manager - Equipment - Smart Search and in Data Manager - Work Center, all objects that are open in the Details window have their tile or card frames highlighted in dark blue in the search results panel, while the currently active object has red highlighting.

In Data Manager - Equipment - Basic Search, however, only the currently active object is indicated with red highlighting. The search results panel does not display highlighting for other objects that are open in the Details window.

TIP

Please note that editing objects may be unavailable because

- data objects may be under status control and only editable in the Draft status, such as equipment classes (page 120) and equipment entities (page 122).
- the user rights linked to your login name control if you can access Data Manager only for viewing data objects or for editing the data objects.

For each object you choose to view or open, the Details window displays a tab in the tab bar at the bottom of the window. When you open an object for editing or create a new object, the system adapts the title of the Details window and opens a new tab in the lower tab bar to display:

- the object's identifier
- the object's type
- a status marker, if applicable.

 An asterisk (*) indicates that the object has unsaved changes, while objects that are not editable are marked by an (R).

TIP

Please note that objects that are in a read-only status can contain runtime data, which reflects activities performed on the shop floor. Since it is also possible to edit runtime data in Data Manager to resolve processing exceptions by administrative means, an object may display both the (R) and the (*) markers.

For each object, the Details window holds an upper tab bar with a **Basic** tab for the object's static attributes and may hold several other tabs for its object-specific properties.

To open the detail data of an object, double-click its tile or card in the search results panel.

The system opens a new tab in the lower tab bar.

- To assign another object to the object whose data you are editing in the Details window:
 - 1. In the search results panel, locate the object you wish to assign.
 - 2. Drag the object to the property tab on which you wish to place it.

The system indicates by mouse cursor (or or) if the tab is suitable as target for the assignment.

To switch to another tab than the one that is currently open, drag the object to the title of the other tab.

- 3. Drop the object on the tab.
- To close the detail data of an object:
 - Click the **Close** button in the title bar of the object's Details window.
 - Click anywhere on the object's detail data tab to make it the currently active one

From the **File** menu, select the **Close <object identifier>** function.

Signature Requests

When performing safety-sensitive or GxP-relevant functions the system may request you to enter an electronic signature, for example during a status change. Signatures are linked to user groups and access privileges, which means that the system will only accept the signature of a user who is qualified to perform the task in question. Unless the required signature data has been entered correctly, subsequent functions cannot be executed.

For situations requiring a witness, the system will ask not only for a single but for a double signature. In these cases two different users, typically with different qualifications, have to complete the signature form before task processing can continue.

To perform an electronic signature, type your login name and password and click the **OK** button. Comments can be optional or mandatory and may consist of up to 255 characters.

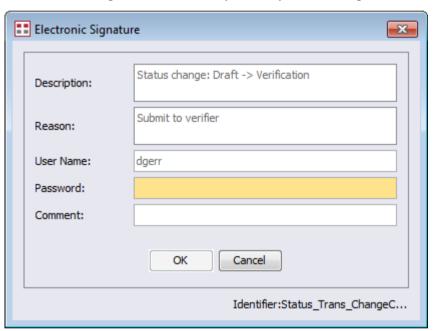


Figure 82: Single electronic signature

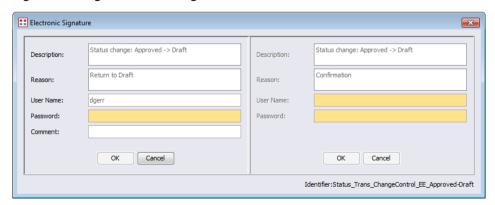


Figure 83: Double electronic signature to support witness role

Exporting Objects

The **Export** function allows you to export equipment data objects (property types, graphs, entities, template entities, or classes) along with their relevant referenced objects.

- For **classes**, the system exports:
 - basic attributes with values except for the Status
 - style definitions made for the class
 - Specification, Automation, and Historian properties, including their content
 - **Runtime** properties, without content
 - property types on which the class' properties are based
 - template entities assigned to the class (including their assigned objects)
 - entities assigned to the class (including their assigned objects)
 - graphs assigned to the class (including their assigned objects)

TIP

When exporting classes you can select to also export the archived template entities and/or the generated entities of the class. By default, the options are not selected and the objects are excluded from the export.

- For **template entities**, the system exports:
 - basic attributes with values except for the Status
 - class assignment information, but not the assigned class objects
 - style class setting, but not the style class object itself
 - Specification, Automation, and Historian properties, including their content
 - **Runtime** properties, without content
 - graphs assigned to the template entity (including their assigned objects)
 - property types on which the template entity's properties are based
- For **entities**, the system exports:
 - basic attributes with values except for the Status and the Template used
 - class assignment information, but not the assigned class objects
 - style class setting, but not the style class object itself
 - **Specification**, **Automation**, and **Historian** properties, including their content
 - **Runtime** properties, without content
 - graphs assigned to the entity (including their assigned objects)
 - property types on which the entity's properties are based

- For **graphs**, the system exports:
 - **b**asic attributes with values except for the **Status**
 - style settings of the graph
 - statuses, triggers, and transitions of the graph
 - property types assigned to the graph
- For **property types**, the system exports:
 - basic attributes with values

TIPS

Please note that the **Status**, **Status History**, and **Change History** data of classes, template entities, entities, and graphs as well as the **Logbook** data of entities are not included in the export.

Usually, the most efficient export strategy is to export classes first, since class export packages include all of the class' template entities, entities, graphs, and property types. Only if the objects to be exported are neither assigned directly to a class nor to a (template) entity within the class, is it necessary to export them individually.

The system creates a ZIP archive that contains one BML file per exported object and an HTM file for meta data of the export package. Additionally it creates a log file that lists the individual actions performed during the export.

To perform an export, proceed as follows:

- In the Search window, locate the object you wish to export.
 Right-click it to open the object's shortcut menu and select the Export <object identifier> function or double-click to open the object and then, from the File menu, select Export.
 - The system displays the **Export** dialog.

export, click the **Show log** button.

- 2. Click the ellipsis button (...) to select a location and name for the ZIP file the system will create.
 - The system pre-fills both the **Export file** and **Log file** boxes with a default directory. For both files, it suggests the object's identifier as file name, but for the log file it also appends **-export**. The log file has .log as file extension. You can change the target locations and file names of both files, if required.
 - When exporting a class, you can define if you wish to include archived (template) entities and/or generated entities in the scope of the export.
- Click the Export button to run the export process. The system displays the overall result of the export in the Result box.
 In addition, to view the complete log that lists all steps performed during the

4. To close the dialog, click the **Close** button.

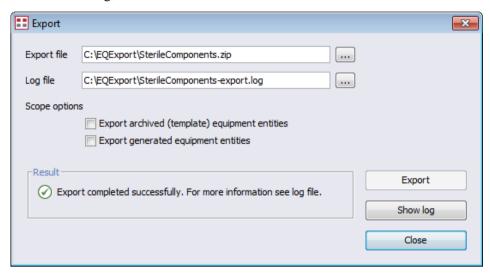


Figure 84: Export dialog for class

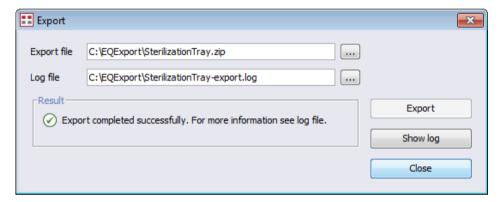


Figure 85: Export dialog for entity

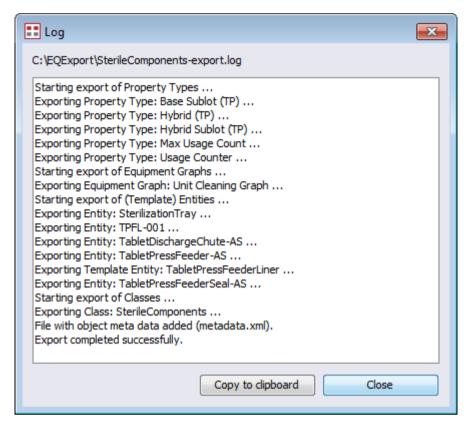


Figure 86: Log dialog of class export

TIP

If you wish to retain the information listed in the **Log** dialog, click the **Copy to clipboard** button to copy the list and then paste it into a system-external text editor.

Importing Objects

The **Import** function allows you to import equipment data objects (property types, graphs, entities, or classes) along with their relevant referenced objects that were either previously exported from another PharmaSuite system with the **Export** function (page 104) of Data Manager or have an equivalent format. It checks the objects to be imported against the objects that are already available in your system to determine potential data conflicts and resolves them by skipping objects or updating object data.

The system rejects an import file and aborts the import if

- the checksum of the files has changed, which happens when exported files are changed manually.
- the B2MML schema of the files to be imported differs from the schema expected by the system.

TIP

Please note that status-controlled objects (classes, template entities, entities, and graphs) are always imported in the **Draft** status, regardless of the status they had when they were exported.

The system checks on the basis of the objects' identifiers if an object to be imported already exists in the system. In this case, it does not import the object, but applies the following import strategy that depends on the type and status of the object.

For property types:

- The system aborts the import if the property type to be imported already exists but differs with respect to its attributes or content.
- The system aborts the import if the property type to be imported references an FSM or a unit of measure that does not exist in the system.
- The system skips the import if the property type to be imported already exists and has identical attributes and content.

■ For **equipment graphs**:

- The system aborts the import if the graph already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the graph to be imported.
- The system updates an existing graph by overwriting its attributes, property types, statuses, triggers, and transitions with the imported data if the graph is in an editable status such as **Draft** and differs with respect to its data.
- The system skips the import if the graph to be imported already exists and has identical attributes, property types, statuses, triggers, and transitions.

■ For **equipment entities**:

- The system aborts the import if the entity already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the entity to be imported.
- The system aborts the import if the entity to be imported has a property type of the **WorkCenterAssignment** data type assigned to it, which references a work center that does not exist in the system.
- The system aborts the import if one of the entity's assigned objects (property type, graph) already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the object to be imported.
- The system updates an existing entity by overwriting its attributes and properties with the imported data if the entity is in an editable status such as **Draft** and differs with respect to its data.

TIP

Please note that the system does not update the runtime property values and the equipment graph-controlled status and expiry date of an existing entity.

- The system skips the import if the entity to be imported already exists and has identical attributes and properties.
- If an entity to be imported does not yet exist in the system and holds an assignment to a graph, the system sets it to the initial status of the graph.
- If an entity to be imported holds an assignment to a class that does not exist in the system, the assignment cannot be established and is consequently removed from the entity. The import results log contains a warning to this effect.

■ For template equipment entities:

- The system aborts the import if the template entity already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the template entity to be imported.
- The system aborts the import if the template entity to be imported has a property type of the **WorkCenterAssignment** data type assigned to it, which references a work center that does not exist in the system.
- The system aborts the import if one of the template entity's assigned objects (property type, graph) already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the object to be imported.
- The system updates an existing template entity by overwriting its attributes and properties with the imported data if the template entity is in an editable status such as **Draft** and differs with respect to its data.
- The system skips the import if the template entity to be imported already exists and has identical attributes and properties.
- If a template entity to be imported does not yet exist in the system and holds an assignment to a graph, the system sets it to the initial status of the graph.
- If a template entity to be imported holds an assignment to a class that does not exist in the system, the assignment cannot be established and is consequently removed from the template entity. The import results log contains a warning to this effect.
- If a template entity to be imported holds an assignment to a label layout that does not exist in the system, the template entity is imported without the label layout assignment. The import results log contains a warning to this effect.

■ For **equipment classes**:

- The system aborts the import if the class already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the class to be imported.
- The system aborts the import if one of its assigned objects (property type, graph, or entity) already exists in the system, is in a read-only status such as **Verification** or **Approved**, and differs from the object to be imported.
- The system updates an existing class by overwriting its attributes and properties with the imported data if the class is in an editable status such as **Draft** and differs with respect to its data.

The system expects a ZIP archive as import file, which contains one BML file per object to be imported and an HTM file for meta data of the import package. It creates a log file that lists the individual actions performed during the import.

To perform an import, proceed as follows:

- From the **File** menu, select **Import**.
 The system displays the **Import** dialog.
- 2. Click the ellipsis button (...) to select the ZIP file of the object you wish to import. Once you have selected an import file, the system automatically pre-fills the log file box with the same directory and file name, but appends -import to the file name. The log file has .log as file extension.
- 3. If the import you are about to make includes entities that hold **Automation** or **Historian** properties, you can define to which extent their data is to be imported. Select the corresponding options to import data such as server names, Live Data area paths, tag paths, or point names defined for the individual properties.
- 4. To display the **Import Content** dialog that contains a list of the identifiers of the objects contained in the import file, sorted by their object types, click the **View content** button.
- 5. To perform suitability checks on the objects contained in the import file and view the check results in the **Import Checks** dialog, click the **Check content** button.
- 6. When you have verified that you can import the objects without conflicts, click the **Import** button to run the import process. The system displays the overall result of the import in the **Result** box.
 In addition, to view the complete log that lists all steps performed during the import, click the **Show log** button.

7. To close the dialog, click the **Close** button.

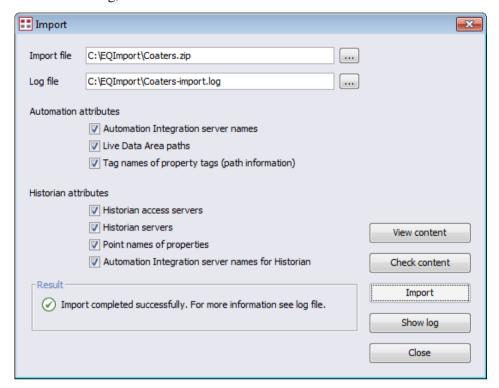


Figure 87: Import dialog

Import Content × C:\EQImport\Coaters.zip ٨ Property Types Coater Prepared Drum Size H-Ambient Humidity Ξ H-Coating Process Step H-Drying Temperature H-Layer Thickness H-Negative Pressure H-Rotational Velocity Max Usage Count Usage Counter Vessel Cleaning Status Entities Coater_L Coater_M Copy to dipboard Close

Figure 88: Import Content dialog

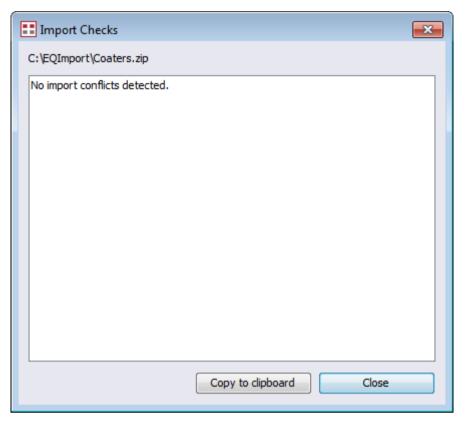


Figure 89: Import Checks dialog

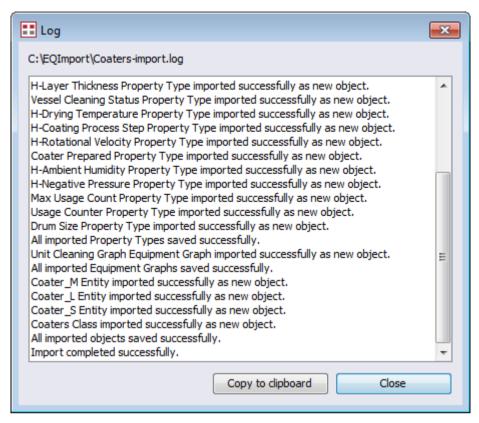


Figure 90: Log dialog of import

TIP

If you wish to retain the information listed in the **Import Content**, **Import Checks**, or **Log** dialogs, click the **Copy to clipboard** button to copy the lists and then paste them into a system-external text editor.

Managing Equipment

Data Manager provides a comprehensive framework for creating, configuring, and managing all data you need to maintain the equipment in use at your site and to define the equipment requirements for master recipes and workflows.

Data Manager - Equipment can be used in two different modes. Data Manager - Equipment - Smart Search is the recommended mode for most usage scenarios and provides the full potential of the system's flexible search mechanisms. In this mode and depending on its configuration, the system ignores entities that have been generated on the shop floor and are in the **Archived** status (page 122) or all generated entities regardless of their status.

Data Manager - Equipment - Basic Search is recommended for usage scenarios when specific objects whose identifiers are known need to be located within a very large number of equipment objects. A scenario of this kind can evolve when large numbers of equipment entities are generated for one-time use on the shop floor, followed by their immediate archival.

In both modes, the system supports you with providing a set of default objects (classes (page 146), graphs (page 176), and property types (page 185) in Smart Search and classes (page 207), graphs (page 236), and property types (page 246) in Basic Search).

What Is an Equipment Requirement?

An **equipment requirement** specifies the needs an equipment entity must provide for a specific process step.

Equipment requirements in PharmaSuite are defined and maintained in Recipe and Workflow Designer during recipe and workflow configuration.

What Is an Equipment Class?

An **equipment class** provides a means to bundle and address equipment entities that share a common set of properties and capabilities.

Equipment classes are maintained as data objects (page 146) in Data Manager.

What Is a Template Equipment Entity?

A **template equipment entity** is the data representation of a piece of equipment that is used during processing as a master to generate new equipment entities and required for pieces of equipment such as filter liners, hoses, or plastic bags, which are used as equipment during processing and thus need to be tracked. The template entity can be assigned to a material in order to specify the properties that generated equipment entities of the material will have. Template entities without a material reference can be used for components that are not inventoried.

Template entities to be used for generating material-related equipment entities during production require specific object assignments:

Object type	Usage	Data type Content	Purpose
Property type	Specification	EquipmentType Hybrid (RS)	
Property type	Runtime	String	Current Sublot (RS)
Property type	Runtime	String	Base Sublot (RS)

When a phase building block generates an entity during identification of a sublot, the system determines the suitable template entity on account of the template entity assigned to the sublot's material.

When the identified sublot is split, but continues to exist, the system fills the new entity's **Current Sublot (RS)** runtime property with the identifier of the sublot that is generated along with the entity. The **Base Sublot (RS)** runtime property is filled with the identifier of the sublot that has been split in order to generate the sublot of the **Current Sublot (RS)** runtime property.

When the identified sublot is consumed immediately and thus ceases to exist, its identifier is shown in the **Base Sublot (RS)** runtime property of the generated entity. The **Current Sublot (RS)** runtime property of the entity remains blank in this case.

What Is an Equipment Entity?

An **equipment entity** is the data representation of a physical piece of equipment and its properties. Equipment entities can be derived from an equipment class, a template equipment entity, or from another equipment entity. They can be assigned to all classes whose properties they share.

Additionally, equipment entities can be collected in groups to facilitate scenarios such as a common treatment of otherwise unconnected entities, e.g. sterilization, or a complex piece of equipment that consists of a base entity and several other attached entities, e.g. an assembled machine. A group of entities consists of a parent entity and one or more child entities, which themselves can also be parent to an entity group.

The following types of equipment (page 191) entities require a specific set of properties to be fully configured and suitable for use with the Weighing and Dispense phases of PharmaSuite:

Containers

Container is a generic term to cover the various types of equipment for holding materials between processing steps. Typical containers used in pharmaceutical production environments are bins or IBCs.

A container equipment entity needs to have specific objects assigned to it:

Object type	Usage	Data type Content	Purpose
Property type, such as Container Type (RS)	Specification	EquipmentType Container (RS)	
Property type, such as Container Tare (RS)	Runtime	MeasuredValue	Current Tare (RS)
Property type, such as Container Sublot (RS)	Runtime	String, used in container cleaning graph	Current Sublot (RS)
Property type, such as Container Clean Shelflife (RS)	Specification	Duration, used in container cleaning graph	
Equipment graph, such as ContainerCleaning_RS_1			Container Cleaning (RS)

TIP

To define a reference tare for a container that can be accessed when taring the container during Dispense or Output Weighing, create a MeasuredValue runtime property type of the Reference Tare (RS) purpose.

Rooms

A **room** is a physical location, at which a step of an order execution is performed, such as dispensing, mixing, packaging, etc.

A room equipment entity needs to have specific objects assigned to it:

Object type	Usage	Data type Content	Purpose
Property type, such as Room Type (RS)	Specification	EquipmentType Room (RS)	
Property type, such as Room Cleaning Rules (RS)	Runtime	RoomCleaningRules <room-specific></room-specific>	

Object type	Usage	Data type Content	Purpose
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment < room-specific>	
Property type, such as General Clean Shelflife (RS)	Specification	Duration, used in room cleaning graph	
Equipment graph, such as RoomCleaning_RS_1			Room Cleaning (RS)

Scales

A **scale** is a type of equipment used to measure the weight of a material or an object.

A scale equipment entity needs to have specific objects assigned to it:

Object type	Usage	Data type Content	Purpose
Property type, such as Scale Type (RS)	Specification	EquipmentType Scale (RS)	
Property type, such as Scale Ranges (RS)	Specification	Ranges <scale-specific></scale-specific>	ScaleRanges (RS)
Property type, such as Scale Configuration (RS)	Specification	ScaleConfiguration <scale-specific></scale-specific>	
Property type, such as Scale Test and Calibration (RS)	Specification	ScaleTestAndCalibration <scale-specific></scale-specific>	
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment <scale-specific></scale-specific>	
Property type, such as Scale Test Shelflife (RS)	Specification	Duration, used in scale test graph	
Property type, such as Scale Calibration Shelflife (RS)	Specification	Duration, used in scale calibration graph	
Property type, such as Scale Load (RS)	Runtime	String, required for handling of loaded scales	Current Load (RS)
Equipment graph, such as ScaleTest_RS_1			Scale Test (RS)
Equipment graph, such as ScaleCalibration_RS_1			Scale Calibration (RS)

TIP

Unless an entity has all required objects assigned, it cannot be moved to a read-only status (page 122), such as **Verification** or **Approved**.

What Is an Equipment Graph?

An **equipment graph** specifies the statuses an equipment entity can assume while it is used in execution, the triggers that affect the entity's status, as well as the transitions between the statuses, their conditions, and actions.

A typical example of an equipment graph is a cleaning graph with statuses such as "Clean" and "Unclean" and triggers such as "Entity is bound to process" and "Entity is unbound from process".

Equipment graphs are maintained as data objects (page 176) in Data Manager.

What Is a Property Type?

A property type specifies equipment properties and equipment property requirements.

Property types are maintained as data objects (page 185) in Data Manager.

Status Handling of Equipment

Equipment classes, template entities, entities, and graphs are maintained in Data Manager throughout their entire life-cycle and follow an inherent status graph that determines if they are approved for use.

In addition to the inherent status graph, which states that an equipment object's attributes and properties are complete and correct, there may be further dynamic statuses that affect the equipment object's suitability for use, such as a cleaning status or a maintenance status.

Statuses of this kind are defined and maintained in equipment graph (page 176) objects, which you can assign to classes and entities. Equipment graph objects themselves are also controlled by an inherent status graph.

Equipment Class Statuses

During their life-cycle, equipment classes can assume the following statuses:

■ **Draft**: The equipment class has been created and saved. It can be edited.

TIP

When you create an assignment (page 101) between an object in **Draft** and another object that is already in a read-only status such as **Verification**, **Approved**, or even **Archived**, only one assignment direction is available, namely assigning to the object in **Draft**. The **Assign**... function of an object is disabled when its assignment target is in **Verification** or higher.

- Verification: The equipment class is ready for review. It is not editable any more. If updates are required, its status needs to be changed back to **Draft**. Under specific circumstances, such as equipment qualification procedures on the shop floor, it is possible to allow the usage of classes that are in the **Verification** status.
- **Approved**: The equipment class is ready for use as equipment requirement. Those of its assigned entities that are also **Approved** (or have another suitable status) can be identified and used for production on the shop floor. It is not editable but can return to **Draft** if it requires to be updated.
- Archived: The equipment class is not intended to be used as equipment requirement any more. For this reason it is no longer available in the Universe of Recipe and Workflow Designer. This is the final status of an equipment class. It is, however, still possible to use equipment entities of an Archived class for production on the shop floor, provided the entities themselves have a suitable status.

TIP

Please note that once an equipment class has been used as requirement in a master recipe or master workflow it cannot be deleted any more.

Depending on the system's configuration, a status change can require a user to enter a single or double electronic signature as proof of authorization.

Template Equipment Entity Statuses

During their life-cycle, template equipment entities can assume the following statuses:

■ **Draft**: The template equipment entity has been created and saved. It can be edited and assigned to an equipment class.

TIP

When you create an assignment (page 101) between an object in **Draft** and another object that is already in a read-only status such as **Verification**, **Approved**, or even **Archived**, only one assignment direction is available, namely assigning to the object in **Draft**. The **Assign**... function of an object is disabled when its assignment target is in **Verification** or higher.

■ **Verification**: The template equipment entity is ready for review. It is not editable any more. If updates are required, its status needs to be changed back to **Draft**. A template entity can only be moved to **Verification**, if all of its assigned graphs are also at least in **Verification**.

TIP

Under specific circumstances, such as equipment qualification procedures, a template equipment entity in a status lower than **Approved**, like **Draft** or **Verification**, may be used for generating equipment entities on the shop floor. The entities are then also not **Approved** but are generated in the same status as their template entity.

■ **Approved**: The template equipment entity is ready for generating equipment entities during production on the shop floor. It is not editable but can return to **Draft** if it requires to be updated.

TIP

An equipment entity generated on the shop floor from an **Approved** template entity is also **Approved** and immediately ready for unrestricted use.

■ **Archived**: The template equipment entity has been retired and is no longer available for generating entities. This is the final status of a template equipment entity.

TIP

Please note that once a template equipment entity has been used for generating entities on the shop floor, it cannot be deleted any more.

Depending on the system's configuration, a status change can require a user to enter a single or double electronic signature as proof of authorization.

Equipment Entity Statuses

During their life-cycle, equipment entities can assume the following statuses:

■ **Draft**: The equipment entity has been created and saved. It can be edited and assigned to an equipment class.

TIP

When you create an assignment (page 101) between an object in **Draft** and another object that is already in a read-only status such as **Verification**, **Approved**, or even **Archived**, only one assignment direction is available, namely assigning to the object in **Draft**. The **Assign**... function of an object is disabled when its assignment target is in **Verification** or higher.

■ Verification: The equipment entity is ready for review. It is not editable any more. If updates are required, its status needs to be changed back to **Draft**. This, however, does not apply to updates of runtime data, which reflects the actual activities that are performed on the shop floor and can change whenever an equipment entity is bound and used for processing. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in this status in Data Manager as well.

An entity can only be moved to **Verification**, if all of its assigned graphs are also at least in **Verification**.

TIP

Under specific circumstances, such as equipment qualification procedures on the shop floor, it is possible to allow the identification and use of entities that are in the **Verification** status. Even though it would be possible to move such entities back to **Draft** while they are being used and are bound to an order or workflow step, this change could compromise the quality of the process and should thus be strictly avoided.

- **Approved**: The equipment entity is ready for use during production on the shop floor, provided its equipment class required by the master recipe or master workflow is **Approved** (or has another suitable status). It is not editable but can return to **Draft** if it requires to be updated.
 - This, however, does not apply to updates of runtime data, which reflects the actual activities that are performed on the shop floor and can change whenever an equipment entity is bound and used for processing. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in this status in Data Manager as well.
- **Archived**: The equipment entity has been retired and is no longer available for regular use. This is the final status of an equipment entity.

TIP

Please note that once an equipment entity has been used for processing and has been bound to an order or workflow, it cannot be deleted any more.

Depending on the system's configuration, a status change can require a user to enter a single or double electronic signature as proof of authorization.

Equipment Graph Statuses

During their life-cycle, equipment graphs can assume the following statuses:

■ **Draft**: The equipment graph has been created and saved. It can be edited.

TIP

When you create an assignment (page 101) between an object in **Draft** and another object that is already in a read-only status such as **Verification**, **Approved**, or even **Archived**, only one assignment direction is available, namely assigning to the object in **Draft**. The **Assign**... function of an object is disabled when its assignment target is in **Verification** or higher.

- Verification: The equipment graph is ready for review. It is not editable any more. If updates are required, its status needs to be changed back to **Draft**. A graph can only be moved back from **Verification** to **Draft**, if all entities to which it is assigned are also in **Draft**.
- **Approved**: The equipment graph is ready to control the statuses of equipment entities on the shop floor.
- **Archived**: The equipment graph is not intended to be used for status control of equipment entities any longer. This is the final status of an equipment graph.

Depending on the system's configuration, a status change can require a user to enter a single or double electronic signature as proof of authorization.

Changing the Status of Equipment

To change the status of an equipment class, template entity, entity, or graph, proceed as follows:

- From the File menu, select Change status of <object identifier>, click the Change status button (page 72) in the File toolbar, or right-click an equipment class or entity to open its shortcut menu and select Change status of <object identifier>.
 - The system opens the **Change status** dialog for the equipment class or entity. It displays the identifier, status, and short description of the equipment.
- 2. From the option list, select the **Action** you wish to perform on the equipment. The status to which the action will move the class, template entity, entity, or graph is indicated in parentheses.

The system displays mismatch issues that exist for the object in the **Mismatch Details**. Issues that cannot be resolved any more after the status change has been performed are listed as errors and prevent the status change. Other issues are listed as warnings and you can perform the status change.

TIP

Please be aware that even if a mismatch issue is listed as warning, you need to make sure that performing the status change will not prevent resolving the issues at the object where the resolution should take place.

3. Click the **OK** button.

The system displays the **Electronic Signature** dialog. The **Description** box displays the status change you are about to perform.

4. Execute the electronic signature (page 103).

When the status change has completed successfully, the **Change Status** dialog closes automatically.

To view all status changes performed on the equipment, open the **Status History** tab, which is available in an object's Details window in both modes of Data Manager - Equipment, **Smart Search** (classes (page 152), template entities (page 160), entities (page 175), and graphs (page 184)) and **Basic Search** (classes (page 213), template entities (page 220), entities (page 235), and graphs (page 245)).

TIP

Please note that you cannot change that status of equipment that is currently bound by processing on the shop floor.

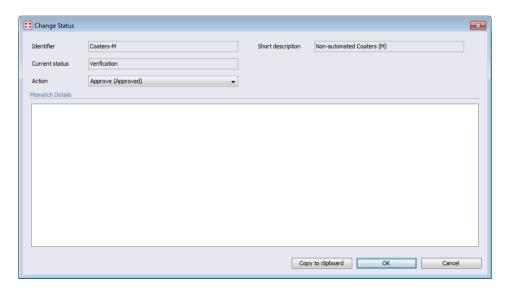


Figure 91: Change Status dialog

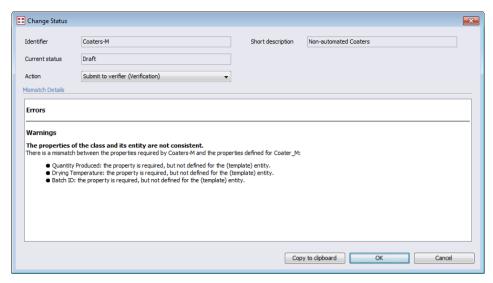


Figure 92: Change Status dialog with warnings

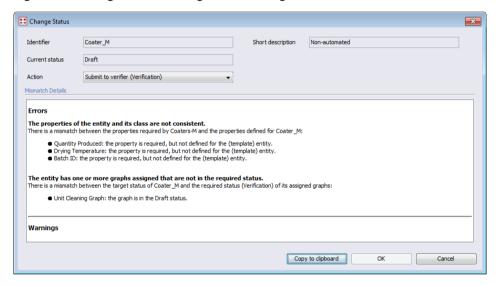


Figure 93: Change Status dialog with errors

Mass Change Operations on (Template) Entities

In the course of its life cycle, an equipment entity can change its characteristics, which are defined by its properties or its equipment graphs. Changes to an entity's characteristics can be caused by circumstances such as

- a sensor is added to an entity and requires a new property type to be assigned to the entity.
- an additional counter or expiry date needs to be maintained for the entity and requires a new status graph with corresponding property types to be assigned to the entity.

If the required changes do not only affect a single entity but all entities of an equipment class, you can perform the required changes on the class and select the **Update** (template) entities function from the **File** menu or the shortcut menu of the class.

TIP

Please note that the **Update** (template) entities function applies changes to all (template) entities that are in a status other than **Archived**. For **Approved** entities, the system performs the updates directly on the entity, which means it overrides the read-only restriction of the **Approved** status and does not perform any status changes. To support you with assessing the impact of changes to the (template) entities of an **Approved** class, the system provides the **Compile usage list** function (page 131) for equipment classes.

Performing a mass change operation on the template entities and entities of a class happens in the following two steps. In the first step, the system calculates the expected changes and presents them for reviewing. In the second step a suitably authorized user triggers the system to perform the updates on the (template) entities.

CALCULATING EXPECTED CHANGES

From the **File** menu, select **Update** (**template**) **entities of <class identifier>** or right-click an equipment class to open its shortcut menu and select **Update** (**template**) **entities of <class identifier>**.

The system opens the **Update** (**Template**) **Entities** dialog for the equipment class and its entities. It displays the identifier and short description of the equipment class. While calculating the expected changes, it shows a progress bar. The calculated expected changes are then listed in four tabs.

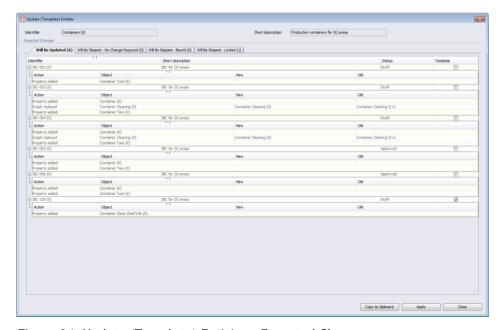


Figure 94: Update (Template) Entities - Expected Changes

To provide an overview of the expected changes, the header of each tab displays the number of listed (template) entities:

The Will Be Updated tab lists all entities and template entities that the system will try to update.

Each (template) entity is displayed as a nested table, with the common attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox) as main table and in a collapsible sub-table each (template) entity's expected changes:

Action

indicates which change needs to be performed.

Object

displays the identifier of the affected object. In the case of replace actions, this is the old component.

New

displays the new component (for replace actions) or the new value (for property value changes).

Old

displays the old component (for replace actions) or the old value (for property value changes).

■ The Will Be Skipped - No Change Required tab lists all entities and template entities that already contain all intended changes and thus do not require to be updated.

Each (template) entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox).

The **Will Be Skipped - Bound** tab lists all entities that cannot be updated, since they are currently in use for processing.

Each entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox).

Selecting an entity in the list displays further information in the **Details** section at the bottom of the dialog. It indicates the work center where the entity is currently being used and in which phase of the order or workflow that is being executed.

■ The Will Be Skipped - Locked tab lists all entities and template entities that cannot be updated, since they are currently being edited by another user or have unsaved changes.

Each (template) entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox).

Selecting an entity or template entity in the list displays further information in the **Details** section at the bottom of the dialog. If in use in another instance of Data

Manager or another application, it indicates the login name of the user who is currently editing the (template) entity, the ID of the device where it is being edited, and the application that is used for editing. If opened with unsaved changes in your current instance of Data Manager, it indicates this situation.

TIP

To view the information of all tabs, click the **Copy to clipboard** button and paste the text into a system-external text editor.

UPDATING (TEMPLATE) ENTITIES

- Click the **Apply** button to start the mass change.
 The system displays the **Electronic Signature** dialog.
- 2. Execute the electronic signature (page 103).

 The system shows a progress bar indicating the number of processed (template) entities. After the update run, it displays the update results in five tabs.

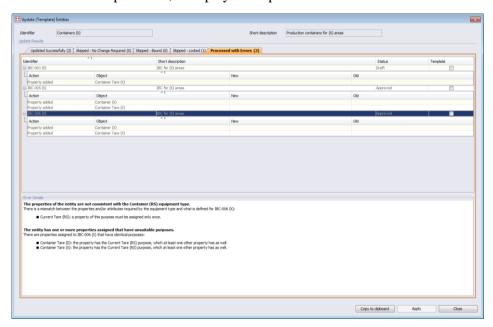


Figure 95: Update (Template) Entities - Update Results

To provide an overview of the update results, the header of each tab displays the number of listed (template) entities:

■ The **Updated Successfully** tab lists all entities and template entities that the system has updated.

Each (template) entity is displayed as a nested table, with the common attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox) as main table and in a collapsible sub-table each (template) entity's performed changes:

Action

indicates which change was performed.

Object

displays the identifier of the affected object. In the case of replace actions, this is the old component.

New

displays the new component (for replace actions) or the new value (for property value changes).

Old

displays the old component (for replace actions) or the old value (for property value changes).

- The **Skipped No Change Required** tab lists all entities and template entities that already contain all intended changes and thus did not require to be updated. Each (template) entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox).
- The **Skipped Bound** tab lists all entities that could not be updated, since they were in use for processing.

Each entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox).

Selecting an entity in the list displays further information in the **Details** section at the bottom of the dialog. It indicates the work center where the entity was being used and in which phase of the order or workflow that was being executed.

TIP

Please note that the number of bound entities may differ between the expected changes and the update result as an entity can have been bound when the changes were calculated but was unbound before the update run started or an entity was still unbound at calculation time but identified and bound before the update run started.

The **Skipped - Locked** tab lists all entities and template entities that could be updated, since they were being edited by another user or had unsaved changes. Each (template) entity is displayed with its attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox). Selecting an entity or template entity in the list displays further information in the **Details** section at the bottom of the dialog. If in use in another instance of Data Manager or another application, it indicates the login name of the user who was editing the (template) entity, the ID of the device where it was being edited, and the application that was used for editing. If opened with unsaved changes in your

PSDM-UM004E-EN-E, 1.0 129

current instance of Data Manager, it indicates this situation.

TIP

Please note that the number of locked entities may differ between the expected changes and the update result as a (template) entity can have been locked when the changes were calculated but was unlocked before the update run started or a (template) entity was not locked at calculation time but opened for editing before the update run started.

■ The **Processed with Errors** tab lists all entities and template entities that could not be updated due to errors.

TIP

Please note that (template) entities that are listed on the **Processed with Errors** tab remain fully unchanged even if only a sub-set of the attempted update actions could not be performed.

Each (template) entity is displayed as a nested table, with the common attributes (**Identifier**, **Short description**, **Status**, and **Template** indicator checkbox) as main table and in a collapsible sub-table each (template) entity's expected changes:

Action

indicates which change should have been performed.

Object

displays the identifier of the affected object. In the case of replace actions, this is the old component.

New

displays the new component (for replace actions) or the new value (for property value changes).

Old

displays the old component (for replace actions) or the old value (for property value changes).

Selecting an entity or template entity in the main table displays further information in the **Error Details** section at the bottom of the dialog.

TIP

To view the information of all tabs, click the **Copy to clipboard** button and paste the text into a system-external text editor.

Click the **Close** button to close the dialog.

TIP

You can perform the **Update** (template) entities function multiple times for a class. This allows you to resolve issues listed on the **Processed with Errors** tab, wait for bound entities to finish processing, or make sure a locked entity is available for updating. The you can re-run the function until all (template) entities have been changed successfully or are listed in the **Skipped - No Changes Required** tab as they were updated successfully in an earlier run of the function.

Usage Lists of Classes

The usage list of a class provides an overview of where the class is referenced in recipes, workflows, or building blocks. This information can support you with assessing the impact a change to the class will have on data that is relevant to processing. Typically, a class's usage list is compiled as first step before class data is changed and the **Update** (template) entities function (page 125) is used to pass on the changes to all of its template entities and entities.

The usage list differentiates between the following types of an equipment class's usages:

- Usage as equipment requirement
 The class is referenced as equipment requirement parameter in a phase.
- Usage within an expression that contains the **Equipment is member of class** function

The function can occur in equipment requirement rules, transition conditions, or process parameter attributes. The equipment class identifier is the second argument of the function and is given as string. A class can only be detected for the usage list if the parameter contains the equipment class identifier as single string constant and not as a concatenation of strings or variables.

TIP

Please note that the system may not be able to determine if an expression uses an equipment class when the expression contains syntax errors.

To compile the usage list of a class, proceed as follows:

- In the Search window, locate the class.
 Right-click it to open the class's shortcut menu and select the Compile usage list function or double-click to open the object and then, from the File menu, select Compile usage list.
 - The system displays the **Usage List** dialog.
- 2. If you wish to see all usages of the class regardless of the status of the recipe, workflow, or building block, select the **Include non-approved objects** option.

TIP

Please note that the system does not consider usages in retired objects, such as **Archived** recipes or workflows.

3. Click the **Run** button to compile the usage list.

TIPS

Please note that each time you compile a usage list for a class, the system refreshes the data on which it performs the search. For this purpose it has to access all relevant objects (master recipes, master workflows, and building blocks) on the database to determine if they have been modified since the last time a usage list was compiled.

If there are other users who work with the system on the same database, some objects may be locked as they are currently being edited and are thus not accessible for refreshing. In this case, the usage list compiles with the potentially obsolete data it has retrieved before its previous run, but lists all objects it could not refresh in a specific section.

4. To copy the complete list to the clipboard for subsequent pasting into a spreadsheet application or a text editor, click the **Copy to clipboard** button. To retain its basic formatting in the application into which it is pasted, the list holds blanks and tabs as separator characters.

To close the dialog, click the Close button.

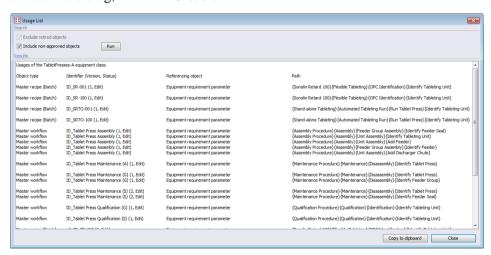


Figure 96: Usage List dialog

Managing Equipment - Smart Search

Data Manager - Equipment - Smart Search is the recommended mode for most usage scenarios and provides the full potential of the system's flexible search mechanisms. In this mode and depending on its configuration, the system ignores entities that have been generated on the shop floor and are in the **Archived** status (page 122) or all generated entities regardless of their status.

Menus and Toolbars

You can access all relevant functions either from the menu bar in the main Data Manager - Equipment - Smart Search window, from context-sensitive shortcut menus, or from toolbars provided for quick access to frequently used functions.

MENUS

Data Manager - Equipment - Smart Search provides a main menu bar (page 133) with all relevant functions as well as context-sensitive shortcut menus (page 138) for quick access to specific functions.

MAIN MENU BAR

The **main menu bar** offers the following menus and functions:

File

- New equipment class (CTRL+SHIFT+C)
 Creates a new equipment class, thus first opening the **New Equipment Class**dialog and afterwards a new tab in the lower tab bar of the Details window.
- New template equipment entity (CTRL+SHIFT+T)

 Creates a new template equipment entity, thus first opening the **New Template Equipment Entity** dialog and afterwards a new tab in the lower tab bar of the Details window.
- New equipment entity (CTRL+SHIFT+E)
 Creates a new equipment entity, thus first opening the **New Equipment Entity**dialog and afterwards a new tab in the lower tab bar of the Details window.
- New equipment graph (CTRL+SHIFT+G)
 Creates a new equipment graph, thus first opening the **New Equipment Graph**dialog and afterwards a new tab in the lower tab bar of the Details window.
- New property type (CTRL+SHIFT+P)
 Creates a new property type, thus first opening the **New Property Type** dialog and afterwards a new tab in the lower tab bar of the Details window.

Import

Starts the process of importing (page 107) an equipment data object with all referenced objects by selecting, checking, and importing a PharmaSuite import ZIP archive.

- Export <object identifier> Starts the process of exporting (page 104) an equipment object with all referenced objects by selecting a target location for the PharmaSuite export ZIP archive.
- Save <object identifier> (CTRL+S)
 Saves all changes made to the object that is currently active in the lower tab bar of the Details window. This action saves all changes made on the object's attributes and properties tabs.
- Save all (CTRL+SHIFT+S)

 Saves all changes made to all object that are currently active in the lower tab bar of the Details window. This action saves all changes made on the objects' properties tabs.

TIP

Please note that you can only save an object if none of its assigned objects have unsaved changes.

- Duplicate < equipment class identifier > without entities (CTRL+F12) Only available for equipment classes.
 - Opens the **Duplicate Equipment Class** dialog to create a copy of the class. The new class opens as new tab in the lower tab bar of the Details window.
 - The **Duplicate** function copies all attributes and properties of the original class except for its template entity and entity assignments.
- Duplicate <(template) equipment entity identifier> without classes (CTRL+F12) Only available for template equipment entities or equipment entities.
 - For template equipment entities

 Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - For equipment entities

 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity.

 The new entity opens as new tab in the lower tab bar of the Details window.

The **Duplicate** function copies all attributes and properties of the original including all of its assignments.

 Duplicate <(template) equipment entity identifier> with classes (CTRL+SHIFT+F12)
 Only available for template equipment entities or equipment entities.

■ For template equipment entities

Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.

For equipment entities

Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.

The **Duplicate** function copies all attributes and properties of the original including all of its assignments.

TIP

Please note that tag names defined with automation properties are suffixed with "_COPY" when they are duplicated.

Duplicate <equipment graph identifier> (CTRL+F12)

Only available for equipment graphs.

Opens the **Duplicate Equipment Graph** dialog to create a copy of the graph. The new graph opens as new tab in the lower tab bar of the Details window.

Only available for property types.

Opens the **Duplicate Property Type** dialog to create a copy of the property type. The new property type opens as new tab in the lower tab bar of the Details window.

- Change status of <object identifier> (CTRL+SHIFT+H)

 Opens the **Change Status** dialog to perform a status change (page 123) on the equipment class, template entity, or entity that is currently active in the lower tab bar of the Details window.
- Force unbinding of <equipment entity identifier>
 Only available for equipment entities that are currently bound for processing in PharmaSuite for Production Execution.

Opens an **Electronic Signature** dialog (page 103) to perform and sign for unbinding of the equipment entity that is currently active in the lower tab bar of the Details window.

TIP

This function should only be used as a last resort for scenarios such as cleaning up after processing has met with unresolvable issues in PharmaSuite for Production Execution.

Update (template) entities of <class identifier>
 Only available for equipment classes that hold template entities or entities.
 Opens the Update (Template) Entities dialog to perform a mass change operation on all entities and template entities assigned to the class.

Compile usage list of <class identifier>

Opens the **Usage List** dialog to compile a list of recipes, workflows, and building blocks that reference the equipment class as requirement or in an expression.

Close < object identifier > (CTRL+F4)

Closes the object that is currently active in the lower tab bar of the Details window.

Close all (CTRL+SHIFT+F4)

Closes all objects that are currently open in the lower tab bar of the Details window.

Restore <object identifier> (CTRL+R)

Only available if there are unsaved changes.

Restores the object that is currently active in the lower tab bar of the Details window to its last saved state, thus undoing all changes made in the meantime.

Refresh < object identifier > (F5)

Only available if there are no unsaved changes.

Refreshes the object that is currently active in the lower tab bar of the Details window by retrieving its data again from the database. Thus it updates all runtime data, such as runtime properties, graph statuses or grouping situations, which may have changed due to processing activities on the shop floor.

Delete <object identifier>

Deletes the object that is currently active in the lower tab bar of the Details window.

Print barcode label for <object identifier> (CTRL+B)

Only available for equipment entities.

Sends the barcode of the equipment entity that is currently active in the Details window for printing to a connected printer.

Exit (ALT+F4)

Closes the application window.

View

New search (CTRL+N)

Opens a new Search window to define another set of search criteria and process its search results.

Zoom in (CTRL+PLUS)

Zooms in on the currently active search result, switching the display to the next larger view, either tiles or cards.

Zoom out (CTRL+MINUS)

Zooms out from the currently active search result, switching the display to the next smaller view, either tiles or mini tiles.

- Hide Archived objects (CTRL+SHIFT+A)
 Toggles the display of objects in the **Archived** status in the results panel.
- Card tooltips (CTRL+T)
 Toggles the display of the card view as tooltip when you hover over a tile or mini tile.

Window

■ Equipment Manager - Smart Search

Switches to the Equipment - Smart Search mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Equipment - Smart Search.

Equipment Manager - Basic Search

Switches to the Equipment - Basic Search mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Equipment - Basic Search.

Work Center Manager

Switches to the Work Center mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Work Center.

Undo layout change

Revokes the last layout change you have performed. You can undo up to 100 actions, thus you can step by step revoke the last 100 layout changes you have performed. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Undo resizing** or **Undo dragging**.

Redo layout change

Redoes the last layout change you have revoked with the **Undo layout change** function. You can redo up to 100 actions, thus you can step by step redo the last 100 layout changes you have revoked. Once you have performed a layout change,

the menu function changes to a more precise description of the undo action, such as **Redo resizing** or **Redo dragging**.

Save user layout Saves the current window layout and overwrites the layout that was last saved by you on this computer.

Load user layout Loads the last layout you have saved on this computer with the Save user layout function.

Reset layout

Resets the window layout to the system-defined default layout. This function does not affect the saved user layout, which can be restored with the **Load user layout** function.

Help

- Data Manager Help (ALT+F1)Opens the start page of the help system (page 7).
- About PharmaSuite
 Opens the About PharmaSuite dialog (page 9).

SHORTCUT MENUS

The card and tile views make object type-specific **shortcut menus** available, which you can access by right-clicking a card or tile in the search results panel.

Equipment class

- Open <equipment class identifier> in Details window
 Opens the detail view of the equipment class as new tab in the Details window.
- Duplicate <equipment class identifier> without (template) entities
 Opens the **Duplicate Equipment Class** dialog to create a copy of the class. The
 new class opens as new tab in the lower tab bar of the Details window.
 The **Duplicate** function copies all attributes and properties of the original class
 except for its template entity and entity assignments.
- New equipment class Creates a new equipment class, thus first opening the New Equipment Class dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <equipment class identifier>
 Opens the Change Status dialog to perform a status change (page 123) on the equipment class.

- Update (template) entities of <class identifier>
 Only available for equipment classes that hold template entities or entities.
 Opens the Update (Template) Entities dialog to perform a mass change operation on all entities and template entities assigned to the class.
- Restore <equipment class identifier>
 Only available if there are unsaved changes.

 Restores the equipment class to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment class identifier>
 Only available if there are no unsaved changes.
 Refreshes the equipment class by retrieving its data again from the database.
- Delete <equipment class identifier>
 Only available if the class is in an editable status, such as **Draft**.

 Deletes the equipment class.
- Export <equipment class identifier>
 Starts the process of exporting (page 104) an equipment class with all referenced template entities, entities, graphs, and property types by selecting a target location for the PharmaSuite export ZIP archive.
- Compile usage list of <class identifier>
 Opens the **Usage List** dialog to compile a list of recipes, workflows, and building blocks that reference the equipment class as requirement or in an expression.
- Assign <equipment class identifier> to <equipment entity identifier> entity Only available, if the active tab of the Details window holds a template equipment entity or an equipment entity. Assigns the class to the template entity or entity that is displayed in the Details window.
- Create entity from <equipment class identifier> class
 Creates a new equipment entity on the basis of the data defined for the equipment class. The function passes all attributes and properties defined with the class on to the new entity. Moreover, the class is assigned to the entity as its style class.
- Create template entity from <equipment class identifier> class
 Creates a new template equipment entity on the basis of the data defined for the equipment class. The function passes all attributes and properties defined with the class on to the new template entity. Moreover, the class is assigned to the template entity as its style class.

Template equipment entity

- Open <template equipment entity identifier> in Details window
 Opens the detail view of the template equipment entity as new tab in the Details window.
- Duplicate <template equipment entity identifier> without classes Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - The **Duplicate** function copies all attributes and properties of the template entity except for its class assignments.
- Duplicate <template equipment entity identifier> with classes Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - The **Duplicate with classes** function copies all attributes and properties of the original including all of its assignments.
- New template equipment entity (CTRL+SHIFT+T)
 Creates a new template equipment entity, thus first opening the New Template
 Equipment Entity dialog and afterwards a new tab in the lower tab bar of the
 Details window.
- Change status of <template equipment entity identifier>
 Opens the Change Status dialog to perform a status change (page 123) on the template equipment entity.
- Restore <template equipment entity identifier>
 Only available if there are unsaved changes.
 Restores the template equipment entity to its last saved state, thus undoing all changes made in the meantime.
- Refresh <template equipment entity identifier>
 Only available if there are no unsaved changes.

 Refreshes the template equipment entity by retrieving its data again from the database.
- Delete <template equipment entity identifier>
 Only available if the template entity is in an editable status, such as **Draft**, and has not been used as template for generating equipment entities during execution. Deletes the template equipment entity.
- Export <template equipment entity identifier>
 Starts the process of exporting (page 104) a template equipment entity with all referenced graphs and property types by selecting a target location for the PharmaSuite export ZIP archive.

- Assign <template equipment entity identifier> to <equipment class identifier> class
 - Only available, if the active tab of the Details window holds an equipment class. Assigns the template entity to the equipment class that is displayed in the Details window.
- Create class from <template equipment entity identifier> template equipment entity
 - Creates a new equipment class on the basis of the data defined for the template equipment entity. The function passes all attributes and properties defined with the template entity on to the new class. Thus the data on the **Style** tab of the new class is not defined.
- Create entity from <template equipment entity identifier> template equipment entity
 - Creates a new equipment entity on the basis of the data defined for the template equipment entity. The function passes all attributes, properties, and assignments defined with the template entity on to the new entity.

Equipment entity

- Open <equipment entity identifier> in Details window
 Opens the detail view of the equipment entity as new tab in the Details window.
- Duplicate <equipment entity identifier> without classes
 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The
 new entity opens as new tab in the lower tab bar of the Details window.
 The **Duplicate** function copies all attributes and properties of the original except
 for its class assignments.
- Duplicate <equipment entity identifier> with classes
 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.
 The **Duplicate with classes** function copies all attributes and properties of the original including its assignments.
- New equipment entity Creates a new equipment entity, thus first opening the New Equipment Entity dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <equipment entity identifier>
 Opens the Change Status dialog to perform a status change (page 123) on the equipment entity.

Force unbinding of <equipment entity identifier>

Only available for equipment entities that are currently bound for processing in PharmaSuite for Production Execution.

Opens an **Electronic Signature** dialog (page 103) to perform and sign for unbinding of the equipment entity that is currently active in the lower tab bar of the Details window.

TIP

This function should only be used as a last resort for scenarios such as cleaning up after processing has met with unresolvable issues in PharmaSuite for Production Execution.

- Restore < equipment entity identifier>
 - Only available if there are unsaved changes.
 - Restores the equipment entity to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment entity identifier>
 - Only available if there are no unsaved changes.
 - Refreshes the equipment entity by retrieving its data again from the database. Thus it updates all runtime data, such as runtime properties, graph statuses or

grouping situations, which may have changed due to processing activities on the shop floor.

- Delete <equipment entity identifier>
 - Only available if the entity is in an editable status, such as **Draft**, and has not been used for processing yet.
 - Deletes the equipment entity.
- Export <equipment entity identifier>
 Starts the process of exporting (page 104) an equipment entity with all referenced graphs and property types by selecting a target location for the PharmaSuite export ZIP archive.
- Assign <equipment entity identifier> to <equipment class identifier> class
 Only available, if the active tab of the Details window holds an equipment class.
 Assigns the entity to the equipment class that is displayed in the Details window.
- Create class from <equipment entity identifier> equipment entity
 Creates a new equipment class on the basis of the data defined for the equipment entity. The function passes all attributes and properties defined with the entity on to the new class. Thus the data on the **Style** tab of the new class is not defined.

Equipment graph

- Open <equipment graph identifier> in Details window
 Opens the detail view of the equipment graph as new tab in the Details window.
- Duplicate < equipment graph identifier>
 Opens the **Duplicate Equipment Graph** dialog to create a copy of the graph. The new graph opens as new tab in the lower tab bar of the Details window.
- New equipment graph Creates a new equipment graph, thus first opening the New Equipment Graph dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <equipment graph identifier>
 Opens the **Change Status** dialog to perform a status change (page 123) on the equipment graph.
- Restore <equipment graph identifier>
 Only available if there are unsaved changes.

 Restores the equipment graph to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment graph identifier>
 Only available if there are no unsaved changes.
 Refreshes the equipment graph by retrieving its data again from the database.
- Delete <equipment graph identifier>
 Deletes the equipment graph.
 Only available if the graph is not assigned to another object, such as a class or an entity.
- Export <equipment graph identifier>
 Starts the process of exporting (page 104) an equipment graph with all referenced property types by selecting a target location for the PharmaSuite export ZIP archive.
- Assign <equipment graph identifier> to <object type identifier> <object type> Only available, if the active tab of the Details window holds an equipment class, template entity, or entity and the graph has not been assigned already to the class, template entity, or entity.
 Assigns the graph to the equipment class, template entity, or entity that is

PSDM-UM004E-EN-E, 1.0 143

displayed in the Details window.

Property type

- Open Open Open to detail view of the property type as new tab in the Details window.
- Duplicate <property type identifier>
 Opens the **Duplicate Property Type** dialog to create a copy of the property type.
 The new property type opens as new tab in the lower tab bar of the Details window.
- New property type
 Creates a new property type, thus first opening the **New Property Type** dialog
 and afterwards a new tab in the lower tab bar of the Details window.
- Restore property type identifier>
 Only available if there are unsaved changes.
 Restores the property type to its last saved state, thus undoing all changes made in the meantime.
- Refresh property type identifier>
 Only available if there are no unsaved changes.
 Refreshes the property type by retrieving its data again from the database.
- Delete <property type identifier>
 Only available if the property type is not assigned to another object, such as a class, an entity, or a graph.
 Deletes the property type.
- Export Export Export Export type identifier>
 Starts the process of exporting (page 104) a property type by selecting a target location for the PharmaSuite export ZIP archive.

TOOLBARS

Data Manager provides several toolbars for context-sensitive quick access to specific functions.

MAIN TOOLBARS

The **main toolbars** offer shortcuts to the more frequently required menu functions:

- File toolbar with
 - New equipment class (page 72)
 - New template equipment entity (page 73)
 - New equipment entity (page 72)
 - New equipment graph (page 73)
 - New property type (page 73)
 - Refresh (page 73)
 - Save (page 74)
 - Close (page 72)
 - Delete (page 72)
 - Change status (page 72)
 - Print barcode label (page 73)
- View toolbar with
 - Zoom in (page 74)
 - Zoom out (page 74)
- Help toolbar with
 - Help (page 72)

PROPERTY TAB TOOLBAR

The **property tab toolbar** provides the following functions for sorting and managing the property types assigned to an equipment class, entity, or graph:

- Move down (page 75)
- Move up (page 75)
- Display on card (page 74)
 Only available for equipment classes and graphs.
- Remove (page 76)

Detail Data

From the upper tab bar in the Details window, you can access the attributes, properties, assignments, and usage data of the following equipment-related objects:

- Equipment classes (page 146)
- Template equipment entities (page 153)
- Equipment entities (page 161)
- Equipment graphs (page 176)
- Property types (page 185)

CLASS

The Details window of a class contains the following data tabs:

- Basic (page 146)
- Specification (page 148)
- Process (page 148)
- Engineering (page 149)
- Graph (page 149)
- Entity (page 150)
- Style (page 150)
- Change History (page 150)
- Status History (page 152)

BASIC

The **Basic** tab lists the Asset Attributes of the equipment class.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type. Any asset attribute values you define for an equipment class are copied to an equipment entity created from the class. The attribute values copied to the equipment entity can, however, be changed on the equipment entity without affecting the values defined on the class.

TIP

Please note that once you have created an equipment class, you can no longer modify its **Identifier**.

DEFAULT CLASSES

PharmaSuite provides the following equipment classes with any default installation of the system. They are intended as templates to create entities that contain all required graphs and property types:

■ Container_RS_1

The default class for containers includes the following default objects:

Graph:

ContainerCleaning_RS_1

- Property types:
 - Container Clean Shelflife (RS)
 - Container Sublot (RS)
 - Container Tare (RS)
 - Container Type (RS)
- Room_RS_1

The default class for rooms includes the following default objects:

- GraphRoomCleaning_RS_1
 - Property types:
 - General Clean Shelflife (RS)
 - Room Cleaning Rules (RS)
 - Room Type (RS)
 - Work Center Assignment (RS)
- Scale_RS_1

The default class for scales includes the following default objects:

- Graphs:
 - ScaleCalibration_RS_1
 - ScaleTest_RS_1
- Property types:
 - Scale Calibration Shelflife (RS)
 - Scale Configuration (RS)
 - Scale Load (RS)
 - Scale Ranges (RS)
 - Scale Test and Calibration (RS)

- Scale Test Shelflife (RS)
- Scale Type (RS)
- Work Center Assignment (RS)

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- Equipment module
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**, **N/A**) if the class groups (template) equipment entities that are intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**, **N/A**) if the class groups equipment entities whose life cycle needs to be tracked in the logbook.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the process tab.

- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the equipment class.

■ To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the class to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a graph with its short description on the card view of the equipment class, click the **Display on card** button (page 74).
- To remove a graph from the list, click the **Remove graph** button (page 76).

ENTITY

The **Entity** tab lists the equipment entities and template equipment entities assigned to the equipment class. The checkbox in the **Style class** column indicates which of the assigned (template) entities take their styling (color, icon, properties displayed on card view) from the class. The checkbox in the **Template** column indicates which of the assigned objects are plain entities and which of them are template entities.

■ To add a (template) entity to the list, drag and drop (page 101) its card or tile on the Details window of the class to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned (template) entity correspond to those of your class, but not on which tabs (**Specification**, **Process**, **Engineering**) the properties are located. Thus the system does not rearrange the (template) entity's properties to match the properties' positioning on the class.

■ To remove a (template) entity from the list, select or multi-select it and click the **Remove equipment entity** button (page 76) or press the DEL key. Removing a (template) entity from the list of entities also removes the class from the list of classes shown on the **Class** tab of the (template) entity's detail view.

STYLE

The **Style** tab provides tools for defining the visual appearance of the equipment classes' tiles and cards:

- Background color
- Font color
- Icon

TIP

Please note that (template) equipment entities assigned to a class can have the class set as their style class and thus inherit its visual appearance.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment class, which also includes indirect assignment changes that occur when an entity's assignment change also involves the class.

For each change event that affected the class, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the class that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your class, the change history shows the identifier of the attribute you have modified and when you assign a template entity, entity, graph, or property type to your class, the change history shows the identifier of the assigned object.
- Old content/New content for data change events on your class, displays the changed values.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

TIP

Signatures and their comments are only recorded for mass change operations.

Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment class.

For each status change that affected the class, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the class that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the class was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

TEMPLATE ENTITY

The Details window of an entity contains the following data tabs:

- Basic (page 153)
- Specification (page 156)
- Process (page 157)
- Engineering (page 157)
- Graph (page 158)
- Class (page 158)
- Material (page 158)
- Change History (page 159)
- Status History (page 160)

BASIC

The **Basic** tab lists the Asset, Automation, Historian, and Entity Barcode attributes of the template equipment entity.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

Asset, Automation, and Historian attribute values defined for a template entity are copied to all equipment entities created from the template in Data Manager or generated from the template on the shop floor.

Asset attribute values you define for a template equipment entity are copied to an equipment class created from the entity.

The attribute values copied to the new object can, however, be changed on the new object without affecting the values defined on the template entity.

TIP

Please note that once you have created a template equipment entity, you can no longer modify its **Identifier**.

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- Equipment module
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**) if the entities generated from the template are intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**) if the life cycles of all generated entities need to be tracked in the logbook.

The **Label layout (default)** attribute shows which label layout is pre-configured by the system and defines the layout that will be used for printing entity barcode labels when the template entity is used for generating entities on the shop floor.

With the **Label layout** attribute, you can override the default setting and define a different label layout to be used. For selecting a suitable label layout, the system provides the **Label Layout Selection** editor (page 60).

If you leave the box blank, the system uses the pre-configured default label design displayed in the **Label layout (default)** attribute.

When a new entity is generated from the template entity during execution, the **Entity Barcode** attributes determine what the identifier and barcode of the new entity will look like

The identifier of a generated entity consists of a prefix, which is a configurable sequence of characters and a count, whose number of digits is also configurable.

- The **Barcode prefix character (default)** is read-only and shows which character (if any) is pre-configured as barcode prefix by the system.
- With the **Barcode prefix source** attribute, you can define if the barcode will be prefixed with the default character (**From configuration key**) or with a character specifically defined with the template (**Template-specific**).
- The **Character** attribute is only available when the **Barcode prefix source** is set to **Template-specific**. It must be no longer than one character, but can also be left blank.
- The **Identifier prefix** (**default**) is read-only and shows the sequence of characters that is pre-configured by the system to precede the count of a generated entity.
- With the **Identifier prefix** you can override the system default with another sequence of characters. It can have a length of up to 30 characters, but can also remain blank.
- The **Sequencer length (default)** is read-only and shows the pre-configured number of digits to be used for the count of generated entities.
- With the **Sequencer length** you can override the system default with another number of digits for the count. The system uses leading zeros to fill up the digits if the actual count would require fewer digits.

Examples:

Barcode prefix source	Character	Identifier prefix	Sequencer length	Entity identifier Entity barcode
Template-specific	&	FL	5	FL00001 &FL00001
Template-specific		F-Liner	10	F-Liner0000000001 F-Liner0000000001
Template-specific	§		15	000000000000001 \$0000000000000001
Template-specific	\$	FL-	8	FL-00000001 \$FL-00000001

With the Automation attributes, you can establish the connection to the automation layer, by way of the **Automation Integration server name** and the **Live Data Area path**. The information is required if you wish to use automation phases in your workflows or master recipes. The system shows the pre-configured default paths, which are used unless you define another path, which then overrides the default.

The **Live Data Area path** specifies the path the system uses to access the tags on your generated equipment entity within the Factory Talk Directory. Together with the specific tag names you can configure when you edit the automation properties (page 11) of the entity, it forms the full path to a specific tag. The path consists of a protocol prefix **(RNA://\$Global)**, an application name, and one or more area names.

So the path to an equipment entity, located in a Coating sub-area of a Building03 area within a company's MES application would be

RNA://\$Global/MES/Building03/Coating.

With the Historian attributes, you can access the data archived in a Historian application. Unless you can use the pre-defined defaults, you need to specify the **Provider** for interfacing to the **Historian server**, the **Historian access server**, and also the name of the **Automation Integration server** through which the data access is channeled. The information is required if your master recipe or workflow holds phases for retrieving historical data.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Template entities to be used for generating material-related equipment entities during production require specific object assignments:

Object type	Usage	Data type Content	Purpose
Property type	Specification	EquipmentType Hybrid (RS)	
Property type	Runtime	String	Current Sublot (RS)
Property type	Runtime	String	Base Sublot (RS)

When a phase building block generates an entity during identification of a sublot, the system determines the suitable template entity on account of the template entity assigned to the sublot's material.

When the identified sublot is split, but continues to exist, the system fills the new entity's **Current Sublot (RS)** runtime property with the identifier of the sublot that is generated along with the entity. The **Base Sublot (RS)** runtime property is filled with the identifier of the sublot that has been split in order to generate the sublot of the **Current Sublot (RS)** runtime property.

When the identified sublot is consumed immediately and thus ceases to exist, its identifier is shown in the **Base Sublot (RS)** runtime property of the generated entity. The **Current Sublot (RS)** runtime property of the entity remains blank in this case.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the process tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the template equipment entity. Each graph shows with its initial status and expiry date (if set), both of which cannot be changed. The statuses controlled by the graph do not apply to the template entity itself, but to all entities generated from it.

■ To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the template entity to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a graph from the list, click the **Remove graph** button (page 76).

CLASS

The **Class** tab lists the equipment classes assigned to the template equipment entity. A template equipment entity can belong to several equipment classes, but takes its styling (color, icon, properties displayed on card view) from the class set as its **Style class**.

■ To add a class to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned class correspond to those of your template entity, but not on which tabs (Specification, Process, Engineering) the properties are located. Thus the system does not rearrange the template entity's properties to match the properties' positioning on the class.

- To define the styling of the template entity by setting an assigned class as style class, select the **Style class** checkbox of the class whose styling the template entity is to adopt.
- To remove a class from the list, select or multi-select it and click the **Remove** equipment class button (page 76) or press the DEL key.

 Removing a class from the list of classes also removes the template entity from the list of entities shown on the **Entity** tab of the class' detail view.

MATERIAL

The **Material** tab lists the materials assigned to the template equipment entity. The assignments between materials and template entities are maintained in PharmaSuite for Production Management, where only those templates entities are available for assignment that have a specification property of the **Hybrid** (**RS**) equipment type.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the template equipment entity, which also includes indirect assignment changes that occur when a class' assignment change also involves the template entity.

For each change event that affected the template entity, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the template entity that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action
 indicates the change event that triggered the entry in the change history.
- Affected object

indicates the object that is affected by the change event. So when you update the basic data of your template entity, the change history shows the identifier of the attribute you have modified and when you assign a class, graph, or property type to your template entity, the change history shows the identifier of the assigned class, graph, or property type.

- Old content/New content
 for data change events on your template entity, displays the changed values.
- Information indicates additional details on the change, such as if it was performed in the context of a mass change.
- Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the template equipment entity.

For each status change that affected the template entity, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the template entity that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the template entity was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

ENTITY

The Details window of an entity contains the following data tabs:

- Basic (page 161)
- Specification (page 164)
- Process (page 167)
- Engineering (page 167)
- Graph (page 168)
- Class (page 169)
- Grouping (page 169)
- Context (page 171)
- Logbook (page 171)
- Migrated History (page 173) (only for migrated equipment entities)
- Change History (page 174)
- Status History (page 175)

BASIC

The **Basic** tab lists the Asset, Automation, and Historian attributes of the equipment entity.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type. Any asset attribute values you define for an equipment entity are copied to an equipment class created from the entity. The attribute values copied to the equipment class can, however, be changed on the equipment class without affecting the values defined on the entity.

When an equipment entity is used for processing in PharmaSuite for Production Execution it is bound to the process. Under very rare circumstances, in may be necessary to unbind an entity form the process in order to resolve data issues that cannot be solved in any other manner. For these cases, the system provides the **Force unbinding** function in the File menu (page 133) or the entities shortcut menu (page 141).

TIPS

Please note that once you have created an equipment entity, you can no longer modify its **Identifier**.

For scale equipment entities, which hold a property of the **Scale** (**RS**) EquipmentType, the **Short description** is displayed during execution as button text on the scale buttons in the **Select scale** phases of Weighing or Dispense operations. If there is no short description defined, the system displays the scale's **Identifier** instead.

Thus the maximum number of characters for the **Short description** should not exceed 12 and should include a blank to trigger a line break when displayed on the button. One line on the button can hold approximately 6 characters. If the text exceeds the button width, it is truncated.

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- **Equipment module**
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**) if the entity is intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**) if the entity's life cycle needs to be tracked in the logbook.

If the entity was generated on the shop floor, the **Template used** attribute displays the identifier of the template entity that was used for its generation.

The **Label layout (default)** attribute shows which label layout is pre-configured by the system and defines the layout that will be used for printing the barcode labels of the entity.

With the **Label layout** attribute, you can override the default setting and define a different label layout to be used. For selecting a suitable label layout, the system provides the **Label Layout Selection** editor (page 60).

If you leave the box blank, the system uses the pre-configured default label design displayed in the **Label layout (default)** attribute.

When you create a new entity, the system pre-fills its **Barcode** attribute with a string of characters that consists of a system-configured equipment entity barcode prefix and the entity's identifier you have specified as first step of the creation process. The system-configured prefix may be empty so that the barcode and the entity's identifier are identical. For barcodes of entities that are generated from a template entity during processing, however, the system calculates the **Barcode** attribute from the definitions made in the **Entity Barcode Attributes** section on the template entity's **Basic** tab (page 153).

To print the barcode label of an entity, proceed as follows:

1. Make sure the **Barcode** attribute cell contains the required unique string of characters.

TIP

Do not type leading of trailing blanks before or after the barcode string, since this may interfere with the system-internal formatting conversion and render the barcode unreadable for scanners.

- Save the equipment entity.
 The system enables the **Print barcode label** button on the **File** toolbar as well as the respective function in the **File** menu.
- 3. Click the **Print barcode label** button or select the respective menu function to print the barcode on a connected printer, typically the default printer defined in your Windows operating system.

With the Automation attributes, you can establish the connection to the automation layer, by way of the **Automation Integration server name** and the **Live Data Area path**. The information is required if you wish to use automation phases in your workflows or master recipes. The system shows the pre-configured default paths, which are used unless you define another path, which then overrides the default.

The **Live Data Area path** specifies the path the system uses to access the tags on your equipment entity within the Factory Talk Directory. Together with the specific tag names you can configure when you edit the automation properties (page 11) of the entity, it forms the full path to a specific tag. The path consists of a protocol prefix

(RNA://\$Global), an application name, and one or more area names.

So the path to an equipment entity, located in a **Coating** sub-area of a **Building03** area within a company's **MES** application would be

RNA://\$Global/MES/Building03/Coating.

With the Historian attributes, you can access the data archived in a Historian application. Unless you can use the pre-defined defaults, you need to specify the **Provider** for interfacing to the **Historian server**, the **Historian access server**, and also the name of the **Automation Integration server** through which the data access is channeled. The information is required if your master recipe or workflow holds phases for retrieving historical data.

TIP

Please note that changes made to Automation or Historian attributes of an equipment entity that is already in use on the shop floor are not automatically pushed to the Production Execution station that runs the process with the affected equipment entity. PharmaSuite for Production Execution needs to be restarted for the changes to become effective.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Some entities require specific object assignments:

CONTAINER

Object type	Usage	Data type Content	Purpose
Property type, such as Container Type (RS)	Specification	EquipmentType Container (RS)	
Property type, such as Container Tare (RS)	Runtime	MeasuredValue	Current Tare (RS)
Property type, such as Container Sublot (RS)	Runtime	String, used in container cleaning graph	Current Sublot (RS)
Property type, such as Container Clean Shelflife (RS)	Specification	Duration, used in container cleaning graph	
Equipment graph, such as ContainerCleaning_RS_1			Container Cleaning (RS)

TIP

To define a reference tare for a container that can be accessed when taring the container during Dispense or Output Weighing, create a MeasuredValue runtime property type of the Reference Tare (RS) purpose.

Room

Object type	Usage	Data type Content	Purpose
Property type, such as Room Type (RS)	Specification	EquipmentType Room (RS)	
Property type, such as Room Cleaning Rules (RS)	Runtime	RoomCleaningRules < room-specific>	
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment < room-specific>	
Property type, such as General Clean Shelflife (RS)	Specification	Duration, used in room cleaning graph	
Equipment graph, such as RoomCleaning_RS_1			Room Cleaning (RS)

SCALE

Object type	Usage	Data type Content	Purpose
Property type, such as Scale Type (RS)	Specification	EquipmentType Scale (RS)	
Property type, such as Scale Ranges (RS)	Specification	Ranges <scale-specific></scale-specific>	ScaleRanges (RS)
Property type, such as Scale Configuration (RS)	Specification	ScaleConfiguration <scale-specific></scale-specific>	
Property type, such as Scale Test and Calibration (RS)	Specification	ScaleTestAndCalibration <scale-specific></scale-specific>	
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment <scale-specific></scale-specific>	

Object type	Usage	Data type Content	Purpose
Property type, such as Scale Test Shelflife (RS)	Specification	Duration, used in scale test graph	
Property type, such as Scale Calibration Shelflife (RS)	Specification	Duration, used in scale calibration graph	
Property type, such as Scale Load (RS)	Runtime	String, required for handling of loaded scales	Current Load (RS)
Equipment graph, such as ScaleTest_RS_1			Scale Test (RS)
Equipment graph, such as ScaleCalibration_RS_1			Scale Calibration (RS)

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the process tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the equipment entity. Each graph shows with the current status of the entity. If the graph status can expire (page 178), the system displays the expiry date, if set. If the status has already expired, the system indicates this by marking the displayed (expired) status in strikethrough formatting.

■ To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

To change the current status of the entity and its expiry date, which are controlled by a graph, open the GraphStatusChange editor (page 60) of the respective graph and make the required changes.

TIPS

Graph statuses and their expiry dates are runtime data that can change due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

Please note that changing the status of a graph forces this status and does not perform a transition into the status. This means that actions that would be performed during a transition, such as updating the retest date or a counter do not take place and need to be performed manually.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a graph from the list, click the **Remove graph** button (page 76).

CLASS

The **Class** tab lists the equipment classes assigned to the equipment entity. An equipment entity can belong to several equipment classes, but takes its styling (color, icon, properties displayed on card view) from the class set as its **Style class**.

To add a class to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned class correspond to those of your entity, but not on which tabs (**Specification**, **Process**, **Engineering**) the properties are located. Thus the system does not rearrange the entity's properties to match the properties' positioning on the class.

- To define the styling of the entity by setting an assigned class a style class, select the **Style class** checkbox of the class whose styling the entity is to adopt.
- To remove a class from the list, select or multi-select it and click the **Remove** equipment class button (page 76) or press the DEL key.

 Removing a class from the list of classes also removes the entity from the list of entities shown on the **Entity** tab of the class' detail view.

GROUPING

The **Grouping** tab displays the grouping situation of the entity in two lists.

- The **Parent** list displays the data of the entity's parent entity. An entity can have only one parent, so the list always contains only one entry with the following data:
 - Identifier
 - Short description
 - Description
 - Status

TIP

The **Parent** list of an entity is always read-only. To change the parent assignment of an entity in Data Manager, you have to open the parent entity in the Details window and remove the respective child entity from its **Children** list.

- The **Children** list displays the data of all children that are directly or indirectly assigned to the entity. Indirect assignments occur when you assign an entity as child that is already a parent entity to other child entities. The following data is shown for child entities:
 - Identifier
 - Short description
 - Description
 - Status
 - Sub-parent
 Only available for entities that were assigned indirectly when their indicated parent was assigned to the entity.

TIP

Please note that you can only remove child entities from the list that have been assigned directly. For removing an indirectly assigned child entity you have to open its parent entity (indicated in the **Sub-parent** column) and remove the respective child entity from its **Children** list.

- To add a child entity to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.
- To remove a child entity from the list, select or multi-select it and click the **Remove child entity** button (page 76) or press the DEL key.

TIP

Group assignments are runtime data that can change due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

A typical example of a group assignment change is a repair situation on the shop floor where an entity that is part of a group malfunctions during order processing and needs to be replaced.

CONTEXT

The **Context** tab lists the current and the previous material-related context information of the equipment entity, such as

- the product batch and material for which the entity was used,
- the order and order step during whose execution the entity was used,
- the involved material that was in direct contact with the entity,
- the order step input and order step output of the order step for which the entity was used.

TIP

Please note that the **Context** tab only contains the material-related context information for orders, not for workflows.

The information is read-only and shows the data for the current usage if the entity is bound. If it is not bound it shows the data for the entity's last usage. The complete usage history of the entity is recorded on the **Logbook** tab (page 171).

LOGBOOK

The **Logbook** tab provides a table that lists all processing-related events in which the equipment entity was involved. For each event that affected the entity, the table displays one row.

To filter the event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the logbook, the date range is preset to start with the date when the last event occurred and to end with the current date. If the system has no events registered for the entity, the date range is preset to the current date.

To refresh the list of events, click the **Refresh** button (page 76). All events of the entity that have occurred since you opened the logbook are then included.

To print the **Equipment Logbook Report** for the events that have occurred during the selected date range, click the **Print equipment logbook report** button (page 76).

The following table columns are available and are filled if relevant to the respective event:

 Timestamp indicates the date and time when the event occurred.

Category

indicates the type of the event (Binding, Denial, FSM, Context, Manual, Phase, Property update, Graph transition, Grouping).

Action/trigger

for events that were triggered by external circumstances in the life cycle of the entity, the action that triggered the event (such as **Bind**, **Identify**) or any trigger of an assigned equipment graph.

TIP

Please note that for events of the **Graph transition** category, several trigger actions may be performed that change the same runtime property value. In this case, the logbook only records the initial and the final values of the property.

Graph

for events of the **Graph transition** category, indicates the graph that triggered the event.

Property

for events of the **FSM** category, the identifier of the FlexibleStateModel property type that governs the registered status change.

Old content/New content

indicates the data changed by an event, such as **Identified/Bound** for an event of the **Binding** category.

Information

for events of the **Denial**, **Manual**, **Graph transition**, **Property update**, or **Grouping** categories, additional information on the circumstances of the event.

■ Workflow

for equipment entities used for processing a workflow, identifier of the workflow.

Orde

for equipment entities used for processing an order, identifier of the order.

Product batch

for equipment entities used in batch production, the identifier of the batch that was being produced when the event occurred.

Product material

for equipment entities used in production, the identifier of the material that was being produced when the event occurred.

Unit procedure identifier of the unit procedure (with its count if it was run more than once) that

Operation

identifier of the operation (with its count if it was run more than once) that was being executed when the event occurred.

Phase

identifier of the phase (with its count if it was run more than once) that was being executed when the event occurred.

Involved material

identifier of the material that was in direct contact with the entity when the event occurred.

Work center

identifier of the work center where the event occurred.

Station

identifier of the station where the event occurred.

was being executed when the event occurred.

Device

identifier of the device where the event occurred.

Signature

displays two items per signature (page 103):

- User and login names of the user who performed the signature.
- Timestamp when the signature was recorded.
- Logged-in user

login name of the user under whose login the event occurred.

MIGRATED HISTORY

The **Migrated History** tab only exists for equipment entities that previously existed as data objects in PharmaSuite for Production Management and were migrated to Data Manager. It only contains the data recorded before the entity was migrated. Any events that occur after the migration are recorded in the entity's Logbook (page 171), Change History (page 174), and Status History (page 175) tabs.

A migrated history consists of two panels, one for the **Logbook** table at the top and the other one for the **Status Histories** table underneath, which comprises all status history event entries that were recorded for all status graphs that applied to the entity before it was migrated. So for a scale, it contains both the event entries from the calibration status history and from the testing status history.

The panels are divided by a slidable separator and can thus be freely resized, if necessary.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

To refresh the list of events, click the **Refresh** button (page 76).

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment entity, which also includes indirect assignment changes that occur when a class' assignment change also involves the entity.

For each change event that affected the entity, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the entity that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your entity, the change history shows the identifier of the attribute you have modified and when you assign a class, graph, or property type to your entity, the change history shows the identifier of the assigned class, graph, or property type.
- Old content/New content for data change events on your entity, displays the changed values.

Information indicates additional details on the change, such as if it was performed in the context of a mass change.

 Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment entity.

For each status change that affected the entity, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the entity that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the entity was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

GRAPH

The Details window of a graph contains the following data tabs:

- Basic (page 176)
- Property Type (page 178)
- Status/Trigger (page 178)
- Transition (page 179)
- Style (page 183)
- Change History (page 183)
- Status History (page 184)

BASIC

The **Basic** tab lists the Basic Attributes of the equipment graph.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created an equipment graph, you can no longer modify its **Identifier**.

DEFAULT GRAPHS

PharmaSuite provides the following equipment graphs with any default installation of the system:

- ContainerCleaning_RS_1 The default graph for container cleaning includes the following default property types:
 - Container Clean Shelflife (RS)
 - Container Sublot (RS)
- RoomCleaning_RS_1

The default graph for room cleaning includes the following default property type:

- General Clean Shelflife (RS)
- ScaleCalibration RS 1

The default graph for scale calibration includes the following property type:

■ Scale Calibration Shelflife (RS)

- ScaleTest_RS_1 (scale test graph)
 The default graph for scale test includes the following property type:
 - Scale Test Shelflife (RS)

The **Display text** attribute defines the text shown on the card view of the graph.

The **Purpose** attribute is mandatory and indicates the context for which the graph is intended.

Especially the Dispense and Weighing phases of Rockwell Software PharmaSuite® require equipment to hold graphs of specific purposes in order to function correctly. The Dispense and Weighing-related purposes are marked with **(RS)**.

The following purposes are available:

Calibration

for graphs related to the calibration of equipment.

Cleaning

for graphs related to the cleaning of equipment.

■ a Container Cleaning (RS) graph is required to control that vessels identified during production are fit for use.

Installation

for graphs related to installation processes for equipment.

Maintenance

for graphs related to maintenance processes for equipment.

- a Room Cleaning (RS) graph is required to calculate to which extent a room needs to be cleaned prior to a weighing process.
- a Scale Calibration (RS) graph is required to qualify scales prior to a weighing process.
- a **Scale Test (RS)** graph is required to qualify scales prior to a weighing process.

■ Sterilization

for graphs related to the sterilization of equipment.

Testing

for graphs related to testing processes for equipment.

■ Usage

for graphs related to the usage of equipment.

PROPERTY TYPE

The **Property Type** tab lists the property types assigned to the equipment graph.

- To add a property type to the list, drag and drop (page 101) its card or tile on the Details window of the graph to which you wish to assign it.
- To change a property type's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property type on the card view of the equipment graph, click the **Display on card** button (page 74).
- To remove a property type from the list, click the **Remove property type** button (page 76).

STATUS/TRIGGER

The Status/Trigger tab provides two collapsible lists to define

- the individual statuses of the equipment graph consisting of
 - the **Key**, which is mandatory and must be unique within the list of statuses,
 - the Display text, which is how the status is shown to operators during processing,
 - **Description** to further elaborate the status's meaning, and
 - the **Initial status** option, which defines which status an equipment entity receives initially when the graph is assigned to it.
 - the Can expire option, which defines if a status can expire automatically after a specified duration or at a specific date.
- the triggers that affect the graph's statuses, consisting of
 - the **Key**, which is mandatory and must be unique within the list of triggers,
 - the **Display text**, which is how the trigger is shown to operators during processing, and
 - **Description** to further elaborate the trigger's meaning.

TIP

Please note that the system automatically adds the **Expired (RS)** trigger as soon as you select the **Can expire** option for one of the graph's statuses. You cannot manually delete the system-provided **Expired (RS)** trigger, but it is removed automatically when you have unselected the **Can expire** option of all statuses.

To add a new status or trigger, type its data in the empty table row, starting with its key. The system automatically adds a new empty list row after you have completed the first cell of the new status or trigger.

TIP

Please note that curly brackets (braces) and leading or trailing blanks are not allowed in the keys of statuses or triggers.

To delete a status or trigger, select or multi-select it and click the **Delete status** or **Delete trigger** button, respectively, or press the DEL key.

TIP

Statuses or triggers that contain errors are indicated by an error marker (page 77) to the left of the respective rows. Hover over the icon to view a tooltip with additional error details.

TRANSITION

The **Transition** tab provides a list to specify the structure and logic of the equipment graph by combining

- a **Trigger**, which needs to have been defined on the **Status/Trigger** tab (page 178) before.
- the statuses (**From status** and **To status**), also previously defined on the **Status/Trigger** tab (page 178).
- an optional transition Condition that determines if the expected circumstances are met so that the transition can be executed. A condition is defined as condition expression in the Expression editor for transition conditions (page 31).
 The Condition column of a transition is blank if there is no condition defined. If a transition condition exists, it shows the description of the condition. If the condition does not have a description, the system displays the condition expression itself, introduced by an equals sign.

TIP

In the transition table, the description of a condition is not editable. To change it, you have to open the Expression editor and make your changes in the **Description** box.

one or more Actions that are performed along with the transition. Actions are also optional and are displayed in a collapsible sub-table under the transition row.
 They are defined in the Expression editor for transition actions (page 33).

TIP

Actions are executed in the order in which they are listed. Use the **Move** action down/up buttons (page 75) to change the order of the actions.

the identifier (**ID**) of the transition, which is shown for exception cases during execution, in the batch report, and in the logbook and change history of affected equipment entities.

Thus a transition specifies the cause, represented by the **Trigger**, that initiates the transition from one status, the **From status**, to another status, the **To status**, including potential preconditions and resulting actions.

GRAPH TRANSITION MODELING WITH EXPIRY DATES AND TRIGGERS

In addition to the triggers you define yourself, the system creates the **Expired (RS)** trigger, when you define a status that can expire. Along with the trigger the system provides an **ExpiryDate** reference for use in the Expression editor in conditions or actions.

Expiry triggers are evaluated automatically during execution whenever an operator identifies an equipment entity in order to update its status and thus ensure that the entity is suitable for use. If the trigger evaluation determines that the identified entity has expired into a status that is unfit for use, the system rejects the entity. In this case the entity has to undergo a specific treatment that returns it to the suitable status.

In the case of a container, this could mean that its "Clean" status has expired and it needs to be run through a cleaning workflow. In the case of a scale, its "Tested" or "Calibrated" statuses may have expired so that the scale requires testing and calibration before it can be used in production again.

Your graph may contain several statuses that can expire, so that one status expires into a successor status that again expires into a successor status, thus forming a cascade of expiries until the graph has reaches a status that cannot expire or has not yet expired.

TIP

For creating the transitions of a graph with expiry-enabled statuses, we recommend to proceed as follows:

- 1. Create all transitions required to cover all statuses using all user-created triggers.
- 2. Identify which transitions have an expiry-enabled **To status** and add a **set** action that defines an expiry date.
- 3. Use the Expired (RS) trigger to create transitions out of expiry-enabled statuses, which have not been handled yet. This may be necessary to define various conditions that lead to different target statuses.

 Make sure to create an action for setting an expiry date when a transition has an expiry-enabled To status.

The following example shows a cleaning graph for equipment entities with four statuses, three of which can expire:

- To be cleaned (UNCLEAN) is the initial status and cannot expire. From here you can only transition into the Clean status.
- Clean (CLEAN) can expire. From here you can transition to the To be cleaned, the Clean, the In use, and the Reusable statuses.
- In use (IN_USE) can expire. From here you can transition to the **Reusable** and **To be cleaned** statuses.
- Reusable (REUSABLE) can expire. From here you can transition to the **In use** and **To be cleaned** statuses.

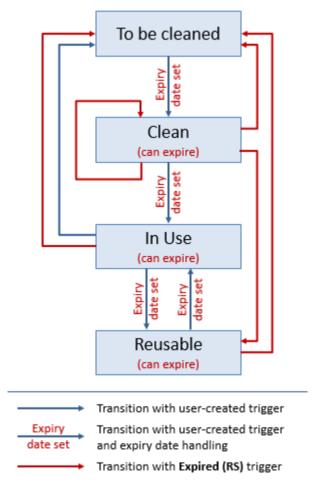


Figure 97: Example graph

The expiry dates of explicit transitions in the example are handled as follows:

Setting the expiry date

The expiry date for the **Clean** status is specified as action with the transition from **To be cleaned** to **Clean**. It uses the set command to define that the {ExpiryDate} reference is set to twelve hours after the date and time when the transition occurs. To retrieve the time, the action expression uses the **Current Date and Time (now)** function from the **Analysis** section.

```
set {ExpiryDate} = now() + 12h
```

Retaining the expiry date

To retain the expiry date of the equipment entity when it moves from the **Clean** or **Reusable** statuses to the **In use** status, the {ExpiryDate} reference is set to itself:

```
set {ExpiryDate} = {ExpiryDate}
```

Postponing the expiry date

When the equipment entity moves from the **In use** status to the **Reusable** status, its expiry date is postponed by two hours:

```
set {ExpiryDate} = {ExpiryDate} + 2h
```

Implicit transitions with **Expired (RS)** triggers handle the following cases:

TIP

When calculating a new expiry date in a transition of the **Expired (RS)** trigger, we recommend not to use the **now()** function. Since the system executes the expiry trigger when an (expired) equipment entity is identified during production, which is not necessarily a predictable point in time and is thus not really suitable as base of a calculation. The expiry date of the **From status**, on the other hand, is a defined and immutable point in time, which makes it a good base for calculating the expiry date of the **To status**:

```
set {ExpiryDate} = {ExpiryDate} + <duration>
```

Prolonging the time before an equipment entity is unavailable for use due to an expired status

Under a specific condition, the **Clean** status expires into itself, adding time to its set expiry date:

```
set {ExpiryDate} = {ExpiryDate} + 12h
```

Prolonging the time before an equipment entity is unavailable for use after it has expired into another status

Under a specific condition, the **Clean** status expires into the **Reusable** status, adding time to its set expiry date:

```
set {ExpiryDate} = {ExpiryDate} + 2h
```

Automatically moving an equipment entity to a status that makes it unavailable for use

Under specific conditions, the **Clean**, **In use**, or **Reusable** statuses expire into the **To be cleaned** status, which cannot expire and thus does not require an action that handles an expiry date.

To add a new transition, select the required entries from the respective option lists or start to define a new condition. The system automatically adds a new empty list row after you have completed any cell of the new transition.

To delete a transition, select or multi-select it and click the **Delete transition** button or press the DEL key.

TIP

Transitions that contain errors are indicated by an error marker (page 77) to the left of the respective table or sub-table rows. Hover over the icon to view a tooltip with additional error details.

STYLE

The **Style** tab provides tools for defining the visual appearance of the equipment graph's tiles and cards:

- Background color
- Font color

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment graph.

For each change event that affected the graph, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the graph that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your graph, the change history shows the identifier of the attribute you have modified. When you assign a property type to your graph, the change history shows the identifier of the assigned property type. For status or trigger changes, the affected object is displayed as <key>/<display text>. Similar formatting is used for transition attributes which show as <ID>/<attribute>.
- Old content/New content for data change events on your graph, displays the changed values.
- Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment graph.

For each status change that affected the graph, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the graph that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.

- To status indicates the status to which the graph was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

PROPERTY TYPE

Property types are used on the one hand to model the properties inherent to equipment entities and classes and on the other hand to define the equipment requirements presented by master recipes and workflows. A property type describes a physical characteristic of an equipment entity, such as its volume, speed range, or the fact that it is under cleaning status control. For this reason, each property type can only be assigned once to an equipment entity, template entity, or class.

As a consequence, when you model an equipment entity that holds two tanks of the same volume, you still need to define two property types, one for each tank. Similarly, you also need to define two property types to model different functions the volume of one and the same tank may have, such as its storage volume, which may be greater than its fermentation volume.

During execution, an equipment entity is matched against the requirements defined with the recipe or workflow for which an operator plans to use it. Only if this validation check concludes that the properties of the equipment entity meet the requirements can the entity be used as planned.

VALIDATION RULES

The rules that determine if an equipment entity matches its requirements take place on three levels of complexity:

- The basic level only has one rule, which checks if all properties defined for the requirement are also defined as properties of the equipment entity.
- The second level has a set of rules that apply if requirement and entity both state a value for a property, if one of them states a range while the other supplies a value, or if one or both of them state neither a value nor a range for a property.

Condition	Result	
Requirement: value and range are not defined	The entity is a valid match for the requirement.	
Requirement: value or range is defined	The entity is no valid match for the requirement.	
Entity: value and range are not defined		
Requirement: value is defined (ReqValue)	The entity is a valid match for the requirement.	
Entity: value is defined (EntValue) ReqValue = EntValue		
Requirement: range is defined (ReqLowLimit and/or ReqHighLimit)	The entity is a valid match for the requirement.	
Entity: value is defined (EntValue)		
ReqLowLimit <= EntValue <= ReqHighLimit		
Requirement: value is defined (ReqValue)	The entity is a valid match for the requirement.	
Entity: range is defined (EntLowLimit and/or EntHighLimit)		
EntLowLimit <= ReqValue <= EntHighLimit		
Requirement: value is not defined	Covered by third level of rules, see below.	
Entity: value is not defined		
Either requirement or entity: one value (Low or High) of range is defined		
Either requirement or entity: value is defined range is defined (Low and/or High)	This condition represents an invalid configuration and is prevented by the system.	

- The set of rules on the third level applies to cases when both requirement and entity have a range defined for a property.
 - When matching the range of an entity (EntLowLimit, EntHighLimit) against the range of a requirement (ReqLowLimit, ReqHighLimit) the system has to consider the following possible cases:
 - Entity range is **lower** than requirement range: EntHighLimit < ReqLowLimit
 - Entity range **overlaps** requirement range at the **low limit**: EntLowLimit < ReqLowLimit <= EntHighLimit <= ReqHighLimit
 - Entity range is contained in requirement range:
 ReqLowLimit <= EntLowLimit <= EntHighLimit <= ReqHighLimit</p>
 - Entity range **contains** requirement range: EntLowLimit <= ReqLowLimit <= ReqHighLimit <= EntHighLimit
 - Entity range **overlaps** requirement range at the **high limit**:

 ReqLowLimit <= EquLowLimit <= ReqHighLimit < EquHighLimit
 - Entity range is **higher** than requirement range: ReqHighLimit < EntLowLimit

The following table lists how the system evaluates the settings made for entity and requirement ranges and indicates the match results.

If a range only has one limit, the system treats it as open range.

Limit settings specified		Range check type of requirement			
ReqLow	ReqHigh	EntLow	EntHigh	Is contained in entity range	Contains entity range
				Valid match	Valid match
			Yes	Valid match	Valid match
		Yes		Valid match	Valid match
		Yes	Yes	Valid match	Valid match
	Yes			No valid match	No valid match
	Yes		Yes	Valid match, if EntHigh <= ReqHigh	Valid match, if ReqHigh <= EntHigh
	Yes	Yes		No valid match	No valid match
	Yes	Yes	Yes	Valid match, if EntHigh <= ReqHigh	No valid match
Yes				No valid match	No valid match
Yes			Yes	No valid match	No valid match

Limit settings specified Range check type of requirement Contains Is contained ReqHigh EntLow **EntHigh** RegLow in entity range entity range Yes Yes Valid match, if Valid match, if RegLow <= EntLow EntLow <= ReqLow Yes ---Yes Yes Valid match, if No valid match RegLow <= EntLow Yes Yes ------No valid match No valid match Valid match, if Yes Yes ---Yes No valid match Equ.max <= Req.max Yes Yes Yes ---No valid match Valid match, if Req.min <= Equ.min Yes Yes Yes Yes Valid match, if Valid match, if RegLow <= EntLow EntLow <= RegLow AND AND EntHigh <= ReqHigh ReqHigh <= EntHigh

The Details window of a property type contains a **Basic** tab that lists its Basic Attributes.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created, defined, and saved a property type, you cannot edit it any more.

DEFAULT PROPERTY TYPES

PharmaSuite provides the following property types with any default installation of the system:

- Container Clean Shelflife (RS)a Specification property type of the Duration data type
- Container Sublot (RS)
 a Runtime property type of the String data type and the Current Sublot (RS)
 purpose
- Container Tare (RS)
 a Runtime property type of the MeasuredValue data type and the Current Tare (RS) purpose

- Container Type (RS)
 a Specification property type of the Container (RS) equipment type
- General Clean Shelflife (RS)
 a Specification property type of the Duration data type
- Room Cleaning Rules (RS)
 a Specification property type of the RoomCleaningRules data type
- Room Type (RS)a Specification property type of the Room (RS) equipment type
- Scale Calibration Shelflife (RS)
 a Specification property type of the Duration data type
- Scale Configuration (RS)
 a Specification property type of the ScaleConfiguration data type
- Scale Load (RS)a Runtime property type of the String data type and the Current load (RS) purpose
- Scale Ranges (RS)
 a Specification property type of the Ranges data type and the ScaleRanges (RS)
 purpose
- Scale Test and Calibration (RS)
 a Specification property type of the ScaleTestAndCalibration data type
- Scale Test Shelflife (RS)
 a Specification property type of the Duration data type
- Scale Type (RS)
 a Specification property type of the Scale (RS) equipment type
- Work Center Assignment (RS) a Specification property type of the WorkCenterAssignment data type

The purpose and context of a property type are defined by several attributes:

- with the **Usage** attribute you determine if a property type
 - is part of the basic **Specification** of the equipment, indicating a characteristic of an equipment object, such as a coater's drum size,
 - is intended for equipment in an **Automation** environment, so that you need to specify automation-related data, such as tag names, tag update rates, or Live Data types,
 - if it refers to a **Runtime** value of an equipment entity that can change during processing, such as a coater's cleaning status,

- or is intended for equipment that is connected to a **Historian** server, so that you need to specify which tags are to be read for retrieving the historical data chart.
- with the **Purpose** attribute you can further specify some data types that represent required properties for equipment to be used with the Dispense and Weighing phases of PharmaSuite or with phases that generate equipment entities on the shop floor.
 - the **Base Sublot** (**RS**) purpose extends the String (page 193) data type in the **Runtime** usage and is required to register the identified sublot so that the system can determine which template equipment entity to use when generating an entity.
 - the **Current Tare (RS)** purpose extends the MeasuredValue (page 192) data type in the **Runtime** usage and is required to handle the tare property of a container.
 - the **Reference Tare (RS)** purpose extends the MeasuredValue (page 192) data type in the **Runtime** usage and is used for defining the optional reference tare property of a container.
 - the **Current Sublot** (**RS**) purpose extends the String (page 193) data type in the **Runtime** usage and is required for identifying a container.
 - the Scale Ranges (RS) purpose extends the Ranges (page 193) data type and is required to configure the ranges of a scale.
 - the **Current Load (RS)** purpose extends the String (page 193) data type in the **Runtime** usage and is required to handle the identifier of a container or sublot that represents a scale load.
- with the **Data type** attribute you determine the context for which the property type is suitable. Once you have selected the **Data type**, you can specify its **Content**.

The system provides the following data types:

- BigDecimal
 floating point number, used for numbers and ranges. It is suitable for
 handling numbers qualified by a unit of measure.
 BigDecimal for automation can handle the three Live Data types **Double**,
 Float, and **Integer** that need to be specified for correct communication with
 equipment. The mapping of the most common OPC names to the Live Data
 types is as follows:
 - Integer represents SHORT, LONG, CHAR, BYTE, USHORT, and ULONG

- Float represents REAL4
- **Double** represents REAL8

TIP

BigDecimal values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

For editing BigDecimal values, the system provides several BigDecimal editors:

- BigDecimal (page 12)
- Automation BigDecimal (Double) (page 15)
- Automation BigDecimal (Float) (page 18)
- Automation BigDecimal (Integer) (page 22)
- Historian BigDecimal (page 25)

Boolean

with the values **Yes**, **No**, and in some cases **N/A**.

For editing boolean values for automated equipment, the system provides the Automation Boolean (page 26) editor.

Duration

only available for **Specification** and **Runtime** properties.

It is used for displaying time spans and for time-related calculations. It supports the following time units: days (**d**), hours (**h**), minutes (**min**), seconds (**s**), and milliseconds (**ms**).

For editing durations, the system provides the Duration (page 30) editor.

EquipmentType

only available for **Specification** property types.

It is used to support you with the accurate and complete configuration of equipment entities (page 116) to be used for executing product phases, such as Dispense and Weighing phases.

TIP

When an entity holds an EquipmentType property, the system checks if it also holds all other properties or graphs required by its type. You can save an entity that does not hold all required properties or graphs, but you cannot change its status to **Verification** or **Approved**.

The following equipment types are available:

- Container (RS)
- Hybrid (RS)
- Room (RS)
- Scale (RS)

■ FlexibleAttributeDefinition

only available for **Runtime** property types.

It is used to define a bundle of runtime attributes, whose values are established and can change during processing.

For defining the attribute bundle, the system provides the FlexibleAttributeDefinition (page 55) editor.

■ FlexibleStateModel

only available for **Runtime** property types.

It is used to put equipment entities under status control, for example, to model cleaning or maintenance cycles.

Suitable FSMs must be maintained in the Process Designer application of FactoryTalk ProductionCentre. For further information on FSMs for use with equipment, please refer to "Configuring FSMs for Equipment Properties" in Volume 3 of the "Technical Manual Configuration and Extension".

For selecting a FlexibleStateModel for equipment, the system provides the FlexibleStateModel (page 57) editor.

FlexibleTagDefinition

only available for Automation property types.

It is used to define a group of automation-relevant values to communicate as value bundle from an equipment entity for monitoring purposes.

For defining the value bundle, the system provides the Automation FlexibleTagDefinition (page 58) editor.

MeasuredValue

used for displaying numeric values qualified by a unit of measure.

TIP

MeasuredValue values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

For editing MeasuredValue data types, the system provides the MeasuredValue (page 61) editor.

Ranges

only available for **Specification** property types.

It is used to define up to three ranges for an equipment object.

For defining the ranges, the system provides the Ranges (page 62) editor.

■ RoomCleaningRules

only available for **Specification** property types.

It is used to define the cleaning rules and cleaning demands of rooms used in a Dispense environment.

For cleaning rule data, the system provides the CleaningRules (page 28) editor.

■ ScaleConfiguration

only available for **Specification** property types.

It is used to define the driver and connection data of a scale.

For defining the scale data, the system provides the ScaleConfiguration (page 63) editor.

■ ScaleTestAndCalibration

only available for **Specification** property types.

It is used to define the test weight and operator instructions for scale tests and calibration.

For scale test and calibration data, the system provides the ScaleTestAndCalibration (page 67) editor.

String

used for handling any sequence of characters.

■ WorkCenterAssignment

only available for **Specification** property types.

It is used to assign work centers to scales or rooms. Work centers are maintained in the Data Manager - Work Center mode of Data Manager. For selecting a work center, the system provides the Searchable Option List (page 69) editor.

Managing Equipment - Basic Search

Data Manager - Equipment - Basic Search is recommended for usage scenarios when specific objects whose identifiers are known need to be located within a very large number of equipment objects. A scenario of this kind can evolve when large numbers of equipment entities are generated for one-time use on the shop floor, followed by their immediate archival.

Menus and Toolbars

You can access all relevant functions either from the menu bar in the main Data Manager - Equipment - Basic Search window, from context-sensitive shortcut menus, or from toolbars provided for quick access to frequently used functions.

MENUS

Data Manager - Equipment - Basic Search provides a main menu bar (page 194) with all relevant functions as well as context-sensitive shortcut menus (page 199) for quick access to specific functions.

MAIN MENU BAR

The **main menu bar** offers the following menus and functions:

File

- New equipment class (CTRL+SHIFT+C)

 Creates a new equipment class, thus first opening the **New Equipment Class** dialog and afterwards a new tab in the lower tab bar of the Details window.
- New template equipment entity (CTRL+SHIFT+T)
 Creates a new template equipment entity, thus first opening the New Template
 Equipment Entity dialog and afterwards a new tab in the lower tab bar of the
 Details window.
- New equipment entity (CTRL+SHIFT+E)

 Creates a new equipment entity, thus first opening the **New Equipment Entity**dialog and afterwards a new tab in the lower tab bar of the Details window.
- New equipment graph (CTRL+SHIFT+G)
 Creates a new equipment graph, thus first opening the **New Equipment Graph**dialog and afterwards a new tab in the lower tab bar of the Details window.
- New property type (CTRL+SHIFT+P)
 Creates a new property type, thus first opening the **New Property Type** dialog and afterwards a new tab in the lower tab bar of the Details window.

Import

Starts the process of importing (page 107) an equipment data object with all referenced objects by selecting, checking, and importing a PharmaSuite import ZIP archive.

- Export <object identifier>
 Starts the process of exporting (page 104) an equipment object with all referenced objects by selecting a target location for the PharmaSuite export ZIP archive.
- Save <object identifier> (CTRL+S)
 Saves all changes made to the object that is currently active in the lower tab bar of the Details window. This action saves all changes made on the object's attributes and properties tabs.
- Save all (CTRL+SHIFT+S)
 Saves all changes made to all object that are currently active in the lower tab bar of the Details window. This action saves all changes made on the objects' properties tabs.

TIP

Please note that you can only save an object if none of its assigned objects have unsaved changes.

- Duplicate <equipment class identifier> without entities (CTRL+F12)
 Only available for equipment classes.
 Opens the **Duplicate Equipment Class** dialog to create a copy of the class. The new class opens as new tab in the lower tab bar of the Details window.
 The **Duplicate** function copies all attributes and properties of the original class except for its template entity and entity assignments.
- Duplicate <(template) equipment entity identifier> without classes (CTRL+F12) Only available for template equipment entities or equipment entities.
 - For template equipment entities

 Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - For equipment entities
 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity.
 The new entity opens as new tab in the lower tab bar of the Details window.

The **Duplicate** function copies all attributes and properties of the original including all of its assignments.

 Duplicate <(template) equipment entity identifier> with classes (CTRL+SHIFT+F12)
 Only available for template equipment entities or equipment entities.

■ For template equipment entities

Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.

For equipment entities

Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.

The **Duplicate** function copies all attributes and properties of the original including all of its assignments.

TIP

Please note that tag names defined with automation properties are suffixed with "_COPY" when they are duplicated.

Duplicate <equipment graph identifier> (CTRL+F12)

Only available for equipment graphs.

Opens the **Duplicate Equipment Graph** dialog to create a copy of the graph. The new graph opens as new tab in the lower tab bar of the Details window.

Duplicate <property type identifier> (CTRL+F12)
 Only available for property types.

Opens the **Duplicate Property Type** dialog to create a copy of the property type. The new property type opens as new tab in the lower tab bar of the Details window.

- Change status of <object identifier> (CTRL+SHIFT+H)
 Opens the **Change Status** dialog to perform a status change (page 123) on the equipment class, template entity, or entity that is currently active in the lower tab bar of the Details window.
- Force unbinding of <equipment entity identifier>
 Only available for equipment entities that are currently bound for processing in PharmaSuite for Production Execution.

Opens an **Electronic Signature** dialog (page 103) to perform and sign for unbinding of the equipment entity that is currently active in the lower tab bar of the Details window.

TIP

This function should only be used as a last resort for scenarios such as cleaning up after processing has met with unresolvable issues in PharmaSuite for Production Execution.

Update (template) entities of <class identifier> Only available for equipment classes that hold template entities or entities. Opens the Update (Template) Entities dialog to perform a mass change operation on all entities and template entities assigned to the class.

Compile usage list of <class identifier>

Only available for equipment classes.

Opens the **Usage List** dialog to compile a list of recipes, workflows, and building blocks that reference the equipment class as requirement or in an expression.

Close <object identifier> (CTRL+F4)

Closes the object that is currently active in the lower tab bar of the Details window.

Close all (CTRL+SHIFT+F4)

Closes all objects that are currently open in the lower tab bar of the Details window.

Restore < object identifier > (CTRL+R)

Only available if there are unsaved changes.

Restores the object that is currently active in the lower tab bar of the Details window to its last saved state, thus undoing all changes made in the meantime.

Refresh < object identifier > (F5)

Only available if there are no unsaved changes.

Refreshes the object that is currently active in the lower tab bar of the Details window by retrieving its data again from the database. Thus it updates all runtime data, such as runtime properties, graph statuses or grouping situations, which may have changed due to processing activities on the shop floor.

Delete <object identifier>

Deletes the object that is currently active in the lower tab bar of the Details window.

Print barcode label for <object identifier> (CTRL+B)

Only available for equipment entities.

Sends the barcode of the equipment entity that is currently active in the Details window for printing to a connected printer.

Exit (ALT+F4)

Closes the application window.

View

New search (CTRL+N)

Opens a new Search window to define another set of search criteria and process its search results.

Zoom in (CTRL+PLUS)

Zooms in on the currently active search result, switching the display to the next larger view, either tiles or cards.

Zoom out (CTRL+MINUS)

Zooms out from the currently active search result, switching the display to the next smaller view, either tiles or mini tiles.

■ Hide Archived objects (CTRL+SHIFT+A)

Toggles the display of objects in the **Archived** status in the results panel.

Card tooltips (CTRL+T)

Toggles the display of the card view as tooltip when you hover over a tile or mini tile.

Window

Equipment Manager - Smart Search

Switches to the Equipment - Smart Search mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Equipment - Smart Search.

Equipment Manager - Basic Search

Switches to the Equipment - Basic Search mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Equipment - Basic Search.

Work Center Manager

Switches to the Work Center mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Work Center.

Undo layout change

Revokes the last layout change you have performed. You can undo up to 100 actions, thus you can step by step revoke the last 100 layout changes you have performed. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Undo resizing** or **Undo dragging**.

Redo layout change

Redoes the last layout change you have revoked with the **Undo layout change** function. You can redo up to 100 actions, thus you can step by step redo the last 100 layout changes you have revoked. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Redo resizing** or **Redo dragging**.

- Save user layout Saves the current window layout and overwrites the layout that was last saved by you on this computer.
- Load user layout Loads the last layout you have saved on this computer with the **Save user layout** function.
 - Reset layout
 Resets the window layout to the system-defined default layout. This function does
 not affect the saved user layout, which can be restored with the **Load user layout**function.

Help

- Data Manager Help (ALT+F1)
 Opens the start page of the help system (page 7).
- About PharmaSuite
 Opens the About PharmaSuite dialog (page 9).

SHORTCUT MENUS

The card and tile views make object type-specific **shortcut menus** available, which you can access by right-clicking a card or tile in the search results panel.

Equipment class

- Open <equipment class identifier> in Details window
 Opens the detail view of the equipment class as new tab in the Details window.
- Duplicate <equipment class identifier> without (template) entities Opens the **Duplicate Equipment Class** dialog to create a copy of the class. The new class opens as new tab in the lower tab bar of the Details window. The **Duplicate** function copies all attributes and properties of the original class except for its template entity and entity assignments.
- New equipment class Creates a new equipment class, thus first opening the New Equipment Class dialog and afterwards a new tab in the lower tab bar of the Details window.

- Change status of <equipment class identifier> Opens the Change Status dialog to perform a status change (page 123) on the equipment class.
- Update (template) entities of <class identifier>
 Only available for equipment classes that hold template entities or entities.
 Opens the Update (Template) Entities dialog to perform a mass change operation on all entities and template entities assigned to the class.
- Restore <equipment class identifier>
 Only available if there are unsaved changes.

 Restores the equipment class to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment class identifier>
 Only available if there are no unsaved changes.
 Refreshes the equipment class by retrieving its data again from the database.
- Delete <equipment class identifier>
 Only available if the class is in an editable status, such as **Draft**.

 Deletes the equipment class.
- Export <equipment class identifier>
 Starts the process of exporting (page 104) an equipment class with all referenced template entities, entities, graphs, and property types by selecting a target location for the PharmaSuite export ZIP archive.
- Compile usage list of <class identifier>
 Opens the Usage List dialog to compile a list of recipes, workflows, and building blocks that reference the equipment class as requirement or in an expression.
- Assign <equipment class identifier> to <equipment entity identifier> entity
 Only available, if the active tab of the Details window holds a template equipment
 entity or an equipment entity.
 Assigns the class to the template entity or entity that is displayed in the Details
 window.
- Create entity from <equipment class identifier> class
 Creates a new equipment entity on the basis of the data defined for the equipment class. The function passes all attributes and properties defined with the class on to the new entity. Moreover, the class is assigned to the entity as its style class.
- Create template entity from <equipment class identifier> class
 Creates a new template equipment entity on the basis of the data defined for the
 equipment class. The function passes all attributes and properties defined with the
 class on to the new template entity. Moreover, the class is assigned to the
 template entity as its style class.

Template equipment entity

- Open <template equipment entity identifier> in Details window
 Opens the detail view of the template equipment entity as new tab in the Details window.
- Duplicate <template equipment entity identifier> without classes Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - The **Duplicate** function copies all attributes and properties of the template entity except for its class assignments.
- Duplicate <template equipment entity identifier> with classes Opens the **Duplicate Template Equipment Entity** dialog to create a copy of the template entity. The new template entity opens as new tab in the lower tab bar of the Details window.
 - The **Duplicate with classes** function copies all attributes and properties of the original including all of its assignments.
- New template equipment entity (CTRL+SHIFT+T)

 Creates a new template equipment entity, thus first opening the **New Template Equipment Entity** dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <template equipment entity identifier>
 Opens the Change Status dialog to perform a status change (page 123) on the template equipment entity.
- Restore <template equipment entity identifier>
 Only available if there are unsaved changes.
 Restores the template equipment entity to its last saved state, thus undoing all changes made in the meantime.
- Refresh < template equipment entity identifier>
 Only available if there are no unsaved changes.
 Refreshes the template equipment entity by retrieving its data again from the database.
- Delete <template equipment entity identifier> Only available if the template entity is in an editable status, such as **Draft**, and has not been used as template for generating equipment entities during execution. Deletes the template equipment entity.
- Export <template equipment entity identifier>
 Starts the process of exporting (page 104) a template equipment entity with all referenced graphs and property types by selecting a target location for the PharmaSuite export ZIP archive.

Assign <template equipment entity identifier> to <equipment class identifier> class

Only available, if the active tab of the Details window holds an equipment class. Assigns the template entity to the equipment class that is displayed in the Details window.

- Create class from <template equipment entity identifier> template equipment entity
 - Creates a new equipment class on the basis of the data defined for the template equipment entity. The function passes all attributes and properties defined with the template entity on to the new class. Thus the data on the **Style** tab of the new class is not defined.
- Create entity from <template equipment entity identifier> template equipment entity

Creates a new equipment entity on the basis of the data defined for the template equipment entity. The function passes all attributes, properties, and assignments defined with the template entity on to the new entity.

Equipment entity

- Open <equipment entity identifier> in Details window
 Opens the detail view of the equipment entity as new tab in the Details window.
- Duplicate <equipment entity identifier> without classes
 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.
 The **Duplicate** function copies all attributes and properties of the original except for its class assignments.
- Duplicate <equipment entity identifier> with classes
 Opens the **Duplicate Equipment Entity** dialog to create a copy of the entity. The new entity opens as new tab in the lower tab bar of the Details window.
 The **Duplicate with classes** function copies all attributes and properties of the original including its assignments.
- New equipment entity Creates a new equipment entity, thus first opening the New Equipment Entity dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <equipment entity identifier>
 Opens the **Change Status** dialog to perform a status change (page 123) on the equipment entity.

Force unbinding of <equipment entity identifier>
Only available for equipment entities that are currently bound for processing in PharmaSuite for Production Execution.

Opens an **Electronic Signature** dialog (page 103) to perform and sign for unbinding of the equipment entity that is currently active in the lower tab bar of the Details window.

TIP

This function should only be used as a last resort for scenarios such as cleaning up after processing has met with unresolvable issues in PharmaSuite for Production Execution.

- Restore <equipment entity identifier>
 Only available if there are unsaved changes.

 Restores the equipment entity to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment entity identifier>
 Only available if there are no unsaved changes.
 Refreshes the equipment entity by retrieving its data again from the database.
 Thus it updates all runtime data, such as runtime properties, graph statuses or grouping situations, which may have changed due to processing activities on the shop floor.
- Delete <equipment entity identifier>
 Only available if the entity is in an editable status, such as **Draft**, and has not been used for processing yet.
 Deletes the equipment entity.
- Export <equipment entity identifier>
 Starts the process of exporting (page 104) an equipment entity with all referenced graphs and property types by selecting a target location for the PharmaSuite export ZIP archive.
- Assign <equipment entity identifier> to <equipment class identifier> class
 Only available, if the active tab of the Details window holds an equipment class.
 Assigns the entity to the equipment class that is displayed in the Details window.
- Create class from <equipment entity identifier> equipment entity
 Creates a new equipment class on the basis of the data defined for the equipment entity. The function passes all attributes and properties defined with the entity on to the new class. Thus the data on the **Style** tab of the new class is not defined.

Equipment graph

- Open <equipment graph identifier> in Details window
 Opens the detail view of the equipment graph as new tab in the Details window.
- Duplicate <equipment graph identifier>
 Opens the **Duplicate Equipment Graph** dialog to create a copy of the graph. The new graph opens as new tab in the lower tab bar of the Details window.
- New equipment graph Creates a new equipment graph, thus first opening the New Equipment Graph dialog and afterwards a new tab in the lower tab bar of the Details window.
- Change status of <equipment graph identifier>
 Opens the **Change Status** dialog to perform a status change (page 123) on the equipment graph.
- Restore <equipment graph identifier>
 Only available if there are unsaved changes.

 Restores the equipment graph to its last saved state, thus undoing all changes made in the meantime.
- Refresh <equipment graph identifier>
 Only available if there are no unsaved changes.

 Refreshes the equipment graph by retrieving its data again from the database.
- Delete <equipment graph identifier>
 Deletes the equipment graph.
 Only available if the graph is not assigned to another object, such as a class or an entity.
- Export <equipment graph identifier>
 Starts the process of exporting (page 104) an equipment graph with all referenced property types by selecting a target location for the PharmaSuite export ZIP archive.
- Assign <equipment graph identifier> to <object type identifier> <object type>
 Only available, if the active tab of the Details window holds an equipment class, template entity, or entity and the graph has not been assigned already to the class, template entity, or entity.

 Assigns the graph to the againment class, template entity, or entity that is

Assigns the graph to the equipment class, template entity, or entity that is displayed in the Details window.

Property type

- Open cproperty type identifier> in Details window
 Opens the detail view of the property type as new tab in the Details window.
- Duplicate <property type identifier>
 Opens the **Duplicate Property Type** dialog to create a copy of the property type.
 The new property type opens as new tab in the lower tab bar of the Details window.
- New property type
 Creates a new property type, thus first opening the **New Property Type** dialog and afterwards a new tab in the lower tab bar of the Details window.
- Restore <property type identifier>
 Only available if there are unsaved changes.
 Restores the property type to its last saved state, thus undoing all changes made in the meantime.
- Refresh property type identifier>
 Only available if there are no unsaved changes.
 Refreshes the property type by retrieving its data again from the database.
- Delete <property type identifier>
 Only available if the property type is not assigned to another object, such as a class, an entity, or a graph.
 Deletes the property type.
- Export Export Export Export Export Identifier
 Starts the process of exporting (page 104) a property type by selecting a target location for the PharmaSuite export ZIP archive.
- Assign cproperty type identifier> to <object type identifier> <object type>
 Only available, if the active tab of the Details window holds a suitable tab of an equipment class, template entity, entity, or graph and the property type has not been assigned already to the class, template entity, entity, or graph.
 Assigns the property type to the property tab (Specification, Process, Engineering) of the equipment class, template entity, or entity or to the Property Type tab of the equipment graph that is displayed in the Details window.

TOOLBARS

Data Manager provides several toolbars for context-sensitive quick access to specific functions.

MAIN TOOLBARS

The main toolbars offer shortcuts to the more frequently required menu functions:

- File toolbar with
 - New equipment class (page 72)
 - New template equipment entity (page 73)
 - New equipment entity (page 72)
 - New equipment graph (page 73)
 - New property type (page 73)
 - Refresh (page 73)
 - Save (page 74)
 - Close (page 72)
 - Delete (page 72)
 - Change status (page 72)
 - Print barcode label (page 73)
- View toolbar with
 - Zoom in (page 74)
 - Zoom out (page 74)
- Help toolbar with
 - Help (page 72)

PROPERTY TAB TOOLBAR

The **property tab toolbar** provides the following functions for sorting and managing the property types assigned to an equipment class, entity, or graph:

- Move down (page 75)
- Move up (page 75)
- Display on card (page 74)
 Only available for equipment classes and graphs.
- Remove (page 76)

Detail Data

From the upper tab bar in the Details window, you can access the attributes, properties, assignments, and usage data of the following equipment-related objects:

- Equipment classes (page 207)
- Template equipment entities (page 213)
- Equipment entities (page 221)
- Equipment graphs (page 236)
- Property types (page 246)

CLASS

The Details window of a class contains the following data tabs:

- Basic (page 207)
- Specification (page 209)
- Process (page 209)
- Engineering (page 210)
- Graph (page 210)
- Entity (page 211)
- Style (page 211)
- Change History (page 211)
- Status History (page 213)

BASIC

The **Basic** tab lists the Asset Attributes of the equipment class.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type. Any asset attribute values you define for an equipment class are copied to an equipment entity created from the class. The attribute values copied to the equipment entity can, however, be changed on the equipment entity without affecting the values defined on the class.

TIP

Please note that once you have created an equipment class, you can no longer modify its **Identifier**.

DEFAULT CLASSES

PharmaSuite provides the following equipment classes with any default installation of the system. They are intended as templates to create entities that contain all required graphs and property types:

Container_RS_1

The default class for containers includes the following default objects:

Graph:

ContainerCleaning_RS_1

- Property types:
 - Container Clean Shelflife (RS)
 - Container Sublot (RS)
 - Container Tare (RS)
 - Container Type (RS)
- Room_RS_1

The default class for rooms includes the following default objects:

Graph

RoomCleaning_RS_1

- Property types:
 - General Clean Shelflife (RS)
 - Room Cleaning Rules (RS)
 - Room Type (RS)
 - Work Center Assignment (RS)
- Scale_RS_1

The default class for scales includes the following default objects:

- Graphs:
 - ScaleCalibration_RS_1
 - ScaleTest_RS_1
- Property types:
 - Scale Calibration Shelflife (RS)
 - Scale Configuration (RS)
 - Scale Load (RS)
 - Scale Ranges (RS)
 - Scale Test and Calibration (RS)

- Scale Test Shelflife (RS)
- Scale Type (RS)
- Work Center Assignment (RS)

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- Equipment module
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**, **N/A**) if the class groups (template) equipment entities that are intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**, **N/A**) if the class groups equipment entities whose life cycle needs to be tracked in the logbook.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the process tab.

- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the equipment class.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property on the card view of the equipment class, click the **Display** on card button (page 74).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the equipment class.

■ To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the class to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a graph with its short description on the card view of the equipment class, click the **Display on card** button (page 74).
- To remove a graph from the list, click the **Remove graph** button (page 76).

ENTITY

The **Entity** tab lists the equipment entities and template equipment entities assigned to the equipment class. The checkbox in the **Style class** column indicates which of the assigned (template) entities take their styling (color, icon, properties displayed on card view) from the class. The checkbox in the **Template** column indicates which of the assigned objects are plain entities and which of them are template entities.

To add a (template) entity to the list, drag and drop (page 101) its card or tile on the Details window of the class to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned (template) entity correspond to those of your class, but not on which tabs (**Specification**, **Process**, **Engineering**) the properties are located. Thus the system does not rearrange the (template) entity's properties to match the properties' positioning on the class.

■ To remove a (template) entity from the list, select or multi-select it and click the **Remove equipment entity** button (page 76) or press the DEL key. Removing a (template) entity from the list of entities also removes the class from the list of classes shown on the **Class** tab of the (template) entity's detail view.

STYLE

The **Style** tab provides tools for defining the visual appearance of the equipment classes' tiles and cards:

- Background color
- Font color
- Icon

TIP

Please note that (template) equipment entities assigned to a class can have the class set as their style class and thus inherit its visual appearance.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment class, which also includes indirect assignment changes that occur when an entity's assignment change also involves the class.

For each change event that affected the class, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the class that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your class, the change history shows the identifier of the attribute you have modified and when you assign a template entity, entity, graph, or property type to your class, the change history shows the identifier of the assigned object.
- Old content/New content for data change events on your class, displays the changed values.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

TIP

Signatures and their comments are only recorded for mass change operations.

■ Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment class.

For each status change that affected the class, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the class that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the class was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

TEMPLATE ENTITY

The Details window of an entity contains the following data tabs:

- Basic (page 214)
- Specification (page 216)
- Process (page 217)

- Engineering (page 218)
- Graph (page 218)
- Class (page 219)
- Material (page 219)
- Change History (page 219)
- Status History (page 220)

BASIC

The **Basic** tab lists the Asset, Automation, Historian, and Entity Barcode attributes of the template equipment entity.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

Asset, Automation, and Historian attribute values defined for a template entity are copied to all equipment entities created from the template in Data Manager or generated from the template on the shop floor.

Asset attribute values you define for a template equipment entity are copied to an equipment class created from the entity.

The attribute values copied to the new object can, however, be changed on the new object without affecting the values defined on the template entity.

TIP

Please note that once you have created a template equipment entity, you can no longer modify its **Identifier**.

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- Equipment module
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**) if the entities generated from the template are intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**) if the life cycles of all generated entities need to be tracked in the logbook.

The **Label layout (default)** attribute shows which label layout is pre-configured by the system and defines the layout that will be used for printing entity barcode labels when the template entity is used for generating entities on the shop floor.

With the Label layout attribute, you can override the default setting and define a

different label layout to be used. For selecting a suitable label layout, the system provides the **Label Layout Selection** editor (page 60).

If you leave the box blank, the system uses the pre-configured default label design displayed in the **Label layout (default)** attribute.

When a new entity is generated from the template entity during execution, the **Entity Barcode** attributes determine what the identifier and barcode of the new entity will look like.

The identifier of a generated entity consists of a prefix, which is a configurable sequence of characters and a count, whose number of digits is also configurable.

- The **Barcode prefix character (default)** is read-only and shows which character (if any) is pre-configured as barcode prefix by the system.
- With the **Barcode prefix source** attribute, you can define if the barcode will be prefixed with the default character (**From configuration key**) or with a character specifically defined with the template (**Template-specific**).
- The **Character** attribute is only available when the **Barcode prefix source** is set to **Template-specific**. It must be no longer than one character, but can also be left blank.
- The **Identifier prefix (default)** is read-only and shows the sequence of characters that is pre-configured by the system to precede the count of a generated entity.
- With the **Identifier prefix** you can override the system default with another sequence of characters. It can have a length of up to 30 characters, but can also remain blank.
- The **Sequencer length (default)** is read-only and shows the pre-configured number of digits to be used for the count of generated entities.
- With the **Sequencer length** you can override the system default with another number of digits for the count. The system uses leading zeros to fill up the digits if the actual count would require fewer digits.

Examples:

Barcode prefix source	Character	Identifier prefix	Sequencer length	Entity identifier Entity barcode
Template-specific	&	FL	5	FL00001 &FL00001
Template-specific		F-Liner	10	F-Liner0000000001 F-Liner0000000001
Template-specific	S		15	000000000000001 \$0000000000000001
Template-specific	\$	FL-	8	FL-00000001 \$FL-00000001

With the Automation attributes, you can establish the connection to the automation layer, by way of the **Automation Integration server name** and the **Live Data Area path**. The information is required if you wish to use automation phases in your workflows or master recipes. The system shows the pre-configured default paths, which are used unless you define another path, which then overrides the default.

The **Live Data Area path** specifies the path the system uses to access the tags on your generated equipment entity within the Factory Talk Directory. Together with the specific tag names you can configure when you edit the automation properties (page 11) of the entity, it forms the full path to a specific tag. The path consists of a protocol prefix **(RNA://\$Global)**, an application name, and one or more area names.

So the path to an equipment entity, located in a **Coating** sub-area of a **Building03** area within a company's **MES** application would be

RNA://\$Global/MES/Building03/Coating.

With the Historian attributes, you can access the data archived in a Historian application. Unless you can use the pre-defined defaults, you need to specify the **Provider** for interfacing to the **Historian server**, the **Historian access server**, and also the name of the **Automation Integration server** through which the data access is channeled. The information is required if your master recipe or workflow holds phases for retrieving historical data.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Template entities to be used for generating material-related equipment entities during production require specific object assignments:

Object type	Usage	Data type Content	Purpose
Property type	Specification	EquipmentType Hybrid (RS)	
Property type	Runtime	String	Current Sublot (RS)
Property type	Runtime	String	Base Sublot (RS)

When a phase building block generates an entity during identification of a sublot, the system determines the suitable template entity on account of the template entity assigned to the sublot's material.

When the identified sublot is split, but continues to exist, the system fills the new entity's **Current Sublot (RS)** runtime property with the identifier of the sublot that is generated along with the entity. The **Base Sublot (RS)** runtime property is filled with the identifier of the sublot that has been split in order to generate the sublot of the **Current Sublot (RS)** runtime property.

When the identified sublot is consumed immediately and thus ceases to exist, its identifier is shown in the **Base Sublot (RS)** runtime property of the generated entity. The **Current Sublot (RS)** runtime property of the entity remains blank in this case.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the process tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the template equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

- Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.
- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the template equipment entity. Each graph shows with its initial status and expiry date (if set), both of which cannot be changed. The statuses controlled by the graph do not apply to the template entity itself, but to all entities generated from it.

To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the template entity to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a graph from the list, click the **Remove graph** button (page 76).

CLASS

The **Class** tab lists the equipment classes assigned to the template equipment entity. A template equipment entity can belong to several equipment classes, but takes its styling (color, icon, properties displayed on card view) from the class set as its **Style class**.

To add a class to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned class correspond to those of your template entity, but not on which tabs (Specification, Process, Engineering) the properties are located. Thus the system does not rearrange the template entity's properties to match the properties' positioning on the class.

- To define the styling of the template entity by setting an assigned class as style class, select the **Style class** checkbox of the class whose styling the template entity is to adopt.
- To remove a class from the list, select or multi-select it and click the **Remove** equipment class button (page 76) or press the DEL key.

 Removing a class from the list of classes also removes the template entity from the list of entities shown on the **Entity** tab of the class' detail view.

MATERIAL

The **Material** tab lists the materials assigned to the template equipment entity. The assignments between materials and template entities are maintained in PharmaSuite for Production Management, where only those templates entities are available for assignment that have a specification property of the **Hybrid** (**RS**) equipment type.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the template equipment entity, which also includes indirect assignment changes that occur when a class' assignment change also involves the template entity.

For each change event that affected the template entity, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events

involving the template entity that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your template entity, the change history shows the identifier of the attribute you have modified and when you assign a class, graph, or property type to your template entity, the change history shows the identifier of the assigned class, graph, or property type.
- Old content/New content for data change events on your template entity, displays the changed values.
- Information indicates additional details on the change, such as if it was performed in the context of a mass change.
- Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the template equipment entity.

For each status change that affected the template entity, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the template entity that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the template entity was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

ENTITY

The Details window of an entity contains the following data tabs:

- Basic (page 222)
- Specification (page 225)
- Process (page 227)
- Engineering (page 228)
- Graph (page 229)
- Class (page 229)
- Grouping (page 230)
- Context (page 231)
- Logbook (page 231)
- Migrated History (page 234) (only for migrated equipment entities)
- Change History (page 234)
- Status History (page 235)

BASIC

The **Basic** tab lists the Asset, Automation, and Historian attributes of the equipment entity.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type. Any asset attribute values you define for an equipment entity are copied to an equipment class created from the entity. The attribute values copied to the equipment class can, however, be changed on the equipment class without affecting the values defined on the entity.

When an equipment entity is used for processing in PharmaSuite for Production Execution it is bound to the process. Under very rare circumstances, in may be necessary to unbind an entity form the process in order to resolve data issues that cannot be solved in any other manner. For these cases, the system provides the **Force unbinding** function in the File menu (page 194) or the entities shortcut menu (page 202).

TIPS

Please note that once you have created an equipment entity, you can no longer modify its **Identifier**.

For scale equipment entities, which hold a property of the Scale (RS) EquipmentType, the Short description is displayed during execution as button text on the scale buttons in the Select scale phases of Weighing or Dispense operations. If there is no short description defined, the system displays the scale's Identifier instead.

Thus the maximum number of characters for the **Short description** should not exceed 12 and should include a blank to trigger a line break when displayed on the button. One line on the button can hold approximately 6 characters. If the text exceeds the button width, it is truncated.

The **Level** attribute refers to the physical model of the S88 standard and provides the following options:

- Control module
- Equipment module
- Unit
- Process cell

The **Disposable** attribute allows you to choose (**Yes**, **No**) if the entity is intended for single-use.

The **Logbook enabled** attribute allows you to choose (**Yes**, **No**) if the entity's life cycle needs to be tracked in the logbook.

If the entity was generated on the shop floor, the **Template used** attribute displays the identifier of the template entity that was used for its generation.

The **Label layout (default)** attribute shows which label layout is pre-configured by the system and defines the layout that will be used for printing the barcode labels of the entity.

With the **Label layout** attribute, you can override the default setting and define a different label layout to be used. For selecting a suitable label layout, the system provides the **Label Layout Selection** editor (page 60).

If you leave the box blank, the system uses the pre-configured default label design displayed in the **Label layout (default)** attribute.

When you create a new entity, the system pre-fills its **Barcode** attribute with a string of characters that consists of a system-configured equipment entity barcode prefix and the entity's identifier you have specified as first step of the creation process. The system-configured prefix may be empty so that the barcode and the entity's identifier are identical. For barcodes of entities that are generated from a template entity during processing, however, the system calculates the **Barcode** attribute from the definitions made in the **Entity Barcode Attributes** section on the template entity's **Basic** tab (page 214).

To print the barcode label of an entity, proceed as follows:

1. Make sure the **Barcode** attribute cell contains the required unique string of characters.

TIP

Do not type leading of trailing blanks before or after the barcode string, since this may interfere with the system-internal formatting conversion and render the barcode unreadable for scanners.

- Save the equipment entity.
 The system enables the **Print barcode label** button on the **File** toolbar as well as the respective function in the **File** menu.
- 3. Click the **Print barcode label** button or select the respective menu function to print the barcode on a connected printer, typically the default printer defined in your Windows operating system.

With the Automation attributes, you can establish the connection to the automation layer, by way of the **Automation Integration server name** and the **Live Data Area path**. The information is required if you wish to use automation phases in your workflows or master recipes. The system shows the pre-configured default paths, which are used unless you define another path, which then overrides the default.

The **Live Data Area path** specifies the path the system uses to access the tags on your equipment entity within the Factory Talk Directory. Together with the specific tag names you can configure when you edit the automation properties (page 11) of the entity, it forms the full path to a specific tag. The path consists of a protocol prefix (**RNA://\$Global**), an application name, and one or more area names.

So the path to an equipment entity, located in a **Coating** sub-area of a **Building03** area within a company's **MES** application would be

RNA://\$Global/MES/Building03/Coating.

With the Historian attributes, you can access the data archived in a Historian application. Unless you can use the pre-defined defaults, you need to specify the **Provider** for interfacing to the **Historian server**, the **Historian access server**, and also the name of the **Automation Integration server** through which the data access is channeled. The information is required if your master recipe or workflow holds phases for retrieving historical data.

TIP

Please note that changes made to Automation or Historian attributes of an equipment entity that is already in use on the shop floor are not automatically pushed to the Production Execution station that runs the process with the affected equipment entity. PharmaSuite for Production Execution needs to be restarted for the changes to become effective.

SPECIFICATION

The **Specification** tab lists the property types assigned as specification properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Some entities require specific object assignments:

CONTAINER

Object type	Usage	Data type Content	Purpose
Property type, such as Container Type (RS)	Specification	EquipmentType Container (RS)	
Property type, such as Container Tare (RS)	Runtime	MeasuredValue	Current Tare (RS)
Property type, such as Container Sublot (RS)	Runtime	String, used in container cleaning graph	Current Sublot (RS)
Property type, such as Container Clean Shelflife (RS)	Specification	Duration, used in container cleaning graph	
Equipment graph, such as ContainerCleaning_RS_1			Container Cleaning (RS)

TIP

To define a reference tare for a container that can be accessed when taring the container during Dispense or Output Weighing, create a MeasuredValue runtime property type of the Reference Tare (RS) purpose.

Room

Object type	Usage	Data type Content	Purpose
Property type, such as Room Type (RS)	Specification	EquipmentType Room (RS)	
Property type, such as Room Cleaning Rules (RS)	Runtime	RoomCleaningRules < room-specific>	
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment < room-specific>	
Property type, such as General Clean Shelflife (RS)	Specification	Duration, used in room cleaning graph	
Equipment graph, such as RoomCleaning_RS_1			Room Cleaning (RS)

SCALE

Object type	Usage	Data type Content	Purpose
Property type, such as Scale Type (RS)	Specification	EquipmentType Scale (RS)	
Property type, such as Scale Ranges (RS)	Specification	Ranges <scale-specific></scale-specific>	ScaleRanges (RS)
Property type, such as Scale Configuration (RS)	Specification	ScaleConfiguration <scale-specific></scale-specific>	
Property type, such as Scale Test and Calibration (RS)	Specification	ScaleTestAndCalibration <scale-specific></scale-specific>	
Property type, such as Work Center Assignment (RS)	Specification	WorkCenterAssignment <scale-specific></scale-specific>	
Property type, such as Scale Test Shelflife (RS)	Specification	Duration, used in scale test graph	
Property type, such as Scale Calibration Shelflife (RS)	Specification	Duration, used in scale calibration graph	
Property type, such as Scale Load (RS)	Runtime	String, required for handling of loaded scales	Current Load (RS)

Object type	Usage	Data type Content	Purpose
Equipment graph, such as ScaleTest_RS_1			Scale Test (RS)
Equipment graph, such as ScaleCalibration_RS_1			Scale Calibration (RS)

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the specification tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

PROCESS

The **Process** tab lists the property types assigned as process properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the process tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

ENGINEERING

The **Engineering** tab lists the property types assigned as engineering properties to the equipment entity.

TIP

Automation properties indicate if a tag path has been specified for them.

- (-) means that they have no tag path,
- (+) means that at least one tag path has been defined.

Please note, however, that the indicator only refers to the existence of a tag path and not to its validity.

Click a property value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Runtime properties can change their values due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

- To add a property to the list, drag and drop (page 101) its property type on the engineering tab.
- To change a property's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a property from the list, click the **Remove property** button (page 76).

GRAPH

The **Graph** tab lists the equipment graphs assigned to the equipment entity. Each graph shows with the current status of the entity. If the graph status can expire (page 238), the system displays the expiry date, if set. If the status has already expired, the system indicates this by marking the displayed (expired) status in strikethrough formatting.

■ To add a graph to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that you can only assign graphs that do not have unsaved changes and contain at least one status.

■ To change the current status of the entity and its expiry date, which are controlled by a graph, open the GraphStatusChange editor (page 60) of the respective graph and make the required changes.

TIP

Graph statuses and their expiry dates are runtime data that can change due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

Please note that changing the status of a graph forces this status and does not perform a transition into the status. This means that actions that would be performed during a transition, such as updating the retest date or a counter do not take place and need to be performed manually.

- To change a graph's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To remove a graph from the list, click the **Remove graph** button (page 76).

CLASS

The **Class** tab lists the equipment classes assigned to the equipment entity. An equipment entity can belong to several equipment classes, but takes its styling (color, icon, properties displayed on card view) from the class set as its **Style class**.

To add a class to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.

TIP

Please note that the system only checks if the properties of the assigned class correspond to those of your entity, but not on which tabs (**Specification**, **Process**, **Engineering**) the properties are located. Thus the system does not rearrange the entity's properties to match the properties' positioning on the class.

- To define the styling of the entity by setting an assigned class a style class, select the **Style class** checkbox of the class whose styling the entity is to adopt.
- To remove a class from the list, select or multi-select it and click the **Remove** equipment class button (page 76) or press the DEL key.

 Removing a class from the list of classes also removes the entity from the list of entities shown on the **Entity** tab of the class' detail view.

GROUPING

The **Grouping** tab displays the grouping situation of the entity in two lists.

- The **Parent** list displays the data of the entity's parent entity. An entity can have only one parent, so the list always contains only one entry with the following data:
 - Identifier
 - Short description
 - Description
 - Status

TIP

The **Parent** list of an entity is always read-only. To change the parent assignment of an entity in Data Manager, you have to open the parent entity in the Details window and remove the respective child entity from its **Children** list.

- The **Children** list displays the data of all children that are directly or indirectly assigned to the entity. Indirect assignments occur when you assign an entity as child that is already a parent entity to other child entities. The following data is shown for child entities:
 - Identifier
 - Short description
 - Description
 - Status
 - Sub-parent
 Only available for entities that were assigned indirectly when their indicated parent was assigned to the entity.

TIP

Please note that you can only remove child entities from the list that have been assigned directly. For removing an indirectly assigned child entity you have to open its parent entity (indicated in the **Sub-parent** column) and remove the respective child entity from its **Children** list.

- To add a child entity to the list, drag and drop (page 101) its card or tile on the Details window of the entity to which you wish to assign it.
- To remove a child entity from the list, select or multi-select it and click the **Remove child entity** button (page 76) or press the DEL key.

TIP

Group assignments are runtime data that can change due to activities on the shop floor when the entity is in a read-only status, such as **Verification** or **Approved**. In order to resolve processing exceptions by administrative means, it is possible to update runtime data in these statuses in Data Manager as well. Before you change any runtime data, make sure to refresh the entity (page 73) so that it reflects the current situation on the shop floor.

A typical example of a group assignment change is a repair situation on the shop floor where an entity that is part of a group malfunctions during order processing and needs to be replaced.

CONTEXT

The **Context** tab lists the current and the previous material-related context information of the equipment entity, such as

- the product batch and material for which the entity was used,
- the order and order step during whose execution the entity was used,
- the involved material that was in direct contact with the entity,
- the order step input and order step output of the order step for which the entity was used.

TIP

Please note that the **Context** tab only contains the material-related context information for orders, not for workflows.

The information is read-only and shows the data for the current usage if the entity is bound. If it is not bound it shows the data for the entity's last usage. The complete usage history of the entity is recorded on the **Logbook** tab (page 231).

LOGBOOK

The **Logbook** tab provides a table that lists all processing-related events in which the equipment entity was involved. For each event that affected the entity, the table displays one row.

To filter the event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the logbook, the date range is preset to start with the date when the last event occurred and to end with the current date. If the system has no events registered for the entity, the date range is preset to the current date.

To refresh the list of events, click the **Refresh** button (page 76). All events of the entity that have occurred since you opened the logbook are then included.

To print the **Equipment Logbook Report** for the events that have occurred during the selected date range, click the **Print equipment logbook report** button (page 76).

The following table columns are available and are filled if relevant to the respective event:

- Timestamp indicates the date and time when the event occurred.
- Category
 indicates the type of the event (Binding, Denial, FSM, Context, Manual, Phase,
 Property update, Graph transition, Grouping).
- Action/trigger for events that were triggered by external circumstances in the life cycle of the entity, the action that triggered the event (such as **Bind**, **Identify**) or any trigger of an assigned equipment graph.

TIP

Please note that for events of the **Graph transition** category, several trigger actions may be performed that change the same runtime property value. In this case, the logbook only records the initial and the final values of the property.

- Graph for events of the **Graph transition** category, indicates the graph that triggered the event.
- Property for events of the **FSM** category, the identifier of the FlexibleStateModel property type that governs the registered status change.
- Old content/New content indicates the data changed by an event, such as **Identified/Bound** for an event of the **Binding** category.
- Information
 for events of the **Denial**, **Manual**, **Graph transition**, **Property update**, or **Grouping** categories, additional information on the circumstances of the event.
- Workflow for equipment entities used for processing a workflow, identifier of the workflow.

Order

for equipment entities used for processing an order, identifier of the order.

■ Product batch

for equipment entities used in batch production, the identifier of the batch that was being produced when the event occurred.

Product material

for equipment entities used in production, the identifier of the material that was being produced when the event occurred.

Unit procedure

identifier of the unit procedure (with its count if it was run more than once) that was being executed when the event occurred.

Operation

identifier of the operation (with its count if it was run more than once) that was being executed when the event occurred.

Phase

identifier of the phase (with its count if it was run more than once) that was being executed when the event occurred.

Involved material

identifier of the material that was in direct contact with the entity when the event occurred.

Work center

identifier of the work center where the event occurred.

Station

identifier of the station where the event occurred.

Device

identifier of the device where the event occurred.

Signature

displays two items per signature (page 103):

- User and login names of the user who performed the signature.
- Timestamp when the signature was recorded.

Logged-in user

login name of the user under whose login the event occurred.

MIGRATED HISTORY

The **Migrated History** tab only exists for equipment entities that previously existed as data objects in PharmaSuite for Production Management and were migrated to Data Manager. It only contains the data recorded before the entity was migrated. Any events that occur after the migration are recorded in the entity's Logbook (page 231), Change History (page 234), and Status History (page 235) tabs.

A migrated history consists of two panels, one for the **Logbook** table at the top and the other one for the **Status Histories** table underneath, which comprises all status history event entries that were recorded for all status graphs that applied to the entity before it was migrated. So for a scale, it contains both the event entries from the calibration status history and from the testing status history.

The panels are divided by a slidable separator and can thus be freely resized, if necessary.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

To refresh the list of events, click the **Refresh** button (page 76).

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment entity, which also includes indirect assignment changes that occur when a class' assignment change also involves the entity.

For each change event that affected the entity, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the entity that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your entity, the change history shows the identifier of the attribute you have modified and when you assign a class, graph, or property type to your entity, the change history shows the identifier of the assigned class, graph, or property type.
- Old content/New content for data change events on your entity, displays the changed values.
- Information indicates additional details on the change, such as if it was performed in the context of a mass change.
- Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment entity.

For each status change that affected the entity, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the entity that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the entity was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
 - Comment displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

GRAPH

The Details window of a graph contains the following data tabs:

- Basic (page 236)
- Property Type (page 238)
- Status/Trigger (page 238)
- Transition (page 239)
- Style (page 244)
- Change History (page 244)
- Status History (page 245)

BASIC

The **Basic** tab lists the Basic Attributes of the equipment graph.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created an equipment graph, you can no longer modify its **Identifier**.

DEFAULT GRAPHS

PharmaSuite provides the following equipment graphs with any default installation of the system:

- ContainerCleaning RS 1
 - The default graph for container cleaning includes the following default property types:
 - Container Clean Shelflife (RS)
 - Container Sublot (RS)
- RoomCleaning_RS_1

The default graph for room cleaning includes the following default property type:

- General Clean Shelflife (RS)
- ScaleCalibration_RS_1

The default graph for scale calibration includes the following property type:

- Scale Calibration Shelflife (RS)
- ScaleTest_RS_1 (scale test graph)
 The default graph for scale test includes the following property type:
 - Scale Test Shelflife (RS)

The **Display text** attribute defines the text shown on the card view of the graph.

The **Purpose** attribute is mandatory and indicates the context for which the graph is intended.

Especially the Dispense and Weighing phases of Rockwell Software PharmaSuite® require equipment to hold graphs of specific purposes in order to function correctly. The Dispense and Weighing-related purposes are marked with (**RS**).

The following purposes are available:

Calibration

for graphs related to the calibration of equipment.

Cleaning

for graphs related to the cleaning of equipment.

■ a Container Cleaning (RS) graph is required to control that vessels identified during production are fit for use.

Installation

for graphs related to installation processes for equipment.

Maintenance

for graphs related to maintenance processes for equipment.

.

- **Room Cleaning (RS)** graph is required to calculate to which extent a room needs to be cleaned prior to a weighing process.
- a Scale Calibration (RS) graph is required to qualify scales prior to a weighing process.
- a Scale Test (RS) graph is required to qualify scales prior to a weighing process.
- **■** Sterilization

for graphs related to the sterilization of equipment.

Testing

for graphs related to testing processes for equipment.

Usage

for graphs related to the usage of equipment.

PROPERTY TYPE

The **Property Type** tab lists the property types assigned to the equipment graph.

- To add a property type to the list, drag and drop (page 101) its card or tile on the Details window of the graph to which you wish to assign it.
- To change a property type's position in the list, click the **Move up** or **Move down** buttons (page 75).
- To display a property type on the card view of the equipment graph, click the **Display on card** button (page 74).
- To remove a property type from the list, click the **Remove property type** button (page 76).

STATUS/TRIGGER

The Status/Trigger tab provides two collapsible lists to define

- the individual statuses of the equipment graph consisting of
 - the **Key**, which is mandatory and must be unique within the list of statuses,
 - the Display text, which is how the status is shown to operators during processing,
 - **Description** to further elaborate the status's meaning, and
 - the **Initial status** option, which defines which status an equipment entity receives initially when the graph is assigned to it.
 - the **Can expire** option, which defines if a status can expire automatically after a specified duration or at a specific date.
- the triggers that affect the graph's statuses, consisting of
 - the **Key**, which is mandatory and must be unique within the list of triggers,

238

- the **Display text**, which is how the trigger is shown to operators during processing, and
- **Description** to further elaborate the trigger's meaning.

TIP

Please note that the system automatically adds the **Expired (RS)** trigger as soon as you select the **Can expire** option for one of the graph's statuses. You cannot manually delete the system-provided **Expired (RS)** trigger, but it is removed automatically when you have unselected the **Can expire** option of all statuses.

To add a new status or trigger, type its data in the empty table row, starting with its key. The system automatically adds a new empty list row after you have completed the first cell of the new status or trigger.

TIP

Please note that curly brackets (braces) and leading or trailing blanks are not allowed in the keys of statuses or triggers.

To delete a status or trigger, select or multi-select it and click the **Delete status** or **Delete trigger** button, respectively, or press the DEL key.

TIP

Statuses or triggers that contain errors are indicated by an error marker (page 77) to the left of the respective rows. Hover over the icon to view a tooltip with additional error details.

TRANSITION

The **Transition** tab provides a list to specify the structure and logic of the equipment graph by combining

- a **Trigger**, which needs to have been defined on the **Status/Trigger** tab (page 178) before.
- the statuses (**From status** and **To status**), also previously defined on the **Status/Trigger** tab (page 178).
- an optional transition Condition that determines if the expected circumstances are met so that the transition can be executed. A condition is defined as condition expression in the Expression editor for transition conditions (page 31). The Condition column of a transition is blank if there is no condition defined. If a transition condition exists, it shows the description of the condition. If the condition does not have a description, the system displays the condition expression itself, introduced by an equals sign.

TIP

In the transition table, the description of a condition is not editable. To change it, you have to open the Expression editor and make your changes in the **Description** box.

one or more Actions that are performed along with the transition. Actions are also optional and are displayed in a collapsible sub-table under the transition row. They are defined in the Expression editor for transition actions (page 33).

TIP

Actions are executed in the order in which they are listed. Use the **Move** action down/up buttons (page 75) to change the order of the actions.

■ the identifier (**ID**) of the transition, which is shown for exception cases during execution, in the batch report, and in the logbook and change history of affected equipment entities.

Thus a transition specifies the cause, represented by the **Trigger**, that initiates the transition from one status, the **From status**, to another status, the **To status**, including potential preconditions and resulting actions.

GRAPH TRANSITION MODELING WITH EXPIRY DATES AND TRIGGERS

In addition to the triggers you define yourself, the system creates the **Expired (RS)** trigger, when you define a status that can expire. Along with the trigger the system provides an **ExpiryDate** reference for use in the Expression editor in conditions or actions.

Expiry triggers are evaluated automatically during execution whenever an operator identifies an equipment entity in order to update its status and thus ensure that the entity is suitable for use. If the trigger evaluation determines that the identified entity has expired into a status that is unfit for use, the system rejects the entity. In this case the entity has to undergo a specific treatment that returns it to the suitable status.

In the case of a container, this could mean that its "Clean" status has expired and it needs to be run through a cleaning workflow. In the case of a scale, its "Tested" or "Calibrated" statuses may have expired so that the scale requires testing and calibration before it can be used in production again.

Your graph may contain several statuses that can expire, so that one status expires into a successor status that again expires into a successor status, thus forming a cascade of expiries until the graph has reaches a status that cannot expire or has not yet expired.

TIP

For creating the transitions of a graph with expiry-enabled statuses, we recommend to proceed as follows:

- 1. Create all transitions required to cover all statuses using all user-created triggers.
- 2. Identify which transitions have an expiry-enabled **To status** and add a **set** action that defines an expiry date.
- 3. Use the **Expired (RS)** trigger to create transitions out of expiry-enabled statuses, which have not been handled yet. This may be necessary to define various conditions that lead to different target statuses.

 Make sure to create an action for setting an expiry date when a transition has an expiry-enabled **To status**.

The following example shows a cleaning graph for equipment entities with four statuses, three of which can expire:

- To be cleaned (UNCLEAN) is the initial status and cannot expire. From here you can only transition into the Clean status.
- Clean (CLEAN) can expire. From here you can transition to the To be cleaned, the Clean, the In use, and the Reusable statuses.
- In use (IN_USE) can expire. From here you can transition to the **Reusable** and **To be cleaned** statuses.
- Reusable (REUSABLE) can expire. From here you can transition to the **In use** and **To be cleaned** statuses.

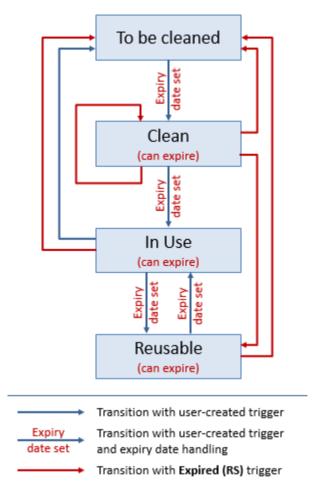


Figure 98: Example graph

The expiry dates of explicit transitions in the example are handled as follows:

The expiry date for the **Clean** status is specified as action with the transition from **To be cleaned** to **Clean**. It uses the set command to define that the {ExpiryDate} reference is set to twelve hours after the date and time when the transition occurs. To retrieve the time, the action expression uses the **Current Date and Time (now)** function from the **Analysis** section.

```
set {ExpiryDate} = now() + 12h
```

Retaining the expiry date

To retain the expiry date of the equipment entity when it moves from the **Clean** or **Reusable** statuses to the **In use** status, the {ExpiryDate} reference is set to itself:

```
set {ExpiryDate} = {ExpiryDate}
```

Postponing the expiry date

When the equipment entity moves from the **In use** status to the **Reusable** status, its expiry date is postponed by two hours:

```
set {ExpiryDate} = {ExpiryDate} + 2h
```

Implicit transitions with **Expired (RS)** triggers handle the following cases:

TIP

When calculating a new expiry date in a transition of the **Expired (RS)** trigger, we recommend not to use the **now()** function. Since the system executes the expiry trigger when an (expired) equipment entity is identified during production, which is not necessarily a predictable point in time and is thus not really suitable as base of a calculation. The expiry date of the **From status**, on the other hand, is a defined and immutable point in time, which makes it a good base for calculating the expiry date of the **To status**:

```
set {ExpiryDate} = {ExpiryDate} + <duration>
```

Prolonging the time before an equipment entity is unavailable for use due to an expired status

Under a specific condition, the **Clean** status expires into itself, adding time to its set expiry date:

```
set {ExpiryDate} = {ExpiryDate} + 12h
```

■ Prolonging the time before an equipment entity is unavailable for use after it has expired into another status

Under a specific condition, the **Clean** status expires into the **Reusable** status, adding time to its set expiry date:

```
set {ExpiryDate} = {ExpiryDate} + 2h
```

 Automatically moving an equipment entity to a status that makes it unavailable for use

Under specific conditions, the **Clean**, **In use**, or **Reusable** statuses expire into the **To be cleaned** status, which cannot expire and thus does not require an action that handles an expiry date.

To add a new transition, select the required entries from the respective option lists or start to define a new condition. The system automatically adds a new empty list row after you have completed any cell of the new transition.

To delete a transition, select or multi-select it and click the **Delete transition** button or press the DEL key.

TIP

Transitions that contain errors are indicated by an error marker (page 77) to the left of the respective table or sub-table rows. Hover over the icon to view a tooltip with additional error details.

STYLE

The **Style** tab provides tools for defining the visual appearance of the equipment graph's tiles and cards:

- Background color
- Font color

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the equipment graph.

For each change event that affected the graph, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for the object, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the graph that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your graph, the change history shows the identifier of the attribute you have modified. When you assign a property type to your graph, the change history shows the identifier of the assigned property type. For status or trigger changes, the affected object is displayed as <key>/<display text>. Similar formatting is used for transition attributes which show as <ID>/<attribute>.
- Old content/New content
 for data change events on your graph, displays the changed values.
- Logged-in user login name of the user under whose login the change event occurred.

STATUS HISTORY

The **Status History** tab provides a list of all status changes that have been performed on the equipment graph.

For each status change that affected the graph, the table displays one row.

To filter the status change entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the status history, the date range is preset to start with the date when the last status change occurred and to end with the current date. If the system has no status changes registered for the object, the date range is preset to the current date.

To refresh the list of status changes, click the **Refresh** button (page 76). All status changes involving the graph that have occurred since you opened the status history are then included.

The following table columns are available and are filled if relevant to the respective status change:

- Timestamp indicates the date and time when the status change occurred.
- Action indicates the status change that triggered the entry in the status history.
- To status indicates the status to which the graph was moved.
- Signature displays two items per signature (page 103):
 - User and login names of the user who performed the signature.
 - Timestamp when the signature was recorded.
- Comment

displays the comment recorded for each signature. For double signatures, each comment is prefixed with **Comment 1** or **Comment 2** to indicate with which signature the comment was recorded.

PROPERTY TYPE

Property types are used on the one hand to model the properties inherent to equipment entities and classes and on the other hand to define the equipment requirements presented by master recipes and workflows. A property type describes a physical characteristic of an equipment entity, such as its volume, speed range, or the fact that it is under cleaning status control. For this reason, each property type can only be assigned once to an equipment entity, template entity, or class.

As a consequence, when you model an equipment entity that holds two tanks of the same volume, you still need to define two property types, one for each tank. Similarly, you also need to define two property types to model different functions the volume of one and the same tank may have, such as its storage volume, which may be greater than its fermentation volume.

During execution, an equipment entity is matched against the requirements defined with the recipe or workflow for which an operator plans to use it. Only if this validation check concludes that the properties of the equipment entity meet the requirements can the entity be used as planned.

VALIDATION RULES

The rules that determine if an equipment entity matches its requirements take place on three levels of complexity:

- The basic level only has one rule, which checks if all properties defined for the requirement are also defined as properties of the equipment entity.
- The second level has a set of rules that apply if requirement and entity both state a value for a property, if one of them states a range while the other supplies a value, or if one or both of them state neither a value nor a range for a property.

Result
The entity is a valid match for the requirement.
The entity is no valid match for the requirement.
The entity is a valid match for the requirement.

•
•
•
•
•

Condition	Result
Requirement: range is defined (ReqLowLimit and/or ReqHighLimit) Entity: value is defined (EntValue) ReqLowLimit <= EntValue <= ReqHighLimit	The entity is a valid match for the requirement.
Requirement: value is defined (ReqValue)	The entity is a valid match for the requirement.
Entity: range is defined (EntLowLimit and/or EntHighLimit) EntLowLimit <= ReqValue <= EntHighLimit	
Requirement: value is not defined	Covered by third level of rules, see below.
Entity: value is not defined	
Either requirement or entity: one value (Low or High) of range is defined	
Either requirement or entity: value is defined range is defined (Low and/or High)	This condition represents an invalid configuration and is prevented by the system.

- The set of rules on the third level applies to cases when both requirement and entity have a range defined for a property.
 - When matching the range of an entity (EntLowLimit, EntHighLimit) against the range of a requirement (ReqLowLimit, ReqHighLimit) the system has to consider the following possible cases:
 - Entity range is **lower** than requirement range: EntHighLimit < ReqLowLimit
 - Entity range overlaps requirement range at the low limit:
 EntLowLimit < ReqLowLimit <= EntHighLimit <= ReqHighLimit</p>
 - Entity range **is contained** in requirement range: ReqLowLimit <= EntLowLimit <= EntHighLimit <= ReqHighLimit
 - Entity range **contains** requirement range: EntLowLimit <= ReqLowLimit <= ReqHighLimit <= EntHighLimit
 - Entity range **overlaps** requirement range at the **high limit**:

 ReqLowLimit <= EquLowLimit <= ReqHighLimit < EquHighLimit

Entity range is **higher** than requirement range: ReqHighLimit < EntLowLimit

The following table lists how the system evaluates the settings made for entity and requirement ranges and indicates the match results.

If a range only has one limit, the system treats it as open range.

Limit settings specified		Range check type of requirement			
ReqLow	ReqHigh	EntLow	EntHigh	Is contained in entity range	Contains entity range
				Valid match	Valid match
			Yes	Valid match	Valid match
		Yes		Valid match	Valid match
		Yes	Yes	Valid match	Valid match
	Yes			No valid match	No valid match
	Yes		Yes	Valid match, if EntHigh <= ReqHigh	Valid match, if ReqHigh <= EntHigh
	Yes	Yes		No valid match	No valid match
	Yes	Yes	Yes	Valid match, if EntHigh <= ReqHigh	No valid match
Yes				No valid match	No valid match
Yes			Yes	No valid match	No valid match
Yes		Yes		Valid match, if ReqLow <= EntLow	Valid match, if EntLow <= ReqLow
Yes		Yes	Yes	Valid match, if ReqLow <= EntLow	No valid match
Yes	Yes			No valid match	No valid match
Yes	Yes		Yes	No valid match	Valid match, if Equ.max <= Req.max
Yes	Yes	Yes		No valid match	Valid match, if Req.min <= Equ.min
Yes	Yes	Yes	Yes	Valid match, if ReqLow <= EntLow AND EntHigh <= ReqHigh	Valid match, if EntLow <= ReqLow AND ReqHigh <= EntHigh

The Details window of a property type contains a **Basic** tab that lists its Basic Attributes.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created, defined, and saved a property type, you cannot edit it any more.

DEFAULT PROPERTY TYPES

PharmaSuite provides the following property types with any default installation of the system:

- Container Clean Shelflife (RS)
 a Specification property type of the Duration data type
- Container Sublot (RS)
 a Runtime property type of the String data type and the Current Sublot (RS)
 purpose
- Container Tare (RS)
 a Runtime property type of the MeasuredValue data type and the Current Tare (RS) purpose
- Container Type (RS)
 a Specification property type of the Container (RS) equipment type
- General Clean Shelflife (RS)
 a Specification property type of the Duration data type
- Room Cleaning Rules (RS)
 a Specification property type of the RoomCleaningRules data type
- Room Type (RS) a Specification property type of the Room (RS) equipment type
- Scale Calibration Shelflife (RS)
 a Specification property type of the Duration data type
- Scale Configuration (RS)
 a Specification property type of the ScaleConfiguration data type
- Scale Load (RS)
 a Runtime property type of the String data type and the Current load (RS) purpose
- Scale Ranges (RS)
 a Specification property type of the Ranges data type and the ScaleRanges (RS)
 purpose

.

- Scale Test and Calibration (RS)
 a Specification property type of the ScaleTestAndCalibration data type
- Scale Test Shelflife (RS)
 a Specification property type of the Duration data type
- Scale Type (RS)a Specification property type of the Scale (RS) equipment type
- Work Center Assignment (RS) a Specification property type of the WorkCenterAssignment data type

The purpose and context of a property type are defined by several attributes:

- with the **Usage** attribute you determine if a property type
 - is part of the basic **Specification** of the equipment, indicating a characteristic of an equipment object, such as a coater's drum size,
 - is intended for equipment in an **Automation** environment, so that you need to specify automation-related data, such as tag names, tag update rates, or Live Data types,
 - if it refers to a **Runtime** value of an equipment entity that can change during processing, such as a coater's cleaning status,
 - or is intended for equipment that is connected to a **Historian** server, so that you need to specify which tags are to be read for retrieving the historical data chart.
- with the **Purpose** attribute you can further specify some data types that represent required properties for equipment to be used with the Dispense and Weighing phases of PharmaSuite or with phases that generate equipment entities on the shop floor.
 - the **Base Sublot (RS)** purpose extends the String (page 253) data type in the **Runtime** usage and is required to register the identified sublot so that the system can determine which template equipment entity to use when generating an entity.
 - the Current Tare (RS) purpose extends the MeasuredValue (page 253) data type in the Runtime usage and is required to handle the tare property of a container.
 - the **Reference Tare (RS)** purpose extends the MeasuredValue (page 253) data type in the **Runtime** usage and is used for defining the optional reference tare property of a container.
 - the **Current Sublot** (**RS**) purpose extends the String (page 253) data type in the **Runtime** usage and is required for identifying a container.

- the **Scale Ranges** (**RS**) purpose extends the Ranges (page 253) data type and is required to configure the ranges of a scale.
- the Current Load (RS) purpose extends the String (page 253) data type in the Runtime usage and is required to handle the identifier of a container or sublot that represents a scale load.
- with the **Data type** attribute you determine the context for which the property type is suitable. Once you have selected the **Data type**, you can specify its **Content**.

The system provides the following data types:

BigDecimal

floating point number, used for numbers and ranges. It is suitable for handling numbers qualified by a unit of measure.

BigDecimal for automation can handle the three Live Data types **Double**, **Float**, and **Integer** that need to be specified for correct communication with equipment. The mapping of the most common OPC names to the Live Data types is as follows:

- Integer represents SHORT, LONG, CHAR, BYTE, USHORT, and ULONG
- Float represents REAL4
- **Double** represents REAL8

TIP

BigDecimal values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

For editing BigDecimal values, the system provides several BigDecimal editors:

- BigDecimal (page 12)
- Automation BigDecimal (Double) (page 15)
- Automation BigDecimal (Float) (page 18)
- Automation BigDecimal (Integer) (page 22)
- Historian BigDecimal (page 25)
- Boolean

with the values Yes, No, and in some cases N/A.

For editing boolean values for automated equipment, the system provides the Automation Boolean (page 26) editor.

Duration

only available for **Specification** and **Runtime** properties. It is used for displaying time spans and for time-related calculations. It supports the following time units: days (**d**), hours (**h**), minutes (**min**), seconds (**s**), and milliseconds (**ms**).

For editing durations, the system provides the Duration (page 30) editor.

EquipmentType

only available for **Specification** property types.

It is used to support you with the accurate and complete configuration of equipment entities (page 116) to be used for executing product phases, such as Dispense and Weighing phases.

TIP

When an entity holds an EquipmentType property, the system checks if it also holds all other properties or graphs required by its type. You can save an entity that does not hold all required properties or graphs, but you cannot change its status to **Verification** or **Approved**.

The following equipment types are available:

- Container (RS)
- Hybrid (RS)
- Room (RS)
- Scale (RS)

■ FlexibleAttributeDefinition

only available for **Runtime** property types.

It is used to define a bundle of runtime attributes, whose values are established and can change during processing.

For defining the attribute bundle, the system provides the FlexibleAttributeDefinition (page 55) editor.

FlexibleStateModel

only available for **Runtime** property types.

It is used to put equipment entities under status control, for example, to model cleaning or maintenance cycles.

Suitable FSMs must be maintained in the Process Designer application of FactoryTalk ProductionCentre. For further information on FSMs for use with equipment, please refer to "Configuring FSMs for Equipment Properties" in Volume 3 of the "Technical Manual Configuration and Extension".

For selecting a FlexibleStateModel for equipment, the system provides the FlexibleStateModel (page 57) editor.

■ FlexibleTagDefinition

only available for **Automation** property types.

It is used to define a group of automation-relevant values to communicate as value bundle from an equipment entity for monitoring purposes. For defining the value bundle, the system provides the Automation

FlexibleTagDefinition (page 58) editor.

MeasuredValue

used for displaying numeric values qualified by a unit of measure.

TIP

MeasuredValue values support up to 15 integral digits and are rounded to 9 fractional digits when stored to the database.

For editing MeasuredValue data types, the system provides the MeasuredValue (page 61) editor.

Ranges

only available for **Specification** property types.

It is used to define up to three ranges for an equipment object.

For defining the ranges, the system provides the Ranges (page 62) editor.

RoomCleaningRules

only available for **Specification** property types.

It is used to define the cleaning rules and cleaning demands of rooms used in a Dispense environment.

For cleaning rule data, the system provides the CleaningRules (page 28) editor.

ScaleConfiguration

only available for **Specification** property types.

It is used to define the driver and connection data of a scale.

For defining the scale data, the system provides the ScaleConfiguration (page 63) editor.

ScaleTestAndCalibration

only available for **Specification** property types.

It is used to define the test weight and operator instructions for scale tests and calibration.

For scale test and calibration data, the system provides the ScaleTestAndCalibration (page 67) editor.

String

used for handling any sequence of characters.

WorkCenterAssignment
 only available for Specification property types.
 It is used to assign work centers to scales or rooms. Work centers are maintained in the Data Manager - Work Center mode of Data Manager.

 For selecting a work center, the system provides the Searchable Option List (page 69) editor.

Managing Work Centers

Data Manager provides a comprehensive framework for creating and managing all data you need to maintain the work centers and stations used for processing recipes or workflows with PharmaSuite.

What Is a Work Center?

A work center can be characterized as a suitably equipped location or area within the operational system where personnel utilizes machines, tools, and devices. A work center can comprise one or more stations.

Work center-related data is relevant to several other objects in the production environment.

- Storage areas for order-related material receipt.
- Dispense-related equipment, such as scales and rooms, which are maintained as equipment entities (page 116) in Data Manager Equipment.

What Is a Station?

A station represents an operator's access point to execution activities with PharmaSuite at a work center. To actually perform execution activities, an operator uses a stationary or mobile device registered at the station. It is possible to register more than one device at a station.

Menus and Toolbars

You can access all relevant functions either from the menu bar in the main Data Manager - Work Center window, from context-sensitive shortcut menus, or from toolbars provided for quick access to frequently used functions.

Menus

Data Manager - Work Center provides a main menu bar (page 255) with all relevant functions as well as context-sensitive shortcut menus (page 259) for quick access to specific functions.

MAIN MENU BAR

The **main menu bar** offers the following menus and functions:

File

■ New work center (CTRL+SHIFT+W)

Creates a new work center, thus first opening the **New Work Center** dialog and afterwards a new tab in the lower tab bar of the Details window.

■ New station (CTRL+SHIFT+T)

Creates a new station, thus first opening the **New Station** dialog and afterwards a new tab in the lower tab bar of the Details window.

Save <object identifier> (CTRL+S)

Saves all changes made to the object that is currently active in the lower tab bar of the Details window. This action saves all changes made on the object's attributes and properties tabs.

■ Save all (CTRL+SHIFT+S)

Saves all changes made to all object that are currently active in the lower tab bar of the Details window. This action saves all changes made on the objects' properties tabs.

TIP

Please note that you can only save an object if none of its assigned objects have unsaved changes.

Duplicate <work center identifier> (CTRL+F12)

Only available for work centers.

Opens the **Duplicate Work Center** dialog to create a copy of the work center. The new work center opens as new tab in the lower tab bar of the Details window. The **Duplicate** function copies all attributes and properties of the original work center except for its station assignments.

■ Duplicate <station identifier> (CTRL+F12)

Only available for stations.

Opens the **Duplicate Station** dialog to create a copy of the station. The new station opens as new tab in the lower tab bar of the Details window.

The **Duplicate** function copies all attributes and properties of the original station except for its work center assignment.

Close < object identifier > (CTRL+F4)

Closes the object that is currently active in the lower tab bar of the Details window.

■ Close all (CTRL+SHIFT+F4)

Closes all objects that are currently open in the lower tab bar of the Details window.

Restore <object identifier> (CTRL+R)

Only available if there are unsaved changes.

Restores the object that is currently active in the lower tab bar of the Details window to its last saved state, thus undoing all changes made in the meantime.

256

Refresh < object identifier > (F5)

Only available if there are no unsaved changes.

Refreshes the object that is currently active in the lower tab bar of the Details window by retrieving its data again from the database.

Delete <object identifier>

Deletes the object that is currently active in the lower tab bar of the Details window.

■ Print barcode label for <object identifier> (CTRL+B)

Only available for stations.

Sends the barcode of the station that is currently active in the Details window for printing to a connected printer.

Exit (ALT+F4)

Closes the application window.

View

■ New search (CTRL+N)

Opens a new Search window to define another set of search criteria and process its search results.

Zoom in (CTRL+PLUS)

Zooms in on the currently active search result, switching the display to the next larger view, either tiles or cards.

Zoom out (CTRL+MINUS)

Zooms out from the currently active search result, switching the display to the next smaller view, either tiles or mini tiles.

Card tooltips (CTRL+T)

Toggles the display of the card view as tooltip when you hover over a tile or mini tile.

Window

Equipment Manager - Smart Search

Switches to the Equipment - Smart Search mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Equipment - Smart Search.

Work Center Manager

Switches to the Work Center mode of Data Manager. Before switching, the system closes all open objects, prompting you to save if you have unsaved changes.

A checkmark to the left of the selected menu option indicates which mode is currently active.

Only available if you have the user rights necessary for accessing Data Manager - Work Center.

Undo layout change

Revokes the last layout change you have performed. You can undo up to 100 actions, thus you can step by step revoke the last 100 layout changes you have performed. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Undo resizing** or **Undo dragging**.

Redo layout change

Redoes the last layout change you have revoked with the **Undo layout change** function. You can redo up to 100 actions, thus you can step by step redo the last 100 layout changes you have revoked. Once you have performed a layout change, the menu function changes to a more precise description of the undo action, such as **Redo resizing** or **Redo dragging**.

Save user layout

Saves the current window layout and overwrites the layout that was last saved by you on this computer.

Load user layout

Loads the last layout you have saved on this computer with the **Save user layout** function.

Reset layout

Resets the window layout to the system-defined default layout. This function does not affect the saved user layout, which can be restored with the **Load user layout** function.

Help

- Data Manager Help (ALT+F1)
 Opens the start page of the help system (page 7).
- About PharmaSuite

Opens the **About PharmaSuite** dialog (page 9).

SHORTCUT MENUS

The card and tile views make object type-specific **shortcut menus** available, which you can access by right-clicking a card or tile in the search results panel.

Work center

- Open <work center identifier> in Details window
 Opens the detail view of the work center as new tab in the Details window.
- Duplicate <work center identifier>
 Opens the **Duplicate Work Center** dialog to create a copy of the work center.
 The new work center opens as new tab in the lower tab bar of the Details window.
 The **Duplicate** function copies all attributes and properties of the original work center except for its station assignments.
- New work center

 Creates a new work center, thus first opening the **New Work Center** dialog and afterwards a new tab in the lower tab bar of the Details window.
- Restore <work center identifier>
 Only available if there are unsaved changes.
 Restores the work center to its last saved state, thus undoing all changes made in the meantime.
- Refresh <work center identifier>
 Only available if there are no unsaved changes.

 Refreshes the work center by retrieving its data again from the database.
- Delete <work center identifier>
 Deletes the work center

Station

- Open <station identifier> in Details window
 Opens the detail view of the station as new tab in the Details window.
- Duplicate <station identifier>
 Opens the **Duplicate Station** dialog to create a copy of the station. The new station opens as new tab in the lower tab bar of the Details window.

 The **Duplicate** function copies all attributes and properties of the original station except for its work center assignment.
- New station
 Creates a new station, thus first opening the **New Station** dialog and afterwards a new tab in the lower tab bar of the Details window.
- Restore <station identifier>Only available if there are unsaved changes.

Restores the station to its last saved state, thus undoing all changes made in the meantime.

- Refresh <station identifier>
 Only available if there are no unsaved changes.
 Refreshes the station by retrieving its data again from the database.
- Delete <station identifier> Deletes the station

Toolbars

Data Manager provides several toolbars for context-sensitive quick access to specific functions.

MAIN TOOLBARS

The main toolbars offer shortcuts to the more frequently required menu functions:

- File toolbar with
 - New work center (page 73)
 - New station (page 73)
 - Refresh (page 73)
 - Save (page 74)
 - Close (page 72)
 - Delete (page 72)
 - Print barcode label (page 73)
- View toolbar with
 - Zoom in (page 74)
 - Zoom out (page 74)
- Help toolbar with
 - Help (page 72)

Detail Data

From the upper tab bar in the Details window, you can access the attributes, assignments, and usage data of the following work center-related objects:

- Work centers (page 261)
- Stations (page 262)

Work Center

The Details window of a work center contains the following data tabs:

- Basic (page 261)
- Station (page 261)
- Change History (page 262)

BASIC

The **Basic** tab lists the attributes of the work center.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created a work center, you can no longer modify its **Identifier**. The maximum length of a work center identifier is 20 characters.

With the **Type** attribute, you can define if your work center is available for Dispense operations. Dispense work centers can only have one station.

The **Storage area** attribute allows you to select the storage area associated with the work center. As this list can be very long, the system supports you with a searchable option list (page 69) editor.

STATION

The **Station** tab lists the stations assigned to the work center.

- To add a station to the list, drag and drop (page 101) its card or tile on the Details window of the work center to which you wish to assign it.
- To remove a station from the list, select or multi-select it and click the **Remove station** button or press the DEL key.
 - Removing a station from the list of stations also clears the **Work center** attribute shown on the **Basic** tab of the station's detail view.

TIP

Please note that you can assign no more than one station to a work center of the **Dispense** type.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the work center, including its station assignments.

For each change event that affected the work center, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for a work center, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the work center that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your work center, the change history shows the identifier of the attribute you have modified and when you assign a station to your work center, the change history shows the identifier of the station.
- Old content/New content for data change events on your work center, displays the changed values.
- Logged-in user login name of the user under whose login the change event occurred.

Station

The Details window of a station contains the following data tabs:

- Basic (page 263)
- Change History (page 264)

BASIC

The **Basic** tab lists the attributes of the station.

Click an attribute value to edit it. The system displays a text cursor or a button to access a suitable editor (page 11) for the required value type.

TIP

Please note that once you have created a station, you can no longer modify its **Identifier**. The maximum length of a station identifier is 12 characters.

The Access privilege attribute allows you to restrict access to the station by selecting the access privilege an operator must have to be permitted to log in at the station. Not selecting an access privilege means that access to the station is free for all operators who have the access privileges required for working with PharmaSuite for Production Execution.

The **Work center** attribute is always read-only.

To assign a station to a work center, open the details view of the respective work center and drag the station's card or tile onto the work center's **Station** tab (page 261). A station can only be assigned to one work center at any given time. So for changing a station's work center assignment you first need to remove the station from the list of stations on the **Station** tab of its current work center before you can assign it to another work center.

During execution with PharmaSuite for Production Execution the system supports device registration at a station by barcode scanning. To create a barcode label for a station, proceed as follows:

Type the barcode string in the **Barcode** attribute cell.
 By default, the barcode is preset with a string of characters that consists of a system-configured station barcode prefix and the station's identifier you have specified as first step of the creation process. The system-configured prefix may be empty so that the barcode and the station's identifier are identical the identifier of the station.

TIP

Do not type leading or trailing blanks before or after the barcode string, since this may interfere with the system-internal formatting conversion and render the barcode unreadable for scanners.

- 2. Save the station.
 - The system enables the **Print barcode label** button on the **File** toolbar as well as the respective function in the **File** menu.
- Click the **Print barcode label** button or select the respective menu function to print the barcode on a connected printer, typically the default printer defined in your Windows operating system.

CHANGE HISTORY

The **Change History** tab provides a list of all changes that have been performed on the station, which also includes indirect assignment changes that occur when the station has been removed from the list of stations on the **Station** tab of its work center.

For each change event that affected the station, the table displays one row.

To filter the change event entries by date, select the date range you wish to consider. The system only displays the entries that have been registered between the two dates you have selected.

The date range starts at 12:00:00 AM on the date you have selected and ends at 23:59:59 PM on the date you have selected.

When you open the change history, the date range is preset to start with the date when the last change event occurred and to end with the current date. If the system has no change events registered for a station, the date range is preset to the current date.

To refresh the list of change events, click the **Refresh** button (page 76). All change events involving the station that have occurred since you opened the change history are then included.

The following table columns are available and are filled if relevant to the respective change event:

- Timestamp indicates the date and time when the change event occurred.
- Action indicates the change event that triggered the entry in the change history.
- Affected object indicates the object that is affected by the change event. So when you update the basic data of your station, the change history shows the identifier of the attribute you have modified and when you assign the station to a work center, the change history shows the identifier of the work center.
- Old content/New content for data change events on your station, displays the changed values.
- Logged-in user login name of the user under whose login the change event occurred.

	Automation (equipment entity) • 222
A	Automation (template equipment entity) • 214
About PharmaSuite • 9	Basic (equipment class) • 207
Action (keyboard operation) • 81	Basic (equipment entity) • 222
Asset attribute (Basic Search) • 207	Basic (equipment graph) • 236
Equipment class • 207	Basic (property type) • 246
Equipment entity • 222	BigDecimal data type (property type) • 251
Asset attribute (Smart Search) • 146	Boolean data type (property type) • 251
Equipment class • 146	Data type (property type) • 251
Equipment entity • 161	Duration data type (property type) • 252
Assigning a class to an entity • 101	Equipment • 207
Assigning an entity to a class • 101	EquipmentType data type (property type) • 252
Assigning property types to equipment • 101	FlexibleAttributeDefinition data type (property type) •
Assignment (equipment - Basic Search) • 207	252
Child entity to parent entity • 230	FlexibleStateModel data type (property type) • 252
Class to entity • 229	FlexibleTagDefinition data type (property type) • 253
Class to template entity • 219	Historian (equipment entity) • 222
Entity to class • 211	Historian (template equipment entity) • 214
Entity to entity group • 230	Label layout (equipment entity) • 222
Graph to class • 210	Label layout (template equipment entity) • 214
Graph to entity • 229	MeasuredValue data type (property type) • 253
Graph to template entity • 218	Purpose (graph) • 236
Material to template entity • 219	Purpose (property type) • 250
Property type to graph • 238	Ranges data type (property type) • 253
Assignment (equipment - Smart Search) • 146	RoomCleaningRules data type (property type) • 253
Child entity to parent entity • 169	ScaleConfiguration data type (property type) • 253
Class to entity • 169	ScaleTestAndCalibration data type (property type) •
Class to template entity • 158	253
Entity to class • 150	Short description (scale) • 222
Entity to entity group • 169	Status/trigger (equipment graph) • 238
Graph to class • 149	String data type (property type) • 253
Graph to entity • 168	Style (equipment class) • 211
Graph to template entity • 158	Transition (equipment graph) • 239
Material to template entity • 158	Usage (property type) • 250
Property type to graph • 178	WorkCenterAssignment data type (property type) • 254
Assignment (work center) • 260	Attribute (equipment - Smart Search)
Station to work center • 261	Automation (equipment entity) • 161
Attribute (equipment - Basic Search)	Automation (template equipment entity) • 153

Basic (equipment class) • 146	Manual tare • 64
Basic (equipment entity) • 161	Range • 62
Basic (equipment graph) • 176	Resolution factor • 64
Basic (property type) • 185	Scale driver • 63
BigDecimal data type (property type) • 190	Scale keyboard lockable • 65
Boolean data type (property type) • 191	Send nominal value • 65
Data type (property type) • 190	Tare • 64
Duration data type (property type) • 191	TCP server/port • 63
Equipment • 146	Terminal number • 63
EquipmentType data type (property type) • 191	Weighing • 64
FlexibleAttributeDefinition data type (property type) •	Zeroing • 64
192	Attribute (work center)
FlexibleStateModel data type (property type) • 192	Access privilege • 263
FlexibleTagDefinition data type (property type) • 192	Basic (station) • 263
Historian (equipment entity) • 161	Basic (work center) • 261
Historian (template equipment entity) • 153	Storage area • 261
Label layout (equipment entity) • 161	Work center • 260
Label layout (template equipment entity) • 153	Automation BigDecimal (Double) editor • 15
MeasuredValue data type (property type) • 192	Automation BigDecimal (Float) editor • 18
Purpose (graph) • 176	Automation BigDecimal (Integer) editor • 22
Purpose (property type) • 190	Automation Boolean editor • 26
Ranges data type (property type) • 193	Automation FlexibleTagDefinition editor • 58
RoomCleaningRules data type (property type) • 193	Automation Integration server name (Basic Search)
ScaleConfiguration data type (property type) • 193	Equipment entity • 222
ScaleTestAndCalibration data type (property type) •	Template equipment entity • 214
193	Automation Integration server name (Smart Search)
Short description (scale) • 161	Equipment entity • 161
Status/trigger (equipment graph) • 178	Template equipment entity • 153
String data type (property type) • 193	Automation String editor • 70
Style (equipment class) • 150	
Style (equipment graph) • 183	В
Transition (equipment graph) • 179	Barcode
Usage (property type) • 189	Station • 263
WorkCenterAssignment data type (property type) • 193	Barcode (equipment - Basic Search)
Attribute (scale configuration)	Equipment entity • 222
Calibration with adjustment • 65	Template equipment entity • 214
Calibration without adjustment • 65	Barcode (equipment - Smart Search)
COM port • 63	Equipment entity • 161
Disable scale keyboard • 65	Template equipment entity • 153
Get serial number • 65	Basic attribute (equipment - Basic Search) • 207
Manual scale • 63	Equipment class • 207

Equipment entity • 222	Delete • 72
Equipment graph • 236	Help • 72
Property type • 185	New equipment class • 72
Template equipment entity • 214	New equipment entity • 72
Basic attribute (equipment - Smart Search) • 146	New equipment graph • 73
Equipment class • 146	New property type • 73
Equipment entity • 161	New station • 73
Equipment graph • 176	New template equipment entity • 73
Property type • 185	New work center • 73
Template equipment entity • 153	Print barcode label • 73
Basic attribute (work center)	Refresh • 73
Station • 263	Save • 74
Work center • 263	Zoom in • 74
Basic operation • 88	Zoom out • 74
Electronic signature • 103	•
Login • 89	С
Logout • 91	Change history (equipment - Basic Search)
Password change • 91	Equipment class • 211
Signature • 103	Equipment entity • 234
Start • 88	Equipment graph • 244
BigDecimal editor • 12	Template equipment entity • 219
Bracket (Expression editor) • 34	Change history (equipment - Smart Search)
Button (action) • 74	Equipment class • 150
Delete • 74	Equipment entity • 174
Display on card • 74	Equipment graph • 183
Filter for classes • 74	Template equipment entity • 159
Filter for entities • 74	Change history (work center)
Filter for graphs • 74	Station • 264
Filter for property types • 75	Work center • 262
Filter for stations • 75	Change password • 91
Filter for template entities • 75	Change station • 89
Filter for work centers • 75	Change status (toolbar button) • 72
Move down • 75	CleaningRules editor • 28
Move up • 75	Close (toolbar button) • 72
Open cell editor • 76	Comment (Expression editor) • 34
Print equipment logbook report • 76	Container equipment entity (definition) • 116
Refresh • 76	Context (Basic Search) • 231
Remove • 76	Context (Smart Search) • 171
Button (toolbar) • 72	Conventions (typographical) • 2
Change status • 72	Cursor • 78
Close • 72	Drop target allowed • 78

Drop target unallowed • 78	ScaleTestAndCalibration • 193
Select • 78	String • 193
Wait • 78	WorkCenterAssignment • 193
	Date/time picker editor • 29
D	Default object (Basic Search) • 115
Data type (Expression editor) • 39	Class • 207
BigDecimal • 39	Graph • 236
Boolean • 39	Property type • 246
Duration • 40	Default object (Smart Search) • 115
Float • 39	Class • 146
Long • 39	Graph • 176
MeasuredValue • 40	Property type • 185
String • 39	Definition
Timestamp • 39	Equipment class • 115
Data type (property type - Basic Search) • 251	Equipment entity • 116
BigDecimal • 251	Equipment graph • 119
Boolean • 251	Equipment requirement • 115
Duration • 252	Property type • 119
EquipmentType • 252	Station • 255
FlexibleAttributeDefinition • 252	Template equipment entity • 116
FlexibleStateModel • 252	Work center • 255
FlexibleTagDefinition • 253	Delete (action button) • 74
MeasuredValue • 253	Delete (toolbar button) • 72
Ranges • 253	Details window (equipment - Basic Search)
RoomCleaningRules • 253	Equipment • 207
ScaleConfiguration • 253	Equipment class • 207
ScaleTestAndCalibration • 253	Equipment entity • 221
String • 253	Property type • 246
WorkCenterAssignment • 254	Template equipment entity • 213
Data type (property type - Smart Search) • 190	Details window (equipment - Smart Search)
BigDecimal • 190	Equipment • 146
Boolean • 191	Equipment class • 146
Duration • 191	Equipment entity • 161
EquipmentType • 191	Property type • 185
FlexibleAttributeDefinition • 192	Template equipment entity • 153
FlexibleStateModel • 192	Details window (work center)
FlexibleTagDefinition • 192	Station • 262
MeasuredValue • 192	Work center • 261
Ranges • 193	Display on card (action button) • 74
RoomCleaningRules • 193	Documentation • 88
ScaleConfiguration • 193	Double signature • 103

Drop target allowed (cursor) • 78	Compiling usage list • 131
Drop target unallowed (cursor) • 78	Exporting • 104
Duration editor • 30	Importing • 107
_	Performing mass change operations on (template)
E	entities • 125
Editing data • 101	Equipment class (Smart Search) • 146
Editor • 11	Assigning graphs • 149
Automation BigDecimal (Double) • 15	Default class • 146
Automation BigDecimal (Float) • 18	Equipment entity (Basic Search) • 221
Automation BigDecimal (Integer) • 22	Assigning graphs • 229
Automation Boolean • 26	Barcode printing • 222
Automation FlexibleTagDefinition • 58	Entity grouping • 230
Automation String • 70	Ungroup entity for repair • 230
BigDecimal • 12	Equipment entity (definition) • 116
CleaningRules • 28	Container • 116
Date/time picker • 29	Exporting • 104
Duration • 30	Importing • 107
Expression • 31	Room • 116
FlexibleAttributeDefinition • 55	Scale • 116
FlexibleStateModel • 57	Template • 116
GraphStatusChange • 60	Equipment entity (Smart Search) • 161
Historian String • 71	Assigning graphs • 168
Label layout selection • 60	Barcode printing • 161
MeasuredValue • 61	Entity grouping • 169
Multi-line text • 61	Ungroup entity for repair • 169
Ranges • 62	Equipment graph (Basic Search) • 236
ScaleConfiguraton • 63	Assigning property types • 238
ScaleTestAndCalibration • 67	Default graph • 236
Searchable option list • 69	Handling expiry dates • 239
Engineering property (Basic Search) • 207	Equipment graph (definition) • 119
Equipment class • 210	Equipment graph (Smart Search) • 176
Equipment entity • 228	Assigning property types • 178
Template equipment entity • 218	Default graph • 176
Engineering property (Smart Search) • 146	Handling expiry dates • 179
Equipment class • 149	Equipment group (Basic Search) • 230
Equipment entity • 167	Equipment group (Smart Search) • 169
Template equipment entity • 157	Equipment logbook report (Basic Search) • 231
Equipment class (Basic Search) • 207	Equipment logbook report (Smart Search) • 171
Assigning graphs • 210	Equipment requirement (definition - Smart Search) • 115
Default class • 207	Exporting data objects • 104
Equipment class (definition) • 115	Expression editor • 31

F

Aggregation functions • 54	Filter for graphs (action button) • 74
Analysis functions • 51	Filter for property types (action button) • 75
Arithmetic operators • 44	Filter for stations (action button) • 75
Bracket • 34	Filter for template entities (action button) • 75
Comment • 34	Filter for work centers (action button) • 75
Comparison operators • 47	FlexibleAttributeDefinition editor • 55
Constant • 39	FlexibleStateModel editor • 57
Conversion functions • 52	Forced unbinding of equipment entity (Basic Search) • 222
Data type • 39	Forced unbinding of equipment entity (Smart Search) • 161
Expression editor (keyboard operation) • 83	Function (Expression editor) • 49
Function • 49	Average (aggregation) • 54
Keyboard operation • 83	Contains Item (analysis) • 51
Logical operators • 47	Convert to BigDecimal (conversion) • 52
Null handling functions • 50	Convert to Long (conversion) • 53
Operator • 43	Convert to MeasuredValue (conversion) • 53
Reference • 34	Convert to unitless number (conversion) • 52
Section • 34	Current date and time (analysis) • 51
Transition action • 33	Is undefined (null handling) • 50
Transition condition • 31	Maximum (aggregation) • 54
Expression editor icon • 78	Minimum (aggregation) • 55
Attribute • 78	Undefined - one of many (null handling) • 50
Command • 79	Undefined - one of two (null handling) • 50
Constant • 78	
Error • 79	G
Function • 79	Generated equipment entity (definition) • 116
List option • 79	Graphical element • 72
Operator • 79	Button (action) • 74
Reference • 79	Button (toolbar) • 72
Separator • 79	Cursor • 78
	Expression editor • 78
	Marker • 77
File menu	GraphStatusChange editor • 60
Equipment - Basic Search • 194	Grouping entities (Basic Search) • 230
Equipment - Smart Search • 133	Grouping entities (Smart Search) • 169
Work center • 256	Н
File toolbar	
Equipment - Basic Search • 206	Help (toolbar button) • 72
Equipment - Smart Search • 145	Help access • 7
Work center • 260	Help menu
Filter for classes (action button) • 74	Equipment - Basic Search • 199
Filter for entities (action button) • 74	Equipment - Smart Search • 138
	Work center • 258

Help toolbar	Template equipment entity • 153		
Equipment - Basic Search • 206	Logbook (equipment - Basic Search)		
Equipment - Smart Search • 145	Report printing • 231		
Work center • 260	Viewing • 231		
Help window • 7	Logbook (equipment - Smart Search)		
Historian access server (Basic Search)	Report printing • 171		
Equipment entity • 222	Viewing • 171		
Template equipment entity • 214	Login • 89		
Historian access server (Smart Search)	Change password • 91		
Equipment entity • 161	Change station • 89		
Template equipment entity • 153	Password • 89		
Historian server (Basic Search)	Logout • 91		
Equipment entity • 222			
Template equipment entity • 214	M		
Historian server (Smart Search)	Marker icon • 77		
Equipment entity • 161	Automation usage type • 77		
Template equipment entity • 153	Class • 77		
Historian String editor • 71	Displayed on card • 77		
	Entity • 77		
1	Error • 77		
Importing data objects • 107	Graph • 77		
K	Graph object type • 77		
	Historian usage type • 77		
Keyboard operation • 80	Property type • 77		
Action • 81	Runtime usage type • 77		
Expression editor • 83	Specification usage type • 77		
Framework • 80	Station • 77		
1	Template entity • 77		
	Work center • 78		
Label layout (Basic Search)	Mass change operations on (template) entities • 125		
Equipment entity • 222	MeasuredValue editor • 61		
Template equipment entity • 214	Menu (equipment - Basic Search) • 194		
Label layout (Smart Search)	File • 194		
Equipment entity • 161	Help • 199		
Template equipment entity • 153	View • 197		
Label layout selection editor • 60	Window • 198		
Live Data Area path (Basic Search)	Menu (equipment - Smart Search) • 133		
Equipment entity • 222	File • 133		
Template equipment entity • 214	Help • 138		
Live Data Area path (Smart Search)	View • 136		
Equipment entity • 161	Window • 137		

K

Menu (work center) • 255	Print barcode label (toolbar button) • 73
File • 256	Print equipment logbook report (action button) • 76
Help • 258	Process property (Basic Search) • 207
View • 257	Equipment class • 209
Window • 257	Equipment entity • 227
Migrated history (Basic Search) • 234	Template equipment entity • 217
Migrated history (Smart Search) • 173	Process property (Smart Search) • 146
Mismatch message • 6	Equipment class • 148
Move down (action button) • 75	Equipment entity • 167
Move up (action button) • 75	Template equipment entity • 157
Multi-line text editor • 61	Property (Basic Search) • 207
	Property (Smart Search) • 146
N	Property tab toolbar (Basic Search) • 206
New equipment class (toolbar button) • 72	Property tab toolbar (Smart Search) • 145
New equipment entity (toolbar button) • 72	Property type (Basic Search) • 246
New equipment graph (toolbar button) • 73	Default property type • 246
New property type (toolbar button) • 73	Property type (definition) • 119
New station (toolbar button) • 73	Exporting • 104
New template equipment entity (toolbar button) • 73	Importing • 107
New work center (toolbar button) • 73	Property type (Smart Search) • 185
0	Default property type • 185
	Purpose (Basic Search)
Open cell editor (action button) • 76	Graph • 236
Operator (Expression editor) • 43	Property type • 250
Conjunction (logical) • 48	Purpose (Smart Search)
Disjunction (logical) • 48	Graph • 176
Divide (arithmetic) • 46	Property type • 190
Equal to (comparison) • 47	D
Greater than (comparison) • 47	R
Greater than or equal to (comparison) • 47	Ranges editor • 62
Less than (comparison) • 47	Reference (Expression editor) • 34
Less than or equal to (comparison) • 47	Refresh (action button) • 76
Minus (arithmetic) • 45	Refresh • 76
Multiply (arithmetic) • 46	Refresh (toolbar button) • 73
Negation (logical) • 49	Remove (action button) • 76
Not equal to (comparison) • 47	Room equipment entity (definition) • 116
Plus (arithmetic) • 44	c
P	S
	Save (toolbar button) • 74
Panel management • 4	Scale configuration • 63
Password • 91	Calibration with adjustment • 65
Password change • 91	Calibration without adjustment • 65

COM port • 63 Specification property (Smart Search) • 146 Equipment class • 148 Disable scale keyboard • 65 Get serial number • 65 Equipment entity • 164 Manual scale • 63 Template equipment entity • 156 Manual tare • 64 Start PharmaSuite • 88 Resolution factor • 64 Station (definition) • 255 Scale driver • 63 Barcode printing • 263 Scale keyboard lockable • 65 Status handling • 119 Set nominal value • 65 Changing status of equipment • 123 Tare • 64 Equipment class • 120 TCP server/port • 63 Equipment entity • 122 Terminal number • 63 Equipment graph • 123 Weighing • 64 Template equipment entity • 121 Zeroing • 64 Status handling (Basic Search) Scale equipment entity (definition) • 116 Status history of equipment class • 213 ScaleConfiguration editor • 63 Status history of equipment entity • 235 ScaleTestAndCalibration editor • 67 Status history of equipment graph • 245 Screen layout • 3 Status history of template equipment entity • 220 Details window • 101 Status handling (Smart Search) Panel management • 4 Status history of equipment class • 152 Search criteria panel • 92 Status history of equipment entity • 175 Search results panel • 92 Status history of equipment graph • 184 Screen layout (equipment - Basic Search) Status history of template equipment entity • 160 Menu • 194 Status history (Basic Search) Toolbar • 206 Equipment class • 213 Screen layout (equipment - Smart Search) Equipment entity • 235 Menu • 133 Equipment graph • 245 Toolbar • 145 Template equipment entity • 220 Screen layout (work center) Status history (Smart Search) Menu • 255 Equipment class • 152 Toolbar • 260 Equipment entity • 175 Searchable option list editor • 69 Equipment graph • 184 Searching data • 92 Template equipment entity • 160 Section (Expression editor) • 34 Status/trigger attribute (equipment graph - Basic Search) • Select (cursor) • 78 Signature • 103 Status/trigger attribute (equipment graph - Smart Search) • Single signature • 103 Specification property (Basic Search) • 207 Style (equipment graph - Basic Search) • 244 Equipment class • 209 Style attribute (Basic Search) • 207 Equipment entity • 225 Equipment class • 150 Template equipment entity • 216 Equipment graph • 183

• '

```
Style attribute (Smart Search) • 146
                                                                        View toolbar
     Equipment class • 150
                                                                            Equipment - Basic Search • 206
                                                                            Equipment - Smart Search • 145
     Equipment graph • 183
                                                                            Work center • 260
Т
  Template equipment entity (Basic Search) • 213
     Assigning graphs • 218
                                                                        Wait (cursor) • 78
                                                                        Window menu
  Template equipment entity (definition) • 116
  Template equipment entity (Smart Search) • 153
                                                                            Equipment - Basic Search • 198
     Assigning graphs (Smart Search) • 158
                                                                            Equipment - Smart Search • 137
  Test weight (scale test and calibration) • 67
                                                                            Work center • 257
  Toolbar (equipment - Basic Search) • 206
                                                                        Work center (definition) • 255
     File toolbar • 206
                                                                      Z
     Help toolbar • 206
                                                                        Zoom in (toolbar button) • 74
     Property tab toolbar • 206
                                                                        Zoom out (toolbar button) • 74
     View toolbar • 206
  Toolbar (equipment - Smart Search) • 145
     File toolbar • 145
     Help toolbar • 145
     Property tab toolbar • 145
     View toolbar • 145
  Toolbar (work center) • 260
     File toolbar • 260
     Help toolbar • 260
     View toolbar • 260
  Transition (equipment graph)
     Equipment - Basic Search • 239
     Equipment - Smart Search • 179
  Transition action (Expression editor) • 33
  Transition condition (Expression editor) • 31
U
  Unbind equipment entity (Basic Search) • 222
  Unbind equipment entity (Smart Search) • 161
  Updating multiple (template) entities • 125
  Usage list of class • 131
  View menu
     Equipment - Basic Search • 197
     Equipment - Smart Search • 136
     Work center • 257
```