

SAMSUNG

Simple User Guide

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at www.samsung.com
Model _____ Serial No. _____

Figures and illustrations in this Simple User Guide are provided for reference only and may differ from the actual product appearance. Product design and specifications may change without notice.

Contact Samsung Support
If you have any questions relating to Samsung products, please contact the Samsung customer care center via <https://www.samsung.com/tr/support/#contact>

Samsung Service Centre	Website
444 7711	www.samsung.com/tr/support

Hereby, Samsung declares that this radio equipment is in compliance with Directive 2014/53/EU and the relevant UK statutory requirements.

The full text of the declaration of conformity is available at the following internet address:
<http://www.samsung.com/support> and enter the model name.

This equipment may be operated in the TÜRKİYE.
– The 5 GHz and 6 GHz WLAN(Wi-Fi) function of this equipment may only be operated indoors.
– The 60 GHz - 61.5 GHz function of this equipment may only be operated indoors (The Frame (LS03H*) only).

RF max transmitter power :	
[QN990H]	[The Frame (LS03HA, LS03HE)]
100mW at 2.4 GHz - 2.4835 GHz,	100mW at 2.4 GHz - 2.4835 GHz,
200mW at 5.15 GHz - 5.25 GHz,	200mW at 5.15 GHz - 5.25 GHz,
100mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz,	100mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz,
25mW at 5.725 GHz - 5.85 GHz,	200mW at 5.945 GHz - 6.425 GHz,
200mW at 5.945 GHz - 6.425 GHz,	100 mW at 61 GHz - 61.5 GHz.
[R9*H/R8*H/S9*H/S8*H/QN8*H]	[The Frame (LS03HW)]
100mW at 2.4 GHz - 2.4835 GHz,	100mW at 2.4 GHz - 2.4835 GHz,
200mW at 5.15 GHz - 5.25 GHz,	200mW at 5.15 GHz - 5.25 GHz,
100mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz,	100mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz,
200mW at 5.945 GHz - 6.425 GHz,	25mW at 5.725 GHz - 5.85 GHz,
[QN7*H/QN1EH/M9*H/M8*H/M7*H/M1EH/U9***H/U8***H]	200mW at 5.945 GHz - 6.425 GHz,
100mW at 2.4 GHz - 2.4835 GHz,	100 mW at 61 GHz - 61.5 GHz.
200mW at 5.15 GHz - 5.25 GHz,	
100mW at 5.25 GHz - 5.35 GHz & 5.47 GHz - 5.725 GHz.	



BN68-26343A-00

© 2026 Samsung Electronics Co., Ltd. All rights reserved.

Caring for the TV

- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product with a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, aerial fresheners, lubricants, or detergents. These chemicals can damage the appearance of the TV or erase the printing on the product.
- The exterior and screen of the TV can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.
- Do not spray water or any liquid directly onto the TV. Any liquid that goes into the product may cause a failure, fire, or electric shock.

01 What's in the Box?

Make sure the following items are included with your TV. If any items are missing, contact your dealer.

- Simple User Guide
- Warranty Card / Regulatory Guide (Not available in some locations)
- *Samsung Smart Remote
- *Remote Control
- *Standard Remote Control
- *Batteries
- *CI Card Adapter
- *TV Power Cord
- *Wall Mount Adapter x 2
- *Slim Power Cord
- **Power Box
- **Power Box Cable x 2
- **C-type Power Adapter
- **C to C Cable
- **Wireless One Connect Box
- **One Connect Box
- **One Connect Box Power Cord
- **One Connect Cable
- **One Connect cable holder (for wall mount)

*: Some of the items specified above may not be included in the package, depending on the model or geographical area.
**: Some components may not be provided, depending on the One Connect connection method (wired or wireless connection).
***: The number of One Connect cables provided may differ depending on the model.
• The type of battery may vary depending on the model.
• The items' colours and shapes may vary depending on the models.

Before Reading This Simple User Guide

This TV comes with this Simple User Guide and an embedded User Guide.
(➡ > left directional button > ⚙ Settings > Support > Tips and User Guides > Open User Guide)


Warning! Important Safety Instructions

Please read the Safety Instructions before using your TV. Refer to the table below for an explanation of symbols which may be on your Samsung product.

CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.	
	This symbol indicates that high voltage is present inside. It is dangerous to have any kind of contact with any internal part of this product.
	This symbol indicates that this product has included important literature concerning operation and maintenance.
	Class II product: This symbol indicates that a safety connection to electrical earth (ground) is not required. If this symbol is not present on a product with a mains lead, the product MUST have a reliable connection to protective earth (ground).
	AC voltage: Rated voltage marked with this symbol is AC voltage.
	DC voltage: Rated voltage marked with this symbol is DC voltage.
	Caution. Consult instructions for use: This symbol instructs the user to consult the Simple User Guide for further safety related information.

Using the One Connect cable holder

(The Frame (LS03HA) only)
You can use the One Connect cable holder to tidy up the cables while installing the wall mount.

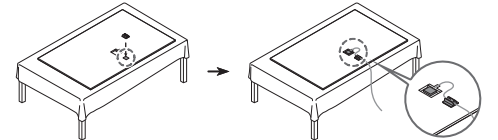

- The image may differ depending on the model.

03 Initial Setup

- When you turn on your TV for the first time, it immediately starts the Initial Setup. Follow the instructions displayed on the screen and configure the TV's basic settings to suit your viewing environment.
- You will need a Samsung account to access our network-based smart services. If you choose not to log in, you will only get a connection to terrestrial TV (applicable to devices with tuners only) and external devices, e.g. via HDMI.
 - LS03H models support Portrait Mode when installed vertically (except for the 98LS03HE).
 - Some features may not support portrait mode or full screen.
 - The initial setup is optimised for landscape mode.

Using the TV Controller


- You can turn on the TV with the **TV Controller** button at the bottom of the TV, and then use the **Control** menu. The **Control** menu appears when the **TV Controller** button is pressed while the TV is On.
- The position and shape of the buttons at the bottom of the TV may differ depending on the model.
 - The screen may dim if the protective film on the Samsung logo or the bottom of the TV is not detached. If protective film is attached, remove the film.
 - On model LS03HW, the TV Control button / Remote Control Sensor may not be fixed in place and may move. This is not a defect, but part of the design to ensure smooth remote control sensing when a Customizable Frame is installed, which is sold separately.

Power

- Do not overload wall outlets, extension cords, or adapters beyond their voltage and capacity. It may cause fire or electric shock.
Refer to the power specifications section of the manual or the power supply label on the product for voltage and amperage information.
- Power-supply cords should be placed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, at wall outlets, and at the point where they exit from the appliance.
- Never insert anything metallic into the open parts of this apparatus. This may cause electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Be sure to plug in the power cord until it is firmly seated. When unplugging the power cord from a wall outlet, always pull on the power cord's plug. Never unplug it by pulling on the power cord. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or Samsung service centre.
- To protect this apparatus from a lightning storm, or to leave it unattended and unused for a long time, be sure to unplug it from the wall outlet and disconnect the antenna or cable system.
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat or by causing the insulation to deteriorate.
- Use only a properly grounded plug and wall outlet.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off this apparatus completely, disconnect it from the wall outlet. To ensure you can unplug this apparatus quickly if necessary, make sure that the wall outlet and power plug are readily accessible.


Installation

- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place vessels (vases etc.) containing water on this apparatus, as this can result in a fire or electric shock.
- Do not expose this apparatus to rain or moisture.



- ⓘ Control menu
- ⓘ TV Controller button / Remote control sensor / Microphone switch / *Motion Sensor
- ⓘ TV Controller button / Remote control sensor
- ⓘ Microphone switch
- *: The Frame only

How to turn on and off the Microphone

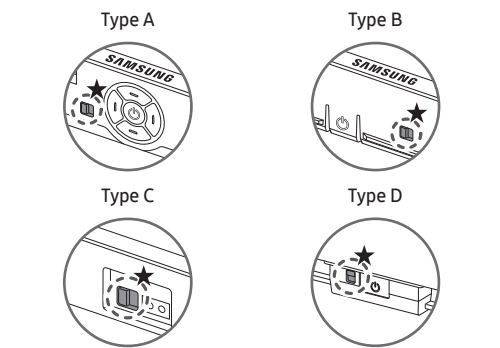

- ★ : On/Off Switch
You can turn on or off the microphone by using the switch at the bottom or rear bottom of the TV. If microphone is turned off, All voice and sound features using microphone are not available.
- This function is supported only in R9*H/R8*H/QN1EH/QN7*H/QN8*H/QN9**H/S8*H/S9*H/M8*H/M9*H/U9***H/LS03H*.
- The position and shape of the microphone switch may differ depending on the model.
- During analysis using data from the microphone, the data is not saved.

- Be sure to contact an authorised Samsung service centre for information if you intend to install your TV in a location with heavy dust, high or low temperatures, high humidity, chemical substances, or where it will operate 24 hours a day such as in an airport, a train station, etc. Failure to do so may lead to serious damage to your TV.
- Do not expose this apparatus to dripping or splashing.

Mounting the TV on a wall

- If you mount this TV on a wall, follow the instructions exactly as set out by the manufacturer. If it is not correctly mounted, the TV may slide or fall and cause serious injury to a child or adult and serious damage to the TV.

- To order the Samsung wall mount kit, contact Samsung service centre.
- Samsung is not responsible for any damage to the product or injury to yourself or others if you choose to install the wall mount on your own.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or when the consumer fails to follow the product installation instructions.
- You can install your wall mount on a solid wall perpendicular to the floor. Before attaching the wall mount to surfaces other than plaster board, contact your nearest dealer for additional information. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.
- For safety, please install all fasteners without missing any of the supplied parts according to the instructions in the provided installation manual.
- Before installing a wall mount, be sure to check that it is compatible with the TV.
- Do not mount the TV at more than a 15 degree tilt.
- Standard dimensions for wall mount kits are shown in the table on the Unpacking and Installation Guide.

- Do not install your wall mount kit while your TV is turned on. This may result in personal injury from electric shock.

- Do not use screws that are longer than the standard dimension or do not comply with the VESA standard screw specifications. Screws that are too long may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.

- Always have two people mount the TV onto a wall.
 - For 82 inch or larger models, have four people mount the TV onto a wall.

Providing proper ventilation for your TV

When installing the TV (*Wireless One Connect box or One Connect Box), ensure proper ventilation by leaving sufficient space between the TV (*Wireless One Connect box or One Connect Box) and surrounding objects. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.
*: Wireless One Connect Box or One Connect Box Supported Model Only

- When you install your TV with a stand or a wall mount, we strongly recommend you use parts provided by Samsung only. Using parts provided by another manufacturer may cause difficulties with the product or result in injury caused by the product falling.

Safety Precaution


- Caution:** Pulling, pushing, or climbing on the TV may cause the TV to fall. In particular, do not hang on or destabilise the TV. This action may cause the TV to tip over, causing serious injuries or death. Follow all safety precautions provided in the Safety Flyer included with your TV. For added stability and safety, you can purchase and install the anti-fall device, referring to "Preventing the TV from falling".

- WARNING:** Never place a television set in an unstable location. The television set may fall, causing serious personal injury or death. Many injuries can be avoided by taking simple precautions such as:

- Always use cabinets or stands or mounting methods recommended by Samsung.
- Always use furniture that can safely support the television set.
- Always ensure the television set is not overhanging the edge of the supporting furniture.
- Always educate about the dangers of climbing on furniture to reach the television set or its controls.
- Always route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- Never place a television set in an unstable location.
- Never place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.

- Never place the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - Never place items that might tempt to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- If the existing television set is going to be retained and relocated, the same considerations as above should be applied.
- When you have to relocate or lift the TV for replacement or cleaning, be sure not to pull out the stand.


Preventing the TV from falling

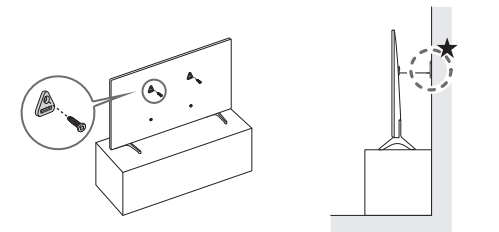

- ★ : Wall-anchor (not supplied)
- Using the appropriate screws, firmly fasten a set of brackets to the wall. Confirm that the screws are firmly attached to the wall.
 - You may need additional material such as wall anchors depending on the type of wall.
 - Using the appropriately sized screws, firmly fasten a set of brackets to the TV.
 - For the screw specifications, refer to the standard screw part in the table on the Unpacking and Installation Guide.
 - Connect the brackets fixed to the TV and the brackets fixed to the wall with a durable, heavy-duty string, and then tie the string tightly.
 - Install the TV near the wall so that it does not fall backwards.
 - Connect the string so that the brackets fixed to the wall are at the same height as or lower than the brackets fixed to the TV.

Precautions when installing the TV with a stand

(The Frame only)
When you install the TV with a stand, avoid placing the stand on the back part of the table surface. Failure to do so may cause the motion sensor at the bottom of the TV not to work properly.

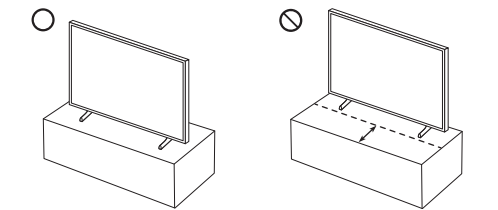

Operation

- This apparatus uses batteries. In your community, there might be environmental regulations that require you to dispose of these batteries properly. Please contact your local authorities for disposal or recycling information.
- Store the accessories (remote control, batteries, or etc.) in a location safely out of the reach.
- Do not drop or strike the product. If the product is damaged, disconnect the power cord and contact a Samsung service centre.
- Do not dispose of remote control or batteries in a fire.
- Do not short-circuit, disassemble, or overheat the batteries.
- After removing the screen protective film, never remove the Polarising film.
 - If the protective film removal label is not found, the protective film has already been removed.
- CAUTION:** There is danger of an explosion if you replace the batteries used in the remote with the wrong type of battery. Replace only with the same or equivalent type.
- WARNING -** Do not use liquid fumigators containing chemicals, such as mosquito repellent or air freshener, around the product.
 - If steam comes in contact with the product surface or enters the product, it may cause stains or malfunction.
- WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES AND OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**



04 Troubleshooting and Maintenance

Troubleshooting

For more information, refer to "Troubleshooting" in the User Guide.
(➡ > left directional button > ⚙ Settings > Support > Tips and User Guides > Open User Guide > Troubleshooting)
If none of the troubleshooting tips apply, please visit "www.samsung.com" and click Support or contact the Samsung service centre.

- This panel is made up of sub pixels which require sophisticated technology to produce. There may be, however, a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.
- To keep your TV in optimum condition, upgrade to the latest software. Use the **Update Now** or **Auto update** functions on the TV's menu (➡ > left directional button > ⚙ Settings > Support > Software Update > Update Now or Auto update).

The TV won't turn on.

- Make sure that the power cord is securely plugged into the product and the wall outlet.
- Make sure that the wall outlet is working and the remote control sensor at the bottom of the TV is lit and glowing a solid red.
- Try pressing the **TV Controller** button at the bottom of the TV to make sure that the problem is not with the remote control.

The screen dims.

The Eco Sensor automatically adjusts the screen brightness based on the ambient light intensity. If the screen is too dark when watching in a dark environment, check the **Brightness Optimisation** feature (➡ > left directional button > ⚙ Settings > All Settings > General & Privacy > Power and Energy Saving > Brightness Optimisation).

The screen brightness may decrease if any objects block the Eco Sensor located at the bottom of the product.

05 Specifications and Other Information

Specifications

Display Resolution
QN9**H: 7680 x 4320
Other models: 3840 x 2160
Sound (Output)
U8***H/U9***H/M7*H/M8*H/M9*H/S8*H/QN7*H/QN1EH/M1EH: 20 W
QN8*H: 30 W
R85H (55"-85"): 30 W, R85H (100"): 40 W
S90H: 40 W
S95H/R9*H: 70 W
QN9**H: 90 W
LS03HE (43"): 20 W, LS03HE (98") : 40 W
LS03HA/LS03HW: 40 W
Operating Temperature
10 °C to 40 °C (50 °F to 104 °F)
Operating Humidity
10 % to 80 %, non-condensing
Storage Temperature
-20 °C to 45 °C (-4 °F to 113 °F)
Storage Humidity
5 % to 95 %, non-condensing

- Notes**
- This device is a Class B digital apparatus.
- For information about the power supply, and more information about power consumption, refer to the information on the label attached to the product.
 - On most models, the label is attached to the back of the TV. (On some models, the label is inside the cover terminal.)
 - On Wireless One Connect Box or One Connect Box models, the label is attached to the bottom of the Wireless One Connect Box or One Connect Box.
- Typical power consumption is measured according to IEC 62087.
- To connect a LAN cable, use a CAT 7 (*STP type) cable for the connection. (100/10 Mbps)
 - * Shielded Twisted Pair
- The images and specifications of the Unpacking and Installation Guide may differ from the actual product.

[Precautions for using Wi-Fi 5.925 - 7125 (or 6.425) GHz]
Operation of this product shall be limited to indoor use only.


An administration fee may be charged in the following situations:

- An engineer is called out at your request, but it is found that the product has no defect (i.e., where the user manual has not been read).
- You bring the unit to the Samsung service centre, but it is found that the product has no defect (i.e., where the user manual has not been read).

You will be informed of the administration fee amount before a technician visits.

Following the repair by a non-authorised service provider, self-repair or non-professional repair of the product, Samsung is not liable for any damage to the product, any injury or any other product safety issue caused by any attempt to repair the product which does not carefully follow these repair and maintenance instructions. Any damage to the product caused by an attempt to repair the product by any person other than a Samsung certified service provider will not be covered by the warranty.

- To access the energy labelling information of the model:
- Go to https://www.samsung.com/global/ecodesign_energy
 - Get the model identifier from the energy label of the product and type it in the search box
 - Energy labelling information can be found

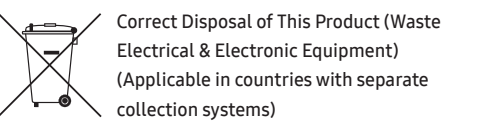

The marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.


Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

- Removing the battery**
- To remove the battery, contact an authorised service centre. To obtain battery removal instructions, please visit www.samsung.com/global/ecodesign_energy.
- For your safety, you must not attempt to remove the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

- The type of battery may vary depending on the model.



The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

The battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider. Do not attempt to remove the battery or dispose it in a fire. Do not disassemble, crush, or puncture the battery. If you intend to discard the product, the waste collection site will take the appropriate measures for the recycling and treatment of the product, including the battery.

- The type of battery may vary depending on the model.

SAMSUNG

Kolay Kullanım Kılavuzu

Bu Samsung ürününü satın aldığınız için teşekkür ederiz. Daha fazla hizmet almak için lütfen www.samsung.com adresinden ürününüzü kaydedin Model _____ Seri No. _____

Bu Kolay Kullanım Kılavuzu şekiller ve çizimler yalnızca referans amaçlıdır ve gerçek ürün görünümünden farklı olabilir. Ürün tasarımı ve teknik özellikler haber verilmeden değiştirilebilir.

Samsung Destek İletişim Bilgileri

Samsung ürünleri ile ilgili soru ve talepleriniz için <http://www.samsung.com/tr/support/#contact> sayfasından Samsung çağrı merkezine ulaşabilirsiniz.

Samsung Servis Merkezi 	Web Sitesi
444 7711	www.samsung.com/tr/support

İşbu belge ile Samsung, bu radyo ekipmanının 2014/53/AB Direktifine ve ilgili İngiltere kanuni gereksinimlerine uygun olduğunu beyan eder. Uyumluluk beyanının tam metni aşağıdaki İnternet adresinde bulunabilir: <http://www.samsung.com/support> ve model adını girin.

- Bu ekipman, TÜRKİYE’de çalıştırılabilir.
- Bu ekipmanın 5 GHz ve 6 GHz WLAN (Wi-Fi) işlevi yalnızca iç mekanda çalıştırılabilir.
- Bu ekipmanın 60 GHz - 61,5 GHz işlevi yalnızca iç mekanda çalıştırılabilir (yalnızca The Frame (LS03H**)).

RF maks verici gücü:

[QN990H]	[The Frame (LS03HA, LS03HE)]
2,4 GHz - 2,4835 GHz’de 100 mW, 5,15 GHz - 5,25 GHz’de 200 mW, 5,25 GHz - 5,35 GHz ve 5,47 GHz - 5,725 GHz’de 100 mW, 5,725 GHz - 5,85 GHz’de 25 mW, 5,945 GHz - 6,425 GHz’de 200 mW.	2,4 GHz - 2,4835 GHz’de 100 mW, 5,15 GHz - 5,25 GHz’de 200 mW, 5,25 GHz - 5,35 GHz ve 5,47 GHz - 5,725 GHz’de 100 mW, 5,945 GHz - 6,425 GHz’de 200 mW.
[R9**H/R8**H/S9**H/S8**H/QN8**H]	[The Frame (LS03HW)]
2,4 GHz - 2,4835 GHz’de 100 mW, 5,15 GHz - 5,25 GHz’de 200 mW, 5,25 GHz - 5,35 GHz ve 5,47 GHz - 5,725 GHz’de 100 mW, 5,945 GHz - 6,425 GHz’de 200 mW.	2,4 GHz - 2,4835 GHz’de 100 mW, 5,15 GHz - 5,25 GHz’de 200 mW, 5,25 GHz - 5,35 GHz ve 5,47 GHz - 5,725 GHz’de 100 mW, 5,945 GHz - 6,425 GHz’de 200 mW.
[QN7**H/QN1EH/M9**H/M8**H/M7**H/M1EH/U9***H/U8***H]	
2,4 GHz - 2,4835 GHz’de 100 mW, 5,15 GHz - 5,25 GHz’de 200 mW, 5,25 GHz - 5,35 GHz ve 5,47 GHz - 5,725 GHz’de 100 mW.	

© 2026 Samsung Electronics Co., Ltd. Tüm hakları saklıdır.



Uyarı: Yanlış tutulduğunda doğrudan basınç yüzünden ekranlar hasar görebilir. TV’yi gösterilen şekilde kenarlarından kaldırmanızı öneriz. Elleçleme hakkında daha fazla bilgi için bu ürünle birlikte gelen Unpacking and Installation Guide belgesine bakın.



02 TV’yi One Connect Kutusuna bağlama

(Yalnızca One Connect Kutusu Destekli Model)

One Connect Kutusu yoluyla bağlama hakkında daha fazla bilgi için bkz. Unpacking and Installation Guide.

-  One Connect Kutusunu baş aşağı veya dikey konumda kullanmayın.
- Kabloyu aşağıdaki eylemlerden birine maruz bırakmamaya dikkat edin. One Connect Kablosu, bir güç devresi içeri.

 Eğme
  Bükme
  Çekme

 Ezme
  Elektrik çarpması

SINIF I LAZER ÜRÜN (yalnızca The Frame (LS03HA))

- Dikkat - Açıldığında görünmez lazer radyasyonu. Işına doğru bakmayın.
- One Connect Kablosu öğesini aşırı bükmemey. Kabloyu kesmemey.
- Kablo üzerine ağır nesneler yerleştirmeyin.
- Kablo konektörlerini parçalarına ayırmayın.
- Dikkat - Denetimlerin, ayarlamaların kullanımı ya da burada belirtilenler haricindeki prosedürlerin performansı zararlı radyasyona maruz kalmayla sonuçlanabilir.

Bu Kolay Kullanım Kılavuzu Okumadan Önce

Bu TV, bu Kolay Kullanım Kılavuzu ve yerleşik Kullanıcı Kılavuzu ile birlikte gelir.

🔊 > sol yön düğmesi > ⚙️ **Ayarlar** > **Destek** > **İpuçları ve Kullanıcı Kılavuzları** > **Kullanıcı Kılavuzunu Aç**)

Uyarı! Önemli Güvenlik Talimatları

TV’nizi kullanmadan önce lütfen Güvenlik Talimatlarını okuyun. Samsung ürününüz üzerinde bulunabilecek sembollerin açıklaması için aşağıdaki tabloya bakın.

DİKKAT	
ELEKTRİK ÇARPMASI RİSKİ. AÇMAYIN.	
DİKKAT: ELEKTRİK ÇARPMASI RİSKİNİ AZALTMAK İÇİN, KAPAĞI (VEYA ARKASINI) ÇIKARMAYIN. İÇ KISIMDA KULLANICININ ONARİLECEĞİ BİR PARÇA YOKTUR. TÜM SERVİS İŞLEMLERİ İÇİN YETKİLİ PERSONELE BAŞVURUN.	
	Bu sembol, içinde yüksek voltaj olduğunu gösterir. Bu ürünün içindeki parçalarla herhangi bir temasta bulunmak tehlikelidir.
	Bu sembol, bu ürünle çalışma ve bakıma ilişkin önemli literatür veriliğini gösterir.
	Sınıf II ürün: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerekemediğini gösterir. Bu sembol elektrik kablosu olan bir ürününüz üzerinde yoksa ürünün koruyucu topraklamaya (toprak) güvenli bir bağlantısı olması GEREKİR.
	AC voltajı: Bu sembolle işaretlenen nominal voltaj AC voltajdır.
	DC voltajı: Bu sembolle işaretlenen nominal voltaj DC voltajdır.
	Dikkat: Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için Kolay Kullanım Kılavuzu başvurmasını söyler.

Güç

- Prizleri, uzatma kablolarını veya adaptörleri voltaj ve kapasitelerinden fazla, aşırı yüklemeyin. Bu, yangın veya elektrik çarpmasına neden olabilir.
- Voltaj ve amper bilgileri için kılavuzun güç özellikleri bölümüne veya ürün üzerindeki güç kaynağı etiketine bakın.
- Güç kaynağı kabloları üzerlerine basılmayacak veya başka öğeler tarafından sıkıştırılmayacak şekilde yerleştirilmelidir. Fişin ucundaki, duvar prizlerinden ve cihazdan çıktıkları noktadaki kablolarla özellikle dikkat edin.
- Bu cihazın açık parçalarını metalik herhangi bir şey takmayın. Bu, elektrik çarpmasına neden olabilir.
- Elektrik çarpmasından kaçınmak için, bu cihazın için kesinlikle dokunmayın. Yalnızca kalifiye teknisyen bu cihazı açmalıdır.
- Güç kablosunu sıkıca yerleşene kadar taktığınızdan emin olun.
- Güç kablosunu prizden çekerken her zaman güç kablosunun fişinden tutun. Keskinlikle güç kablosundan çekip çıkarmayın. Güç kablosuna slak elle dokunmayın.
- Bu cihaz normal şekilde çalışmaya ve özellikle de garip sesler veya kokuar gelirse hemen fişini çekin ve yetkili bir satıcıya veya Samsung servis merkezine temasa geçin.
- Bu cihaz şimşekli bir fırtınadan korunmak veya uzun süre gözetimsiz ve kullanılmadan bırakmak için, fişini duvara prizinden çıkardığınızda ve anten veya kablo sisteminin bağlantısını kestiğinizden emin olun.
 - Toz birikmesi elektrik çarpmasına, elektrik kaçığına veya güç kablosunun kıvılcım veya ışı meydana getirmesi neticesinde yangına veya yangının bozulmasına yol açabilir.
- Yalnızca uygun şekilde topraklanmış fiş ve priz kullanın.
 - Uygun olmayan bir topraklama elektrik çarpmasına veya ekipman hasarına neden olabilir. (Yalnızca Sınıf I Ekipman.)
- Bu cihazı tamamen kapatmak için, prize bağlantınızı kesin. Gerekirse cihazın fişini hızlı bir şekilde çıkarabilmek için priz in ve fişin erişilebilir durumda olduğundan emin olun.

Kurulum

- Bu cihaz bir radyatör veya ışı rezistörünün yakınına veya doğrudan güneş ışığı alan bir yere koymayın.
- Elektrik çarpması ya da yangına yol açma riski taşıdığı için, bu cihazın üzerine su içeren bir kap (vazo vb.) koymayın.
- Bu cihaz yağmura veya neme maruz bırakmayın.
- TV’nizi çok fazla toz, yüksek veya düşük sıcaklık, yüksek nem, kimyasal maddeler olan bir yere veya hava alanı, tren istasyonu vb. gibi günde 24 saat çalışacağı bir yere kurmayı düşünüyorsanız bilgi için yetkili bir servis merkezine başvurdüğunuzdan emin olun. Aksi takdirde TV’nizde ciddi hasarlar meydana gelebilir.
- Bu cihazı damlama veya sıçramaya maruz bırakmayın.

TV’yi duvara monte etme

-  Bu TV’yi duvara monte ederseniz, yönergeleri tam olarak üreticinin belirttiği şekilde uygulayın. Doğru monte edilmezse, TV kayabilir veya düşebilir ve çocuk veya yetişkinde ciddi yaralanmalara ya da TV’nin ciddi derecede hasar görmesine neden olabilir.

- Samsung duvar montaj kitini sipariş etmek için Samsung servis merkezi ile iletişime geçin.
- Samsung, duvara montaj kitini kendiniz monte etmeyi seçtiğinizde kendinize ya da başkalarına vereceğiniz hasarlardan sorumlu değildir.
- VESA olmayan veya belirtilmemiş duvara montaj kullanıldığında veya müşteri ürün kurma yönergelerine uymadığında, Samsung, ürünün zarar görmesinden veya yaralanmalardan sorumlu değildir.
- Duvara montaj kitinizi zemine dik olacak şekilde sağlam bir duvara monte edin. Duvara montaj kitini açtı pano dışında yüzeylere takmadan önce, ek bilgi için en yakın satıcıya başvurun. TV’yi tavana veya eğik bir duvara monte ederseniz, düşebilir ve ciddi kişisel yaralanmaya neden olabilir.
- Güvenlik için, size verilen kurulum kılavuzundaki talimatlara uygun olarak tüm bağlayıcıları, eksiksiz ve sağlanan parçaların tamamını kullanılarak monte edin.
- Duvar montajı parçasını takmadan önce parçanın TV ile uyumlu olup olmadığını kontrol edin.
- TV’yi 15 derecelik eğimden daha fazla eğimde monte etmeyin.
- Duvara montaj kitlerinin standart boyutları Unpacking and Installation Guide içindeki tabloda gösterilmiştir.

-  Duvara montaj kitinizi TV’niz açıkken kurmayın. Bu, elektrik çarpması sonucu yaralanmayla sonuçlanabilir.

- Standart boyuttan daha uzun olan veya VESA standart vida teknik özelliklerine uymayan vidalar kullanmayın. Çok uzun vidalar TV setini iç kısmının hasar görmesine neden olabilir.
- VESA standardı vida teknik özelliklerine uymayan duvara montaj kitleri için, vidaların uzunluğu duvara montaj teknik özelliklerine bağlı olarak değişebilir.
- Vidaları çok fazla sıkmayın. Bu, ürüne zarar verebilir veya ürünün düşmesine neden olarak yaralanmaya neden olabilir. Samsung bu tür kazalarından sorumlu değildir.
- TV’yi duvara her zaman iki kişi monte etmelidir.
 - 82 inç ve daha büyük modeller için TV’yi duvara monte etmek için dört kişi gerekir.

TV’nizi yeterince havalandırma

TV (*Wireless One Connect kutusu veya One Connect Kutusu) kurulumu sırasında, uygun havalandırma sağlamak için TV (*Wireless One Connect kutusu veya One Connect Kutusu) ile etrafındaki nesneler arasında yeterli alan bırakın. Yeterli havalandırmanın sağlanamaması halinde, iç sıcaklıktaki artış nedeniyle yangın veya üründen bir sorun çıkabilir.

- *: Yalnızca Wireless One Connect Kutusu veya One Connect Kutusu Tarafından Desteklenen Model
- TV’nizi stand veya duvar montajı ile monte ettiğinizde, yalnızca Samsung tarafından sağlanan parçaları kullanmanızı önemle öneririz. Başka bir üretici tarafından sağlanan parçaların kullanılması, üründen soruna veya ürünün düşmesi nedeniyle yaralanmaya neden olabilir.


Güvenlik Önlemleri

-  **Dikkat:** TV’yi çekme, itme veya üzerine çkma TV’nin düşmesine neden olabilir. Özellikle TV’ye asılmayın veya TV’nin dengesiini bozmayın. Bu eylem TV’nin devrilmesine, ciddi yaralanmalara veya ölüme neden olabilir. TV’nize birlikte verilen Güvenlik Notundaki tüm güvenlik önlemlerine uyun. Ekstra sağlamlık ve güvenlik için “TV’nin düşmesini önleme” içinde açıklanan şekilde düşmeyi önleyici cihazı satın alabilirsiniz.

-  **UYARI:** Bir televizyon setini kesinlikle sabit olmayan bir konuma koymayın. Televizyon seti düğerek ciddi yaralanmaya veya ölüme neden olabilir. Birçok yaralanma, sunlar gibi basit önlemler alınarak engellenebilir:

- Her zaman Samsung tarafından önerilen kabinleri ve standları veya montaj yöntemlerini kullanın.
- Her zaman televizyon setini güvenli destekleyebilecek esya kullanın.
- Her zaman televizyon setinin kendisini destekleyen eşyanın kenarından aşırı sarkmadığından emin olun.
- Televizyon setine veya kumandalarına ulaşmak için mobilyaların üzerine tırmanmanın tehlikeleri konusunda mutlaka eğitim verin.
- Kablolarla takılmamak, kabloları çekmemek ve kabloların yakalanmasını önlemek için her zaman televizyonunuzu bağlı kordonları ve kabloları yönlendirin.
- Birtelevizyon setini kesinlikle sabit olmayan bir konuma koymayın.
- Hem eşyayı hem de televizyon setini uygun bir desteğe sabitlemeden televizyon setini yüksek eşyaların üzerine kesinlikle yerleştirmeyin (örneğin, dolap veya kitaplık).
- Televizyon setini, televizyon seti ve destekleyen esya arasına koyulabilecek örtü veya diğer malzemelerin üzerine kesinlikle yerleştirmeyin.
- Oyuncaklar ve uzaktan kumandalar gibi tırmanmaya teşvik edebilecek eşyaları asla televizyonun üzerine veya televizyonun yerleştirildiği mobilyaların üzerine koymayın.
- Mevcut televizyon setinizin kendisini veya yerini değiştirmiyorsanız yukarıdaki önlemlerin aynısnı alınmalıdır.
- TV’yi başka bir yere yerleştirmenize veya kaldırmanız gerektiğinde, standı dışarı çıkardığınızdan emim olun.

TV’nin düşmesini önleme

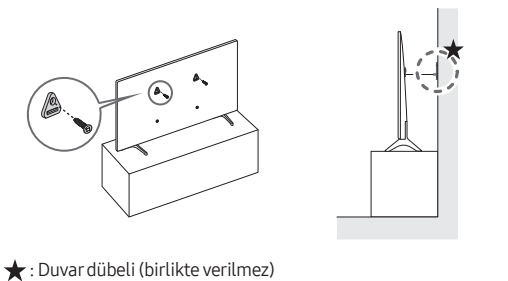


★ : Duvar dübeli (birlikte verilmmez)

- Uygun vidaları kullanarak braket setini duvara sıkıca sabitleyin. Vidaların duvara iyice takıldığından emin olun.
 - Duvar tipine bağlı olarak duvar dübeli gibi ek malzemelere ihtiyacınız olabilir.
- Uygun boyutta vidaları kullanarak braket setini TV’ye sıkıca sabitleyin.
 - Vida özellikleri için Unpacking and Installation Guide içindeki tabloda bulunan standart vida bölümüne bakın.
- TV’ye sabitlenmiş braketleri ve duvara sabitlenmiş braketleri sağlam, ağır işbağı ile birleştirin ve sonra bağı sıkı bir şekilde bağlayın.
 - TV’yi arkaya doğru düşmemesi için duvara yakın bir yere takın.
 - Bağ duvara sabitlenmiş braketler, TV’ye sabitlenmiş braketlerle aynı yükseklikte veya daha alçak olacak şekilde bağlayın.

Standlı TV’yi kurarken önlemler

(Yalnızca The Frame)
Standlı TV’yi kurarken tablo yüzeyinin arka parçasına standı yerleştirmekten kaçının. Aksi halde TV’nin altındaki hareket sensörünün düzgün çalışmasına neden olabilirsiniz.

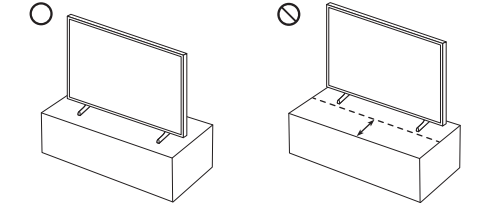

İşlem

- Bu cihaz piller kullanır. Ülkenizde, bu pillerin düzgün şekilde elden çıkarılması gerektiren çevre yönetmelikleri olabilir. Atma veya geri dönüşüm bilgileri için, lütfen yerel yetkililerle temasa geçin.
- Aksesuarları (uzaktan kumanda, piller vb.) kullanmayacak güvenli bir yerde saklayın.
- Ürünü düşürmeyin veya çarpmayın. Ürün hasar görürse güç kablosunun bağlantısını kesin ve bir Samsung servis merkezine temasa geçin.
- Uzaktan kumandayı veya pilleri ateşe atmayın.
- Pillerle kısa devre yaptırmayın, parçalamayın veya aşırı ısıtmayın.
- Ekran koruyucu filmi kaldırdıktan sonra Polarize filmi asla kaldırmayın.
 - Koruyucu film kaldırma etiketi görülmiyorsa, koruyucu film önceden kaldırılmıştır.
- DİKKAT:** Uzaktan kumandada kullanılan pilleri yanlış pil türüyle değiştirmişseniz patlama tehlikesi vardır. Yalnızca aynı tipte veya eşdeğer tipte değiştirin.
- UYARI** - Ürünün çevresinde sinek kovucu gibi böcek ilaçları veya oda spreyi gibi kimyasallar içeren sıvı püskürtücü ürünler kullanmayın.
 - Buharın ürün yüzüne temas etmesi veya ürüne girmesi, lekelere ya da arızalara neden olabilir.
- UYARI** - YANGININ YAYILMASINI ÖNLEMEK İÇİN MUMLARI VE AÇIK ALEV İÇEREN DİĞER ÖĞELERİ BU ÜRÜNDEN HER ZAMAN UZAK TUTUN.

- Pilin çıkartılması**
 - Pili çıkarmak için yetkili servis merkezine başvurun. Pili çıkarma talimatlarını edinmek için lütfen www.samsung.com/global/ecodesign, energy adresini ziyaret edin.
 - Güvenliğiniz için pili kendi başınıza çıkarmaya çalışmayın. Pil düzgün bir şekilde çıkartılmazsa pilin ve cihazın zarar görmesine yol açarak kişisel yaralanmaya yol açabilir ve/veya cihazın güvensiz olmasına sebebiyet verebilir.

-  **Bu üründeki pillerin doğru atılması (Aynı toplama sistemlerine sahip ülkeler içindir)**

-  Pildeki, kılavuzdaki veya ambalajdaki bu işaret bu üründeki pillerin kullanımlar ömürlerinin sonunda diğer ev atıkları ile birlikte atılmaması gerektiğini belirtir. Hg, Cd veya Pb kimyasal sembollerinin EC Yönetmeliği 2006/60’da belirtilen referans değerlerin üstünde cıva, kadmıyum veya kurşun içerdğini gösterir. Piller düzgün atılmazsa, bu maddeler insan sağlığına veya ortama zarar verebilir.
- Doğal kaynakları korumak ve malzemelerin yeniden kullanılmasını özendirme için pilleri diğer atık türlerinden ayırıp bölgenizde ücretsiz pil de sistemiyle geri dönüştürülmesini sağlayın.
- Pil türü modele bağlı olarak değişebilir.

-  **Bu üründeki pillerin doğru atılması (Aynı toplama sistemlerine sahip ülkeler içindir)**

- Pil, kılavuz ve ambalaj üzerindeki işaret, bu üründeki pilin diğer ev atığıyla birlikte atılmaması gerektiğini gösterir. İşaret olduğunda, kimyasal Hg, Cd veya Pb sembollerinin pilin EC Direktif 2006/66’daki referans seviyelerin üzerinde cıva, kadmıyum veya kurşun içerdığını gösterir.
- Bu ürüne dahil edilen pil kullanıcı tarafından değiştirilemez. Değiştirilmesine ilişkin daha ayrıntılı bilgi için, lütfen hizmet sağlayıcınızla görüşün. Pili çıkarmaya veya ateşe atmaya çalışmayın. Pili parçalarını ayırmayın, ezmeyin veya delmeyin. Ürünü atmaya karar vererseniz, atık tolama tesisi pil de dahil olmak üzere ürünün geri dönüşümü ve işlenmesi için uygun önlemleri alacaktır.
- Pil türü modele bağlı olarak değişebilir.

TV’nin bakımı

- Bu cihaz temizlemek için, güç kablosunu prizden çıkartın ve ürünü yumuşak, temiz bir bezle silin. Mum, benzen, alkol, tiner, böcek ilacı, oda parfümü, yağlayıcı veya deterjan gibi herhangi bir kimyasal kullanmayın. Bu kimyasallar TV’nin görünümüne hasar verebilir veya ürün üzerindeki baskıyı silebilir.
- TV’nin düz yüzeyi ve ekranı temizleme sırasında çizilebilir. Dış yüzeyi ve ekranı, çizilmeleri önlemek için yumuşak bir bez kullanarak dikkatle sildiğinizden emin olun.
- TV’nin üzerine doğrudan su veya herhangi bir sıvı püskürtmeyin. Ürüne giren herhangi bir sıvı arızaya, yangına veya elektrik çarpmasına yol açabilir.

01 Kutuda Neler Var?

TV’nize birlikte aşağıdaki öğelerin verildiğinden emin olun. Öğelerden herhangi biri eksikse, bayinizle görüşün.

- Kolay Kullanım Kılavuzu
- Garanti Kartı / Düzeneleme Kılavuzu (Bazı ülkelerde yoktur)
- *Samsung Akıllı Kumanda
- *Uzaktan kumanda
- *Standart Uzaktan Kumanda
- *Piller
- *CI Card Adaptörü
- *TV Güç Kablosu
- *Duvara montaj adaptörü x 2
- *İnce Güç Kablo
- **Güç Kutusu
- **Güç Kutusu Kablo
- **Type-C Güç Adaptörü
- **Çift Taraflı Type-C Kablo
- **Wireless One Connect Kutusu
- **One Connect Kutusu
- **One Connect Güç Kablosu
- **One Connect Kablosu
- **One Connect kablo tutucu (duvara montaj için)

- *: Modele veya coğrafi bölgeye bağlı olarak, yukarıda belirtilen öğelerden bazıları pakete dahil olmayabilir.
- ****:** Bazı bölgeler, One Connect bağlantı yöntimine (kablolu veya kablousuz bağlantı) bağlı olarak sağlanmayabilir.
- ****:** Tedarik edilen One Connect kablolarının sayısı modele bağlı olarak değişiklik gösterebilir.
- Pil türü modele bağlı olarak değişebilir.
- Öğelerin renkleri ve şekilleri modellere bağlı olarak farklılık gösterebilir.
- Birlikte verilmeyen kablolar ayrıca satın alınabilir.
- Kutuyu açarken ambalaj malzemesinin arkasında veya içinde gizlenmiş bir aksesuar olup olmadığını kontrol edin.

İthalatçı Firma	
SAMSUNG	
Samsung Electronics İst. Paz. ve Tic. Ltd. Şti Defterdar Mah.Ötekılar Cad.Sınpaş Flatofis Apt.No78/46 Eyup Sultan, İstanbul / Türkiye Tel: +90 212 4670600	
AEEE Yönetmeliğine Uygundur	
Bu ürünün ortalama yaşam süresi 10 yıldır.	
İmalatçı	Samsung Electronics Co., Ltd. (Maetan-dong) 129, Samsung-ro Yeongtong-gu, Suwon-si, Gyeonggi-do 443-742, Korea Tel: +82-2-2255-0114 / Fax: +82-2-2255-0117
LVD	Nemko Korea Co., Ltd. UL Korea, Ltd. TUV Rheinland Korea Ltd. TUV SUD Korea Laboratory (TKL)
EMC	KCTL Inc. ONETECH Corp. CTK Co., Ltd. Samsung Electronics Co., Ltd., Global CS Center
Nemko Korea Co., Ltd.	165-51 Yurim-ro, Cheoin-gu, Yongin-si, Gyeonggi-do, 17042, Korea
UL Korea, Ltd.	218 Maeyong-ro Yeongtong-gu, Suwon-si Gyeonggi-do, 16675, Korea
TUV Rheinland Korea Ltd.	2/F/B2F, N-Tower, Semicolon Mullaee, 25, Mullaee-ro 28-gil, Yeongdeungpo-gu, Seoul, 07298, Korea
TUV SUD Korea Laboratory (TKL)	#315 and 316, MARIO Tower, 222-12, Guro-Dong, Guro-Gu, Seoul, 08389, Korea
KCTL Inc.	65, Sinwon-ro, Yeongtong-gu, Suwon-si, Gyeonggi-do, 16677, Korea
ONETECH Corp.	43-14, Jinnsaegi-gil, Chowul-eup, Gangwau-si, Gyeonggi-do, 12755, Korea
CTK Co., Ltd.	(Ho-dong), 113, Yejik-ro, Cheoin-gu, Yongin-si, Gyeonggi-do, 17462, Korea
Samsung Electronics Co., Ltd., Global CS Center	(Maetan-dong) 129, Samsung-ro, Yeongtong-gu Suwon-si, Gyeonggi-do, 16677, Korea