

HP PCIe IO Accelerator for ProLiant Servers Installation Guide

Abstract

Use these instructions to install the HP PCIe IO Accelerator ioDrive, HP PCIe IO Accelerator ioDrive2, HP PCIe IO Accelerator ioDrive Duo, or HP PCIe IO Accelerator ioDrive2 Duo.



Part Number: 696161-001
April 2012
Edition: 1



© Copyright 2012 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

Contents

Installation 4

 Warnings and cautions 4

 Removing the access panel 4

 Installing the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 4

 Installing a half-height bracket 7

 Installing the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo 10

Regulatory compliance notices 14

 European Union regulatory notice 14

 Korean class A notice 14

Acronyms and abbreviations 15

Documentation feedback 16

Installation

Warnings and cautions

-
-  **WARNING:** To reduce the risk of personal injury or damage to the equipment, consult the safety information and user documentation provided with the server before attempting the installation. Some servers contain high energy, high circuits, moving parts (such as fan blades), or any combination of these hazards, that may be exposed if covers and access panels are removed while the product is powered. These products are intended to be serviced only by qualified personnel who have been trained to deal with these hazards. Do not remove enclosures or attempt to bypass any interlocks that may be provided for the purpose of guarding against these hazardous conditions.
-
-  **WARNING:** To reduce the risk of electric shock, remove all AC power from the system before installing or replacing any non-hot-plug hardware option to the system. Disconnect all power cords to completely remove power from the server.
-
-  **WARNING:** To reduce the risk of personal injury from hot surfaces, allow the drives and the internal system components to cool before touching them.
-

Removing the access panel


1. Power down the server.
2. Unplug all AC power cords from the server.
3. Remove the server access panel.

For detailed instructions on powering down the server and removing the access panel, see your server user guide.

Installing the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2

1. If you are installing the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 in a low-profile system, install the half-height bracket. For more information, see "Installing a half-height bracket (on page 7)."

2. Locate and record the serial number on your HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2.

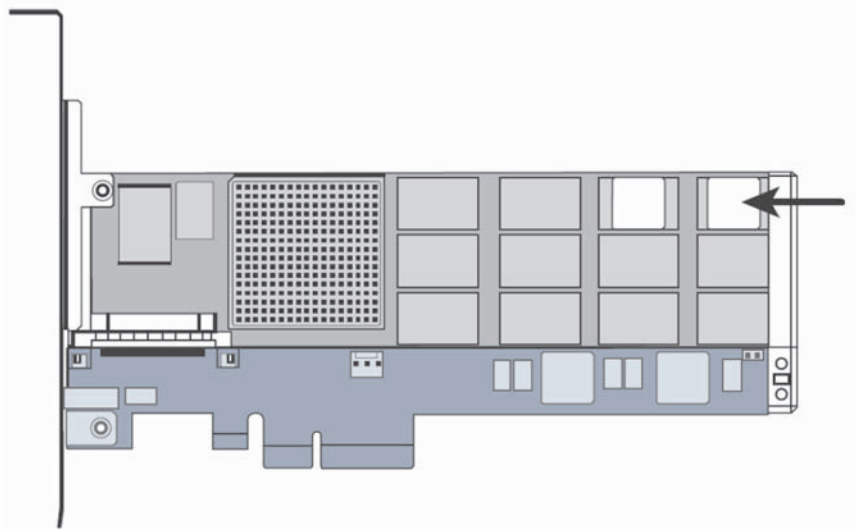


3. Locate an empty PCIe slot. For details on identifying PCIe slots, see your server documentation.

NOTE: HP currently supports:

- x4 Gen1 PCIe slot for a HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2
- x4 Gen2/x8 Gen1/x16 PCIe slot for the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo


4. If present, remove the slot bracket.

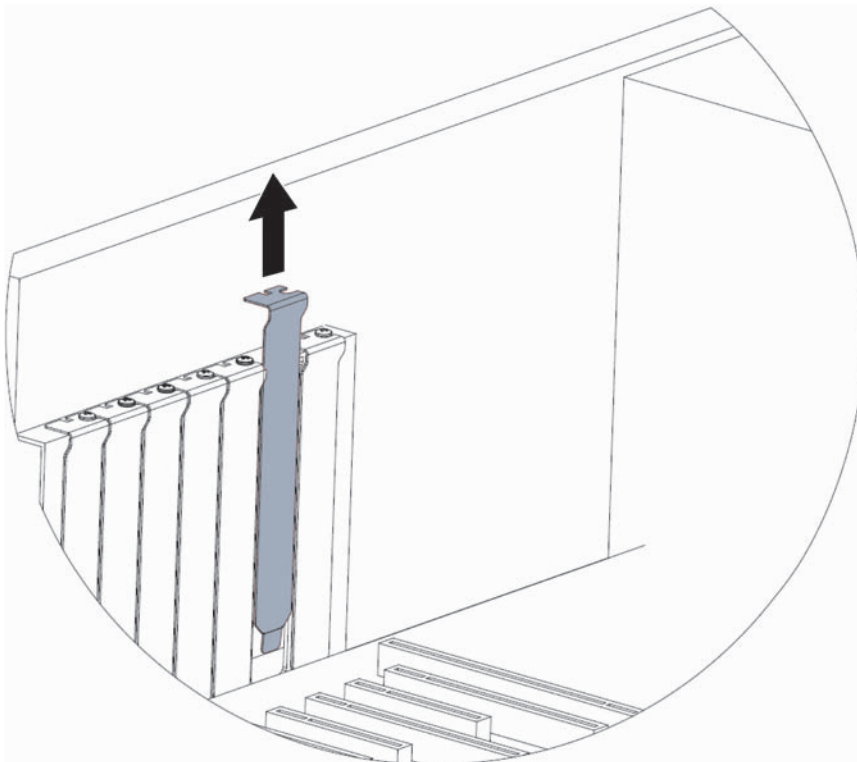


5. Grasp the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 by the top edge and insert it gently, but firmly, into the available PCIe slot.



CAUTION: To prevent damage to the server, apply pressure over the IO Accelerator connector when installing the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2. Do not apply pressure to the edges of the IO Accelerator device.

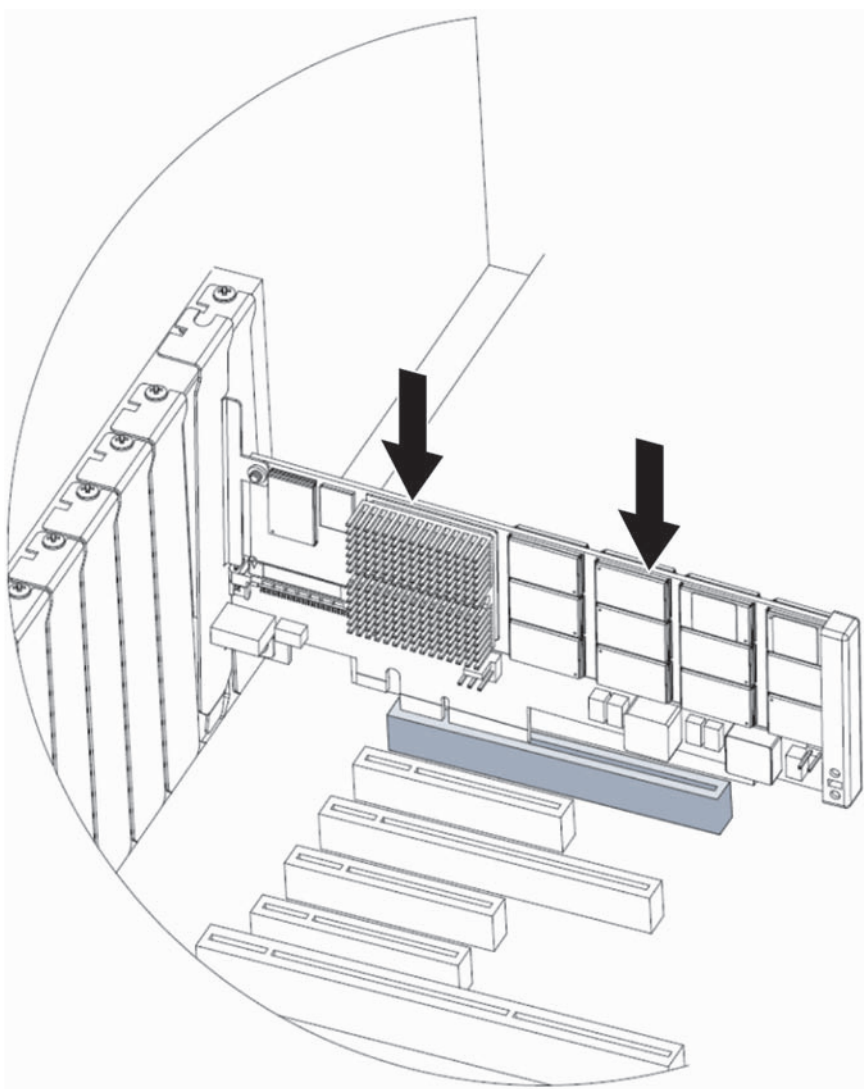

6. Depending on how your hardware is configured, use a screw or lever to secure the IO Accelerator retaining bracket.

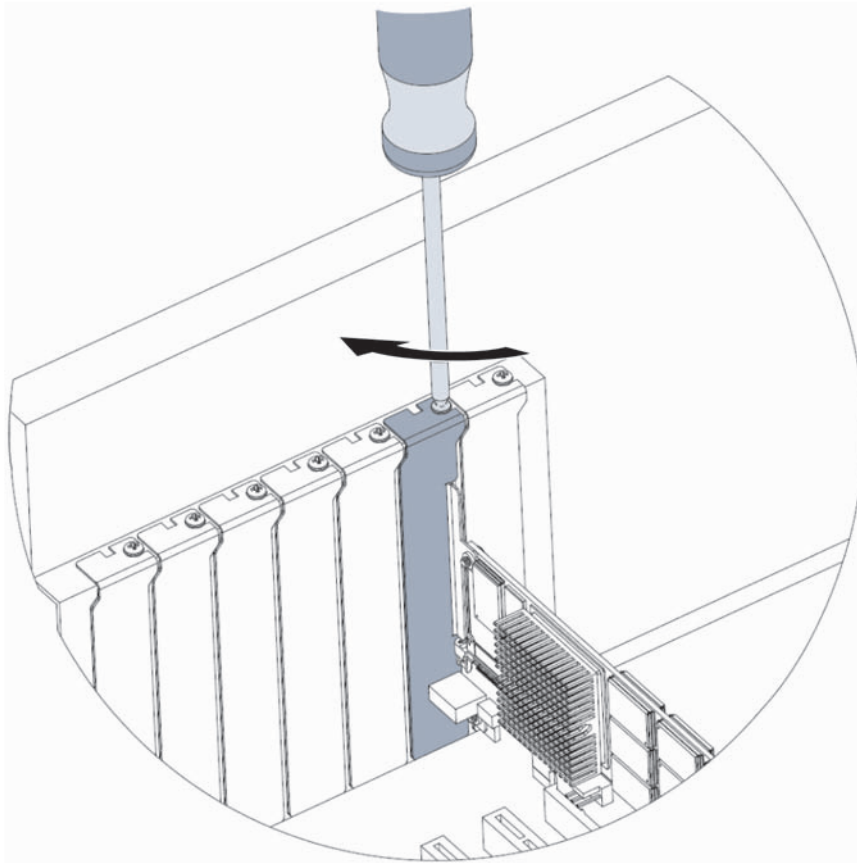


7. Replace the server access panel.
8. Plug in the power cable.
9. Power up the server.
10. If your operating system detects the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 and prompts you to install a driver for the device, click **Cancel**.

Installing a half-height bracket

NOTE: The HP PCIe IO Accelerator ioDrive Duo and HP PCIe IO Accelerator ioDrive2 Duo are not compatible with the half-height bracket.

For half-height installation (such as in low-profile systems), replace the full-height retaining bracket with the half-height bracket included in your HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 kit:


1. Locate the half-height bracket in your PCIe IO Accelerator package.

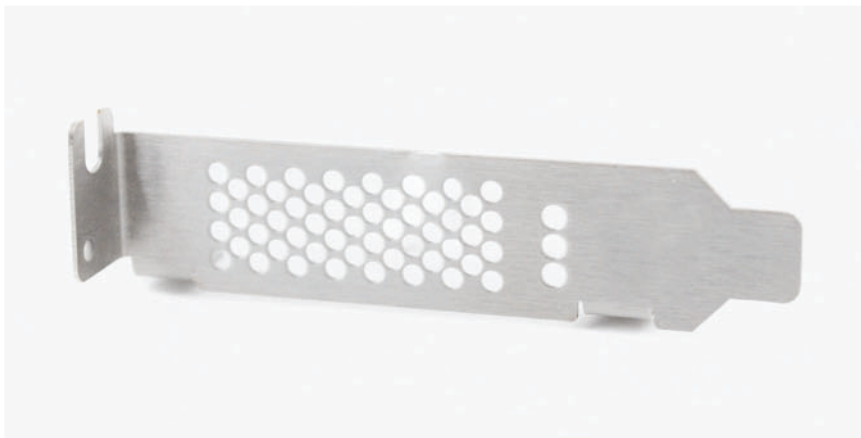

CAUTION: Use care when removing the retaining screws. Do not twist or pull on the bracket until both screws are out as this can cause damage to components.


To prevent damage to the PCIe IO Accelerator, use only a No. 1 Philips screwdriver.

2. Remove the two screws holding the full-height bracket to the PCIe IO Accelerator.

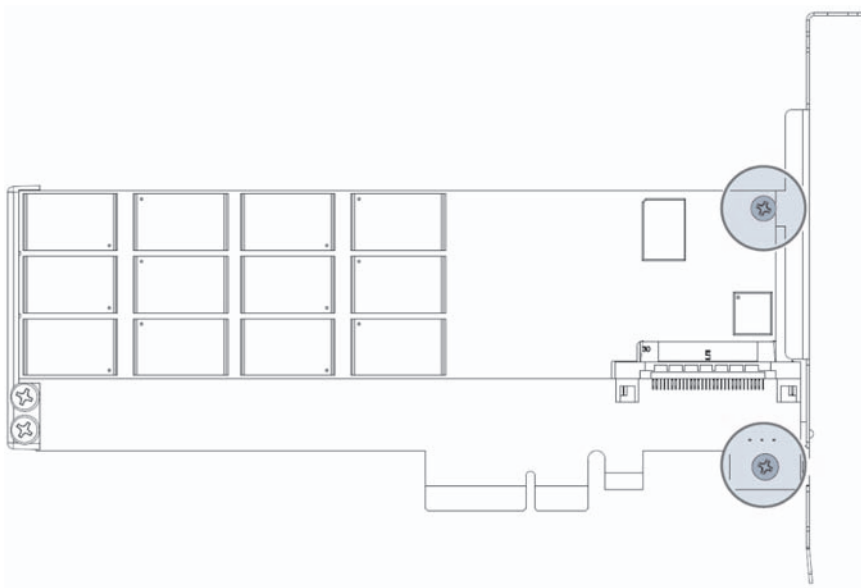


3. Remove the bracket carefully from the device.

4. Align the LEDs on the PCIe IO Accelerator with the holes in the half-height bracket. Be sure the bracket tabs are on the heatsink side of the device.

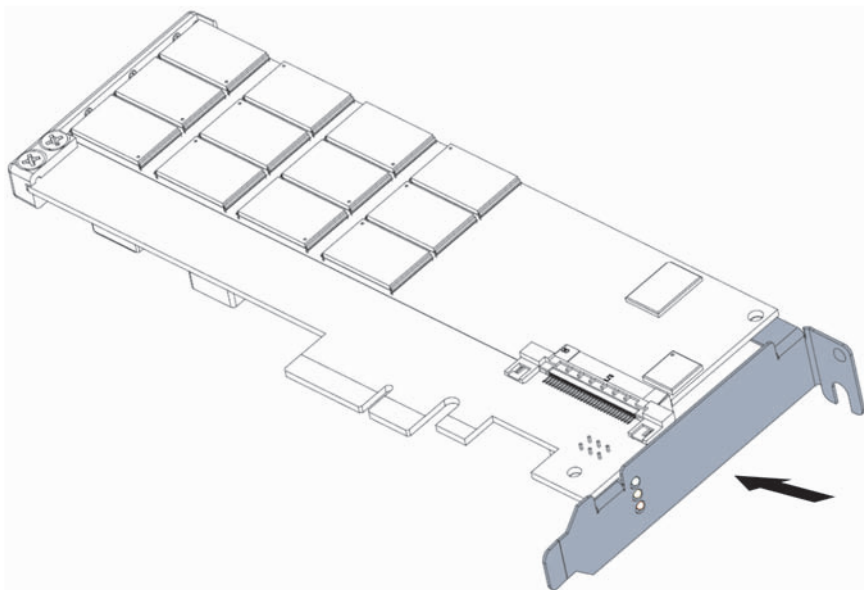

5. Attach the half-height bracket by using a No. 1 Philips screwdriver to tighten the two screws.

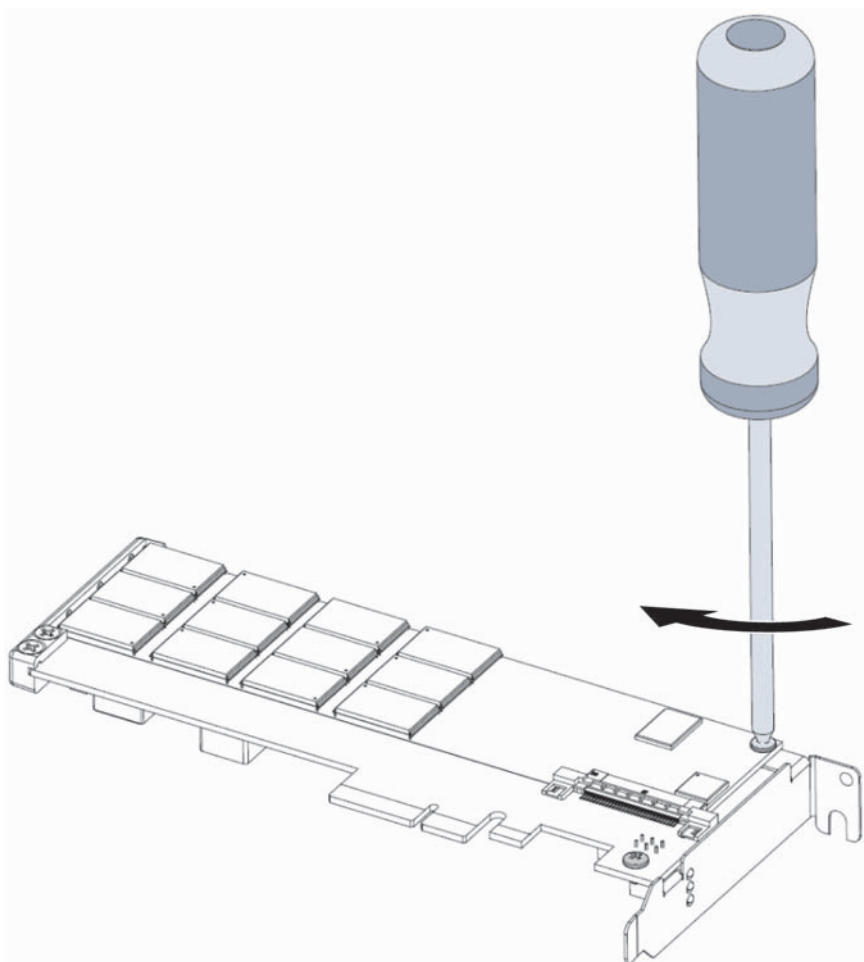



CAUTION: Do not overly tighten screws. Overly tightening the screws might damage the device.

6. Return to "Installing the HP PCIe IO Accelerator ioDrive or HP PCIe IO Accelerator ioDrive2 (on page 4)," and begin with step 2.


Installing the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo

1. Locate and record the serial and informational numbers on each side of your HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo.
2. Locate an empty Gen1 x8 or Gen2 x4 or x16 PCIe slot. For details on removing the panel and identifying PCIe slots, see your server documentation.


NOTE: If you are installing an HP PCIe IO Accelerator ioDrive Duo and are not using an auxiliary power connection, you must choose a slot that provides ample power. For more information, see the HP IO Accelerator User Guide for your operating system on the HP website (<http://www.hp.com/support>).

If you are installing an HP IO Accelerator ioDrive2 Duo, you must use an auxiliary power connection.


3. If present, remove the slot bracket.

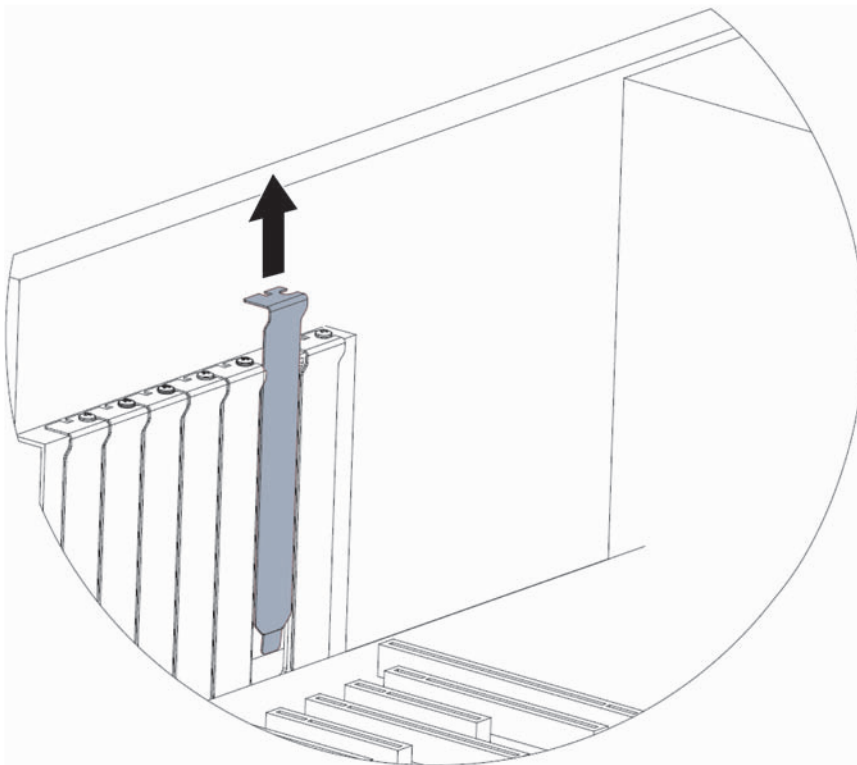

4. Grasp the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo by the top edge and seat it in the available PCIe slot.

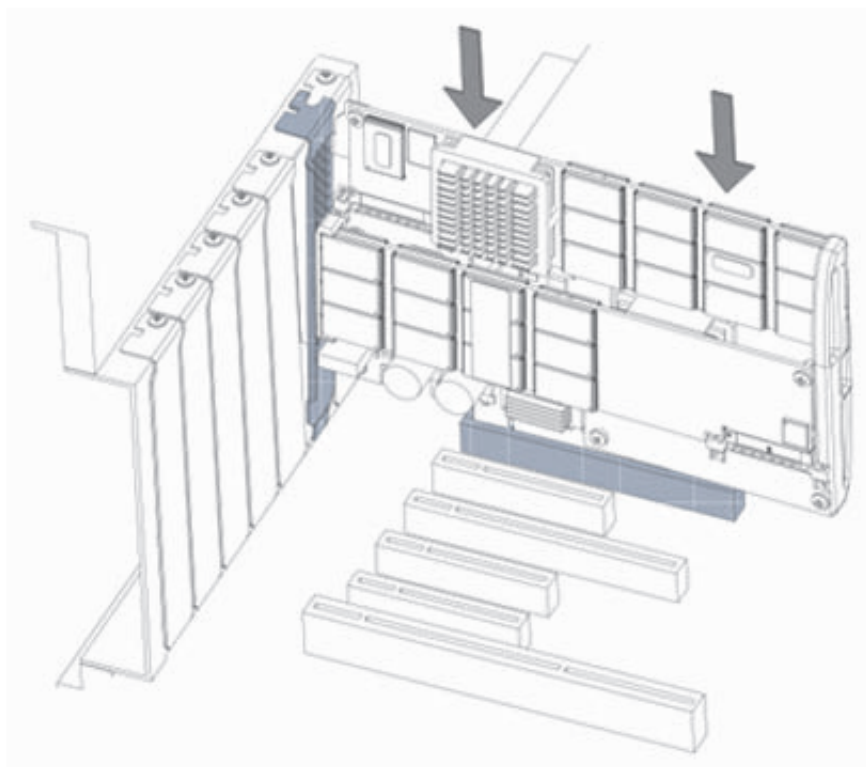

5. Depending on how your hardware is configured, use a screw or lever to secure the IO Accelerator retaining bracket.

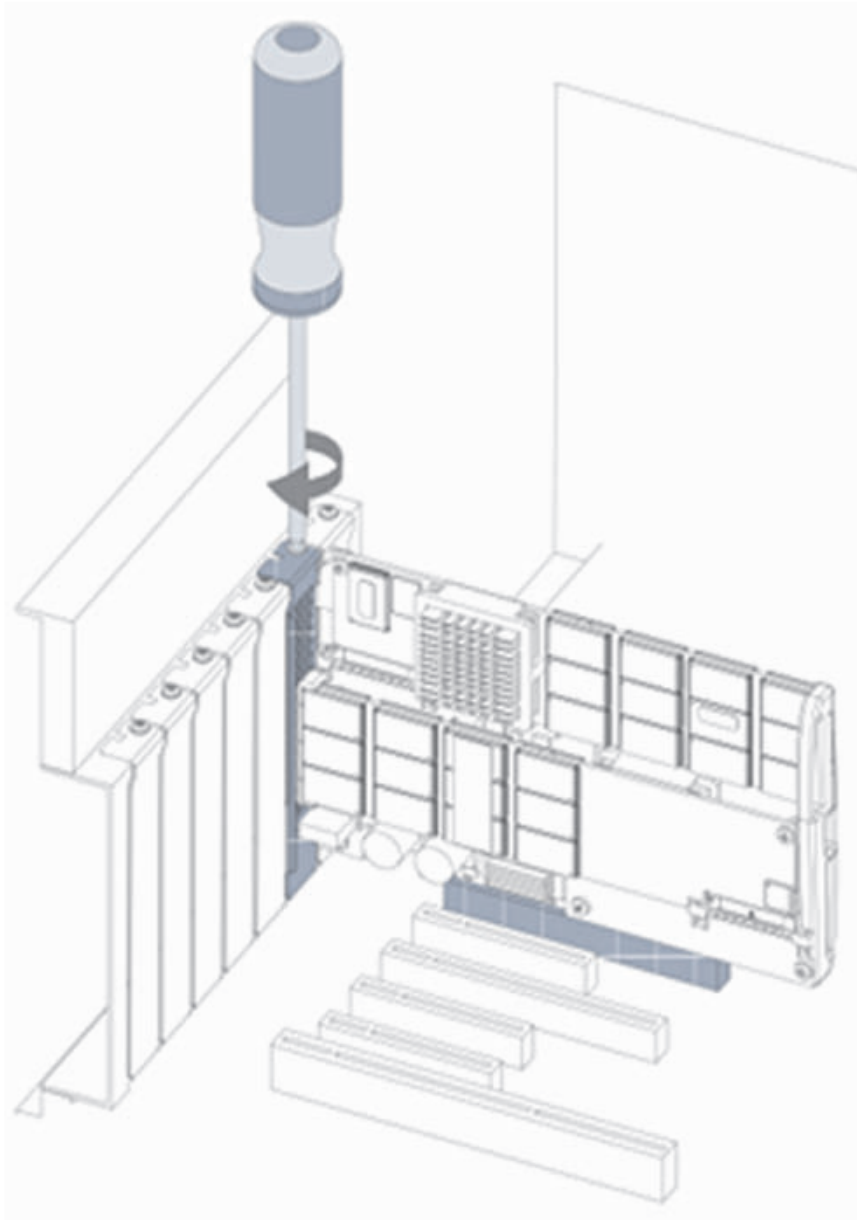

6. To connect an auxiliary power supply to the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo, you need two cables:
 - The cable supplied with your HP IO Accelerator kit
 - A GPU cable supplied with your server platform or offered as a server option

The connectors on the ends of the cables have unique shapes and keying. Connect one end of the cable supplied with your HP IO Accelerator kit into the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo. Connect the other end into the mating receptacle of the server-supplied GPU cable. Then connect the other end of the GPU cable into the auxiliary power source (auxiliary power connection) located on the PCIe card riser or the main server logic board. For the location of the auxiliary power connectors and the server-supplied GPU cable part numbers, see your server documentation or Quickspecs.

7. Replace the server access panel.

8. Connect the power cable and power up the server.
9. If your operating system detects the HP PCIe IO Accelerator ioDrive Duo or HP PCIe IO Accelerator ioDrive2 Duo and prompts you to install a driver for the device, click **Cancel**.

Regulatory compliance notices

European Union regulatory notice

Products bearing the CE marking comply with the following EU Directives:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC
- Ecodesign Directive 2009/125/EC, where applicable

CE compliance of this product is valid if powered with the correct CE-marked AC adapter provided by HP.

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) that are listed in the EU Declaration of Conformity issued by HP for this product or product family and available (in English only) either within the product documentation or at the following HP website (<http://www.hp.eu/certificates>) (type the product number in the search field).

The compliance is indicated by one of the following conformity markings placed on the product:

For non-telecommunications products and for EU harmonized telecommunications products, such as Bluetooth® within power class below 10mW.



For EU non-harmonized telecommunications products (If applicable, a 4-digit notified body number is inserted between CE and !).



Please refer to the regulatory label provided on the product.

The point of contact for regulatory matters is Hewlett-Packard GmbH, Dept./MS: HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, GERMANY.

Korean class A notice

A급 기기 (업무용 방송통신기기)	이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.
-----------------------	---

Acronyms and abbreviations

GPU

graphics processing unit

PCIe

peripheral component interconnect express

Documentation feedback

HP is committed to providing documentation that meets your needs. To help us improve the documentation, send any errors, suggestions, or comments to Documentation Feedback (<mailto:docsfeedback@hp.com>). Include the document title and part number, version number, or the URL when submitting your feedback.