



HP Insight Remote Support

Installation and Configuration Guide

Software Version: 7.1

Document Release Date: September 2014

Software Release Date: July 2014

Legal Notices

Warranty

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

The information contained herein is subject to change without notice.

Restricted Rights Legend

Confidential computer software. Valid license from HP required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Copyright Notice

© Copyright 2014 Hewlett-Packard Development Company, L.P.

Trademark Notices

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

Contents

Contents	3
Preface	7
Document Purpose and Audience	7
Product Overview	7
Related Documents	8
Document Revision History	8
Sign Up to Receive Insight Remote Support Communications	9
HP Support Information	9
We Appreciate Your Feedback!	9
Chapter 1: Understanding Installation Process and Requirements	10
Upgrade Insight Remote Support	10
Fulfill Hosting Device System Requirements	11
Fulfilling Hardware Requirements	11
Number of Monitored Devices Supported	12
Configuration Collection Capabilities	13
Fulfilling Operating System Requirements	15
Supported Microsoft Windows Operating Systems	15
Supported Microsoft Hyper-V Server	16
Supported VMware Operating Systems	17
Supported Citrix XenServer Operating Systems	17
Fulfilling Software Requirements	17
Install Web Browsers	17
Install .NET Framework	18
Perform a Windows Update	18
Fulfilling Access Requirements	18
Fulfill Networking Requirements	19
Fulfill Communication Requirements	19
Configuring Communication from a Web Browser to Insight RS	19
Configuring Communication from the Hosting Device to HP	19
Configure the Hosting Device to Use DNS	20

Verify Hosting Device Connectivity with HP	22
Configuring Communication Between the Hosting Device and Monitored Devices	23
Install SNMP on the Hosting Device	23
Configure Traps	24
Set SNMP Trap Service Startup Type	24
Monitor the Hosting Device	24
Chapter 2: Installing Insight Remote Support for the First Time	25
Download and Install Insight Remote Support	25
Locating Log Files	28
Logging On To the Insight RS Console	28
Known Issue: Cannot Log On To the Insight RS Console as an Administrator	28
Resolve Certificate Warning	29
Internet Explorer	29
Mozilla Firefox	30
Google Chrome	31
Chapter 3: Completing the Setup Wizards	34
Complete the Monitored Device Setup Wizard	34
Configure Your Devices	35
Configure Protocol Access Credentials	35
Discovery Sources	37
Discover Devices	40
Export Health Report	41
Complete the Hosting Device Setup Wizard	42
Receiving Remote Support	42
Optimize My Environment	42
Remote Support Software Updates	42
Contact Information	43
Site Information	44
Registering HP Insight Remote Support	45
Test Connectivity to HP	45
Register With HP	45

Integrate Insight RS with HP Insight Online	46
HP Authorized Channel Partners	47
Chapter 4: Completing Post-Installation Configuration Tasks	48
Verify Hosting Device Health	48
Install the HP Insight Remote Support Patch	48
Verify Warranty and Contract Information	49
Verify Device Status	49
Resolve Monitored Device Status Issues	50
Send Test Events and Generate Collections	52
Clear Status Errors	52
Configure the Backup Settings	53
Set the Backup Target Location	53
Set the Number of Backup Versions	54
Integrate with HP SIM	54
Install the HP SIM Adapter	55
Configure the HP SIM Adapter	55
Enable and Configure Email Notifications	57
Forward Service Events to Another Management Application	59
Enable Operator-level User Authentication	60
Add Device Groups	61
Chapter 5: Restoring from Backup	63
Manually Run Backup Schedules	63
Viewing Successful Backup Information	64
Identifying Backup Failures	64
Restoring Insight RS from Backup	64
Chapter 6: Uninstalling Insight RS	66
Disable Insight Online	66
Close Support Cases	66
Delete Devices from Insight RS Console	67
Disable Connection to HP Insight Online	67
Uninstall the Insight RS Software	68

Cleanup Hosting Device	68
Appendix A: Export and Import of Device Information	69
Export a Bulk CSV File	69
Import a Bulk CSV File	69
Edit a Bulk CSV File	70
Glossary	73
Index	78

Preface

Document Purpose and Audience

This document provides the necessary information to install and configure HP Insight Remote Support (RS) on a Hosting Device and provides steps to troubleshoot the installation.



Important: This document only covers installing and configuring Insight RS on the Hosting Device. Your monitored devices may require additional software components and configuration that needs to be completed separately. Device configuration should be performed prior to the installation of Insight RS. The information necessary to configure monitored devices is described in the *HP Insight Remote Support Monitored Devices Configuration Guide*. If you have not completed the installation and configuration information described in both of these documents, Insight RS may not work properly.

This document is intended for HP's customers, HP business partners, and HP account teams. This document is intended to guide both HP customers and HP support personnel through the installation and configuration of Insight RS.

Product Overview

Insight RS is a software solution that enables reactive and proactive remote support to improve the availability of supported servers, storage systems, and other devices in your data center. Insight RS relies on several HP components and communication between various software applications within the customer enterprise and between the customer enterprise and HP to deliver support services. Software components may be installed on the Hosting Device or on monitored devices depending on their purpose.

Insight RS can be used on its own or can be integrated with HP Systems Insight Manager (SIM).

For more information about Insight RS, go to: <http://www.hp.com/go/insightremotesupport>.



Important: To configure Insight RS correctly, it is essential that you read this document thoroughly *before* proceeding with the installation of Insight RS.

Related Documents

For additional Insight RS documentation, go to: <http://www.hp.com/go/insightremotesupport/docs>.



- *HP Insight Remote Support Release Notes*

This document provides product details and information about which monitored devices and Hosting Devices are supported for use with the Insight RS solution.

- *HP Insight Remote Support Quick Installation Guide*

This document provides a checklist for installing and configuring Insight RS.

- *HP Insight Remote Support Installation and Configuration Guide*

This document provides detailed information about installing and configuring Insight RS.

- *HP Insight Remote Support Monitored Devices Configuration Guide*

This document provides information to configure the devices that will be monitored by Insight RS.

- *HP Insight Remote Support Security White Paper*

This document provides an overview of the security features available in Insight RS.

- *HP Insight Remote Support Upgrade Guide*

This document provides information about upgrading Insight RS to version 7.1.

- *HP Insight Online Getting Started Guide*

This document provides information about the prerequisites for using HP Insight Online, and explains how to use Insight Online to manage your company's HP devices, contracts and warranties.

Document Revision History

Edition	Software Version	Publication Date	Change Summary
1.2	7.1	September 2014	Added information about how to install the ProLiant Gen9 patch.
1.1	7.1	September 2014	Updated Hosting Device OS support notes to make clear that OSs not listed are not supported.
1.0	7.1	July 2014	Initial release.

Sign Up to Receive Insight Remote Support Communications

The HP Insight Remote Support product team uses HP's Support Communication process to communicate important news such as Engineering Advisories, Customer Advisories, Engineering Notices, and Customer Notices.

To sign up to receive Support Communications using HP Subscribers Choice, go to:
<https://h30046.www3.hp.com/SubChoice/country/us/en/signin.aspx>.

When you subscribe, search for *Insight Remote Support*.

HP Support Information

HP recommends you consult the Insight RS documentation to resolve issues. The documentation is designed to guide you through a successful installation and configuration. However, if you need further support for Insight RS, help is available through HP's local Response Centers. For contact details, go to: <http://www.hp.com/go/rstechsupport>.

Before contacting support, you can check if your issue has a solution available. Note that a valid contract and HP Passport log on is required to view issue solution documents.

To view Insight RS issue solutions, complete the following steps:

1. Go to <http://www.hp.com> and browse to **Support** → **Support & troubleshooting**.
2. In the **Find by product** field, type **Insight Remote Support** and click **Go**.
3. In the search results, click **HP Insight Remote Support Next Gen Software**.
4. In the **Most viewed solutions** pane, click **View all** to see the solutions.

We Appreciate Your Feedback!

If you have comments about this document, you can [contact the documentation team](#) by email. If an email client is configured on this system, click the link above and an email window opens with the following information in the subject line:

Feedback on Insight Remote Support, 7.1 Installation and Configuration Guide


Just add your feedback to the email and click send.

If no email client is available, copy the information above to a new message in a web mail client, and send your feedback to techdocs_feedback@hp.com.

Chapter 1: Understanding Installation Process and Requirements

This chapter provides an overview of the Insight RS installation process and identifies the system requirements for the Hosting Device.

Perform the following steps for a first time installation of Insight RS on your Hosting Device.

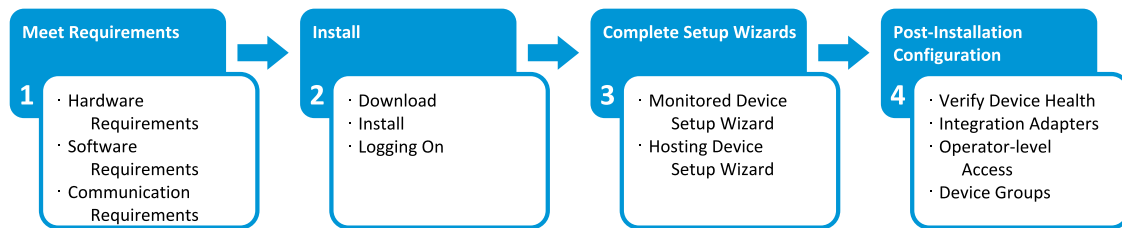

Upgrade Insight Remote Support

If Insight RS is installed on your Hosting Device, see the upgrade instructions provided in the *HP Insight Remote Support Upgrade Guide* at: <http://www.hp.com/go/insightremotesupport/docs>.

Before getting started, review the following table. It lists the functionality that was available in earlier versions of Insight RS but is not currently available in Insight RS 7.1.

Table 1.1 *Insight RS 5.x Functionality Not Available in Insight RS 7.1*

Functionality	Details
Hosting Device	• All Microsoft Windows 2003 operating system versions. Note that this will <i>not</i> be supported on any Insight RS 7.x versions.
Product coverage for monitored devices	• HP Superdome SD-A and SD-B (Insight RSA only) • P9000/HP XP Disk Arrays (Insight RSA only) • HP Enterprise Secure Key Manager (Insight RSA only) • HP Secure Key Manager (Insight RSA only) • HP NonStop servers (Insight RSA only) • IBM AIX servers (Insight RSA only) • Sun Solaris servers (Insight RSA only)
Monitored environment size	• Environments with more than 2,500 devices

Table 1.1 Insight RS 5.x Functionality Not Available in Insight RS 7.1, continued


Functionality	Details
Mission Critical Service Delivery (Insight RSA only)	Capabilities to deliver mission critical services such as: • Revision and configuration management for HP-UX • Assessments including patch, firmware, configuration analysis for HP-UX • HP-UX System Health Check assessments • Availability analysis for HP-UX • TAM-S and CCMon Services • Unreachable Device Notification
Products that will <i>not</i> be supported by any 7.x version	• HP Dynamic Smart Cooling • HP SAN Virtualization Services Platform • HP Modular Array • HP Enterprise Modular Array • HP Raid Array • HP Enterprise Storage Array • M-series Switches (McData)

Fulfill Hosting Device System Requirements

The Hosting Device must meet the hardware and software requirements defined in the *HP Insight Remote Support Release Notes* and summarized in the Hardware, Operating System, Software, Access, and Communication Requirements sections below.

Important: Make sure the system date is set correctly on the Hosting Device.

Important: To protect your privacy, do not use sensitive information in the name of the Hosting Device server. The server name will be visible in the Insight RS Console and HP Insight Online, and can be viewed by HP support and your HP Authorized Channel Partner.

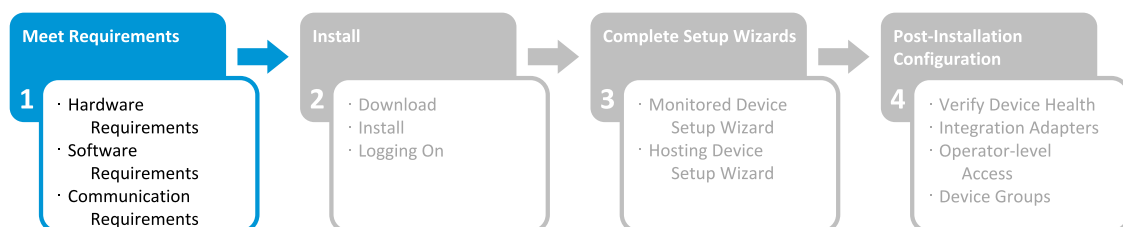

Fulfilling Hardware Requirements

Insight RS is supported only on the following HP ProLiant servers:

- Any HP ProLiant G4 or above (x86 system) with Insight Management Agent or Web-Based Enterprise Management (WBEM) Provider support
- Any HP ProLiant G4 or above (x64 system) with Insight Management Agent or WBEM Provider support

See the *HP Insight Remote Support Release Notes* for more details about Insight Management Agent and WBEM Provider support.

The following tables outline the minimum and recommended Hosting Device specifications:



Important: If you are installing or retaining HP Systems Insight Manager on the same Hosting Device, then the extra resources and requirements needed for this application should be added accordingly. See the *HP Systems Insight Manager Installation and Configuration Guide for Windows* at <http://www.hp.com/go/foundationmgmt/docs> for details.



Important: When running the Hosting Device in a virtual environment, HP recommends increasing the memory and disk space recommendations by 10% when the Virtual Machine (VM) is created. Do this for each VM added to the ProLiant.

Table 1.2 Memory and Storage Requirements to Monitor up to 100 Devices

Memory Size	Free Disk Space
• Minimum 4 GB for new installations • Recommended 6 GB, 8 GB if using HP SIM	• 2 GB for installation • 4 GB for operation¹

Table 1.3 Memory and Storage Requirements to Monitor up to 500 Devices

Memory Size	Free Disk Space
• Minimum 6 GB for new installations • Recommended 8 GB, 10 GB if using HP SIM	• 2 GB for installation • 8 GB for operation¹

Table 1.4 Memory and Storage Requirements to Monitor up to 2,500 Devices

Memory Size	Free Disk Space
• Minimum 8 GB for new installations • Recommended 12 GB, 16 GB if using HP SIM	• 2 GB for installation • 28 GB for operation¹

¹The disk space requirements are affected by the number and type of devices if collections are configured (strongly recommended and in some case a requirement of the contract type). Please see the *HP Insight Remote Support Release Notes* for details.

Number of Monitored Devices Supported

This solution has been optimized to support up to 2,500 monitored devices per Hosting Device. If you need to monitor more than 2,500 devices, HP recommends that you use multiple Insight Remote Support installations, either on multiple physical servers or installed on its own supported virtual machine.

Normally, each physical device counts as one device when calculating the overall maximum device number, e.g. a ProLiant server and its iLO 4 only count as a single device. However, there are some exceptions that need to be taken into account as listed below:

- HP ProLiant Gen8 servers using the embedded iLO 4 capabilities when AHS collections are turned on, count as 5 devices (without AHS collections, each server counts as one device)
- Each networking switch counts as 4 devices
- Each HP StoreVirtual 4xxx Storage Node counts as 30 devices
- Each HP StoreAll Network Storage System counts as 3 devices
- Each Tape Library counts as 4 devices
- Each HP 2000/MSA device counts as 4 devices
- Each HP P6000 Enterprise Virtual Array counts as 8 devices
- Each VMware vCenter server installation counts as 4 devices
- Any device that is configured as part of a SAN collection, adds an additional count of 4 devices

Configuration Collection Capabilities

HP Insight Remote Support 7.1 has the ability to collect configuration information from your monitored devices managed centrally from the Hosting Device.

These services are initiated when the devices register and further collections are automatically scheduled by default. These configuration collections enable the following:

- HP Support to provide improved technical support.
- Data collections provide HP (or your nominated HP Authorized Channel Partner) with information on the monitoring health of each of your devices. This is displayed in Insight Online if you have chosen this option.
- Certain HP Proactive services have a mandatory requirement for remote support monitoring and collections enabled on all devices for the customer to receive all the features and service deliverables provided under the service. This means HP is not obligated to provide delivery of proactive entitlements for disabled collections for these devices until such time as the remote support monitoring and collection functionality is restored.
- Optionally, if during installation or subsequently you have requested HP or your preferred HP Authorized Channel Partner to provide recommendations that may improve your environment.



Important: Dependent on the collection type, additional disk space needs to be allocated to allow configuration collections to operate correctly. Note, all collections have a number that are retained for historic records. Additionally, collections are compressed by a ratio of ten to one when they are retained but consideration for disk space should be given if multiple collections are run at the same time. The only exception is Active Health System (AHS) Collections that are not compressed. Please see ["Collection Types and Disk Space Requirements"](#) on the next page for details on how to calculate the required disk space.

Table 1.5 Collection Types and Disk Space Requirements

	Schedule Frequency (default schedule)	Average size by collection (compressed)	Number of collections retained
Active Health System (AHS) Collection			
Applicable for HP ProLiant Gen8 servers only, independent if the server is using the embedded management capabilities in the iLO 4 or using a diagnostic agent installed on the operating system.			
HP ProLiant Gen8	Weekly	25 MB	3
Server Basic Configuration Collection			
Windows and Linux on HP ProLiant	Monthly	200 Kbytes	5
ESX/ESXi on HP ProLiant	Monthly	75 Kbytes	5
HP-UX	Monthly	800 Kbytes	5
HP Integrity Superdome 2 Onboard Administrator	Monthly	10 Kbytes	5
OpenVMS	Monthly	35 Kbytes	5
Onboard Administrator for c-Class Enclosures	Monthly	20 Kbytes	5
StoreVirtual (P4000) Family Configuration Collection			
HP StoreVirtual 4xxx (P4000 SAN Solutions)	Daily	900 Kbytes	7
Network Configuration Collection			
HP Provision-based Switches (E-Series/ ProCurve)	Weekly	100 Kbytes	5
HP ComWare-based Switches (A-Series/ 3Com)	Weekly	13 Kbytes	5
VMware vCenter Server Collection			
This collection size includes all the configuration information from VMware vCenter and all of its virtual machines. The size varies based on the size and complexity of the cluster being monitored. More virtual machines in the cluster will increase the size.			
VMware vCenter Server	Weekly	5 MB	3
Storage Configuration Collection			
P6000 Enterprise Virtual Arrays	Weekly	250 Kbytes	5
HP StoreFabric SAN switches	Weekly	100 Kbytes	5
HP StoreEasy Storage (Commercial NAS)	Monthly	450 Kbytes	5
HP ESL/HP StoreEver EML/HP StoreEver MSL	Weekly	25 Kbytes	5
HP 2000 (Modular Smart Arrays)	Weekly	100 Kbytes	5

	Schedule Frequency (default schedule)	Average size by collection (compressed)	Number of collections retained
SAN Configuration Collection			
These collections are in addition to the collections listed above but are only required to fulfill the deliverables of a SAN Proactive Services contract.			
HP-UX	Weekly	800 Kbytes	5
OpenVMS	Weekly	35 Kbytes	5
Windows/Linux on HP ProLiant	Weekly	200 Kbytes	5
P6000 Enterprise Virtual Arrays	Weekly	250 Kbytes	5
HP ESL/HP StoreEver EML/HP StoreEver MSL	Weekly	25 Kbytes	5
HP StoreFabric SAN switches	Weekly	100 Kbytes	5
HP StoreVirtual 4xxx (P4000 SAN Solutions)	Weekly	900 Kbytes	7
HP 2000 (Modular Smart Arrays)	Weekly	100 Kbytes	5
Operational Collections			
This collection is manual on request from HP Support.			
Support Data Collection	On demand	10 Mbytes	2

Fulfilling Operating System Requirements

Insight RS7.1 can be installed on a Windows HP ProLiant server or Windows virtual guest on a VMware, Citrix or Hyper-V virtual machine.



Important: HP SIM and Insight RS7.1 support different versions of the Microsoft Windows operating system. If you intend to synchronize Insight RS with HP SIM, make sure the Hosting Device operating system is supported by both HP SIM and Insight RS. For HP SIM operating system support, see the *HP Insight Management Support Matrix* at: <http://www.hp.com/go/insightmanagement/docs>.

Supported Microsoft Windows Operating Systems

The following Microsoft Windows operating system versions are supported with English, French, Italian, German, Spanish, Dutch, Traditional Chinese, Simplified Chinese, Korean, and Japanese International Server. Operating systems are **not** supported unless included in the below list.

- Microsoft Windows Server 2012 R2
 - Standard Edition
 - Datacenter Edition
- Microsoft Windows Server 2012

- Standard Edition
- Datacenter Edition
- Microsoft Windows Server 2008 R2 for x64 including Service Pack 1
 - Standard Edition
 - Enterprise Edition
- Microsoft Windows Server 2008 Service Pack 2 for x64
 - Standard Edition
 - Enterprise Edition
 - Datacenter Edition
- Microsoft Windows Server 2008 Service Pack 2 32-Bit
 - Standard Edition
 - Enterprise Edition
 - Datacenter Edition
- Microsoft Windows Web Server 2008 Service Pack 2 for x86 and x64



Important: Only 64-bit (x64) versions of Microsoft Windows operating systems are supported when used in combination with HP Systems Insight Manager.



Note: Installing or upgrading Insight Remote Support on a Microsoft Windows server configured as a domain controller is not supported.



Note: Support for Microsoft Windows Server 2008, Windows Server 2008 R2 and Windows Server 2012 is limited to the full server version only and is not available for the core version as much of the required functionality is unavailable in this version. This also excludes Windows Server core versions running the Hyper-V role.

Supported Microsoft Hyper-V Server

Hyper-V virtual machines are supported if the Microsoft Windows virtual guest operating system is a supported Hosting Device operating system.

The following Microsoft Windows versions are supported:

- Microsoft Hyper-V Server 2012 R2 and Windows Server 2012 R2 using Hyper-V role
- Microsoft Hyper-V Server 2012 and Windows Server 2012 using Hyper-V role
- Microsoft Windows Server 2008 R2 using Hyper-V role

Supported VMware Operating Systems

The following VMware versions are supported:

- VMware ESX 4.0 and 4.1 including Update versions
- VMware ESXi 4.0, 4.1, 5.0, 5.1 and 5.5 including Update versions

Support is provided on a VMware ESX or ESXi supported HP ProLiant server utilizing 32-bit or 64-bit VMware Guests running Windows Server 2008 or 2012 variants as described in "[Supported Microsoft Windows Operating Systems](#)" on page 15.

Support is provided for the following VMware vSphere capabilities when the Hosting Device is installed in a VMware Windows virtual machine:

- VMware vSphere vMotion when the Hosting Device is moved to another server in the same cluster
- VMware vSphere Fault Tolerance to provide Hosting Device hardware resilience using two servers running in parallel for continuous fault tolerance for an Insight Remote Support installation. For details of this capability please refer to <http://www.vmware.com/products/vsphere/features/fault-tolerance.html>



Important: VMware vCenter features that are not supported on a Virtual Machine based Hosting Device includes VMware Distributed Resource Scheduler (DRS), VMware High Availability (HA), VM cloning, VM copying and Physical to Virtual (P2V) Migrations with the VMware vCenter Converter.

Supported Citrix XenServer Operating Systems

The following Citrix XenServer versions are supported:

- Citrix XenServer 5.5 and 5.6 including Update versions
- Citrix XenServer 6.0, 6.1 and 6.2 including Update versions

Fulfilling Software Requirements



Important: Make sure the system date is set correctly on the Hosting Device.

Install Web Browsers

The following web browsers are supported for Insight RS:

- Microsoft Internet Explorer, versions 8.x, 9.x, 10.x and 11.x
- Firefox, versions 24.x Extended Support Release (ESR) and 29.x Mainstream
- Google Chrome, version 33.x

Install .NET Framework

Microsoft .NET Framework 3.5 or later is required.

To verify your version of the .NET Framework, complete the following steps:

Windows 2008

1. On the Hosting Device, open the **Server Manager**.
2. In the Server Manager, click **Features** and verify that .NET Framework 3.5.x or later is listed in the right pane.
3. If the .NET Framework is not listed, click the **Add Features** link.
4. In the Select Features screen, expand **.NET Framework 3.5.x Features**.
5. Select the .NET Framework 3.5.x check box, and then click **Next**.
6. In the Confirm Installation Selections screen, review the selections and click **Install**.
7. When the installation completes, click **Close**.

Windows 2012

1. On the Hosting Device, open the **Server Manager**.
2. In the Server Manager, click **Local Server** and verify that .NET Framework 3.5.x or later is listed in the Roles and Features section of the right pane.
3. If the .NET Framework is not listed, click **Tasks** → **Add Roles and Features**.
4. On the Select Features screen of the Add Roles and Features Wizard, expand **.NET Framework 3.5.x Features**.
5. Select the .NET Framework 3.5.x check box, and then click **Next**.
6. In the Confirm Installation Selections screen, review the selections and click **Install**.
7. When the installation completes, click **Close**.

Perform a Windows Update

HP recommends performing a Windows Update on the Hosting Device before installing Insight RS. Make sure you restart the Hosting Device after the updates are installed.

Fulfilling Access Requirements

To install Insight RS, you must have *administrative rights* to Microsoft Windows on the Hosting Device.



Important: Due to enhanced security features in Windows 2008 and later, HP recommends that you run the installation as user administrator or as a user in the Administrators group.

Insight RS should only be installed by a user who is logged on to the Hosting Device through the system console or a console-mode Remote Desktop Connection (RDC) session. Do not attempt to install Insight RS through a non-console mode RDC session.

To access the Hosting Device remotely with Windows RDC, use one of the following console-mode switches:

- When connecting from a Windows XP, Windows 2000, or Windows 2003 system, use the `/console` switch:

```
c:\windows\system32\mstsc.exe /console
```

- When connecting from a Vista, Windows 2008, Windows 2012, or Windows 7 system, use the `/admin` switch:

```
c:\windows\system32\mstsc.exe /admin
```

Fulfill Networking Requirements

Make sure the following network requirements are met before installing Insight RS:

- IPv6 is not supported and needs to be disabled on the Hosting Device. Insight RS only supports the IPv4 networking protocol.
- Make sure your Hosting Device has a valid static IP address, and that it is connected to your network. Dynamic IP addresses are not supported.

Fulfill Communication Requirements

There are three communication paths within Insight RS that require settings to your firewall. Make sure that the correct firewall openings are configured to allow communication between the components.

Configuring Communication from a Web Browser to Insight RS

Port 7906 (HTTPS)—Open port 7906 on the Hosting Device to access the Insight RS user interface on the Hosting Device from other systems inside of the same network. Also make sure that Windows firewall allows the connection to port 7906.

Configuring Communication from the Hosting Device to HP

Insight RS communicates directly with the HP Data Center through the firewall or web proxy server (if a web proxy server is in use).

Insight RS supports connecting directly to the Internet or connecting through a proxy server. Insight RS *does not* support proxies using proxy auto-configuration scripts, NTLM (NT LAN Manager) authentication, or Kerberos authentication.

The Insight RS configuration may fail if your firewall or security software filters network communication between the Hosting Device and the HP Data Center. For example, some firewall software, such as WatchGuard firewall, filters some HTTP protocols by default. It may block HTTP redirection, HTTP download of compressed files, etc. In those cases, change the firewall settings so that it does not block *any* HTTP communication between the Hosting Device and the HP Data Center. Verify that it passes any HTTP standard protocol between the Hosting Device and the HP Data Center, so that it meets the communication requirement (TCP 443 outbound with established back).

Configure the following port and alias in your firewall:


- **Port 443 (HTTPS)**—Insight RS communicates over HTTPS/443 to submit incidents to and retrieve warranty and contract information from HP. HTTPS provides encryption for confidentiality of software configuration data collected from the Hosting Device and transferred to HP. HP recommends you configure your firewall before installing Insight RS.
- **services.isee.hp.com**—Set your firewall rules to allow access to HP using the alias `services.isee.hp.com`. All data sent to HP is through an HTTPS connection to the destination `services.isee.hp.com`. This destination is a virtual IP address that is automatically routed to an active server in one of the HP Data Centers. HP strongly recommends configuring only the alias. If your policies require IP addresses, see the *HP Insight Remote Support Security White Paper* for details.

Configure the Hosting Device to Use DNS


HP Insight RS uses redundant data centers to provide resiliency and load balancing. Global Server Load Balancing (GSLB) redirects traffic based on server load and availability. GSLB uses Domain Name System (DNS) to return the IP address of an available server. The Hosting Device must use DNS to communicate with the redundant sites. If you configure IP addresses in the hosts file instead of using DNS, you will lose service when the GSLB redirects traffic.

To configure the Hosting Device to use Domain Name System (DNS), complete the following steps:

1. Log on to the system as a member of the Administrators group.
2. Click **Start** → **Control Panel**.
3. In the Network and Internet category, click the **View network status and tasks** link.
4. Click the link for Connections, for example: **Local Area Connection, Ethernet**.
5. Click **Properties**. The Properties screen appears.

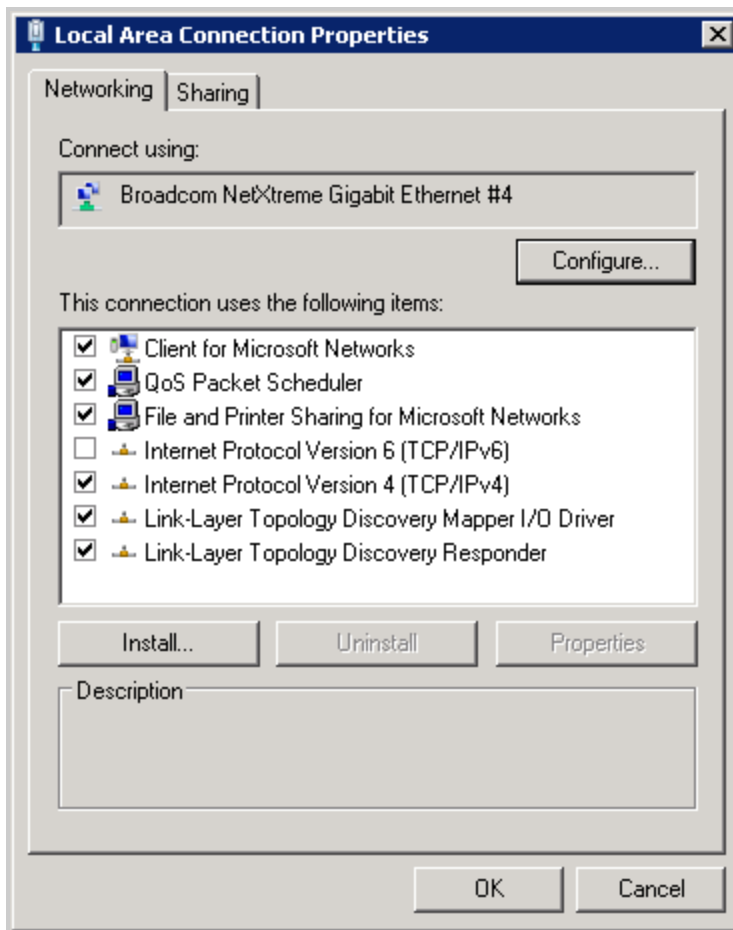

6. Select **Internet Protocol Version 4 (TCP/IPv4)** and click **Properties**. The Internet Protocol Version 4 (TCP/IPv4) Properties screen appears.

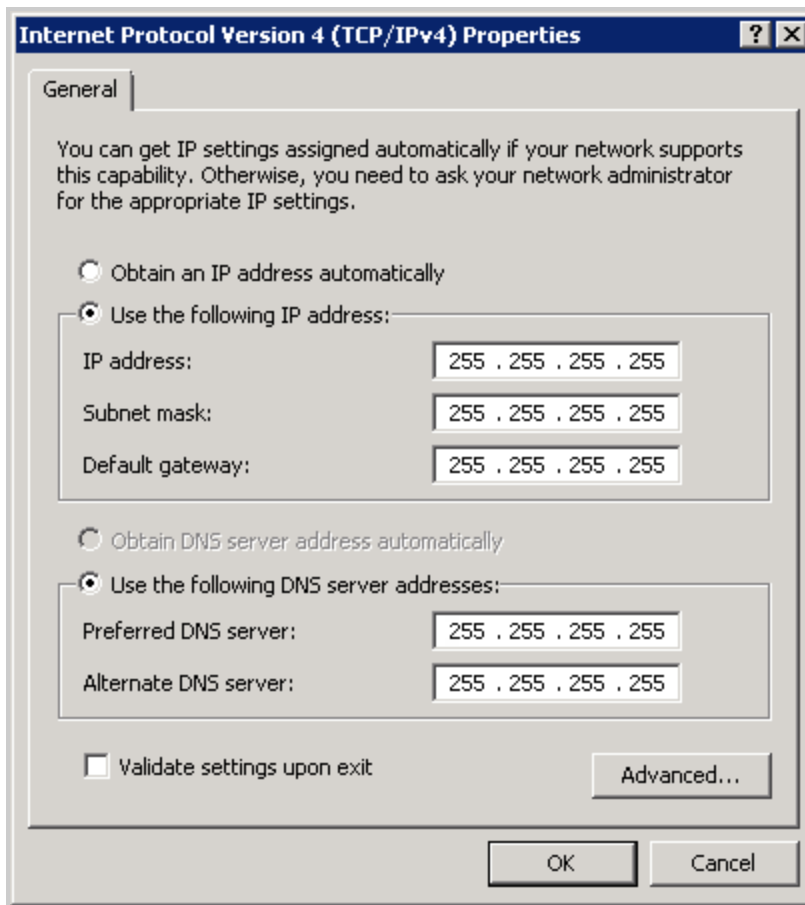

7. Click one of the following options:
 - **Obtain an IP address automatically** (if appropriate for the your environment)
 - **Use the following IP address**
8. Specify the Hosting Device's IP address fields and the DNS server(s) available in your environment.
9. Click **OK**, click **OK**, and then click **Close**. Close the Network and Sharing Center.
10. Verify the settings by performing the nslookup command in a DOS window:


```
nslookup services.isee.hp.com
```

The output should show the IP address of the DNS server you typed.

Verify Hosting Device Connectivity with HP

HP recommends verifying connectivity to the HP Data Center before installing Insight RS to avoid installation failures due to connectivity problems.

During installation, there is no specific connectivity check for Insight RS. The Hosting Device Setup Wizard contains a connectivity test. If there are any problems the first time Insight RS attempts to connect to the HP Data Center, the test will fail. Therefore, verifying connectivity before installation reduces the chance of connectivity failure.

Perform the following connectivity test:



Important: This test does *not* verify that the Hosting Device or Insight RS configurations will actually submit collections or events, but it does validate that the Hosting Device itself can communicate to HP's servers before you continue configuring the Hosting Device.

- `services.isee.hp.com`

If you are using a proxy server, verify connectivity between the Hosting Device and the HP Data Center by using a web browser to connect to the following site:

<https://services.isee.hp.com/version/index.html>. The response should be a version number, for example: `##.##.##.##`.



Note: This version number will *not* match the version of the software which you are installing.

If you are not using a proxy server, verify connectivity to `services.isee.hp.com` by using telnet. From a command prompt, type the command `telnet services.isee.hp.com 443`. You will see a connection established, which confirms connectivity.

Configuring Communication Between the Hosting Device and Monitored Devices

The firewall settings between the Hosting Device and the monitored devices also need to be opened. This could be the Windows firewall and, if one exists, the firewall between the Hosting Device and the monitored devices. See the *HP Insight Remote Support Security White Paper* for the ports needed for your device types.

Depending on your monitored device type, your Hosting Device will collect event and configuration data from the monitored device through one or more of the following: SNMP, WBEM, ELMC, and/or P6000 Command View. The instructions to configure SNMP on the Hosting Device are in "[Install SNMP on the Hosting Device](#)" below. The instructions to configure communications on your monitored device are in the chapter specific to the device in the *HP Insight Remote Support Monitored Devices Configuration Guide*. If you fail to configure these protocols properly, events and configuration collections will not reach the Hosting Device and therefore will not be communicated by the Hosting Device to HP for support.

Install SNMP on the Hosting Device

SNMP is required for Insight RS to monitor device types that use SNMP for communication (see the *HP Insight Remote Support Monitored Devices Configuration Guide* for specific devices). SNMP *must* be installed on the Hosting Device. SNMP is provided by Microsoft and, if not already installed on your Hosting Device, can be installed through the Server Manager.

To install SNMP on your Hosting Device, complete the following steps:

1. On the Hosting Device, open the **Server Manager**.
2. In Server Manager, do one of the following:

- For Windows 2008, go to **Action** → **Add Features**.
 - For Windows 2012, go to **Manage** → **Add Roles and Features**.
3. Scroll down to **SNMP Service**. If it is not selected, select the check box and click **Next**. Follow the wizard to install the service.

Configure Traps

Once you have SNMP installed on your Hosting Device, configure it to receive packets from your monitored devices by completing the following steps:

1. On the Hosting Device, click **Start** → **Administrative Tools** → **Services**.
2. Double click **SNMP Service** to open the Properties window.
3. On the **Traps** tab, make sure a community string is listed, and make sure localhost and 127.0.0.1 exists as a trap destination.
4. On the **Security** tab, choose one of the following options:
 - **Accept SNMP packets from any host**.
 - **Accept SNMP packets from these hosts** and use the **Add** feature to add your monitored devices to the list.
5. Click **OK** to save your changes and close the SNMP Service Properties configuration window.

Set SNMP Trap Service Startup Type

Insight RS requires the SNMP Trap service to start automatically upon boot. Configure the SNMP Trap service by completing the following steps:

1. On the Hosting Device, click **Start** → **Administrative Tools** → **Services**.
2. Double click **SNMP Trap** to open the Properties window.
3. Click the **General** tab.
4. From the **Startup type** drop-down list, select **Automatic**.
5. If the service is not running, click **Start**.
6. Click **OK** to save your changes and close the SNMP Trap Properties configuration window.

Monitor the Hosting Device


Monitor the physical server that the Insight RS software is installed on. The software required to monitor the Hosting Device depends on the ProLiant generation and operating system installed. For information about configuring your Hosting Device for monitoring, see the *HP Insight Remote Support Monitored Devices Configuration Guide*.

Chapter 2: Installing Insight Remote Support for the First Time

This chapter guides you through the Insight RS installation process.

At this point, step 1 below is complete. Perform step 2 to install and configure Insight RS on your Hosting Device.

If a previous version of Insight RS is installed on your Hosting Device and you want to upgrade, see the *HP Insight Remote Support Upgrade Guide*.

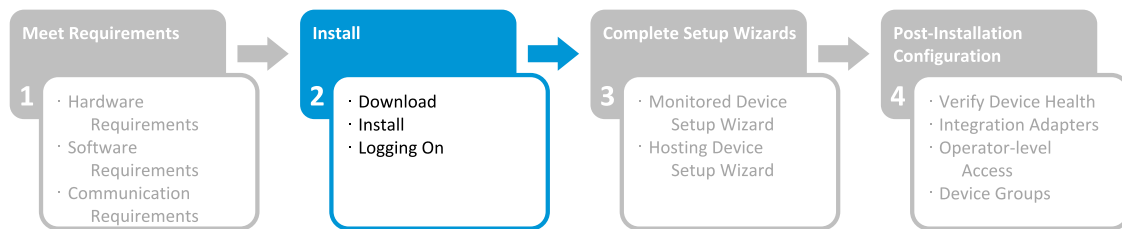

Download and Install Insight Remote Support


Before beginning the Insight RS installation, you need to download the Insight RS software package from the HP Software Depot at: <http://h20392.www2.hp.com/portal/swdepot/displayProductInfo.do?productNumber=REMOTESUPPORT>.

To download Insight RS, complete the following steps:


1. Log on to your Hosting Device using an Administrator account. You must log on as an Administrator or as a user that is a direct member of the Hosting Device's Administrators group.
2. Download the .exe file containing the Insight RS installation files from the HP Software Depot.

To begin the installation, complete the following steps:

1. On the Hosting Device, double-click the self-extracting .exe file that you downloaded from the HP Software Depot. After the files are extracted, the installation wizard launches and performs a prerequisite check.

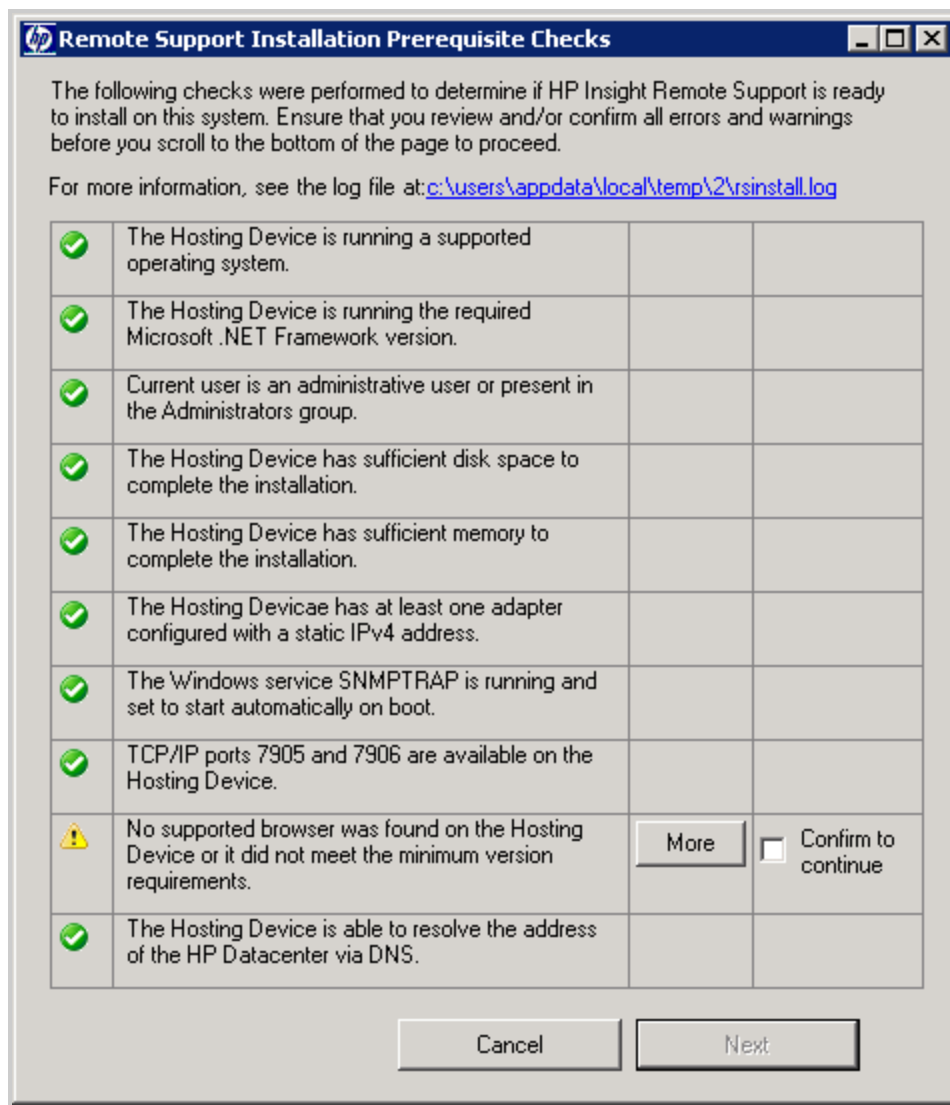

2. If all of the prerequisites are met, click **Next**. If any prerequisites are not met, do one of the following:
 - If the problem is a critical failure, exit the installer, resolve the issue, and then restart the installer.
 - If the problem is a warning, either exit the installer to resolve the issue or check the **Confirm to continue** check box and click **Next**.
3. On the Welcome screen, click **Next**.
4. Review the license agreement, select the **I accept the terms in the License Agreement** check box, and click **Next**. The Destination Folder section of the wizard appears.

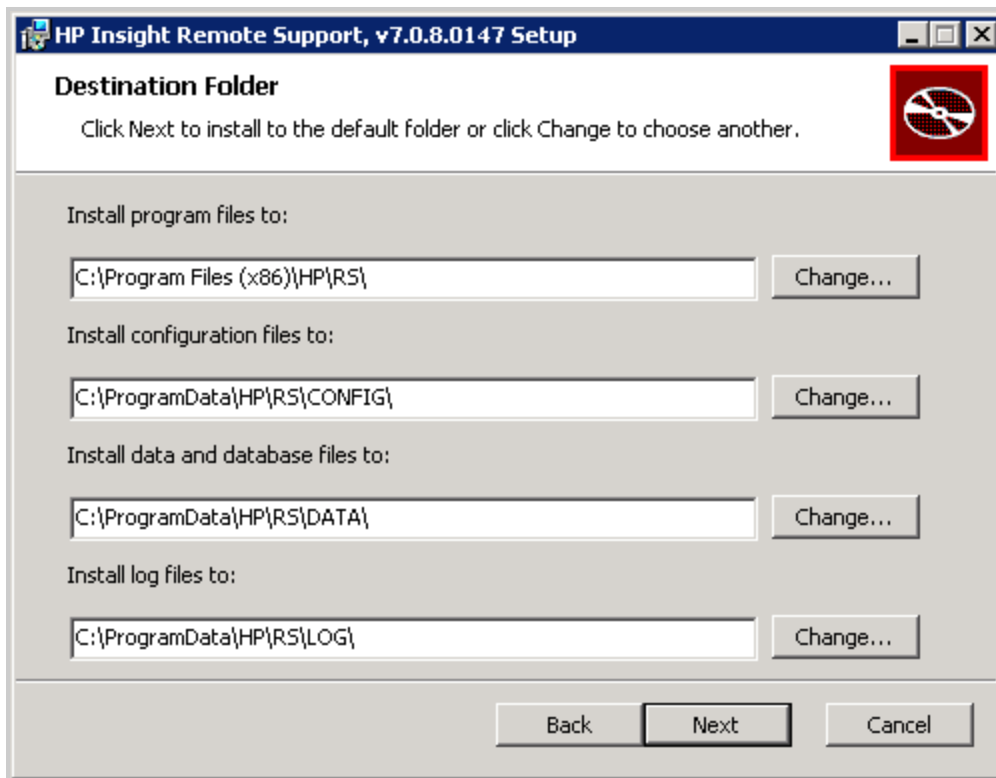

5. On the Destination Folder screen, you can change the default locations for program files, configuration files, database files, and log files. Do one of the following:
 - To install Insight RS to the default destination folders, click **Next**.
 - To install files to other folders, click **Change**, select a new destination folder, and click **OK**. Repeat for any install folder you want to change, and when finished, click **Next**.

Installation directories must be seen by Microsoft Windows as local drives and not network drives. Insight RS cannot be executed from a single shared disk by multiple computers.



Note: If you have a large number of devices to monitor, HP recommends you configure the destination folder for the database and log files to be on different volumes to increase the performance of Insight RS.

6. Click **Install**. When the installation is nearing completion, the following message appears: *Install complete. Waiting up to 600 seconds for the Insight RS Console to become available.*
7. When the installation completes, click **Finish** to exit the installation wizard.



Important: After installation, if the `rsadmin` command is not recognized when run from a command prompt, log off then log back on to Windows. This forces Windows to apply the new modified PATH variable. A reboot is *not* required.

Locating Log Files

If you encounter any problems during installation, view the `rsinstall.log` and the `hprs_msi_install-0.log` files. During installation, these log files are located in the `%TEMP%` folder. After a successful installation, these log files are copied to the `C:\ProgramData\HP\RS\LOG\` folder. This is the default log file location, and it will be different if you chose a different log file location during installation.



Note: The `C:\ProgramData` folder is a hidden folder, so you may need to set your folder options to show hidden folders.

Logging On To the Insight RS Console

After installation, wait a few minutes before attempting to log on to the Insight RS Console to make sure the hosting device is ready for registration. If you try to log on immediately, you will be prompted by a message informing you that the system is starting up and to try again later. If you do this, you must force a refresh on the Insight RS Console (or open a new browser window) to avoid the browser cache.

Point your browser to: `https://<hosting_device_ip_or_fqdn>:7906`.

Log on as an Administrator or as a user that is a direct member of the Hosting Device's Administrators group. The first time you log on to the Insight RS Console you need to log on as an Administrator, but you can enable access for any system account. For more information, see ["Enable Operator-level User Authentication" on page 60](#).

If the account is not an Administrator account you will not be able to access the Administrator Settings, Discovery or Solution Manager screens in the Insight RS Console.

Note that after 30 minutes of inactivity the Insight RS Console times out the session and the user is logged off.



Important: Your web browser language settings determine the language displayed in the Insight RS Console. When connecting to Insight RS Console from a remote system, configure your web browser language settings to match the language you used when you installed Insight RS.

Known Issue: Cannot Log On To the Insight RS Console as an Administrator

Issue: You are using a domain user account. This account is a member of a domain group which in turn is a member of the domain Administrators group. User Account Control (UAC) is turned on.

Example:

You cannot log on to the Insight RS Console with user `MYDOMAIN\myusername` and,

- `MYDOMAIN\myusername` is a member of the group `MYDOMAIN\specialusers`.
- `MYDOMAIN\specialusers` has been added to the `MYDOMAIN\Administrators` group.

- UAC is turned on.

Suggested Action:

Any of the following actions enable you to log on as an Administrator:

- Turn off UAC on the Hosting Device.
- Add your user account to a local Administrators group on the Hosting Device. For example, add MYDOMAIN\myusername to the local HostingDevice\Administrators group.
- Add your user account directly to the domain Administrators group. For example, add MYDOMAIN\myusername to the MYDOMAIN\Administrators group directly.
- Create a new local Administrators account and use that to log on to the Hosting Device. For example, create an Administrative account named HostingDevice\AdminAccount and log on with that.

Resolve Certificate Warning


When you point your browser (Microsoft Internet Explorer, Mozilla Firefox, or Google Chrome) to the Insight RS Console, a certificate error message appears. To resolve the security warning for your Internet browser, complete the following steps:



Note: The desktop shortcut installed on the Hosting Device points to the localhost. If using the desktop shortcut to start the Insight RS Console, change the properties of the shortcut to use the Hosting Device's IP address or FQDN for the certificate steps below to work correctly.


Internet Explorer

1. Click the **Continue to this website (not recommended)** link.
2. In the address bar, click **Certificate Error**. The Untrusted Certificate window appears.

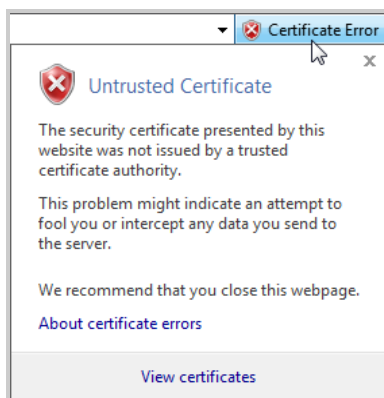

3. Click **View certificates**.
4. In the Certificate dialog box, click **Install Certificate**.
5. In the Certificate Import Wizard, click **Next**.
6. Click the **Place all certificates in the following store** option.


7. Click **Browse**. The Select Certificate Store window appears.

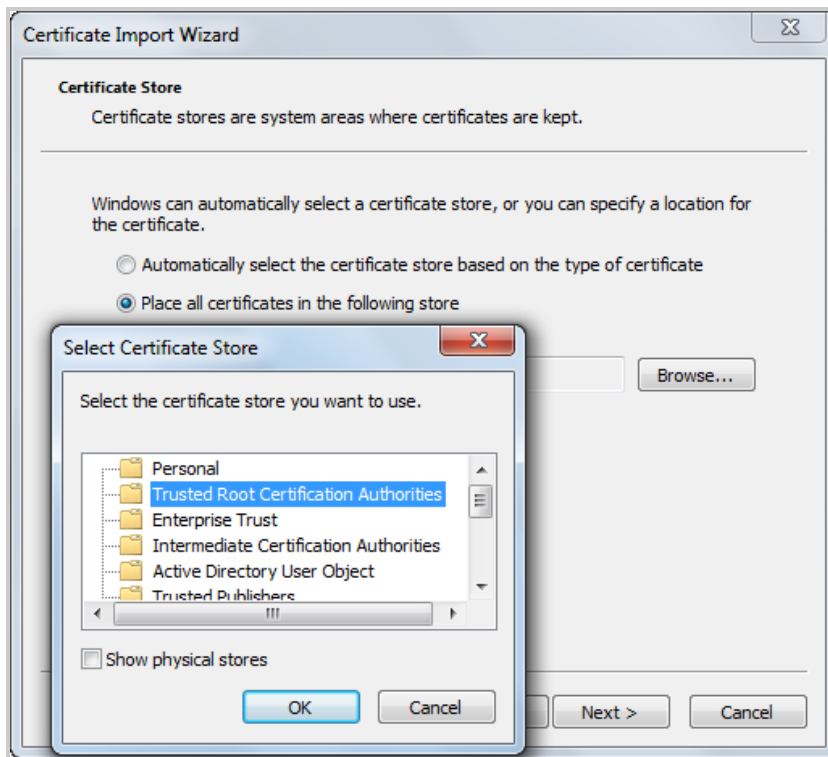

8. Select **Trusted Root Certification Authorities** and click **OK**.
9. Click **Next** and **Finish**. The Security Warning dialog box appears.
10. Click **Yes** to confirm you want to install the certificate.

Mozilla Firefox


1. Click the **I Understand the Risks** link to expand the section and click **Add Exception**.
2. In the Add Security Exception dialog box, type `https://<hosting_device_ip_or_fqdn>:7906/` into the Location field or continue to the next step if the information is correct.

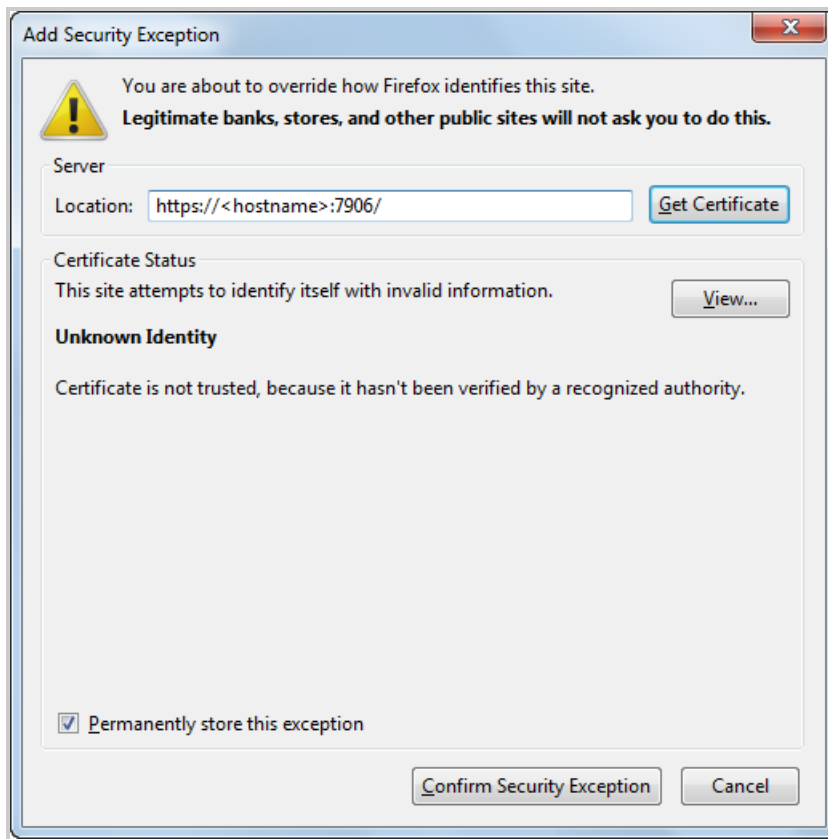

3. Click **Confirm Security Exception** to resolve the security warning.

Google Chrome


1. Click **Proceed Anyway** on the Chrome warning, then click the “lock with the red X” icon in the menu bar, and choose “Certificate information”.

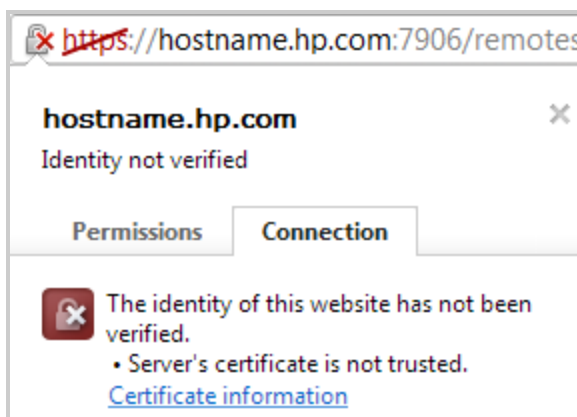


2. In the Certificate dialog box, click the **Details** tab and then click **Copy to File**. The Certificate Export Wizard appears.
3. Proceed through the wizard and save the certificate. When complete, click **OK** to close the

Certificate dialog box.

4. Use the Microsoft Management Console to import the certificate as a trusted root certificate:
 - a. On the Start menu, click **Run**, type **MMC**, and then click **OK**. Microsoft Management Console opens with an empty console.
 - b. From the console, choose **File** → **Add/Remove Snap-in**.
 - c. In the **Available snap-ins** pane, select **Certificates** and click **Add**.
 - d. In the Certificates snap-in dialog box, select how you want to manage certificates and click **Finish** and then click **OK**.
 - e. In the left menu, select **Trusted Root Certification Authorities**. In the Object Type pane, right-click **Certificates** and choose **All Tasks** → **Import**.

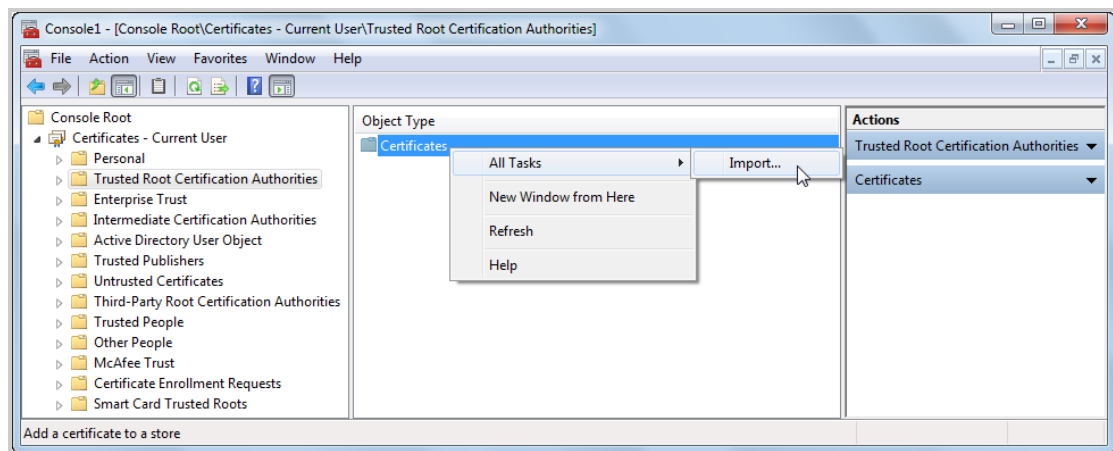

The Certificate Import Wizard appears.

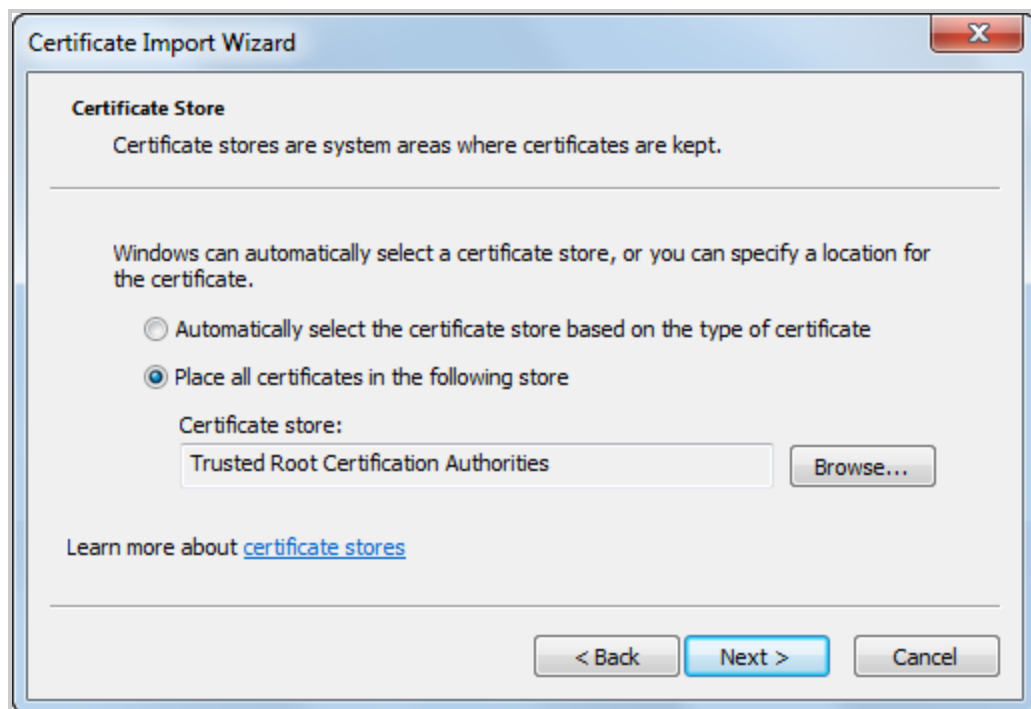


- f. In the Certificate Import Wizard, import the certificate you saved in step 3. Place the certificate in the Trusted Root Certification Authorities store.
- g. Click **Finish**.

Chapter 3: Completing the Setup Wizards

This chapter guides you through the Insight RS setup process.

At this point, steps 1 and 2 below are complete. Perform step 3 to complete the setup wizards.

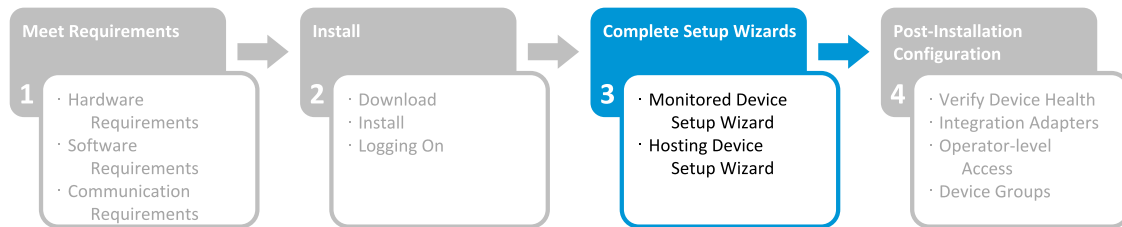

When you first open the Insight RS Console, you must complete the Setup Wizards. There are two Setup Wizards: the Monitored Device Setup Wizard checks the readiness of the devices you want to monitor, and the Hosting Device Setup Wizard allows you to enter default settings about your environment. HP recommends you complete the Monitored Device Setup Wizard first and let it run in the background while you complete the Hosting Device Setup Wizard.

Access the Insight RS Console through a web browser at: `https://<hosting_device_ip_or_fqdn>:7906`. Log on to the Insight RS Console using an Administrator account. You can log on to the Insight RS Console using any system account, but if the account is not an Administrator account you will not be able to access the Administrator Settings, Discovery or Solution Manager screens in the Insight RS Console.



Important: The Setup Wizards are not available in the main menu after you complete them. You can update the settings elsewhere in the Insight RS Console if necessary. If you need to access the wizards again, use the following URL: `https://<hosting_device_ip_or_fqdn>:7906/remotesupport/command/viewWizards/`.

On the HP Insight Remote Support Setup Wizard screen, you can:

- Complete the Monitored Device Setup Wizard to discover the devices you want to monitor. For more information, see ["Complete the Monitored Device Setup Wizard" below](#).
- Complete the Hosting Device Setup Wizard to configure the Hosting Device. For more information, see ["Complete the Hosting Device Setup Wizard" on page 42](#).

Complete the Monitored Device Setup Wizard

The Monitored Device Setup Wizard checks whether Insight RS can communicate with devices in your environment based on the configured credentials and verifies the devices are ready to be monitored by HP Insight Remote Support. The Monitored Device Setup Wizard can be left unattended for large environments. The results can be viewed in the final screen of the wizard or on the Discovery screen in the Insight RS Console.

The left pane displays each step in the wizard and highlights the current step in green. Complete the information in each step and click **Next** to continue. Return to any step in the wizard by clicking **Previous** until you reach the desired step.

Insight RS checks every device's warranty and contract to make sure it has a valid HP warranty, CarePack or contract. If a device has no HP warranty or contract, the monitoring health indicator in the Insight RS Console will be red. If this is red, then no service events will be analyzed or sent to HP.

Configure Your Devices

Before your devices can be monitored by Insight RS, they need to be configured to communicate with the Hosting Device. For information about configuring your specific device type, refer to the *HP Insight Remote Support Monitored Devices Configuration Guide* at: <http://www.hp.com/go/insightremotesupport/docs>.

Configure Protocol Access Credentials

On the Discovery Access Credentials screen, configure protocol credentials for the devices in your environment.



Note: This information can be modified on the **Discovery** → **Credentials** tab.

Each device in your environment requires protocols that Insight Remote Support uses to communicate with the device. Each of these protocols must have associated credential information.

During discovery, protocol credentials are used to gather information about the device such as warranty and contract information. If the protocol credentials are not supplied, the device may be discovered, but all of the relevant information about the device may not be detected, preventing Insight Remote Support from monitoring the device.

See the *HP Insight Remote Support Monitored Devices Configuration Guide* for the protocols required for each device type.



Important: Set up discovery credentials *before* attempting device discovery. If devices are discovered without protocol credentials, then the warranty and contract information is not detected by Insight Remote Support.

Priority	Type	Summary	Name
No data available in table			

To add a new protocol credential, complete the following steps:

1. Experienced users can choose a protocol directly from the Select and Configure Protocol drop-down list, but less experienced users can filter the protocols to determine the necessary protocol for a given device type. To filter the list of available protocols, do one of the following:

- To choose from a list of all available protocols (regardless of device), select **All Device Types** in the Select Type drop-down list.
- To filter the list of available protocols, select the type of device for which you want to configure access credentials in the Select Type drop-down list. You can also identify a sub device type in the Select Sub-Type drop-down list to further filter the list of protocols.

The Select and Configure Protocol drop-down list is filtered according to your selection(s).

- From the Select and Configure Protocol drop-down list, select the appropriate protocol.
- Click **New**. The New Credential dialog box appears with fields for the protocol you selected.

Priority: 1 ▼

Type: Username Password Credential ▼

Port: 5989 ☒ Use default

Named Credential: None ▼

Username:

Password: **Confirm Password:**

ADD

New Credential ✕

- Complete the fields in the New Credential dialog box.



Note: The available fields depend on the protocol that you select.

The following table describes the different fields you will see when working with different protocols:

Credential Field	Description
Priority	Select a priority from the drop-down list. Credentials with a higher set priority will be attempted before credentials with a lower set priority. For example, a set of credentials with a priority of 1 will be executed first during the discovery process.
Type	Select a credential type from the drop-down list. For example, Username Password Credential, Certificate Credential, Anonymous Credential. Selecting a new credential type changes the available fields in the window.
Port	Contains the default port number.

Credential Field	Description
Use default	Clear this check box if you do not want to use the default port number. Type the appropriate port number in the Port field.
Named Credential	If you have created a named credential for the device type, you can select it here. Insight Remote Support populates the access fields with the login details specified in the named credential. By default, the protocol uses the Named Credential that is assigned to the selected device. If no named protocols exist, then <i>None</i> is selected in the Named Credential drop-down list.
Username	Type the username used to access the device type.
Password	Type the password used to access the device type.
Confirm Password	Re-type the password you typed in the Password field.
File Upload	Click the Browse button to locate the certificate and upload it.
Certificate Alias	If the certificate you are identifying for access has an alias, type the alias here.

- After completing the fields, click **Add**.

The credential is added to the list of credentials for the protocol.



Note: Each protocol can have multiple credentials configured. Select a protocol in the Select and Configure Protocol drop-down list to view the list of credentials for that protocol.

- Repeat steps 1 - 5 to add additional protocol credentials.
- To update or delete a protocol credential, select the credential in the table and modify the information in the Existing Credential dialog box.
- Click **Next** to continue to the next screen of the wizard.

Insight Remote Support saves the credential information.

Discovery Sources

On the Discovery Sources screen, configure which devices on your network you want discovered.

Device discovery identifies devices on your network to be monitored by Insight Remote Support.

There are three ways to tell Insight RS which devices on your network to discover, and they can be used individually or in combination: IP addresses, Windows domains, and local networks.



Important: If you have more than 30 devices on your network, depending on your network speed, it may take a considerable time to discover all of the devices at once. Unless you have a very small network, HP advises that you specify discovery settings before starting device discovery.

To configure discovery sources, complete the following steps:

1. Add IP addresses to be discovered. You can discover a single device by typing its IP address or discover multiple devices by typing a range or list of IP addresses.

To discover devices by IP address, complete the following steps:

- a. Click the **IP Addresses** pane.
- b. Click **New**. The IP Address dialog box appears.

- c. Do one of the following:
 - To discover a single monitored device, type the device's IP address in the Address field.
 - To discover a range of devices, select the **Address Range** option. In the Start Address field, type the IP address of the first device in the range. In the End Address field, type the IP address of the last device in the range.
 - To discover a list of devices, select the Address List option. In the Comma-Separated List box, type the IP addresses of the devices separated by commas.
- d. Click **Add**.
The IP address or addresses appear in the table. IP address ranges appear in the Start Address and End Address columns. Single IP addresses display only in the Start Address column.
2. Add Windows domains to be discovered. You can discover devices by typing a Windows domain name and log on credentials.

To discover devices by Windows domain, complete the following steps:

- a. In the main menu, select **Discovery**.
- b. Click the **Sources** tab.
- c. Click the **Windows Domains** pane.
- d. Click **New**. The Windows Domain dialog box appears.

- e. In the Domain field, type the domain name.
- f. In the User field, type the username of the domain administrator.
- g. In the Password field, type the domain administrator's password.
- h. Click **Add**.

The domain and the administrator's user name appear in the table.

- i. Make sure the Discover check box is selected for the domain.
3. Add local networks to be discovered. You can discover devices by typing local network information and subnet information. Note that discovering a local network can take a long time for large environments.

To discover devices by local network, complete the following steps:

- a. In the main menu, select **Discovery**.
- b. Click the **Sources** tab.
- c. Click the **Local Networks** pane.
- d. Click **New**. The Local Network dialog box appears.

- e. Do the following:
 - o In the Network Address field, type a network address.
 - o In the Subnet Mask field, type the subnet mask.
- f. Click **Add**.

The local network and subnet information appears in the table.

- g. Make sure the Discover check box is selected for the local network.

4. Click **Next**.

Discover Devices


On the Discover Devices screen, start discovery of the devices you want Insight Remote Support to monitor.



Note: You can add a large number of devices and pre-configured data such as contact and site information to Insight Remote Support by using the bulk upload functionality. For more information, see ["Export and Import of Device Information" on page 69](#).

To begin discovery, complete the following steps:

1. After configuring your protocol credentials and discovery source(s), click **Start Discovery**. Insight Remote Support displays the progress:



As discovery runs, Insight Remote Support adds discovered devices to the All Devices table. A device's Status column shows whether or not the device is ready to be monitored.

If you exit the Discovery screen, discovery continues in the background.

2. Review your discovered device(s). Discovered devices display in sets of 10. If Insight Remote Support discovers more than 10 devices, use the buttons at the bottom of the table to navigate to the other sets of devices.

If a device displays an error icon (❌) for its status, hover over the icon to view more details about why discovery was not successful for the device.



Note: The results table shows all devices that have been discovered by Insight RS, not just devices that have been discovered with the current settings, so you may see more devices



than expected with your current settings.

Discovery Status: Stopped

Number of discovery operations to be run during this cycle: 2

Number of discovery operations completed during this cycle: 2

All Devices

Search:

Device Name	Product	Product Category	Status
hostname1.hp.com	SERVER		✓
hostname2.hp.com	SERVER		✓
hostname3.hp.com	DISK_ARRAY		✓
hostname4.hp.com	DISK_ARRAY		✓
hostname5.hp.com	DISK_ARRAY		✗
hostname6.hp.com	DISK_ARRAY		✓
hostname7.hp.com	DISK_ARRAY		✓
hostname8.hp.com	COMPUTER		✗
hostname9.hp.com	COMPUTER		✗
hostname10.hp.com	SWITCH		✗

Showing 1 to 10 of 13 entries

First

Previous

1

2

Next

Last

1. Click **Finish** to close the wizard.

Verification is complete, and successfully discovered devices are ready to be monitored.

Export Health Report

You can export a health report of the devices in your environment to determine how many are ready to be monitored by Insight RS, and also let HP or your Channel Partner to determine the effort it would take to configure your devices and deploy Insight RS in your environment.

To export a health report, complete the following steps:

1. In the main menu, select **Devices**.
2. Below the devices table, click **Export Report**.
3. Open or save the report.

The report pulls the device information from the local database and lists all of the devices covered by your discovery settings and shows why they may or may not have been successfully discovered. You can share the report with your HP representative or Channel Partner to determine the effort required to configure the devices in your environment and deploy Insight RS.

Note that when this report is generated from the Monitored Device Setup Wizard, Insight RS has not yet connected to HP, so will not be able to populate the report with warranty and contract information. Run the report from the Discovery or Devices screens in the Insight RS Console to see warranty and contract information.

Complete the Hosting Device Setup Wizard

The Hosting Device Setup Wizard guides you through the initial configuration of Insight Remote Support. In the Hosting Device Setup Wizard you set up default contact, site, and Channel Partner information, connect to HP, and connect Insight Remote Support to Insight Online.

The left pane displays each step in the wizard and highlights the current step in green. Complete the information in each step and click **Next** to continue. Required fields are marked by an asterisk (*). Return to any step in the wizard by clicking **Previous** until you reach the desired step.

Receiving Remote Support

On the Receiving Remote Support screen, enable notifications and configure software updates.

Complete the following sections:

Optimize My Environment

Through Insight Remote Support, you can allow (or deny) HP and its partners to contact your organization with products and services recommendations, pricing, and delivery information.

In the **Choosing to optimize my environment** section, do one of the following:

- To allow HP and HP Authorized Resellers to contact your organization, select the **Yes, I consent to having HP or my HP authorized reseller contact me to discuss optimizing my environment** check box.
- To deny HP and HP Authorized Resellers from contacting your organization, clear the **Yes, I consent to having HP or my HP authorized reseller contact me to discuss optimizing my environment** check box.

Choosing to optimize my environment

☒ Yes, I consent to having HP or my HP authorized reseller contact me to discuss optimizing my IT environment. [more info](#)



Note: Click the **more Info** link to read details about the different communications HP and HP Authorized Resellers send to clients.

This setting can be updated at any time on the **Application Settings** → **Settings** screen.

Remote Support Software Updates

Choose how you want to receive software updates. The following table describes the available options:

Option	Action
Automatically Download and Install	Select Automatically Download and Install to automatically download and install a group's packages. This is the default setting, and is the recommended setting because new product support and product improvements are installed automatically.

Option	Action
Automatically Download	Select Automatically Download to automatically download a group's packages without installing them. These packages can be installed on the Downloaded Version tab.
Manually Apply	Select Manually Apply to manually download and install a group's packages. Install packages on the Available Version tab.

This setting can be updated at any time on the **Application Settings** → **Software Updates** screen.

Contact Information

On the Contact Information screen, configure the default contact for your environment. This contact is assigned to newly discovered devices.

Additional contacts, or updates to the default contact, can be configured on the **Company Information** → **Contacts** screen.

Important: Provide correct contact details

To optimize the handling of incidents, it is important that customers supply and maintain complete, accurate, and up-to-date contact information in HP Insight RS for the monitored devices. Once an incident is automatically submitted and logged, HP uses the specified contact information for further troubleshooting or for initiating on-site intervention, which always involves contacting the customer.



HP will make reasonable efforts to establish contact as per the specified information, however if no contact is possible HP shall not be liable for any delays resulting from incomplete, inaccurate, or out-of-date information; unavailability of the designated customer contact; or any other related causes outside of HP's responsibility.

Make sure that all your contact information for all monitored devices is correct and kept up to date at all times. This will enable HP to promptly react to any reported incidents, speed up troubleshooting and expedite necessary corrective actions in the quickest possible time.

To add a default contact, complete the following steps:

1. Complete the following fields:



Note: Required fields are marked by an asterisk (*).

Field	Action
Company Name	Type the company name.
First Name	Type the contact's first name.
Last Name	Type the contact's last name.

Field	Action
Email Address	Type the contact's email address. The 🌐 character denotes that emails will be sent in the chosen language if the Email Adapter is enabled. See "Enable and Configure Email Notifications" on page 57 .
Preferred Language	Select the contact's language from the drop-down list.
Primary Phone Number	Type the contact's primary phone number.
Alt Phone Number	Type the contact's secondary phone number (optional).
Special instructions for support delivery	Type special support delivery instructions in this free form text field. Text typed here is included with service events and is visible to people working cases that Insight RS submits to HP. Example of a message that could be typed in this field: <i>If you get an event from my site on New Year's Day, call my pager instead, at +1-555-555-5555.</i>

2. Click **Next**.

The system creates the default contact.

Site Information

On the Site Information screen, configure site details for your environment. The information configured here is used as the default site information for your environment and is assigned to newly discovered devices. Keep the site information current because this specifies the location where support services will be delivered.

Additional sites can be configured on the **Company Information** → **Sites** screen.



Important: Make sure you type the correct address details, as the service is delivered to the address details provided.

To add a default site, complete the following steps:

1. Complete the following fields:



Note: Required fields are marked by an asterisk (*).

Field	Action
Site Name	Type the site name.
Address Line 1	Type the site's address. Use Address Line 2 if necessary.
City	Type the site's city.
State/Province	Type the site's state or province.
Postal Code	Type the site's postal code.

Field	Action
Country	Select the site's country from the drop-down list.
Time Zone	Select the time zone from the drop-down list.

2. Click **Next**.

The system creates the default site.

Registering HP Insight Remote Support

On the Registering HP Insight Remote Support screen, configure your proxy settings, test your connectivity to HP, and register your Hosting Device with HP.

Complete the following sections:

Test Connectivity to HP

Test your connection to HP to make sure the Hosting Device can communicate with HP. If your company uses a web proxy server, configure the web proxy settings so Insight Remote Support can connect to HP through your web proxy server.

To configure your web proxy settings and test your connection to HP, complete the following steps:

1. Select the **Use Web Proxy to access Internet** check box to activate the fields.
2. Complete the following fields:
 - Web Proxy Server
 - Web Proxy Port
 - Web Proxy User Name
 - Web Proxy Password
3. Click **Test Connection**.



Note: Clicking **Test Connection** saves the web proxy settings.

Register With HP

Registration confirms that the Hosting Device can reach HP. If for some reason HP cannot be reached, Insight Remote Support will continue to retry registration until HP can be reached. If you prefer to manually attempt to register, return to the Register Hosting Device screen of the Hosting Device Setup Wizard and click **Register with HP**.

To register your Hosting Device with HP, complete the following steps:

1. Click **Register With HP**.

The status of your registration appears next to the **HP Registration Status** field. Once your registration status is *Registered*, the **Register With HP** button grays out so you can only register once, and the **Next** button enables.

If registration fails, return to the previous section and test your connection to HP.

Insight Remote Support is registered with HP and can send information to HP.

2. Click **Next**.

Integrate Insight RS with HP Insight Online

On the Integration with HP Insight Online screen, connect to HP Insight Online, if desired.

HP Insight Online provides one stop, secure access within the HP Support Center (<http://www.hp.com/go/HPSC>) portal to product and HP support information personalized to your IT environment with warranty or HP contractual services. You can link Insight Remote Support to HP Insight Online and get automatic updates of device health, service events, and associated support cases. Integrating with HP Insight Online automatically associates any devices monitored by HP Insight Remote Support with the HP Passport account in HP Insight Online. The device details displayed in HP Insight Online reflect the configuration information and event details transmitted automatically from HP Insight Remote Support.

Additional users can be configured to have a shared view of these devices within HP Insight Online. If you configure HP Authorized Channel Partners, those Channel Partners will also be able to log on to HP Insight Online with their own HP Passport account to view your device information. If you selected in the Receiving Remote Support screen to have your HP Authorized Channel Partner contact you to discuss optimizing your IT environment, then the device information available in HP Insight Online will also be viewable to your preferred HP Authorized Channel Partner.



Note: There is no communication from HP Insight Online to HP Insight Remote Support.

To enable Insight Remote Support to send data to HP Insight Online, complete the following steps:

1. Type your HP Passport user name and password in the provided fields.

HPSC Registration Status:	Not Registered
HP Passport User Name:	
HP Passport Password:	



Note: If you do not have an HP Passport Account, click **Do not have a HP Passport Account?** and create one.

These settings can be updated at any time on the **Application Settings → HP Insight Online** screen.

2. Click **Register With HP Insight Online**.

The HPSC Registration Status changes to Registered, and Insight Remote Support uses your HP Support Center credentials when sending data to HP Insight Online.

3. Click **Next**.

HP Authorized Channel Partners

On the HP Authorized Channel Partners screen, set your channel partner.

The default HP Authorized Service Partner and HP Authorized Reseller/Distributor will be used for any newly discovered devices. Additional HP Authorized Resellers and Service Partners can be specified for each device, if required, on the **Company Information** → **Channel Partners** screen once this setup is complete.

The HP Authorized Channel Partners screen contains the following sections:

- **Default HP Authorized Service Partner** – HP Authorized Channel Partner who sells HP products and services, and is also authorized to deliver services and support on behalf of HP.
- **Default HP Authorized Reseller/Distributor** – HP Authorized Channel Partner who sells HP products and services.
- **Default Installer** – The installer of HP Insight Remote Support.


If your product sales and support services are delivered by Hewlett Packard, leave HP as the default channel partner and click **Next**.

To add default channel partner information, complete the following steps in each section:

1. Click the Partner ID option.
2. Type your partner identification number into the **Partner ID** field. The Partner ID uniquely identifies a partner as an HP Authorized Partner during the HP partner registration process.
3. Click **Check ID**. The partner ID is verified and details about the partner appear. Make sure the information about the partner is correct.
4. Repeat steps 1 - 3 for each section.
The system saves the default channel partner information.
5. Click **Next**.

Chapter 4: Completing Post-Installation Configuration Tasks

This chapter guides you through optional configuration tasks you may want to perform after installing Insight RS. Perform these tasks after the Hosting Device Setup Wizard device discovery is complete.

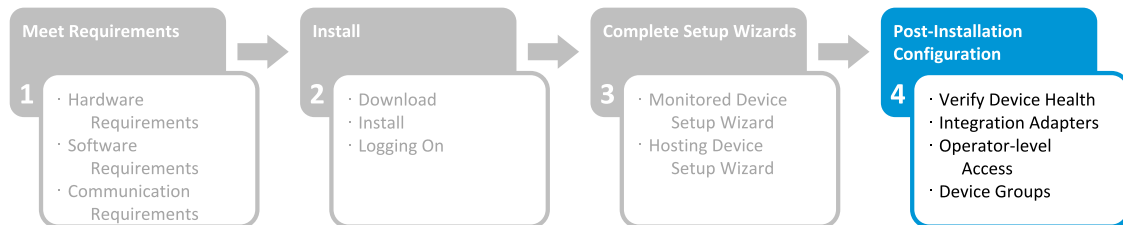


Verify Hosting Device Health

Make sure the installation is successful by confirming your Hosting Device is healthy. A green check mark appears at the top of the screen when the Hosting Device is healthy.

To verify the Hosting Device's health, complete the following steps:

1. Log on to the Insight RS Console.
2. Confirm a green check mark appears next to **Hosting Device Health** at the top of your screen.



3. If the green check mark does not appear, select click the **Hosting Device Health** link to find out which component is not functioning correctly. See the Online Help for more information about resolving health issues.

Install the HP Insight Remote Support Patch

HP Insight RS 7.1 or later includes the ability to install new product support and new intelligent analysis rules through the Software Updates screen in the Insight RS Console. The latest patch version is 7.1.0.57.

For full details about what's included in patch version 7.1.0.57, see the *HP Insight Remote Support Release Notes*.

If your Automatic Update Level is set to **Automatically Download and Install**, the patch will be installed automatically. If your Automatic Update Level is set to **Manually Apply** or **Automatically Download**, you must manually install the patch.

To manually install the Insight Remote Support patch, complete the following steps:

1. In the Main Menu, select **Administrator Settings**.
2. Click the **Software Updates** tab.
3. Click **Check For New Update**.
4. Click the **HP Insight Remote Support Patch** link in the table.
5. Click the **Available Version** tab in the lower pane.
6. Click **Install**. The patch downloads and installs onto the Hosting Device.
7. Log off and log on to the Insight RS Console. It may take a few minutes for the logon screen to reappear.

Verify Warranty and Contract Information

Entitlement information is required to route your managed system's hardware events to the appropriate HP support program based on your contract and support level. Without the necessary and correct entitlement information, events from your managed systems cannot be received and the systems cannot be supported.

In Insight RS every device has its entitlement checked to see if it is in HP warranty, CarePack or contract and Insight RS displays that device's entitlement. If the device has no HP entitlement the health status indicator will be red, and no incidents will be analyzed or sent to HP.

To verify a device's warranty and contract information, complete the following steps:

1. In the main menu, select **Devices**.
2. Locate the device and click the device name. The Device Details screen appears.
3. Click the **Device** tab.
4. Expand the Hardware section and verify the Acquired Serial Number and Acquired Product Number are correct for your device.

With the exception of EVA, P4000 and multivendor devices, the serial number and product number should be returned correctly from your device during discovery. For other devices, if these values are not correct, check the protocol credentials assigned to the device on the **Credentials** tab. If the credentials are incorrect, fix them and rediscover the device.

5. Expand the Warranty & Contract section and verify the Support Type and Support Identifier are correct for your device. These values are returned from HP based on the device's Serial Number and Product Number, so make sure those values are correct first before modifying these values. If these values are not correct, enter the correct values.

The device will use the new warranty and contract information.

Verify Device Status

After discovery completes, select **Devices** in the main menu. Check that the device information has been discovered correctly. If it has not, verify your credential settings and run discovery again for that device.



Note: Discovery will always assign any valid credentials to a device that have been configured



in the discovery settings, even if you have manually assigned invalid credentials to the specific device on the device's Credentials tab.

After discovery, an overview of the device status appears. The Status column shows whether Insight RS can monitor your devices. Verify the Status column shows a success icon (✓). If the Status column shows an error icon (✗), then there are one or more issues with the device's warranty and contract, monitoring and collections information, or its eligibility to receive remote support.

Insight RS checks every device's warranty and contract to make sure it has a valid HP warranty, CarePack or contract. If a device has no HP warranty or contract, the monitoring health indicator in the Insight RS Console will be red. If this is red, then no service events will be analyzed or sent to HP.

If an error icon appears for any devices, hover your pointer over the icon, and a dialog box appears showing an overview of the status issue.

The screenshot shows the 'Discovery Status: Stopped' section of the Insight RS console. It includes buttons for 'EXPORT REPORT', 'SHOW CONFIGURATION OPTIONS', and 'START DISCOVERY'. Below these, it states 'Number of discovery operations to be run during this cycle: 2' and 'Number of discovery operations completed during this cycle: 2'. A table titled 'All Devices' lists five devices with columns for Device Name, Product, Product Category, and Status. The Status column for the first device (hostname1.hp.com) shows a red error icon. A tooltip is displayed over this icon, showing the 'Overall Status' as 'Eligible: Yes', 'Monitoring & Collections: FAILURE', 'Warranty & Contract: Not Entitled', and 'Enabled: No'. The table footer indicates 'Showing 1 to 5 of 5 entries' and navigation links for 'First', 'Previous', '1', 'Next', and 'Last'.

Device Name	Product	Product Category	Status
hostname1.hp.com		SERVER	✗
hostname2.hp.com		SERVER	
hostname3.hp.com		DISK_ARRAY	
hostname4.hp.com		COMPUTER	
hostname5.hp.com		SERVER	

Overall Status:
 Eligible: Yes
 Monitoring & Collections: FAILURE
 Warranty & Contract: Not Entitled
 Enabled: No

To resolve device status issues, see ["Resolve Monitored Device Status Issues" below](#).

Resolve Monitored Device Status Issues

Insight RS checks every device's warranty and contract to make sure it has a valid HP warranty, CarePack or contract. If a device has no HP warranty or contract, the monitoring health indicator in the Insight RS Console will be red. If this is red, then no service events will be analyzed or sent to HP.

To resolve the status issue, complete the following steps:

1. In the main menu, select **Devices**.
2. On the **Device Summary** tab, the Status column shows the overall health of the device and should match the status on the discovery screen. View the Warranty & Contract, Monitoring & Collections, and Eligible columns for areas where errors occurred.

Device Summary Warranty & Contract Monitoring & Collections Delivery									
Show	25	entries	Search:						
☐	Status	Device Name	Product	OS Name	Warranty & Contract	Monitoring & Collections	Open Service Events	Eligible	Enabled
☐	✓	hostname1.hp.com	ProLiant DL360 G3	Linux – Red Hat Enterprise Linux	✓	✓	None	✓	Yes
☐	✓	hostname2.hp.com	StorageWorks MSA2324i		✓	✓	None	✓	Yes
☐	✗	hostname3.hp.com	NSM2060	SAN/iQ	✗	✗	None	✓	Yes
☐	✓	hostname4.hp.com	ProLiant ML350 G3	Windows Server	✓	✓	None	✓	Yes
Showing 1 to 4 of 4 entries							First Previous 1 Next Last		

3. Check the following if any columns show the error icon:

- **Warranty & Contract**—This column shows if a device has valid warranty and contract information. If an error icon appears, this can mean the device does not have a warranty contract, that there was a problem with the Serial Number or Product Number, or that this information was not gathered from the device correctly during discovery.

In Insight RS every device has its entitlement checked to see if it is in HP warranty, CarePack or contract and Insight RS displays that device's entitlement. If the device has no HP entitlement the health status indicator will be red, and no incidents will be analyzed or sent to HP.

To resolve the error, complete the following steps:

- Click the device name and on the **Device** tab expand the Hardware section.
- Check the values for the Serial Number and Product Number. If they are not correct, check the protocol credentials assigned to the device on the **Credentials** tab. If the credentials are incorrect, fix them and rediscover the device.

For some device types, such as EVA and P4000 devices, the Serial Number and Product Number need to be entered manually. Enter the values in the Override Serial Number and Override Product Number fields, and click **Save Changes**.

- Return to the **Devices** → **Warranty & Contract** tab, select the device and click **Actions** → **Refresh Warranty & Contract**. If the success icon does not appear, return to first step and verify your Serial Number and Product Number.
- **Monitoring & Collections**—This column shows if device monitoring and collections are working correctly. To resolve the error, complete the following steps:
 - Click the **Monitoring & Collections** tab and hover over the error icon in Monitoring, Basic Collection, or SAN/Storage Collection column for details or click the error icon for more information about why the failure occurred.
 - Resolve the failures shown in the information window.
 - If the device still displays an error icon in one of its status columns, the failures may need to be cleared. See ["Clear Status Errors" on the next page](#) for more information.
 - **Eligible**—This column shows whether the device is eligible for Insight RS. If the device is not eligible for remote support, then it cannot be monitored.

Send Test Events and Generate Collections

For each device you register with Insight RS, send a test event and generate a collection to Insight RS to verify the device is communicating with the application.

View the *HP Insight Remote Support Monitored Devices Configuration Guide* to learn how to send test events and generate collections for specific devices.



Important: When viewing events and collections in the Insight RS Console, any time displayed converts to the time zone set in the web browser. This is to make sure users see the event timing using their local time zone. If there are discrepancies between the event time and the event processed time, then check the time and time zone setting on the monitored device. If the time is set externally from a time server or via DHCP, make sure these are connected and set to the appropriate time. The time discrepancy will not affect the efficient delivery of service by HP or an HP Authorized Service Partner, as the Hosting Device time is used as a reference for service delivery.


Clear Status Errors

Even when collections and events have been processed successfully, an error icon (❌) may appear under the Monitoring & Collections column for a device on the **Devices** → **Device Summary** screen. An error icon indicates that a failure occurred during event or collection processing. Even after an event or collection succeeds, the error icon persists until errors associated with the device are cleared.

To remove the error icon from the display so that a success icon (✅) appears instead, all errors associated with monitoring or collections must be cleared.

To clear status errors, complete the following steps:

1. From the **Devices** screen, select the **Monitoring & Collections** tab.
2. For the device in question, click the error icon under the **Monitoring**, **Basic Collections** and/or **SAN/Storage Collection** column to get more information. A window appears listing previous and current uncleared failure and success messages for the device. Use the scroll bar on the right to view the entire window contents.

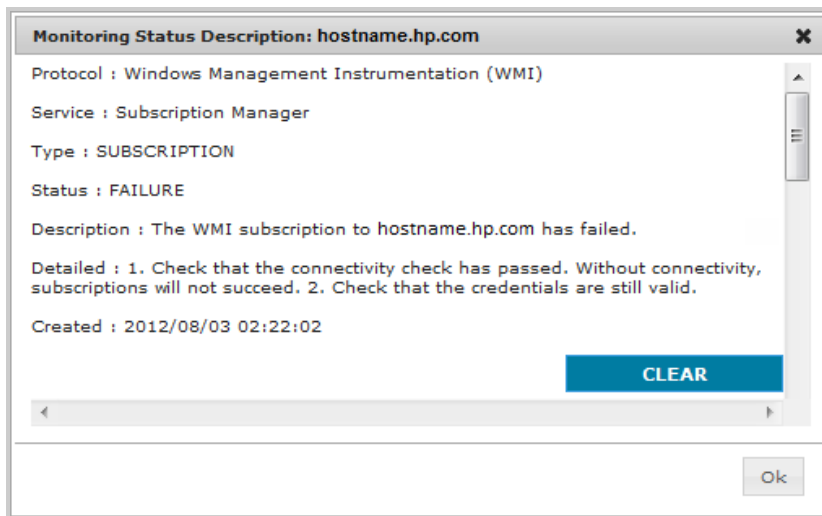

- For each failure message, click **Clear**. All of the failure messages must be cleared before the error icon will be replaced by a success icon.



Note: If only Unknown status messages remain in the window after the failure messages are cleared, a gray box icon (■) appears instead of a success or error icon.

Configure the Backup Settings

If you want to change the default settings, configure the backup target location and number of backups to retain.

Set the Backup Target Location

The default target location is: C:\ProgramData\HP\RS\DATA\backup

HP recommends that you change the target location to a non-default storage device or network share so that backups are not stored on the same device as the original data. HP also recommends that you set the Insight RS and system-level backup target locations to a device that contains removable media or to a remote network share so that backups can be physically stored off-site for disaster-recovery purposes.

To change the backup target location, run the following command from a command prompt:

```
rsadmin backup -now -target \\home\backups
```

This command runs the backup immediately and directs the backup to the network share: \\home\backups.

Because the **-now** option is used, the network share has to be accessible at the time this command is run. If the **-now** option is not used, it is not required that the share location be accessible at the time the command is executed, but it must be accessible whenever the next scheduled or commanded backup is run.

Set the Number of Backup Versions

The default number of backups Insight RS retains, and the recommended setting, is 2.

To change the number of backups retained, run the following command from a command prompt:

```
rsadmin backup -versions <number_of_backups>
```

where <number_of_backups> is the number of backup data sets to be retained at the target location.

Integrate with HP SIM

If you want to share information about your devices between HP SIM and Insight RS, install the HP SIM Adapter through the Insight RS Console. If HP SIM was installed on the Hosting Device *before* installing Insight RS, then the HP SIM Adapter is automatically installed. If HP SIM was installed *after* installing Insight RS, then the HP SIM Adapter needs to be manually installed.

Integration with HP SIM will synchronize devices and credentials from HP SIM to Insight RS. Service Events will synchronize from Insight RS to HP SIM. Since HP SIM only accepts Service Events from known devices, the device needs to be discovered in HP SIM for Insight RS to be able to synchronize Service Events to HP SIM.



Important: You may need to enter additional credentials, such as RIBCL, in Insight RS that are not available in HP SIM. Additionally, values such as Serial Numbers and Product Numbers that you manually entered in HP SIM must be manually entered in Insight RS as well.

For information about supported versions of HP SIM, see the *HP Insight Remote Support Release Notes* at: <http://www.hp.com/go/insightremotesupport/docs>.

For information about installing HP SIM, see the *HP Systems Insight Manager Installation and Configuration Guide for Windows* at: <https://www.hp.com/go/foundationmgmt/docs>.



Important: When using the HP SIM Adapter, make sure to discover devices in HP SIM rather than in Insight RS so the devices are synchronized between the two applications.




Important: HP SIM must be installed on the Hosting Device *before* installing the HP SIM Adapter. If HP SIM is *not* installed, the HP SIM Adapter installation will fail and you will not see the HP SIM Adapter on the Administrator Settings screen.

Before you can enable the HP SIM Adapter pane, you must install the HP SIM Adapter:

Install the HP SIM Adapter

To install the HP SIM Adapter, complete the following steps:

1. Log on to the Insight RS Console.
2. In the main menu, select **Administrator Settings**.
3. Click the **Software Updates** tab.
4. Click the **HP Systems Insight Manager (HP SIM) Adapter** link in the table.
5. Click the **Available Version** tab in the lower pane.

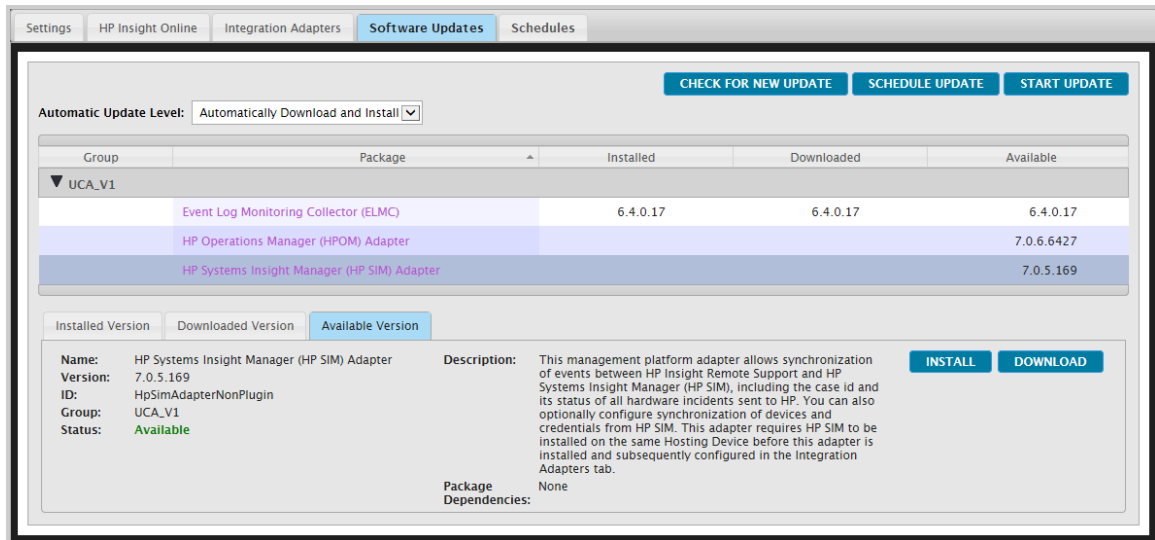

6. Click **Install**. The HP SIM Adapter downloads and installs onto the Hosting Device.
7. When the installation is complete, select the **Integration Adapters** tab to enable and configure the HP SIM Adapter. See ["Configure the HP SIM Adapter" below](#) for more details.



Important: To install updates to the HP SIM Adapter through the **Software Updates** tab, you must first disable the HP SIM Adapter on the **Integration Adapters** tab.

The HP SIM Adapter installs and is ready to be enabled and configured.

Configure the HP SIM Adapter

If your company uses HP SIM, configure Insight Remote Support to share information with HP SIM through an included adapter.

To install the HP SIM Adapter, see ["Install the HP SIM Adapter" above](#).



Important: You may need to enter additional credentials, such as RIBCL, in Insight RS Console that are not available in HP SIM. Additionally, values such as Serial Numbers and Product Numbers that you manually entered in HP SIM must be manually entered in Insight RS Console as well.

To configure the HP SIM Adapter, complete the following steps:

1. In the main menu, select **Administrator Settings**.
2. Click the **Integration Adapters** tab.
3. Click the **HP SIM Adapter** heading to expand the HP SIM Adapter pane.

The pane is divided into three sections: HP SIM Connection Information, Additional Settings, and Perform Manual Device Synchronization.

HP SIM Adapter (Disabled)

☐ **Enable HP SIM Adapter**

HP SIM Connection Information:

HP SIM Username:

HP SIM Password:

Additional Settings:

☐ Automatically sync new/deleted devices from HP SIM

☐ Automatically sync new/deleted credentials from HP SIM

☐ Forward service events to HP SIM

☐ Perform Manual Device Synchronization (This action will be initiated on save)

SAVE ADAPTER SETTINGS

4. Select the **Enable HP SIM Adapter** check box.
5. In the HP SIM Connection Information section, type the HP SIM username and password.



Tip: Use an HP SIM-specific account with a password that does not expire. This will help you to avoid issues if the account is tied to an individual person's account that could be disabled or locked out.

6. In the Additional Settings section, select one or more of the following check boxes:

Check Box	Description
Automatically sync new/deleted devices from HP SIM	Select this check box to automatically a) add any devices that have been added to HP SIM to Insight Remote Support and b) disable any devices from Insight Remote Support that have been deleted from HP SIM. Note that devices in Insight Remote Support are not deleted, but are disabled instead. The devices will still appear in the Insight RS Console. For new devices, the site and contact info in HP SIM is not exchanged with Insight RS.

Check Box	Description
Automatically sync new/deleted credentials from HP SIM	Select this check box to automatically a) add any protocol credentials that have been added to HP SIM to Insight Remote Support and b) delete or change any credentials in Insight Remote Support that have been deleted or changed in HP SIM.
Forward service events to HP SIM	Select this check box to forward any service events relating to HP SIM-specific devices to HP SIM.

7. Select the **Perform Manual Device Synchronization** check box if you need to manually synchronize your devices. When you select the check box, the following fields appear:

☒ **Perform Manual Device Synchronization** (This action will be initiated on save)

☐ **Include Credentials**

☒ **All devices from HP SIM**

☐ **Single device from HP SIM**

IP Address / FQDN:

SAVE ADAPTER SETTINGS

Do the following:

Option	Description
Include Credentials	Select this check box to transfer any changes made to protocol credentials in HP SIM to Insight Remote Support.
All devices from HP SIM	Click this option to transfer all device changes made in HP SIM to Insight Remote Support.
Single device from HP SIM	Click this option to transfer specified device changes made in HP SIM to Insight Remote Support. Add the IP Address / FQDN for the device you want to synchronize with HP SIM.

8. Click **Save Adapter Settings**.

Insight Remote Support saves the HP SIM Adapter configuration. **(Enabled)** now appears next to the HP SIM Adapter to indicate it is enabled.

Enable and Configure Email Notifications

Insight Remote Support sends email notifications when certain system events occur. You can enable or disable some or all of these notifications.



Note: HP highly recommends that you enable the Email Adapter and, at the minimum, select the following notifications: *Case Opened*, *Application Failure*, *Entitlement Expiration*, and *Device Change*.

To enable email notifications, complete the following steps:

1. In the main menu, select **Administrator Settings**.
2. Click the **Integration Adapters** tab.
3. Click the **Email Adapter** heading to expand the Email Adapter pane.

▼ Email Adapter (Disabled)

☐ **Enable Email Notifications**

Notification States:

- ☐ Case Opened (Email default and backup contacts for device)
- ☐ Case Closed (Email default and backup contacts for device)
- ☐ Collection Sent (Email default and backup contacts for device)
- ☐ Application Failure (Email default host device contact)
- ☐ Software Management Updates (Email default host device contact)
- ☐ Entitlement Expiration (Email default and backup contacts for device)
- ☐ New Device Discovered (Email default and backup contacts for device)
- ☐ Host Device Capacity Exceeds % of the Maximum Number of Devices (Email default host device contact)

Mail Server Settings:

Sender's Email Address:

SMTP Server Name:

SMTP Port:

Encryption:

☐ Send test email to default Host Device contact (This action will be initiated on save)

SAVE ADAPTER SETTINGS

4. Select the **Enable Email Notifications** check box to activate the Notification States check boxes.
5. Under Notifications States, select one or more of the following check boxes:

Notification State	Description
Case Opened	Default and backup contacts notified when a case is opened in the HP data center. Note that service events generated by test events are never opened so an email will not be sent for test events.
Case Closed	Default and backup contacts notified when a case is closed in the HP data center. Emails are also sent for service events generated by test events.
Collection Sent	Default and backup contacts notified each time data collected about a device is sent to HP.
Application Failure	Default contact notified when Insight Remote Support fails.
Software Management Updates	Default contact notified whenever there is a new software update available.

Notification State	Description
Entitlement Expiration	Default and backup contacts notified when a warranty or contract is about to expire. Notifications are sent at 90, 60, 30, and 0 days before expiration.
New Device Discovered	Default and backup contacts notified when a new device is discovered.
Hosting Devices Exceeds %	Default and backup contacts notified when the Hosting Device's capacity exceeds the specified percentage of devices that Insight RS can support.



Note: Case Opened, Case Closed, Collection Sent, Entitlement Expiration, and Device Change notifications are sent to the user identified as the default Insight Remote Support contact, as well as any configured backup contacts. Application Failure and Software Management Updates notifications are sent to the user identified as the Hosting Device contact.

6. Under Mail Server Settings, type the sender's email address, and the SMTP server name and port. The sender's email address prevents the anonymous email from being classified as spam by your email system.
7. From the Encryption drop-down list, do one of the following:
 - If your company does not use an encryption method, select **None**.
 - If your company uses an encryption method, select the appropriate encryption type: Secure Sockets Layer (SSL) or Transport Layer Security (TLS).
8. Select the **Send test email to default Hosting Device contact** check box.
9. Click **Save Adapter Settings**.



Important: To install updates to the Email Adapter through the **Software Updates** tab, you must first disable the Email Adapter on the **Integration Adapters** tab.

Insight Remote Support saves the email notification settings. (Enabled) appears in the Email Adapter pane's heading. The Hosting Device contact receives a test email. If the contact does not receive the test email, return to the Email Adapter pane and check the mail server settings for errors.

Forward Service Events to Another Management Application

The SNMP Service Event Adapter allows you to forward a hardware event to another management application when a service event is sent to HP. The SNMP Service Event Adapter only forwards events that need intervention to stop failures, which have already automatically been logged at HP.

The information in the receiving application is identical to the information displayed in the Insight RS Console.

Insight RS sends the SNMP trap in the SNMP MIB Type 3 format. You must configure your receiving application to accept this format.



Note: You need to format the SNMP trap to be readable in the receiving application.

To forward service events to another server, complete the following steps:

1. In the main menu, select **Administrator Settings**.
2. Click the **Integration Adapters** tab.
3. Click the **SNMP Service Event Adapter** heading to expand the Service Event Adapter pane.

4. Select the **Enable Service Event Adapter** check box.
5. To add a server, click **New**. Server name and Port fields appear.
6. Type the server name and port in the fields.
7. To make sure the settings are correct, click **Send Test Trap**. A test SNMP trap is sent to the specified management application server where its receipt can be checked.
8. Click **Save Adapter Settings**.

The system saves the server, and SNMP events received by Insight RS will be forwarded to the server where its arrival can be checked.

Enable Operator-level User Authentication

Password management for the Insight RS Console is managed at the operating system level. Users that are members of the operating system's Administrators group are automatically granted *administrator-level* access in Insight Remote Support. Automatic administrator-level authentication cannot be disabled.

You can choose to grant *operator-level* access to any user authenticated by the operating system, regardless of group membership. This functionality can be enabled or disabled.



Note: Administrator-level users can access all areas of Insight Remote Support, including Administrator Settings, Discovery, and Solution Manager. Operator-level users cannot access Administrator Settings, Discovery, Solution Manager or the setup wizards, but have access to the rest of Insight Remote Support.

To enable operator-level access, complete the following steps:

1. In the main menu, select **Administrator Settings**.
2. Click the **Settings** tab.
3. In the User Authentication pane, select the check box to enable automatic operator-level user authentication:

User Authentication

You can choose to grant operator-level access to any user authenticated by the operating system by selecting the check box.

Administrator-level users can access all areas of Insight Remote Support, including Administrator Settings.

Operator-level users cannot access the Administrator Settings, of Discovery, but have access to the rest of Insight Remote Support.

☐ **Allow all users authenticated by the operating system to access the Insight RS Console as operators, regardless of group membership**



Note: You can clear this check box at any time to disable automatic operator-level user authentication.

4. Click **Save Settings**.

Automatic operator-level user authentication is enabled or disabled.

Add Device Groups

You can group the devices in your environment into logical categories to make administration of settings easier.

Insight RS contains default device groups created when devices are discovered. Devices belonging to these groups are automatically assigned to these device groups. Create additional device groups to further group your devices based on your individual needs.

To create a custom device group, complete the following steps:

1. In the main menu, select **Device Groups**.
2. In the List of Device Groups pane, click **Add New Group**.
3. In the Create New Device Group pane, type a name for the group in the Device Group Name field.
4. In the Custom Delivery ID field, type the optional alphanumeric value if one has been supplied to you by your HP representative. This field allows you to assign a Custom Delivery ID to a group of devices rather than assigning the ID to devices individually.
5. Click **Save Group Name**. The system creates and displays the new device group in the List of Device Groups pane. The assigned devices table appears where you can assign devices to the new device group.
6. Assign devices in the assigned devices pane. The default view shows devices not assigned to the

device group. To show additional devices, click the **Not Assigned to this Device Group** or **All Devices** options. To show devices in a specific device group, select a device group from the **Filter by device group** drop-down list. To search for a specific device, type the device name into the **Search** box. The table displays the devices based on your filter and search criteria.

- To add a device, select the check box next to the device in the devices table.
- To remove a device, clear the check box next to the device in the devices table.

7. Click **Save Devices**.

The system creates and displays the device group in the List of Device Groups pane.

Chapter 5: Restoring from Backup

Insight Remote Support provides a built-in capability to backup the Insight RS application and associated data and configuration files. The built-in Insight RS backup capability is intended to provide non-disruptive backups of the running Insight RS system using minimal resources.

The backup files can be used to restore Insight RS configuration information if the application encounters a problem and needs to be reinstalled, to recover data if it is lost, or to revert to a previous configuration as the result of a support call.

The Insight RS backup capability does not replace an OS-level backup utility such as Windows Backup. Direct restoration of Insight RS data from a system-level backup using a third party utility like Windows Backup may not be successful if the backup is taken while Insight RS is running. This is because such utilities cannot maintain time-consistency of data, particularly database data, while executing the backup if the files being backed up are concurrently being updated by the program. As a result, such utilities may be designed to block themselves or block running programs, causing user interfaces to freeze during backup. Otherwise they may capture backups that are internally inconsistent and that may not actually be useful when restored because of those inconsistencies. The built-in Insight RS backup is designed to address these issues by quickly capturing a time-consistent snapshot of its own data without disrupting its own operations.

You may wish to use a standard backup utility to backup the entire system that hosts Insight RS or to copy the Insight RS backup data sets to another location.

For information about using the backup capability, see ["Manually Run Backup Schedules" below](#).

For information about restoring from backup, see ["Restoring Insight RS from Backup" on the next page](#).

Insight Remote Support also provides a capability to export your device configuration data to a comma separated value (CSV) file. This file can be used to restore device information or to change device configuration data for multiple devices.

For information about using the export capability, see ["Export and Import of Device Information" on page 69](#).

Manually Run Backup Schedules

On the Administrator Settings → Schedules → Advanced Schedules section, you can run the Application Backup Schedule to backup/restore data, such as device details and configuration history. After the initial install, backups are automatically scheduled to run daily at 3:33 AM and data is restored to the selected location.

To run the Application Backup Schedule, complete the following steps:

1. In the main menu, select **Administrator Settings**.
2. Click the **Schedules** tab.
3. In the Schedules table expand the Advanced Schedules section, and click **Application Backup Schedule**. The Application Backup Schedule dialog box appears.

SAVE **START NOW**

Name: Application Backup Schedule

Frequency: Every Day

Time: 03 : 33

Next Scheduled Time: Friday, April 19, 2013 3:33:00 AM

Comment: Creates scheduled backup copies of your Insight Remote Support configuration history and device details. To change the frequency, backup directory or to disable backup (not recommended), please see help.

Schedule



Note: To run the schedule at a different time, select the required time from the Time field and click **Save**.

4. In the Application Backup Schedule dialog box, click **Start Now**.

Insight Remote Support runs the schedule.

Viewing Successful Backup Information

You can view the date and time of the last successful backup on the About Insight Remote Support screen of the Insight RS Console.

Identifying Backup Failures

If a backup fails, then a message appears on the Message Board section of the Home page of the Insight RS Console. View the error log files for details on the backup failure.

Restoring Insight RS from Backup

The Insight RS restore function restores Insight RS dynamic data from a backup data set. For this to happen, Insight RS must be installed so that the correct restore target location can be determined, but Insight RS must not be running so that normal operations and restore operations will not interfere with one another. After the backup data is restored, Insight RS can be restarted.

To run the Application Backup Schedule, complete the following steps:

1. Open a command prompt window on the Hosting Device.
2. Stop the Insight RS services:

```
net stop hprsreceivers
```

```
net stop hprsmain
```

3. Restore your backup data set:

```
rsadmin restore -source <backup_data_set>
```

where *backup_data_set* is the location of your backup data set.

The default backup location is C:\ProgramData\HP\RS\DATA\backup. If you change the source location, then make sure you include the time stamp folder name, for example, E:\backup\1350683403365.

4. Restart the Insight RS services:

```
net start hprsmain
```

```
net start hprsreceivers
```

After restarting the Insight RS services, the database re-initializes with the backup data. Note that the re-initialization takes a few minutes, and the Insight RS Console will not be accessible during this time.

Chapter 6: Uninstalling Insight RS

You can use the Windows Programs and Features control panel to uninstall Insight RS.

Insight RS leaves behind configuration, monitored device, and log file information when it is uninstalled. This allows the application to be uninstalled and reinstalled under the guidance of HP Support without losing data. Deleting this data recovers the disk space and allows a clean re-installation of Insight RS. The default locations for the data files are shown in the figure on page 27. Once Insight RS has been uninstalled, these folders can be deleted. Insight RS does not leave behind data in the registry when uninstalled.

Make sure you disable the Hosting Device in the Insight RS Console before uninstalling Insight RS to prevent any issues with Hosting Device registration if you ever reinstall Insight RS on the same Hosting Device.

To uninstall Insight RS, complete the following steps:

1. If you use HP Insight Online, make sure your device data is removed from HP Insight Online. See ["Disable Insight Online" below](#).
2. ["Uninstall the Insight RS Software" on page 68](#).
3. If you believe any remaining data may be left, you can completely clean your Hosting Device by performing the steps in ["Cleanup Hosting Device" on page 68](#).

Disable Insight Online

If you use HP Insight Online, you need to perform the following steps to make sure your support cases and devices are removed from Insight Online before you disable the connection to Insight Online.

Close Support Cases

Make sure you close all support cases associated with the Hosting Device so the support case are removed from Insight Online.

To view and close service events for a device, complete the following steps:

1. In a web browser, log on to the Insight RS Console.
2. In the main menu, select **Service Events**, and click the Event Status column to sort the results to show open service events.
3. Record the Case ID, which you will need to close the support case.
4. Close any open support cases:
 - Use the HP Support Center Support Case Manager and request that open cases be closed. Note that cases are not automatically closed as the result of a request. A support agent closes the case after reviewing the request.
 - Contact your support representative to close open support cases.

Delete Devices from Insight RS Console

Uninstalling the Insight RS software does not remove your devices from HP Insight Online. You must manually delete your devices in the Insight RS Console, which also removes the devices from HP Insight Online. Deleting a device removes all event and configuration collection history from the Hosting Device and disables the device in HP Insight Online, if configured.

To delete a device, complete the following steps:

1. In a web browser, log on to the Insight RS Console.
2. In the main menu, select **Devices**, and then click the **Device Summary** tab.
3. Select the check box in the far left column for all devices.
4. Click **Actions** → **Delete Selected**, and click **OK** in the confirmation dialog box.



Note: When a monitored device sends an SNMP packet to the Hosting Device, the Insight RS automatically attempts to re-register the monitored device. To make sure this does not happen before uninstalling Insight RS, remove the Hosting Device as a trap destination on your monitored devices or disable the SNMP receiver service on the Hosting Device.

Disable Connection to HP Insight Online

Disabling the HP Insight Online integration removes all details of remotely supported devices in HP Insight Online for the registered HP Passport account. This also disables the same device details for any users for which this data was shared as well as the view of your HP Authorized Channel Partner, if configured.


To disable Insight Remote Support from sending data to Insight Online, complete the following steps:

1. In a web browser, log on to the Insight RS Console.
2. In the main menu, select **Administrator Settings**.
3. Click the **HP Insight Online** tab.
4. Click **Disable Insight Online View**.
5. In the Confirm Disable dialog box, click **OK** to confirm.
6. Log on to your HP Insight Online account and make sure that the devices no longer appear on the dashboard.

Uninstall the Insight RS Software

To uninstall Insight RS, complete the following steps:

1. On the Hosting Device, navigate to **Start** → **Control Panel** → **Programs and Features**.
2. Select **HP Insight RS, v7.x** and click **Uninstall**.
3. Click **Yes** to confirm that you want to uninstall Insight RS. The HP Insight RS, v7.x uninstall window appears showing the progress of the uninstall.

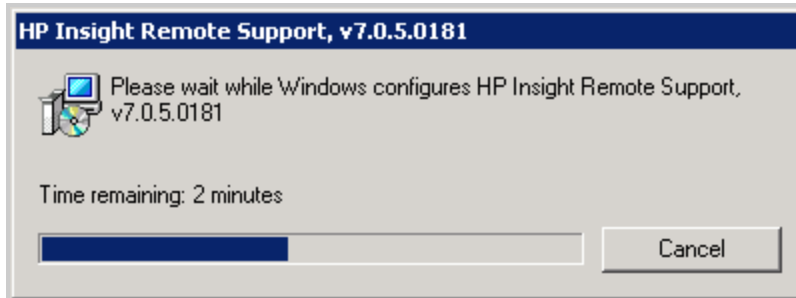

When it completes, Insight RS is removed from the Programs and Features window.

4. Delete the Insight RS data files, if desired. The default locations for the data files are shown in the figure on page [27](#).

Cleanup Hosting Device

After uninstalling HP Insight RS, HP recommends the following cleanup to make sure any monitored device or company information is removed from the server. Complete these steps to make sure the Hosting Device no longer contains any of your company information.

1. Wipe the attached storage devices following your security policy.
2. Reset the BIOS and firmware to factory defaults.

Appendix A: Export and Import of Device Information

The bulk upload functionality allows you to submit monitored device configuration information for multiple devices through a scripted process, rather than updating each individual system through the Insight RS Console. The bulk upload file stores the required information for selected monitored devices. When the file is imported, this information is used to supply unique information (including warranty and contract information) for each monitored device. Provide the monitored device information in a comma separated value (CSV) file, one device per line.



Important: For security reasons, protocol credential information is not saved in the CSV file. After loading the CSV file, protocol credential information must be reconfigured for each device.

Export a Bulk CSV File

To export a bulk CSV file, complete the following steps:

1. Open a command prompt window on the Hosting Device.
2. Export the CSV file using the following command and the path to where you want to save the CSV file:

```
rsadmin unload -file C:\[filepath]\[filename].csv
```

The system downloads the devices from Insight RS and saves them to a CSV file.

Import a Bulk CSV File

You can import previously edited bulk CSV files. See ["Edit a Bulk CSV File" on the next page](#) for information about editing bulk CSV files.



Important: Make sure you register Insight RS in the Hosting Device Setup Wizard before performing this command. Running this command before registration can lead to data integrity issues during the registration process.



Important: A hard line break (carriage return) is required at the end of each series of system fields. If one of the fields does not apply, leave the field empty, but do not delete the comma delimiter.

To upload a bulk CSV file, complete the following steps:

1. Open a command prompt window on the Hosting Device.
2. Import the CSV file using the following command and the full path to the CSV file:

```
rsadmin load -file C:\[filepath]\[filename].csv
```

The system uploads the devices from the CSV file and lists them in the Insight RS Console.



Note: If attempting to use the `rsadmin` command right after installing Insight RS, the path environment may not immediately be updated. If the `rsadmin` command is not found, and you just completed the installation, you may need to log off and then log on to the Hosting Device to make sure the needed environment variables have been updated.

Edit a Bulk CSV File

You can edit the bulk CSV file that you exported from Insight RS and then import the information. The file can be edited with a text editor or a spreadsheet program. The table below shows the structure of the bulk CSV file.



Important: If any of the values in the CSV file contain commas, you need to wrap the value in quotation marks, otherwise the comma will cause the CSV file to not load properly, resulting in an error.

Table A.1 CSV File Data Fields (in the order in which they should be provided)

Field	Description
SYSTEM_NAME	Fully qualified host name of the monitored device.
SYSTEM_IP	IP address for the monitored device.
SERIAL_NUMBER	Serial number for the monitored device.
PRODUCT_ID	Product number for the monitored device.
COUNTRY_CODE	Country code for the location where the support contract was initiated. You can find your country code at the International Organization for Standardization web site at: http://www.iso.org/iso/home/standards/country_codes.htm .
ENTITLEMENT_TYPE	The contract type. Possible options are: 'SAID,' 'Warranty,' 'Carepack.'
ENTITLEMENT_ID	The contract ID.
CUST_DELIVERY_ID	A vendor or HP provided identifier.
CUST_SERIAL_NUM	A customer serial number different from that provided by the system itself.
CUST_PRODUCT_ID	A customer product number different from that provided by the system itself.
SITE_NAME	The location where the monitored device is located. If you have a large campus it might be a facility nickname or other identifying factor for the site location.
SITE_ADDRESS1	Address for the site of the monitored device.
SITE_ADDRESS2	Suite for the site of the monitored device.

Table A.1 CSV File Data Fields (in the order in which they should be provided), continued

Field	Description
SITE_CITY	City for the site of the monitored device.
SITE_STATE	State or province for the site of the monitored device.
SITE_COUNTRY	Country code for the location where the monitored device is physically located. You can find your country code at the International Organization for Standardization web site at: http://www.iso.org/iso/home/standards/country_codes.htm .
SITE_POSTALCODE	Postal Code for the site of the monitored device.
SITE_TIMEZONE	Timezone for the site of the monitored device.
CONTACT1_ROLE	Role of primary contact supporting this monitored device. Must be text 'Primary Contact.'
CONTACT1_FIRSTNAME	Primary contact's first name.
CONTACT1_LASTNAME	Primary contact's last name.
CONTACT1_EMAIL	Primary contact's email address.
CONTACT1_PHONE	Primary contact's primary phone number.
CONTACT1_ALTPHONE	Primary contact's alternate phone number.
CONTACT1_HOURS	Available hours to reach primary contact.
CONTACT1_SALUTATION	Mr., Mrs., Ms., Dr., etc.
CONTACT1_LANGUAGE	Primary contact's preferred language.
CONTACT1_TIMEZONE	Timezone for the area where the primary contact lives.
CONTACT1_OTHER	Free text notes about the primary contact.
CONTACT2_ROLE	Role of secondary contact supporting this monitored device. Must be text 'Secondary Contact.'
CONTACT2_FIRSTNAME	Secondary contact's first name.
CONTACT2_LASTNAME	Secondary contact's last name.
CONTACT2_EMAIL	Secondary contact's email address.
CONTACT2_PHONE	Secondary contact's primary phone number.
CONTACT2_ALTPHONE	Secondary contact's alternate phone number.
CONTACT2_HOURS	Available hours to reach secondary contact.
CONTACT2_SALUTATION	Mr., Mrs., Ms., Dr., etc.
CONTACT2_LANGUAGE	Secondary contact's preferred language.

Table A.1 CSV File Data Fields (in the order in which they should be provided), continued

Field	Description
CONTACT2_TIMEZONE	Timezone for the area where the secondary contact lives.
CONTACT2_OTHER	Free text notes about the secondary contact.
SUPPORT_CHANNEL_PARTNER_NAME	Name of HP Authorized Service Partner.
SUPPORT_CHANNEL_PARTNER_ID	ID of HP Authorized Service Partner.
SUPPORT_CHANNEL_PARTNER_CITY	City of the HP Authorized Service Partner.
SUPPORT_CHANNEL_PARTNER_COUNTRY	Country of the HP Authorized Service Partner.
SERVICE_CHANNEL_PARTNER_NAME	Name of Authorized Reseller.
SERVICE_CHANNEL_PARTNER_ID	ID of Authorized Reseller.
SERVICE_CHANNEL_PARTNER_CITY	City of the Authorized Reseller.
SERVICE_CHANNEL_PARTNER_COUNTRY	Country of the Authorized Reseller.
ENTITLEMENT_IS_ENTITLED	True or false value for whether the monitored device is entitled for remote support.
ENTITLEMENT_PACKAGE	The Service Level Agreement (SLA) that covers the monitored device.
ENTITLEMENT_OFFER_START_DATE	The start date of the device's warranty or contract.
ENTITLEMENT_OFFER_END_DATE	The expiration date of the device's warranty or contract.
ENTITLEMENT_COVERAGE_DAYS	Days covered in a week.
ENTITLEMENT_COVERAGE_HOURS_DAY_1_TO_5	Coverage hours for days 1 to 5, Monday through Friday.
ENTITLEMENT_COVERAGE_HOURS_DAY_6	Coverage hours for Day 6, Saturday.
ENTITLEMENT_COVERAGE_HOURS_DAY_7	Coverage hours for Day 7, Sunday.
ENTITLEMENT_COVERED_HOLIDAYS	True or false value for whether the monitored device's warranty or contract coverage includes holidays.

Glossary

A

Agentless Management Service (AMS)

iLO 4 Agentless Management uses out-of-band communication for increased security and stability. With Agentless Management, health monitoring and alerting is built into the system and begins working the moment a power cord is connected to the server. This feature runs on the iLO hardware, independent of the operating system and processor. The separately installed AMS collects additional operating system data.

C

CDID

See Custom Delivery ID.

Central Management Server (CMS)

The CMS is a system in the management domain that executes the HP Systems Insight Manager software. All central operations within HP Systems Insight Manager are initiated from this system.

Centralized Management Console (CMC)

The CMC is used to configure and manage the P4000 Storage Systems.

CLIQ

Legacy term for the LeftHand OS command line interface. See P4000 CLI.

cluster

A cluster is a grouping of storage nodes that create the storage pool from which you create volumes.

collection schedules

The frequency in which collections are run. The schedule is configurable in the Insight RS Console.

collections

The term within HP SIM for grouping system or event searches. While HP SIM uses the term collection in reference to a group of monitored devices, Insight Remote Support uses the term configuration collection in reference to data collected from a monitored device. This data is communicated to HP for proactive analysis.

configuration collection

HP Insight Remote Support uses the term configuration collection in reference to data collected from a monitored device. This data is sent to HP for proactive analysis.

Custom Delivery ID

The Custom Delivery ID is a free text field that can be individually populated for each monitored device. Unless a specific value is specified within the documentation relating to configuring a particular device, the field should be left blank. In some very specific circumstances, this field may also be populated by an HP Representative to allow customized handling/routing of reported incidents. In those instances, the field must be populated with a unique value associated with the customized handling that is required. Determination of the unique value must be done by the HP Representative working with the HP Automation Team TS that sets up the customizations. Failure to follow this guidance could result in incorrectly handled incident reports.

D

device groups

Configurable groups of devices within the Insight RS Console that helps users organize the devices in their environment.

discovery

A feature within a management application that finds and identifies network objects. In HP management applications, discovery finds and identifies all the devices within a specified network range.

E

Enterprise Virtual Array (EVA)

An EVA is a high performance, high capacity and high availability virtual RAID storage solution for high-end enterprise environments.

entitlement

The process of authorizing a request for support based on the contents of warranty or support contracts held by the customer, normally with respect to a specific Object of Service (OOS) such as a hardware or software component. Your level of entitlement is determined by your HP Support contract. Contact your HP Account Team for more details.

event

A general term for all types of notifications from one process to another.

Event Log Monitoring Collector (ELMC)

ELMC provides error condition detection of the event log and communicates these events to Insight RS.

H

hardware event

A specific type of event that suggests that a specific hardware component may be in trouble. Hardware events may result in a service event.

Health Check

The LeftHand Networks Health Check Utility is used to send monitoring log file information from customer sites to LeftHand Networks for troubleshooting and proactive health monitoring. See Service Console.

Hosting Device

The Hosting Device is a supported Windows ProLiant server that hosts the Insight Remote Support software. When used with HP

Systems Insight Manager, the Hosting Device can act as a Central Management Server (CMS).

Hosting Device Setup Wizard

Step-by-step screens that helps users with the initial configuration of their Hosting Device.

HP Authorized Reseller/Distributor

Channel partners who sell hardware and services.

HP Authorized Service Partner

Channel partners who deliver services and/or installation service on HP's behalf.

HP Care Pack Services

HP Care Packs can be purchased with HP products and services to upgrade or extend standard warranties with enhanced support packages. They reduce downtime risks with support levels from basic to mission-critical. For many products, post-warranty HP Care Pack Services are also available when an original warranty expires.

HP Passport (HPP)

HP Passport single sign-in service lets you use one user ID and password of your choice to sign-in to all HP Passport-enabled Web sites.

I

identification

An aspect of the discovery process that identifies the management protocol and type of system.

iLO

Integrated Lights-Out. Embedded server management technology that delivers web-based remote management that is always available.

iLO Remote Insight Board Command Language (RIBCL)

Communication protocol required for Insight Remote Support to communicate with ProLiant Gen8 servers.

Insight Online

HP Insight Online provides one-stop personalized, secure access to support the devices in your IT environment. It is integrated into HP Support Center for your IT staff who deploy, manage and support systems, plus HP Authorized Channel Partners who support your IT infrastructure. Insight Online can automatically discover devices remotely monitored by HP (requires Insight Remote Support 7.0 or later). Depending on your support model you or your HP Authorized Channel Partner can easily organize your devices into groups and have the flexibility to efficiently monitor, track and service your HP devices.

Insight Remote Support

HP Insight Remote Support provides proactive remote monitoring, diagnostics, and troubleshooting to help improve the availability of supported HP servers and storage systems in your data center. HP Insight Remote Support reduces cost and complexity through support of systems. HP Insight Remote Support securely communicates hardware incident information through your firewall and/or web proxy to the HP Data Center for reactive support. Additionally, based on your support agreement, system information can be collected for proactive analysis and services

Insight RS Console

The Insight Remote Support user interface that is installed on the Hosting Device.

Insight RSA

Insight Remote Support Advanced. Previous version of Insight Remote Support that integrates with HP SIM to provide proactive

remote monitoring, diagnostics, and troubleshooting of devices.

M

management group

A collection of one or more storage nodes which serves as the container within which you cluster storage nodes and create volumes for storage.

Management Information Base (MIB)

The data specification for passing information using the SNMP protocol. An HP MIB is also a database of managed objects accessed by network management protocols.

management protocol

A set of protocols, such as WBEM, HTTP, or SNMP, used to establish communication with discovered systems.

monitored device

Any device monitored by HP Insight Remote Support, such as servers, storage systems, and switches. To monitor a device, some type of management protocol (for example, SNMP or WBEM) must be present on the device.

Monitored Device Setup Wizard

Step-by-step screens that helps users discover devices in their environment to be monitored. Users specify the range of devices to be discovered and the corresponding credentials.

P

P4000 CLI

The P4000 CLI is the command line interface that is used to interface with the P4000 Storage Systems from the Hosting Device. The P4000 CLI is installed with Insight Remote Support. Note that the P4000 CLI is sometimes referred to as cliq, which is the name of the command used within the P4000 CLI.

R

Remote Support Eligible Systems

Systems that are eligible for Remote Support, and when enabled will submit events to the HP Data Center for incident resolution. Systems must also be entitled to Remote Support, otherwise submitted events will be closed. You can verify that an eligible system is actually supported by using the Remote Support Entitlement Check.

Remote Support Entitlement Check (RSEC)

The RSEC is a check against the HP entitlement datastore for the current obligation status of a particular system. The Entitlement window displays the results of the Remote Support Entitlement Check.

RIBCL

See iLO Remote Insight Board Command Language.

S

Service Console

The Service Console is the legacy software that enabled remote hardware and software support for P4000 Storage Systems. This functionality is now provided by Insight Remote Support. See Health Check.

service event

Insight RS monitors a customer's hardware environment for service events that require action from the Service Provider (HP Channel Partner and/or HP services team) or customer. For the most part, actionable service events require replacing a failed Field Replaceable Unit (FRU) or Customer Replaceable Unit (CRU) in the monitored hardware. Non-actionable events are filtered out, and actionable service events are forwarded to HP. Insight RS monitors hardware for hard failures from a major component on the hardware such as CPU, disk, memory, and power supply, and these

will trigger a service event communication to HP. In addition, Insight RS monitors hardware for soft errors, and in some instances, when the number of soft errors exceeds a specific threshold, an event is sent to HP. Further details regarding what classifies as an actionable service event is HP confidential information.

Simple Network Management Protocol (SNMP)

One of the management protocols supported by Insight Remote Support. Traditional management protocol used extensively by networking systems and most servers. MIB-2 is the standard information available consistently across all vendors.

SNMP trap

Asynchronous event generated by an SNMP agent that the system uses to communicate a fault.

Storage Area Network (SAN)

A SAN is a network of storage devices and the initiators that store and retrieve information on those devices, including the communication infrastructure. In large enterprises, a SAN connects multiple servers to a centralized pool of disk storage. Compared to managing hundreds of servers, each with their own disks, SANs improve system administration.

Storage Management Server (SMS)

A system on which HP Enterprise Virtual Array (EVA) software is installed, including HP P6000 Command View and HP Replication Solutions Manager, if used. It is a dedicated management server that runs EVA management software exclusively.

System Fault Management (SFM or SysFaultMgmt)

SFM is the HP-UX fault management solution that implements WBEM standards. SFM integrates with other manageability

applications like HP SIM, HP SMH, and other WBEM-based clients.

system health

Health status is an aggregate status all of the status sources (which can be SNMP, WBEM, and HTTP) with the most critical status being displayed.

System Management Homepage (SMH)

System Management Homepage (SMH) is a web-based interface that consolidates and simplifies single system management for HP servers on HP-UX, Linux, and Windows operating systems.

Systems Insight Manager (SIM)

SIM is a unified server and storage management platform. From a single management console, administrators can manage their complete HP server and storage environment with a secure management tool set.

V

virtual node

The P4000 Virtual SAN Appliance uses captive server disk drives to build a virtual iSCSI SAN consisting of Virtual Nodes that create the storage pool from which virtualized volumes are created. Virtual Nodes can be discovered and managed in the same manner as physical Storage Nodes.

volume

A logical entity that is made up of storage on one or more storage nodes. It can be used as raw data storage or it can be formatted with a file system and used by a host or file server.

W

Web-Based Enterprise Management (WBEM)

This industry initiative provides management of systems, networks, users, and

applications across multiple vendor environments. WBEM simplifies system management, providing better access to software and hardware data that is readable by WBEM client applications.

Windows Management Instrumentation (WMI)

Microsoft's implementation of Web-Based Enterprise Management (WBEM).

workflow case

The specific HP obligation to send a replacement part for a failed customer part.

Index

B

- backup and restore [63](#)
 - restoring Insight RS from backup [64](#)
 - run schedule [63](#)

- bulk CSV file
 - edit a bulk CSV file [70](#)
 - export a bulk CSV file [69](#)
 - import a bulk CSV file [69](#)

C

- certificate warning [29](#)

D

- device groups
 - add [61](#)
- discovery
 - device configuration [35](#)
 - resolving device status [50](#)
 - verifying device status [49, 52](#)

E

- email adapter
 - configure [57](#)
 - enable [57](#)

H

- Hosting Device
 - access requirements [18](#)
 - communicating with monitored devices [23](#)
 - communication requirements [19](#)
 - disk space requirements [12](#)
 - DNS configuration [20](#)
 - memory requirements [12](#)
 - monitoring [24](#)

- SNMP installation [23](#)
- system requirements [11](#)
- verifying connectivity [22](#)

Hosting Device Setup Wizard [42](#)

- contact information [43](#)
- HP Authorized Channel Partners [47](#)
- Integrate with Insight Online [46](#)
- receiving remote support [42](#)
- registering Insight Remote Support [45](#)
- site information [44](#)

HP SIM Adapter [54-55](#)

- configure [55](#)
- install [55](#)

I

- Insight RS Console [28](#)
- installing [25](#)
 - downloading software [25](#)
- integration adapters
 - HP SIM [54](#)

L

- log files [28](#)

M

- Monitored Device Setup Wizard [34](#)
 - discover devices [40](#)
 - discovery access credentials [35](#)
 - discovery sources [37](#)

R

- restoring Insight RS from backup [64](#)

S

- settings
 - enable operator-level authentication [60](#)

SNMP service event adapter

add server [59](#)

software requirements [17](#)

.NET framework [18](#)

web browsers [17](#)

system requirements [11](#)

disk space requirements [12](#)

hardware requirements [11](#)

memory requirements [12](#)

operating system requirements [15](#)

software requirements [17](#)

U

uninstalling [66](#)

upgrade Insight Remote Support [10](#)