

How to collect Advanced Survey Log using HP SPP

1. Download current SPP release from the HP Site as bootable image.

http://h18013.www1.hp.com/products/servers/service_packs/en/index.html

The latest version is 2013.09.0(B):

Name: 2013.09.0(B), Full ISO Image 2.93 GB

MD5 Checksum: 77c78141ee98b44a902005d1018abffb

HP Passport is REQUIRED to download the image

SPP ISO should be copied to **USB Flash Drive or DVD** with using **HP USB-Key Utility**.

HP USB-Key Utility is the part of the SPP and located inside of SPP:


/usb/hpusbkey/hpusbkey.exe

Permanent link to the HP USB-Key Utility on HP Site:


<http://h18004.www1.hp.com/products/servers/management/systemsoftware/utilities.html>

Also you can use iLO Remote Media for booting the server from the ISO.

2. Boot your server from the SPP in **interactive Mode** .

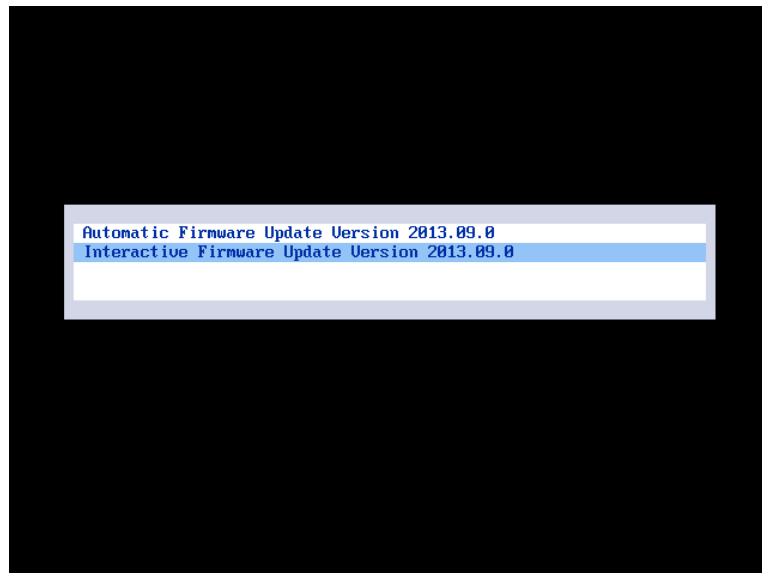

3. Go to **Insight Diagnostics**:

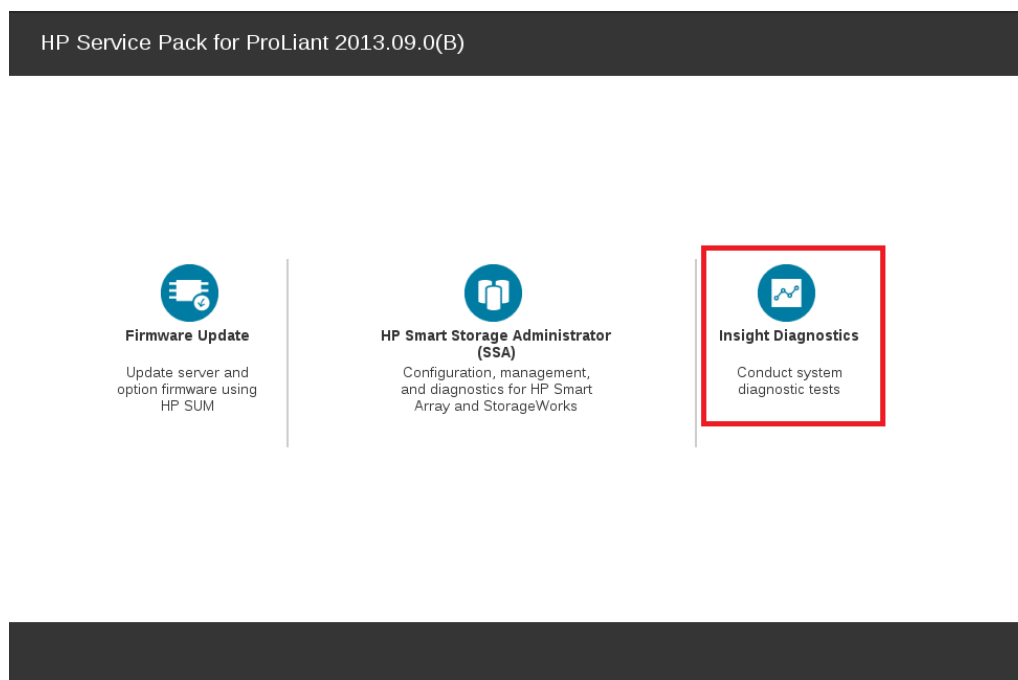

4. To generate report change View level to **ADVANCED**
5. Change Categories to **ALL**
6. **Save report to appropriate location and send to HP Support**

HP Insight Diagnostics

System LXA9V JK00H

1) CHAGNE TO ADVANCED

2) CHANGE TO ALL

3) CLICK SAVE

System	
Product Name	ProLiant DL380p Gen8
Serial Number	LXA9V JK00H
Processor Package 1	Genuine Intel(R) CPU @ 2.40GHz
Total memory - 4096 Mbytes	
Board 1	
Card 1 Status	Online
DIMM 1	Not Installed
DIMM 2	Not Installed
DIMM 3	Not Installed
DIMM 4	Not Installed
DIMM 5	Not Installed
DIMM 6	Not Installed
DIMM 7	Not Installed
DIMM 8	Not Installed
DIMM 9	Not Installed
DIMM 10	Not Installed
DIMM 11	Not Installed
DIMM 12 (DDR3)	4096 Mbytes
Board 2	
Card 2 Status	Offline
DIMM 1	Not Installed
DIMM 2	Not Installed
DIMM 3	Not Installed
DIMM 4	Not Installed
DIMM 5	Not Installed
DIMM 6	Not Installed
DIMM 7	Not Installed
DIMM 8	Not Installed
DIMM 9	Not Installed
DIMM 10	Not Installed
DIMM 11	Not Installed
DIMM 12	Not Installed
ECC memory installed	Yes
Serial presence detect (SPD) information - DIMM 12, Card 1	

Note: If you are accessing the server from remote location, then you can make use of Virtual media feature of iLO. First you need to connect a USB key to your computer, then launch iLO of your Gen8 Server from the same computer.

From iLO, launch Remote Console, click Virtual Media, then select Floppy/USB key and select the drive letter of the USB key connected.

Permanent link to the instruction:

ftp://iss_tool:{IU7yy+Q@ftp.usa.hp.com/AdvancedSurveySPP.pdf

