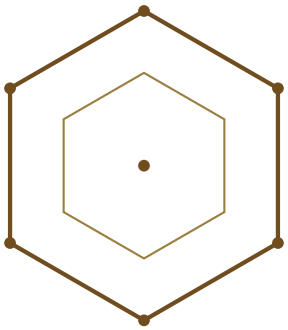

DL-2400 Heavy-Duty Brass Door Latch - Installation Manual

Model DL-2400 | Rev A | 2019

IM-DL-2400

Prototype sample document for the clickable demo. Not an official publication.

Rev	Date	Description
A	2019-06	Initial release.

> For professional use only. Service work must be performed by qualified personnel.

Contents

Section	Page
Prepare the Door	3
Tools Required	4
Rough Opening	5
Install Latch	6
Strike Plate	7
Final Adjustment	8
Fasteners	9

> Page numbers refer to the printed page footer.

Prepare the Door

Section 1: Preparation

Prepare the door and frame before fitting the latch. Confirm the backset and bore diameter against the rough-opening table for the door thickness.

Do not force any component into place. If the latch does not seat freely, re-check the bore and the face-plate mortise.

Tools Required

Section 1: Tools Required

The following tools are required for installation.

- Drill with 1 in spade bit
- Phillips screwdriver
- Tape measure
- Chisel (mortise)

Rough Opening

Section 2: Rough Opening

Prepare the rough opening to the dimensions below.

Dimension	Value
Backset	2-3/8 in (60 mm)
Bore diameter	2-1/8 in (54 mm)
Door thickness	1-3/4 in

Install Latch

Section 3: Install Latch

Throw: 0.625 in standard.

Insert the latch into the bore and confirm it seats freely.

Strike Plate

Section 4: Strike Plate

Align the strike with the latch bolt and fasten to the frame.

Final Adjustment

Section 5: Adjustment

All fasteners must be snug, not over-tightened. Over-torquing can distort the face plate and bind the mechanism.

- Confirm the latch engages the strike.
- Check the throw against the spec.
- Confirm smooth operation from both sides.

Fasteners

Section 6: Fasteners

Item	Torque
Face-plate screws	15 in-lb
Strike screws	15 in-lb

> Torque fasteners to 15 in-lb. Over-tightening can distort the face plate.