

GW-7 Studio — User Guide

GW-7 Studio is a control application for the **Roland GW-7** arranger keyboard. It lets you select tones, control effects, launch accompaniment styles and keep your favourite setup — all from a tablet, a phone or a web browser.

Requirements


- A powered-on **Roland GW-7**.
- A **GW-7 BLE MIDI bridge** connected to the keyboard (the bridge that turns wireless MIDI into signals the keyboard understands).
- The app installed (Android) or opened in the browser:
- **Android:** install the APK from the repository's *Releases* section.
- **Browser:** open <https://benlop27.github.io/gw7-suite/>.

Connecting to the keyboard

1. Power on the BLE bridge and the keyboard. The bridge advertises itself as "**Roland GW7**".
2. Open GW-7 Studio. The app scans for the bridge automatically on startup.
3. Tap **Connect** in the top bar if it did not connect on its own.

When the connection succeeds, the top bar shows "**Connected · Roland GW7 Bluetooth**" and the status indicator turns green.

If the app does not find the bridge, use the **Choose MIDI device** button (plug icon) to open the list of available MIDI devices and pick the bridge manually.

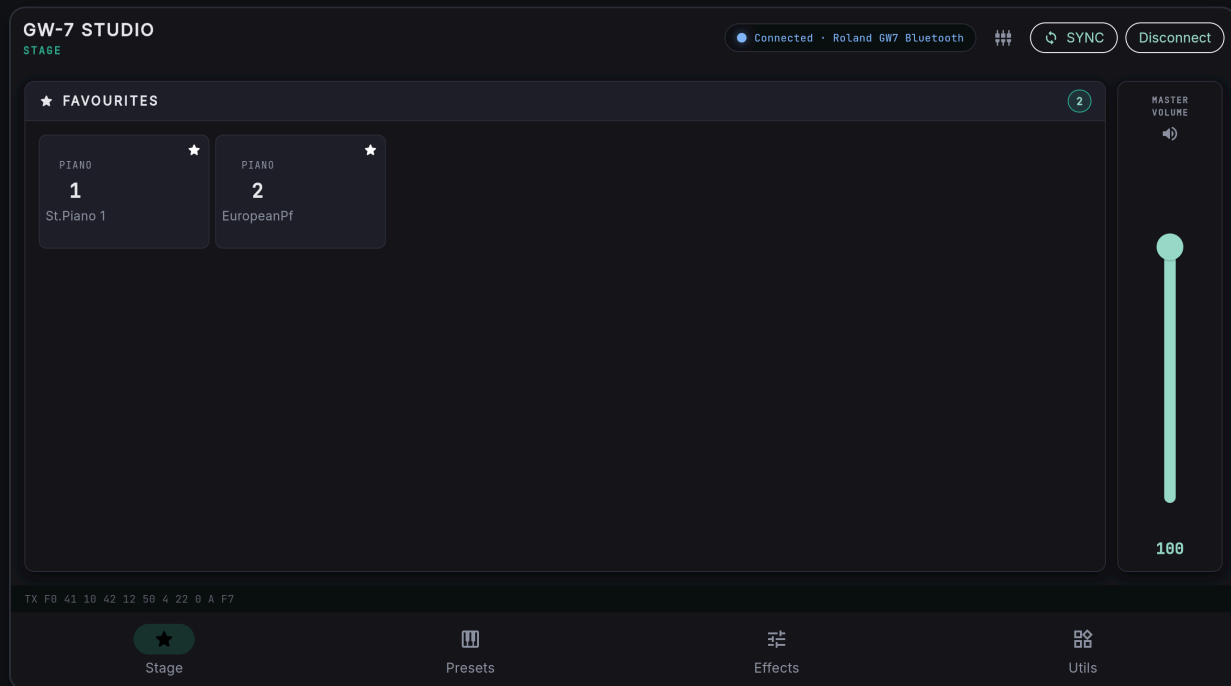

The top bar

At the top of the screen you always see:


- **Connection status:** an indicator with the *Connected* / *Not connected* message.
- **Choose MIDI device (plug icon):** opens the list of MIDI devices.
- **SYNC:** sends the whole current app setup (tone, volume, effects, etc.) to the keyboard in one go.
- **Connect / Disconnect:** connect or disconnect the keyboard.

At the bottom of the screen, a text line shows the last MIDI message sent (for example `TX B0 00 08 · B0 20 02 · C0 00 ch4`). This is useful to confirm the commands are reaching the keyboard.

The Stage tab

Your main working panel. It has two sections:

- **Favourites:** shortcuts to your favourite tones. Presets you starred with ★ on the Presets tab appear here. Tap one to select it instantly.
- **Master Volume:** overall keyboard volume control (0 to 127).

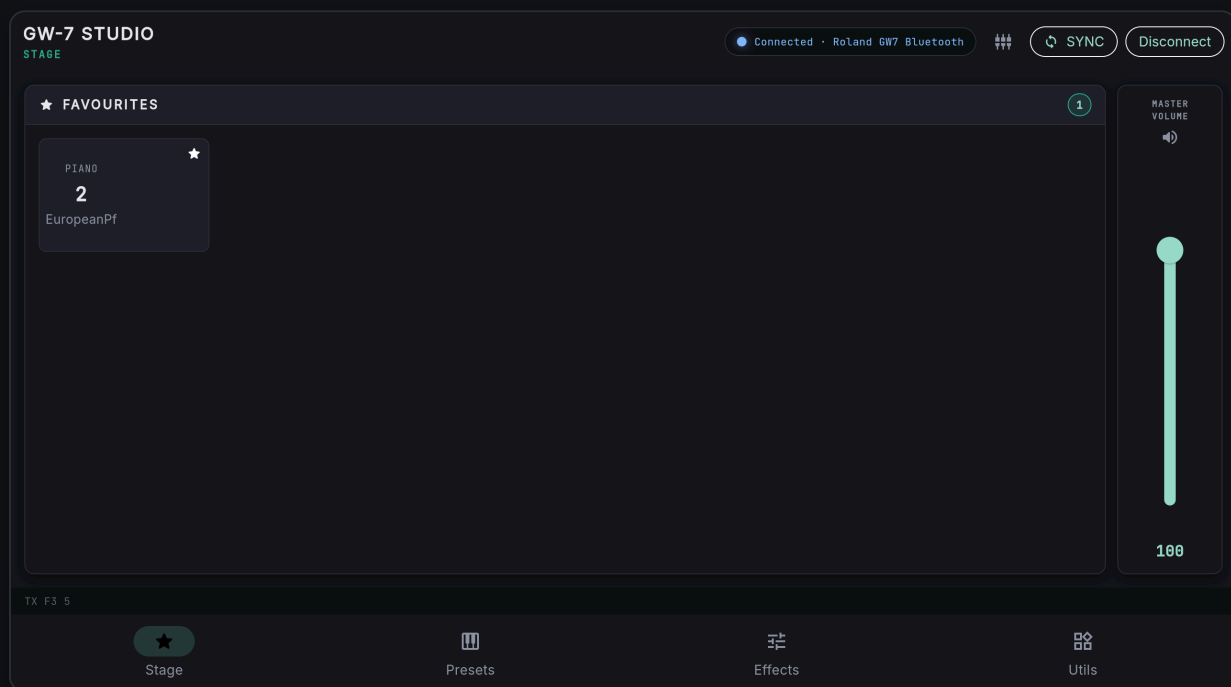


The Presets tab

Here you choose the tone the keyboard plays.

1. Pick a **category** in the panel's top bar (PIANO, ELECTRIC PIANO, ORGAN, BASS, PAD, etc.).
2. Tap a **tone** in the grid to select it. It is sent to the keyboard immediately.
3. Use the ★ on each tone's corner to add it to *Favourites*.

At the top of the panel there are two LCD displays: the first shows the bank and tone number (e.g. `PIANO 001`) and the second the channel and tone name (e.g. `ch4 · St.Piano 1`).

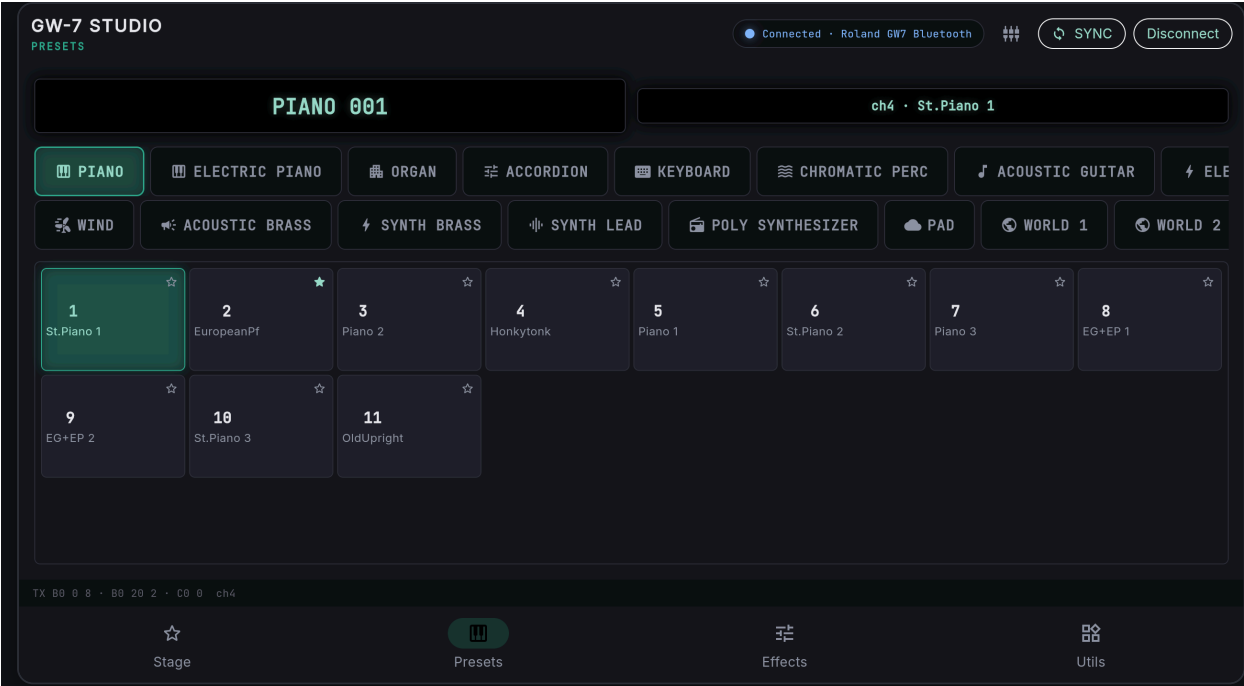


Tones are sent as bank (CC00/CC32) + program change on the channel configured by the app (channel 4 by default).

The Effects tab

Quick effect controllers, sent as *Control Change* (CC) messages on the active channel:

Control	CC message
ATTACK	CC73
RELEASE	CC72
REVERB	CC91
CHORUS	CC93
EXPR	CC11
PAN	CC10


Each control has a 0–127 slider. Move the slider and the change is sent to the keyboard right away. The **SENT ON CH4** label shows the send channel.

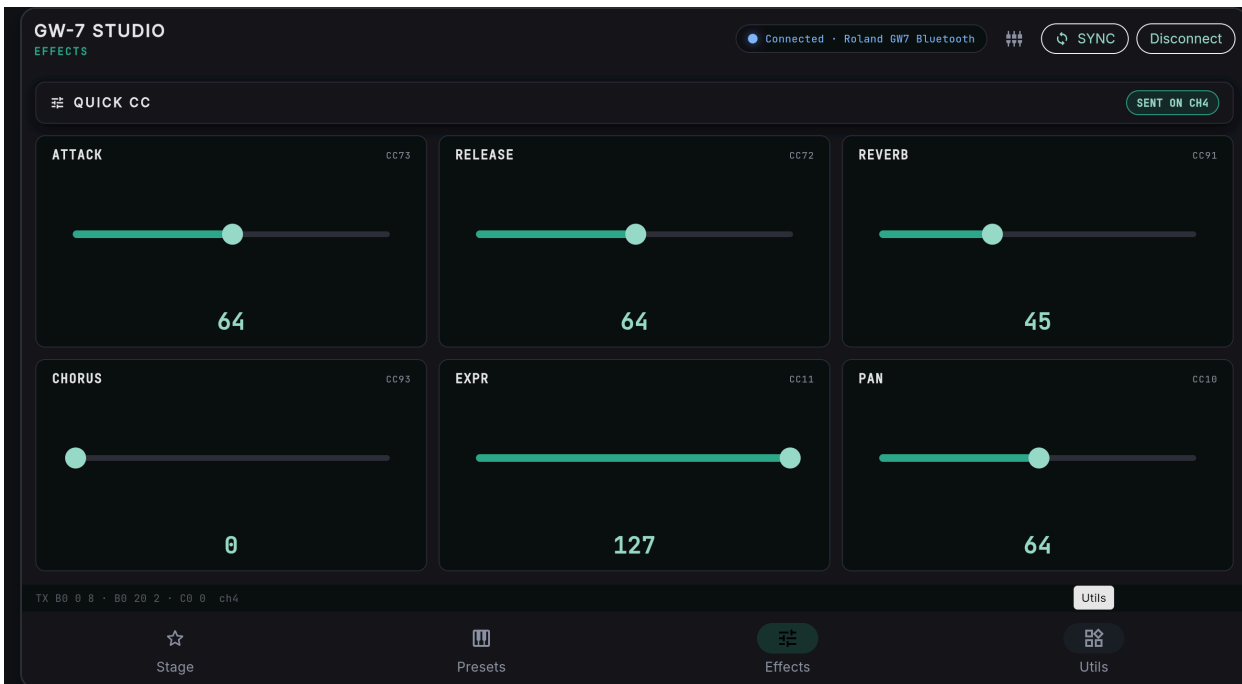

The Utils tab

Control of the GW-7's **backing track** (accompaniment):

1. Pick a **style category** (Rock, Dance, Jazz, Latin, 8Beat, etc.).
2. Select a **style** from the list (e.g. **001 SteadyRk 73**). The number is the style and the last number is its tempo.
3. Use the **transport buttons** to control the accompaniment:
4. **START**: starts the accompaniment.
5. **STOP**: stops it.
6. **CONTINUE**: resumes from where it stopped.
7. **INTRO**: launches the style from the intro.
8. **FILL**: fill-in.
9. **ENDING**: ends the accompaniment.

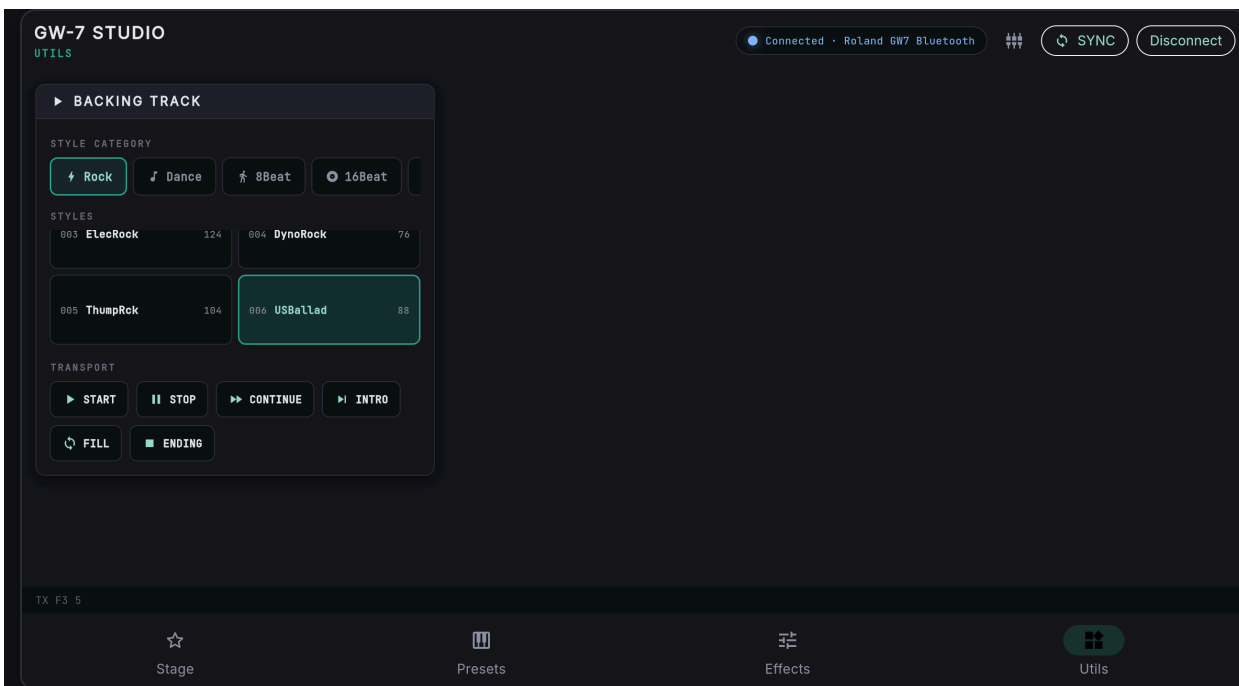

Tips

- Tap **SYNC** after adjusting several controls to re-send the whole state to the keyboard in one go.
- On connect, the app automatically re-sends the last saved setup, so the keyboard recalls your setup from last time.
- If the keyboard does not respond, check the bottom line of the screen: if no **TX ...** appears, the MIDI connection is not active — reconnect with **Connect**.