KPS PUBLIC SCHOOLS • STUDENT TECH BENCH PROGRAM

HP Chromebook 11A G8 EE

Solder-Free Repair Guide



Every field-replaceable repair that needs a screwdriver, not a soldering iron.
HP Chromebook 11A G8 Education Edition (AMD A4/A6).

In this guide

1 Read first: safety, tools, basic skills 2
2 Know the machine: specs, anatomy, parts list 9
3 Triage: symptom → repair finder 11
4 Software repairs (S1–S4) 12
5 Hardware repairs (R1–R17) 17
6 Out of scope: send to HP / lead tech 43
7 Sources 44

Rev 1.0 • October 2026
Built from HP's official Maintenance and Service Guide for the 11A G8 EE.
Part numbers: verify on partsurfer.hp.com before ordering.

1 Read first

This guide covers every HP Chromebook 11A G8 EE repair the Tech Bench can do with hand tools: swapping a part, reseating a cable, or fixing software. Anything that needs a soldering iron, hot air, or board-level work is in Section 6 and goes to the lead tech or the manufacturer.

> **How this guide was built.** Every screw count, screw size and part number here comes from HP's official Maintenance and Service Guide for the HP Chromebook 11A G8 Education Edition. This guide rewrites HP's procedures step by step for a student bench and adds tests and checks.

Bench levels

Level	Who may do it	Typical repairs
LEVEL 1	Any trained student	Software fixes, single keys
LEVEL 2	Student with supervisor sign-off on this repair	Keyboard deck, battery, Wi-Fi, touchpad, speakers, I/O board, bezel, panel, cables, camera, hinges
LEVEL 3	Lead tech or adult supervisor only	Liquid damage, system board swap, heat sink

Before you touch any device

1. ☐ Check the asset tag and look the device up in the district inventory. Note any open ticket.
2. ☐ Ask the lead tech whether the unit is still under HP warranty or an accidental-damage plan. A warranty claim may cost less than a part, and opening a unit can affect warranty coverage.
3. ☐ Photograph all four sides of the device before opening it.
4. ☐ Record the symptom in the user's own words on the ticket.
5. ☐ Warn the user that a reset erases local files (Downloads). Cloud files in Drive are safe.

Safety rules

- **Power off, unplug, remove any SD card and cables,** then disconnect the battery before any other work inside.
- **Lithium batteries:** never puncture, bend, or pry against the battery. A swollen, hot, hissing, or smoking battery is a Level 3 stop. Move it to the metal battery bin or sand and get an adult.
- **ESD:** wear a grounded wrist strap on an ESD mat. Touch boards only by the edges.
- **Ribbon cables:** unlock every ZIF latch before sliding a ribbon out. A locked ribbon tears.
- **Glass:** wear safety glasses when removing a cracked screen.
- **Before power-on:** check for loose screws inside. Shake gently and listen. A loose screw can short the board.

Tools and supplies

Item	Use	Notes
Phillips #0 and #1 screwdrivers	All screws	Most are M2.0 and M2.5 Phillips
Plastic spudger, opening picks, plastic tweezers	Clips, latches, ribbons	Only plastic touches connectors
ESD mat + wrist strap	Static protection	

Item	Use	Notes
Magnetic screw mat	Keeping screws in order	Screws are often different lengths
90%+ isopropyl alcohol + soft brush	Cleaning contacts, spill residue	
Kapton tape	Re-taping cables and connectors	
Recovery USB or SD card, 8 GB+	ChromeOS recovery	Chromebook Recovery Utility
Known-good USB-C charger	Testing power and charging	
Safety glasses	Cracked-screen removal	
Fire-safe battery bin or sand bucket	Damaged batteries	Required at every bench

Basic skills (start here if you're new)


Every repair in this guide uses the same handful of skills. Learn these six first and the rest of the guide is just *which screws* and *which cable*. If a word in a repair is unfamiliar, look it up in the word list at the end of this chapter. Hard words in the steps are also explained in gray the first time they appear.

How a repair page works


Part of the page	What it tells you
Colored bar with the code (R5) and LEVEL	What the repair is and who may do it. Level 1: any trained student. Level 2: with a supervisor's sign-off. Level 3: lead tech only.
Fixes / Part / Time / Tools	Read this first. If you don't have the part or the tools, stop and get them before you open anything.
In plain words	One or two sentences on what you're about to do and why.
At a glance (numbered pictures)	The idea of the repair in four pictures. They show the idea, not your exact model.
Where it is on this model	A map of the inside with the part highlighted.
Step by step (☐ boxes)	The exact steps. Tick each box as you go so you never lose your place.
Common mistakes / If something goes wrong	The traps other students fall into, and what to do when a step doesn't work.
Verify before closing the ticket	The checks that prove the repair worked. Never skip them.
First-teardown notes	Write in what you found the first time (real screw counts, tape positions). It helps the next student.

Skill 1: Screws


Most damage on a repair bench comes from screws: stripped heads, screws in the wrong hole, or a long screw driven through a board. Go slowly; screws are tiny and soft.

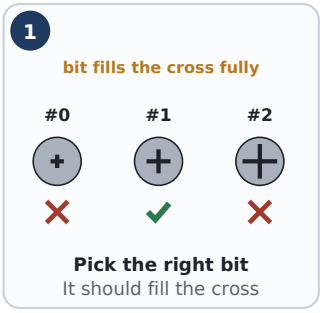


Pick the right bit
It should fill the cross

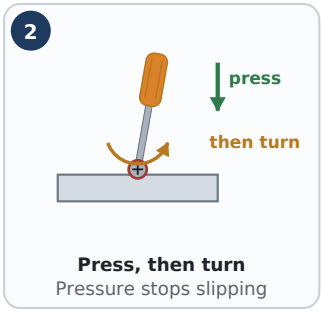

Press, then turn
Pressure stops slipping

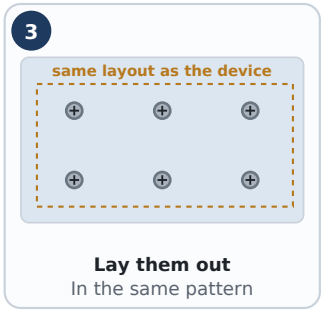

Lay them out
In the same pattern

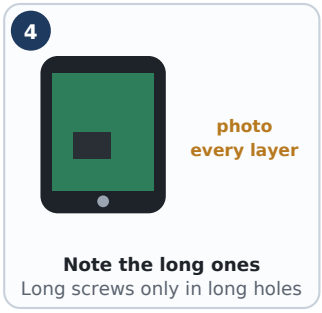


Note the long ones
Long screws only in long holes

- Most Chromebook screws take a **Phillips #0 or #1** bit. If the bit wobbles or slips, try the other size.
- Turn **left to loosen** (counter-clockwise), right to tighten. Tighten until it stops, then stop. "Snug" is enough: over-tightening cracks plastic.
- **Captive screws** stay in the cover. Loosen them until they spin freely; they won't come out.
- If a screw head starts to strip (the cross rounds off), stop and get the lead tech. Don't keep turning.

Skill 2: Opening clips


Covers and bezels are held by small plastic clips as well as screws. You release them by sliding a plastic pick along the seam, not by pulling.

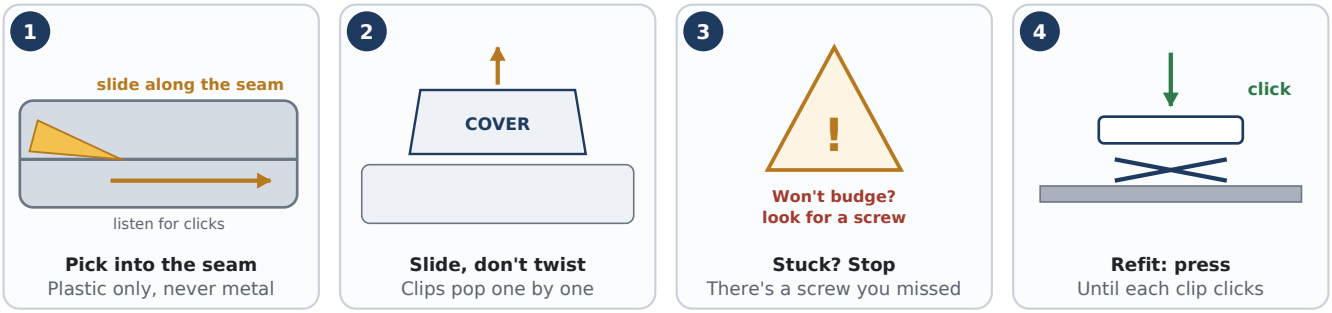

- A click or pop is normal. A crack or creak means stop and look for a screw.
- Start where the guide says (usually a corner) and work around slowly.
- Never pry near the battery or against the screen glass.

Skill 3: The four kinds of connectors

Inside every Chromebook, parts plug into the main board in only four ways. Learn these and you can unplug anything safely.

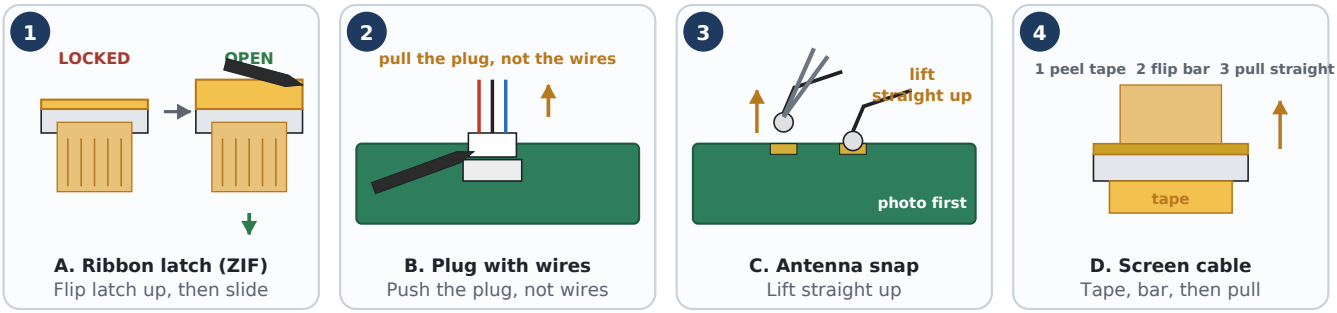

Type	Looks like	How to unplug	How to plug back in
A. Ribbon latch (ZIF)	Flat, thin, see-through cable with gold stripes, in a slot with a small hinged flap	Flip the flap up with a fingernail or spudger. The ribbon slides out with no force.	Gold stripes facing the same way as before. Push it in straight and all the way, then close the flap.
B. Plug with wires	Small white plug with colored wires (battery, speakers, fan)	Push the plug body out with a spudger, gently rocking. Never pull the wires.	Line it up, press straight in until it seats flat.
C. Antenna snap	Tiny round gold button on a thin black or white wire	Lift straight up with plastic tweezers or a fingernail.	Hold it right over the post and press straight down until it snaps.
D. Screen cable	Wider connector, often under tape, with a metal bar or pull tab	Peel the tape, flip up the metal bar (or pull the tab), then pull straight out.	Push straight in, flip the bar down, put the tape back.

Battery first, battery last. Unplug the battery (type B) before you unplug anything else, and plug it back in only after everything else is connected.


Skill 4: Tape, Mylar and adhesive

Many parts are held by tape as well as screws. Some tape is meant to be reused; some must be replaced.



- **Mylar** is thin plastic sheet that insulates parts. Put it back where it was: it stops short circuits.
- **Kapton** is thin amber heat-proof tape for holding cables down. It peels off and can be reused if clean.
- **Stretch-release tape** (under screens and batteries) lets go when you pull its tab slowly and flat. Pulling up snaps it.
- Conductive (shiny) tape on touchpads and cables must touch metal again when you refit, or the part acts strangely.

Skill 5: Static and battery safety

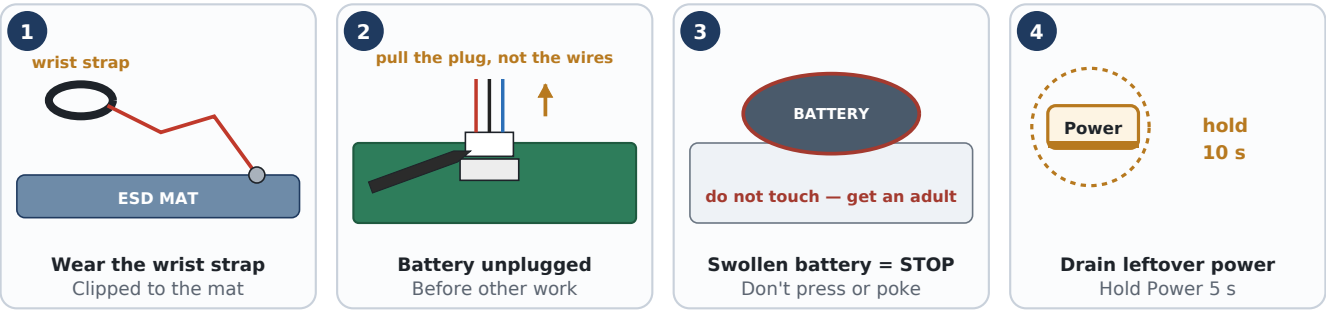

- Static from your body can kill a board without a spark you can see. Strap on, and touch boards only by the edges.
- A swollen, hot, hissing or sweet-smelling battery is an emergency: don't press it, move it to the fire-safe bin with an adult.
- Water, drinks and food stay off the bench.

Skill 6: Photograph, then test before you close



- Your photos are your instructions for putting it back together. Take more than you think you need.
- Plug in, power on and test the repaired part while the cover is still off. Finding a loose cable now saves taking it all apart again.
- Count your screws at the end. A leftover screw means something isn't fastened.

Word list

Word	What it means
Bezel	The plastic frame around the screen.
Bottom cover (base, D cover)	The panel underneath the Chromebook.
Top cover (palm rest, C cover)	The part your wrists rest on; often has the keyboard built in.
Lid / A cover	The back of the screen half.
Board / system board / mainboard	The main circuit board with the processor, memory and storage soldered on.
Daughterboard / I/O board	A small extra board holding some ports, joined to the main board by a ribbon cable.
Ribbon cable (FFC)	A flat, thin cable with gold stripes at the ends.
ZIF connector	A slot with a small flip-up latch that clamps a ribbon cable. "Zero insertion force": open it and the ribbon slides in or out freely.
eDP / LVDS cable	The video cable that carries the picture from the board to the screen.
Coax / antenna lead	The thin round wires from the Wi-Fi card to the antennas in the lid.
Spudger	A plastic or nylon pry stick. Safe to use near electronics.
Pick	A thin plastic triangle used to open seams and clips.
Captive screw	A screw that stays in the part after you loosen it.
Broad-head screw	A screw with a wide, flat head. Often used where it clamps plastic.
Mylar	Thin plastic insulating sheet.
Kapton tape	Thin amber heat-proof tape.
Thermal paste / pad	Gray paste or a soft pad that carries heat from the processor to the heat sink.
Heat sink	Copper or aluminum part that pulls heat off the processor.

Word	What it means
ESD	Electrostatic discharge: static electricity that can damage boards.
Isolator	A rubber piece that stops a part (usually a speaker) from rattling.
Powerwash	A factory reset of ChromeOS. Erases files saved on the device.
Recovery	Reinstalling ChromeOS from a USB stick or SD card.
EC reset (hard reset)	Restarting the small chip that controls power, charging and the keyboard.
Enroll	Connecting the Chromebook to the district's management so school policies apply.
eMMC	The storage chip on the board (like a small SSD). Soldered, so it can't be swapped.
Level 1 / 2 / 3	Who may do a repair: any trained student / student with sign-off / lead tech only.

2 Know the machine

Specs that matter for repair


Item	11A G8 EE	Why it matters
Processor	AMD A4-9120C / A6-9220C	Soldered
Memory / storage	4 or 8 GB RAM; 16–64 GB eMMC	Soldered
Display	11.6" HD, SVA, UWVA or touch	Match the panel part number
Battery	2-cell, 47.36 Wh (L75783-005)	On this model the speakers come out first
Access	Keyboard deck from the top, held by 6 bottom screws	No bottom panel
Wireless	Socketed Wi-Fi card, 1 screw	Replaceable
Cooling	Fanless heat sink under the system board	Heat sink is a separate spare

How it comes apart

Unlike most Chromebooks, this HP opens from the top. Screws on the bottom hold the keyboard deck (keyboard, palm rest and touchpad) to the bottom cover. Lift the deck off and the battery, boards, speakers and Wi-Fi are underneath. The display has its own bezel, panel, back cover, camera and hinges.

Inside the base

With the keyboard deck lifted off, you see the parts below. It's a rough map; correct it on your first teardown.

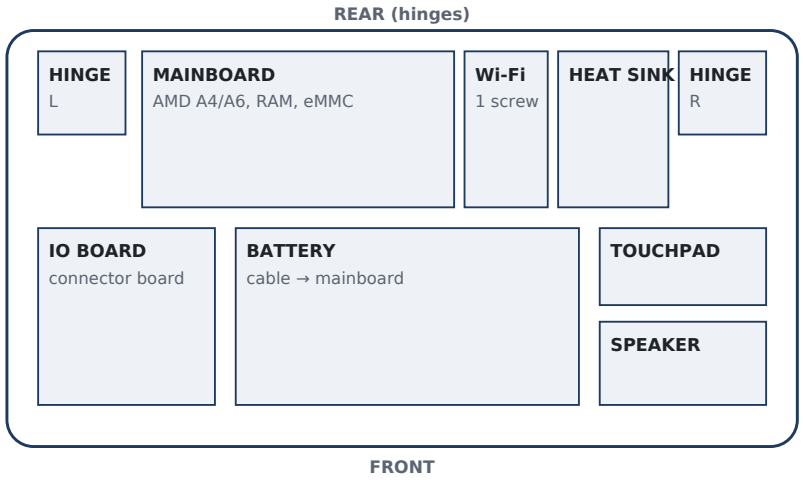

ILLUSTRATIVE — block positions are approximate. Confirm on your first teardown.

11A G8 EE parts list

HP spare part numbers from the official Maintenance and Service Guide. Look them up on partsurfer.hp.com before ordering; HP revises parts.

Part	Part number	Repair
Keyboard/top cover (US) gray / sage	L92832-001 / L92833-001	R2
Battery / bracket / tape	L75783-005 / L98587-001 / L14905-001	R3
WLAN card	L54709-001	R5
Touchpad / bracket	L99224-001 / L89791-001	R6
Speakers	L89788-001	R7
Connector board / left I/O bracket	L92816-001 / L89793-001	R8
Cable Kit	L93821-001	R6, R8, R12
Display bezel / hinge cover	L89773-001 / L89769-001	R9
Panel UWVA / SVA / touch	L92827-001 / L92826-001 / L92828-001	R10
Panel cable non-touch / touch	L89775-001 / L89776-001	R11
Webcam module	L92824-001	R12
Hinges (pair) / back cover	L89768-001 / L89771-001	R13
Heat sink / thermal pads	L92817-001 / L93823-001	R15
System board (example)	M08407-001	R17

3 Triage: symptom → repair

Start with the cheapest, least invasive fix. Work through "try first" before ordering parts.

Symptom	Try first	Then	Part likely needed
Won't turn on, no lights	Known-good charger 30 min → S1	R4 → R3	Battery, or system board
Not charging	Other USB-C port and charger → S1	R3 → Sec. 6 if a port is dead	Battery or system board
Battery drains fast / low health in S2	S2 battery test	R3	Battery
Swollen battery / bulging case	STOP — Level 3	R3 by lead tech	Battery
Black screen, power light on	External display via USB-C; S1	R4 → R11 → R10	Display cable or panel
Flicker or lines that change with lid angle	S1	R11	Display cable
Cracked or blotchy screen	—	R10	LCD panel
Bezel loose or broken	Reseat clips	R9	Bezel
Lid floppy, hinge cracked	Check hinge screws	R13	Hinge(s)
One key missing or broken	—	R1	Keycap
Several keys or a row dead	S2 keyboard test; S1; S4	R4 → R14	Keyboard / top cover
Keys type wrong symbols	S4	S4	None
Touchpad dead or erratic	S1; check touchpad settings	R4 → R6	Touchpad or its cable
USB-A / SD card / audio dead	Try another device in the port; S1	R8	I/O board or its cable
Camera not detected	Privacy shutter open? S1	R12	Camera module
No sound (headphones work)	Volume, output; S1; S3	R7	Speakers
Wi-Fi missing or weak	S1 → S3	R5	Wi-Fi card or antennas
Runs hot, fan loud, shuts down	Check vents for lint; S2	R15	Fan or heat sink
Liquid spill	Power off NOW, unplug	R16	Depends on damage
"ChromeOS is missing or damaged"	S3 recovery	R17	System board (storage)
Cracked bottom or lid shell	—	R2	Cover

4 Software repairs


No tools needed. Always do S1 before opening a device.

S1 Hard reset (EC reset) LEVEL 1

Fixes	Won't power on, won't charge, frozen, black screen, unresponsive keyboard or touchpad
Time	2 minutes
Tools	Known-good USB-C charger
Data loss	None

In plain words. A hard reset restarts the small chip that runs power, charging and the keyboard. It's like unplugging something and plugging it back in, and it fixes a surprising number of "dead" Chromebooks. Nothing is erased.

At a glance

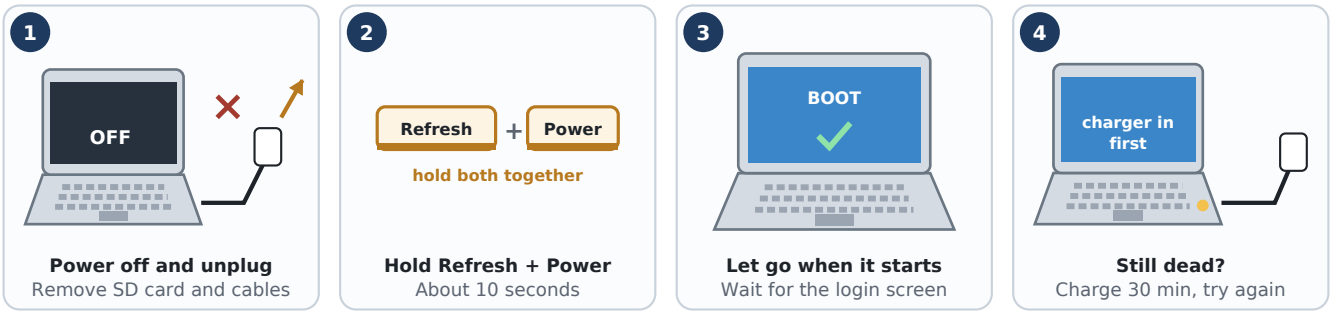

The pictures show the idea, not your exact model. The numbered steps below have the details.

A hard reset restarts the embedded controller (power, keyboard and charging chip). It erases nothing.

Step by step

1. ☐ Unplug the charger and any USB devices. Remove any SD card.
2. ☐ Hold Power for 10 seconds so the device is fully off.
3. ☐ Hold **Refresh** (circular arrow), then tap **Power**. Release Refresh when it starts.
4. ☐ If nothing happens: plug in a known-good charger, wait 30 minutes, and repeat with the charger connected. Try the other USB-C port too.

Common mistakes
- ✗ Giving up after one try without the charger.
- ✗ Holding only Power (that's just a shutdown).
- ✗ Using a charger you haven't tested.

If something goes wrong
Nothing at all, even charging → Try the other USB-C port, then check the battery (battery repair).
Starts then shuts off → Run diagnostics (S2) for the battery.

Verify before closing the ticket

- Device reaches the login screen.
- Charging light comes on with the charger connected.

Tip. After a battery has been disconnected, plug in a charger before deciding the device is dead. Many Chromebooks won't wake on the power button alone.


S2 Built-in hardware diagnostics

LEVEL 1

Fixes	Confirms the fault before ordering a part: battery, CPU, memory, keyboard, touchpad, Wi-Fi
Time	5–15 minutes
Tools	None
Data loss	None

In plain words. Chromebooks have a built-in checkup app. It tests the battery, processor, memory and more, and tells you what's failing before you order anything.

At a glance

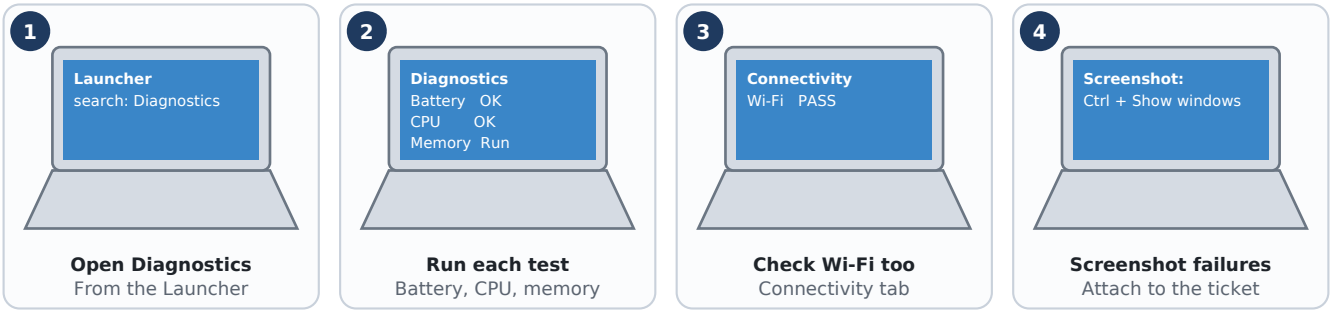

The pictures show the idea, not your exact model. The numbered steps below have the details.

Step by step

1. ☐ Sign in with a bench test account if you can.
2. ☐ Open the Launcher, search **Diagnostics**, and open it.
3. ☐ **System:** read battery health and cycle count, then run the battery tests.
4. ☐ Run the CPU and memory tests.
5. ☐ **Connectivity:** confirm Wi-Fi is detected and run the tests.
6. ☐ **Input:** open the keyboard tester and press every key; test the touchpad and touchscreen.
7. ☐ Screenshot any failed result (Ctrl + Show windows) and attach it to the ticket.

Common mistakes

✗ Skipping the memory test because it's slow.
✗ Not saving the results to the ticket.
✗ Replacing a battery that tests healthy.

If something goes wrong

Battery health low → Battery repair.
Memory or storage fails → System board: Section 6 or lead tech.

Verify before closing the ticket

- Results recorded on the ticket.
- Parts ordered only for a failed test or a fault you saw yourself.


S3 Powerwash and USB recovery

LEVEL 1

Fixes	Slow, crashing, corrupted OS, "ChromeOS is missing or damaged", Wi-Fi missing after an update
Time	Powerwash 10 min; recovery 20–40 min
Tools	Recovery USB or SD card (8 GB+)
Data loss	**Yes.** Erases all local files (Downloads).

In plain words. A Powerwash wipes the Chromebook back to factory settings, like a fresh start. Recovery goes further and reinstalls ChromeOS from a USB stick. Both erase files saved on the device, so warn the student first.

At a glance

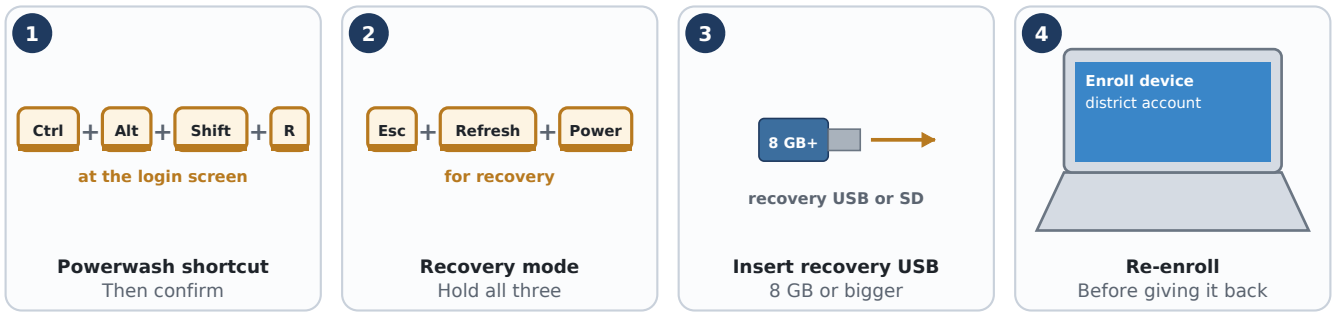

The pictures show the idea, not your exact model. The numbered steps below have the details.

District-managed devices. Enrolled devices should force re-enrollment on their first Wi-Fi connection after a wipe. Confirm with the lead tech that forced re-enrollment is on and the bench Wi-Fi reaches enrollment. Never enter Developer Mode on a district device.

Step by step

1. ☐ **Check for updates first:** Settings > About ChromeOS > Check for updates.
2. ☐ **Powerwash (factory reset):** sign out, press Ctrl + Alt + Shift + R, choose Restart, then Powerwash. (May be blocked by policy; use recovery instead.)
3. ☐ **Make recovery media:** on a working computer, open the Chromebook Recovery Utility, choose the **HP Chromebook 11A G8 EE** from its list (or search the model), insert an 8 GB+ drive, and click Create now.
4. ☐ Hold **Esc + Refresh**, tap **Power**, and release when the recovery screen appears.
5. ☐ Insert the recovery media and follow the prompts.
6. ☐ After it reboots, connect to Wi-Fi and confirm it re-enrolls to the KPS domain.

Common mistakes
✗ Not warning that Downloads will be erased.
✗ Choosing Developer Mode (never on district devices).
✗ Handing it back before re-enrolling.

If something goes wrong
"ChromeOS is missing or damaged" again after recovery → Storage failing: system board, Section 6.
Can't enroll → Lead tech checks the Admin console.

Verify before closing the ticket

- Boots to the enrollment or KPS sign-in screen.

- Shows as enrolled in the Admin console.
- Recovery can't write to storage: storage has failed. That's a system board repair or warranty claim.


S4 Keyboard layout and international keyboard fix

LEVEL 1

Fixes	Keys type the wrong symbols (@ and " swapped, accents appear, Z and Y swapped); a replacement keyboard with a different layout
Time	5 minutes
Tools	None
Data loss	None

In plain words. If keys type the wrong symbols, the keyboard usually isn't broken: the computer has been switched to a different keyboard language. A key combination switches it by accident.

At a glance

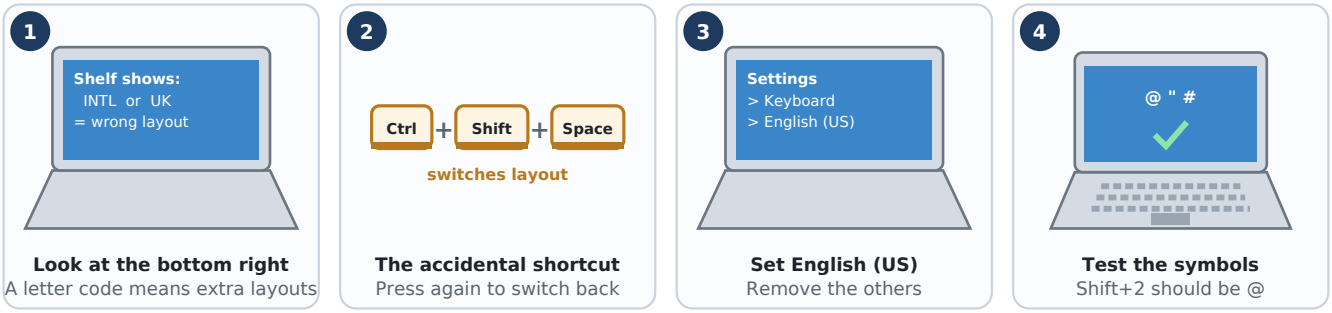

The pictures show the idea, not your exact model. The numbered steps below have the details.

ChromeOS can have several keyboard layouts installed. Students often switch layouts by accident with **Ctrl + Shift + Space**, or have **US International** on, which turns ' and " into accent keys. The physical keyboard is fine.

Step by step

1. ☐ Look at the bottom-right shelf. A layout code (US, INTL, UK, ES...) means more than one layout is installed.
2. ☐ Open **Settings > Device > Keyboard and inputs > Input** (on older versions: Settings > Advanced > Languages and inputs > Inputs).
3. ☐ Set **English (US)** as the active input. Remove any layouts the student doesn't need, especially US International, unless a teacher asked for it.
4. ☐ Test in a text box: Shift + 2 should type @ and Shift + ' should type ".
5. ☐ If a **replacement keyboard** has a different physical layout (UK keyboard on a US unit, for example), order the correct US part. Changing the software layout won't fix printed key labels.
6. ☐ If the wrong layout keeps coming back for everyone who signs in, it's set by district policy. Tell the lead tech; don't change it on the device.

Common mistakes

✗ Ordering a keyboard for a software problem.
✗ Leaving US International installed.
✗ Changing it when the district sets it by policy.

If something goes wrong

Wrong layout comes back → District policy sets it: tell the lead tech.
Printed keys are a different language → Wrong replacement part: order the US one.

Verify before closing the ticket

- Every key types its printed character in the S2 keyboard tester and in a text box.
- Only the needed layouts remain installed.

5 Hardware repairs

Every internal repair on this model starts with the keyboard deck (R2) and disconnecting the battery. Screw counts and sizes come from HP's guide.


Golden rules. Photograph every layer before removing it. Lay screws on the mat in the same pattern as the device. Unlock every connector before pulling a cable. Never force a part: if it won't move, find the screw or clip you missed. Test before the last screws go in.

R1 Single keycap replacement — LEVEL 1

Fixes	Missing, cracked or loose key
Part	Individual key (ask the manufacturer or harvest from a scrapped keyboard)
Time	5 minutes
Tools	Plastic pick, tweezers

In plain words. A key is a plastic cap clipped onto a small scissor-shaped hinge. A missing or broken key can usually be fixed with just the cap, in a few minutes.

At a glance

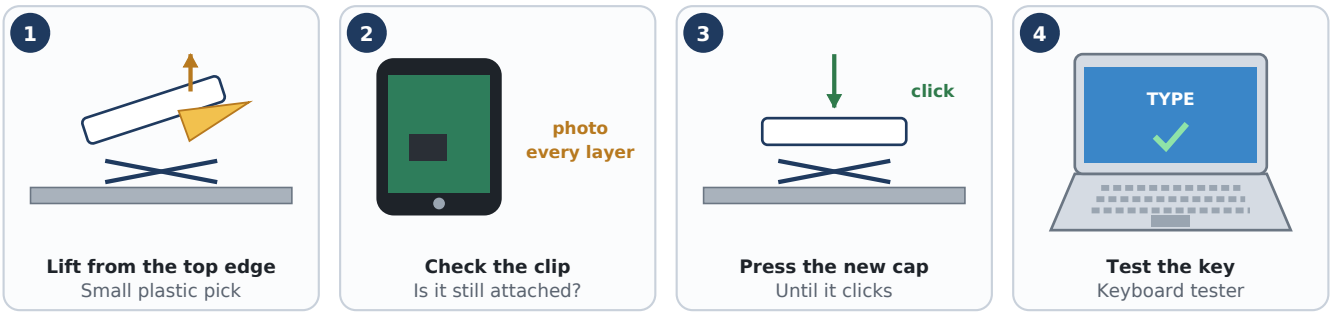

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

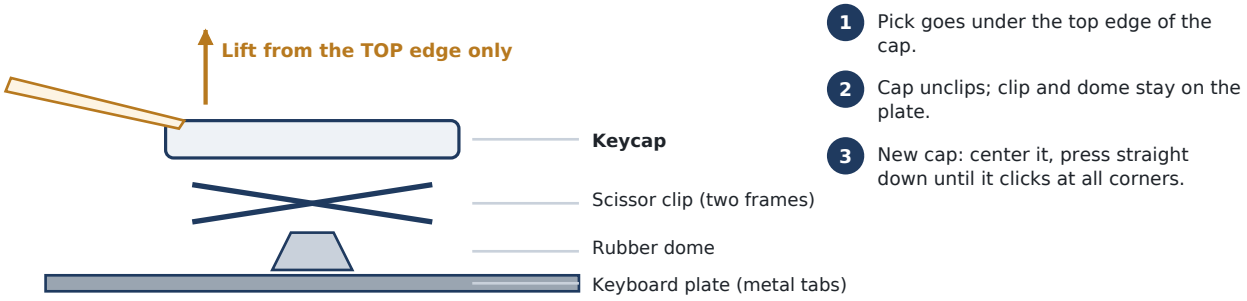


Illustration: side view of one key. Not to scale.

Step by step

1. ☐ Power off. Open the lid flat on the mat.

2. ☐ Slide a plastic pick under the TOP edge of the damaged key and lift until it unclips.
3. ☐ Check the scissor clip and rubber dome under it. A broken clip must be replaced too.
4. ☐ Fit a clip: hook its pins under the metal tabs on the keyboard plate, then press flat.
5. ☐ Center the new key over the clip and press straight down until it clicks at every corner.
6. ☐ Wide keys (Space, Shift, Enter): seat the metal stabilizer wire in its holders first.

Common mistakes
✗ Prying from the bottom edge (snaps the clip).
✗ Pressing a cap on crooked.
✗ Using a cap from a different model.

If something goes wrong
Clip is broken → Order the key with its clip, or replace the keyboard.
Key types nothing → Keyboard ribbon or keyboard: connectors repair first.

Verify before closing the ticket


- Key clicks evenly and springs back.
- Key registers in the S2 keyboard tester.

R2 Keyboard / top cover removal (the access cover) LEVEL 2

Fixes	Dead keyboard, cracked palm rest; the first step for every internal repair on this model
Part	Keyboard/top cover L92832-001 (gray, US) / L92833-001 (sage, US)
Time	15 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, screw mat


In plain words. On this model you open it from the top: the keyboard and palm rest lift off as one piece after you remove the screws underneath. The keyboard is still plugged in when it comes up, so go slowly.

At a glance

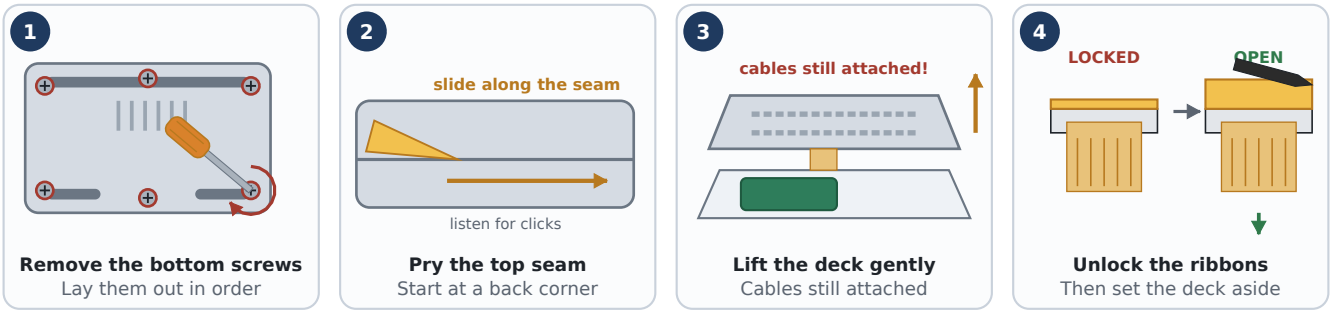

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

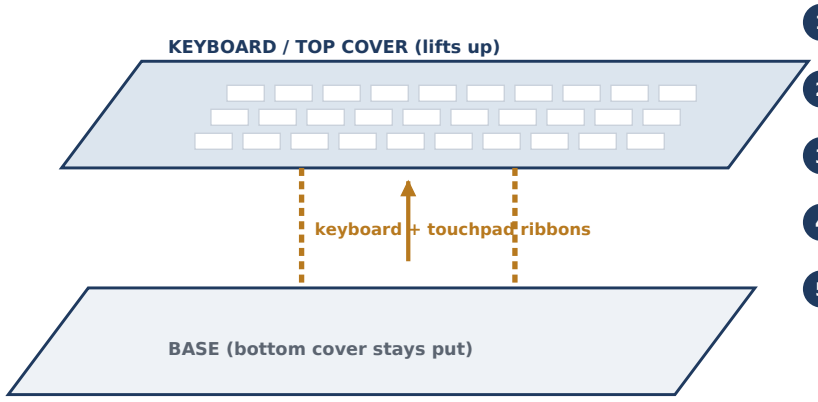

1. Flip the laptop: remove the 6 screws from the BOTTOM.
2. Flip back, open the lid. Pry the keyboard deck up at the rear edge.
3. Lift gently: two ribbons still connect it.
4. Unlock both ZIF latches, then lift the deck away.
5. Keyboard and top cover are one part.

Illustration: on this model you go in from the top. The keyboard deck is the access cover.

On this model you go in from the top. There is no removable bottom panel. The keyboard deck (keyboard + palm rest + touchpad) is the access cover, and the keyboard is built into it. "Keyboard replacement" and "top assembly" are the same part here.

Step by step

1. ☐ Shut down fully, unplug, remove any SD card.
2. ☐ Close the lid and turn the computer upside down on the mat.
3. ☐ Remove the 6 screws: 2 Phillips M2.5×8.7 and 4 Phillips M2.5×7.2 that hold the keyboard/top cover to the bottom cover. Note which holes take the longer screws.
4. ☐ Turn it right side up and open the lid as far as it goes.
5. ☐ Starting at the rear edge (near the hinges), slide a plastic pick into the seam and release the clips along the back, then the sides.
6. ☐ Lift the rear of the keyboard deck slowly, like opening a book toward you. Don't pull: the keyboard and touchpad ribbons are still connected.
7. ☐ Unlock the ZIF (a flip-up latch that clamps a flat ribbon cable) latches and slide out the touchpad and keyboard ribbons (release the keyboard cable shielding). Lift the deck away.
8. ☐ **Disconnect the battery now** (see the battery repair, first steps) before touching anything else.
9. ☐ To refit: reconnect the ribbons and lock the latches, lay the deck on, press around the edges until every clip snaps, then refit the bottom screws.

Common mistakes

✗ Yanking the deck up and tearing the keyboard ribbon.
✗ Missing a screw and cracking the deck.
✗ Pulling ribbons without unlocking the latch.

If something goes wrong

Keyboard dead after refitting → Ribbon not fully in: reseat it (connectors repair).
Deck won't sit flat → A cable is trapped underneath. Lift and reroute.

Verify before closing the ticket

- Keyboard and touchpad pass the S2 tests after refitting.
- No gaps at the seam; every bottom screw refitted.

First-teardown notes — fill in the first time you do this repair	
Which holes take the long screws?	_____
Where the first clip released	_____


R3 Battery replacement

LEVEL 2

Fixes	Won't hold charge, low health in S2, swollen battery
Part	Battery L75783-005; bracket L98587-001; tape L14905-001
Time	15–20 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, ESD strap

In plain words. The battery is a flat pack that powers the Chromebook when it's unplugged. To replace it you unplug its cable from the board, remove a few screws, and lift it out. Batteries can be dangerous if bent or punctured, so handle them gently.

At a glance

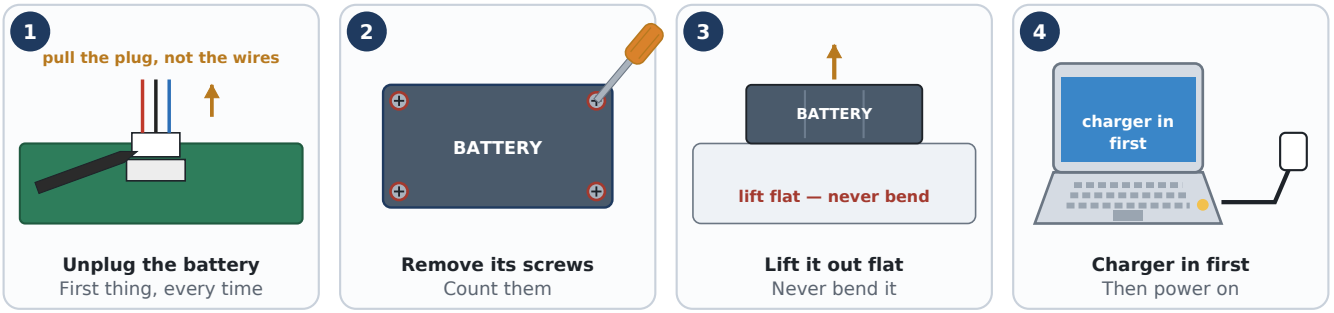

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

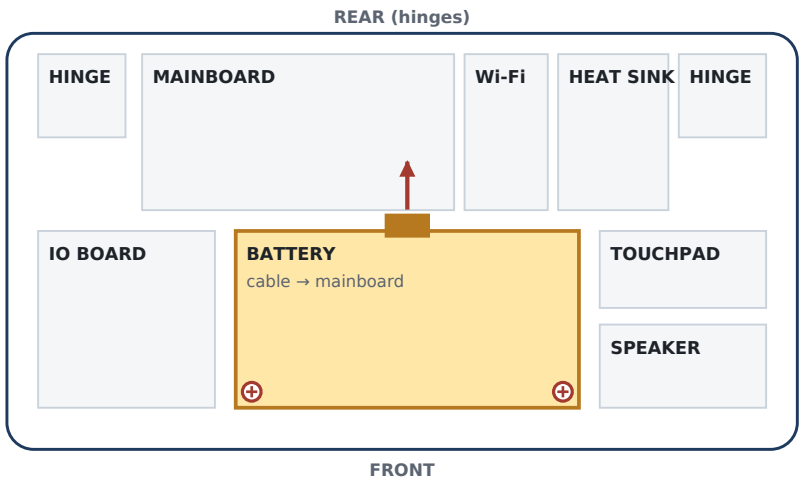


Illustration: base interior, battery highlighted. Screw positions illustrative.

1. Unplug the battery cable from the mainboard first (red arrow).
2. Pry at the plug body, never the wires.
3. Remove the battery screws (count them).
4. Lift out flat. Never bend or pry against the cell.

Swollen battery = Level 3. Don't press or pry. The lead tech handles it; the old cell goes straight to the fire-safe bin.

Step by step

1. ☐ Remove the keyboard deck (top cover repair above).
2. ☐ Lift the tape or shielding over the battery connector, then disconnect the battery cable from the system board. Pry at the connector body.
3. ☐ Remove the 2 Phillips M2.0×4.2 screws that hold the battery to the bottom cover.
4. ☐ Lift the battery out. Never bend it.
5. ☐ Fit the new battery, refit its screws, reconnect the cable, and re-tape the connector.
6. ☐ Refit the keyboard deck. Plug in the charger before powering on.

Common mistakes

✗ Pulling the battery cable by its wires.
✗ Prying under the battery with a metal tool.
✗ Thinking it's dead because it won't start without the charger.

If something goes wrong

Swollen, hot, hissing or smells sweet → STOP. Don't press it. Fire-safe bin, get an adult.
Won't power on with new battery → Plug in the charger for 30 minutes, then hard reset (S1).

Verify before closing the ticket

- Charging light comes on; battery percentage shows.
- S2 battery health near 100% on a new battery.
- Old battery goes to battery recycling, never the trash.

Speakers first. HP's order on this model: remove the speakers (R7) before the battery; the speaker cable runs over it.


R4 Reseating internal connectors

LEVEL 2

Fixes	Dead keyboard, touchpad or speakers; black screen; dead ports; no power after a drop
Part	None, unless a cable is damaged
Time	15–25 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, isopropyl alcohol

In plain words. Inside, parts connect to the main board with small plugs and flat ribbon cables. A drop can wiggle one loose. Unplugging it, checking it, and plugging it back in properly fixes many problems for free.

At a glance

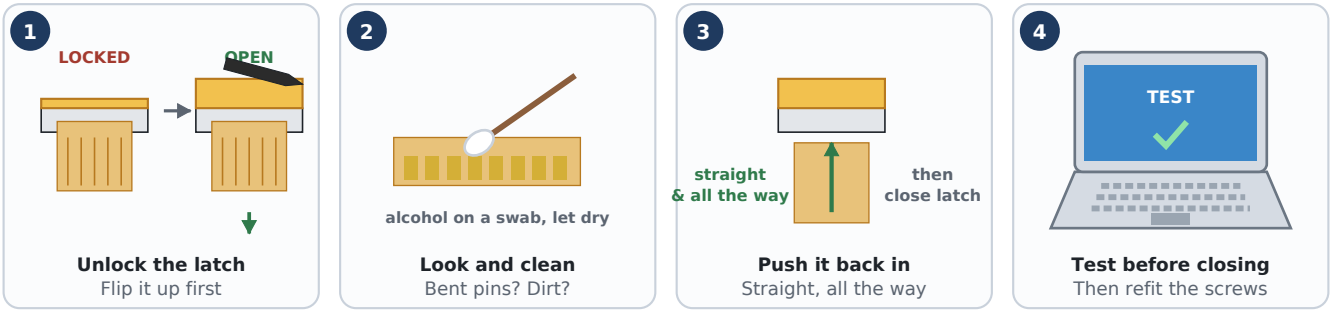

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

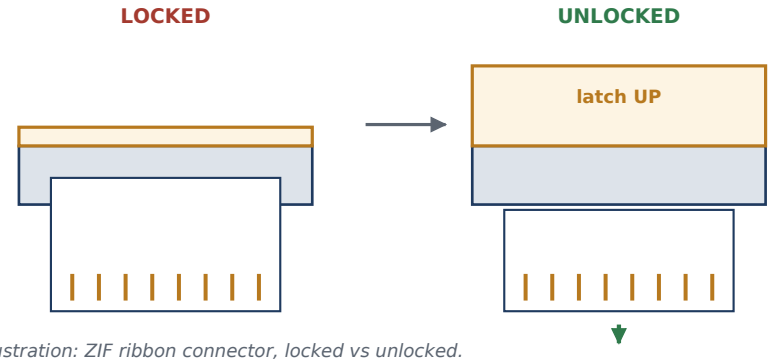


Illustration: ZIF ribbon connector, locked vs unlocked.

1. Flip the hinged latch up (or slide a drawer-type latch out) with a spudger.
2. Ribbon now slides out with zero force. Never pull a locked ribbon.
3. Refit: contacts facing the same way, push in straight and fully, close latch.
4. Board-to-wire plugs (battery, speaker): pry at the plug body, never the wires.

Connector	Type	How to release
Keyboard ribbon	ZIF ribbon	Unlock the latch; slide out
Touchpad ribbon	ZIF ribbon	Unlock the latch; slide out
Battery cable	Board-to-wire	Lift tape; pry at the connector body
Display (eDP) cable	Locking connector	Lift tape and the locking bar, then pull straight
Connector board cables	ZIF ribbons	Unlock both ends first
Speaker cable	Board-to-wire	Pry at the plug body

Connector	Type	How to release
Wi-Fi antennas (2)	Snap-on coax	Lift straight up; #1 white = Main, #2 black = Aux

Step by step

1. ☐ Open the device and disconnect the battery.
2. ☐ Hold Power for 5 seconds with the battery disconnected to drain leftover power.
3. ☐ For each connector related to the symptom: photograph it, unlock and release it, and inspect it for bent pins, burn marks or creases.
4. ☐ Clean dirty contacts with a brush dampened in isopropyl alcohol. Let them dry 5 minutes.
5. ☐ Reconnect each one. Ribbons must go in straight and all the way before you close the latch.
6. ☐ Reconnect the battery last. Plug in and test **before** closing up.

Common mistakes
✗ Pulling a ribbon without unlocking the latch.
✗ Inserting a ribbon crooked or only half way.
✗ Forgetting to reconnect the battery last.

If something goes wrong
Ribbon is creased or torn → Replace that cable or part.
Symptom comes back later → The part itself is failing: replace it.

Verify before closing the ticket

- Symptom gone in a full test, not just at boot.
- Creased or torn ribbons replaced.


R5 Wi-Fi card reseat or replacement

LEVEL 2

Fixes	No Wi-Fi or Bluetooth, weak signal, Wi-Fi gone after a drop
Part	WLAN card L54709-001
Time	15 minutes
Tools	Phillips driver, plastic tweezers

In plain words. The Wi-Fi card is a small removable card with two thin antenna wires snapped on top. It sits at an angle in a slot and is held down by one screw.

At a glance

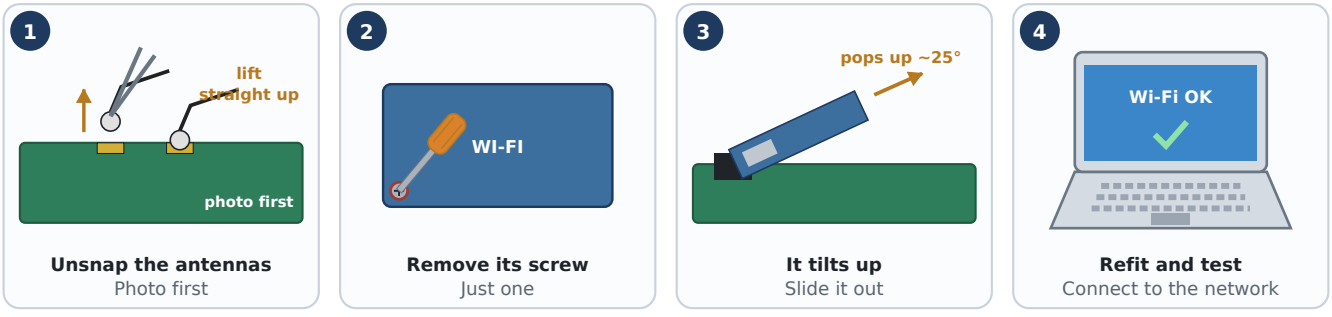

Unsnap the antennas
Photo first


Remove its screw
Just one

It tilts up
Slide it out

Refit and test
Connect to the network

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

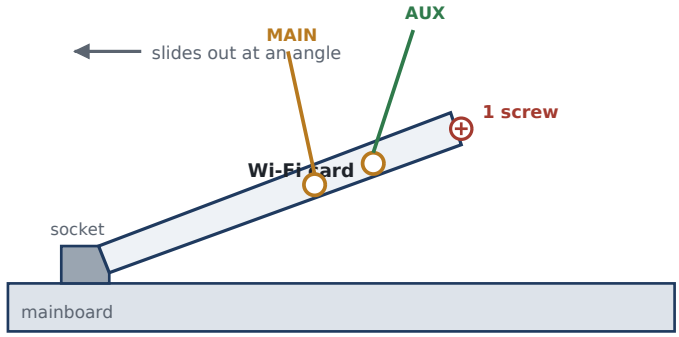

1. Photograph which antenna goes on which terminal.
2. Lift both antenna plugs straight up with plastic tweezers.
3. Remove the 1 screw. The card springs up at an angle.
4. Slide it out of the socket. Refit in reverse.

Illustration: M.2 Wi-Fi card, side view. Colors of antenna leads vary.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Find the Wi-Fi card on the system board.
3. ☐ Note which antenna is on which terminal: #1 (white) goes to Main, #2 (black) to Aux. Lift both straight off.
4. ☐ Remove the 1 Phillips M2.0×2.9 screw.
5. ☐ The card tilts up. Slide it out of the socket at an angle.
6. ☐ Refit at an angle, press down, refit the screw, snap on both antennas, reconnect the battery and test.

Common mistakes

✗ Swapping the two antenna wires.
✗ Pulling antennas sideways (breaks the snap).
✗ Using a card that isn't the approved part.

If something goes wrong

Weak signal after a repair → An antenna wire is pinched or unplugged.
No Wi-Fi at all → Try a powerwash (S3) and a known-good card.

Verify before closing the ticket

- Wi-Fi connects and the S2 connectivity tests pass.
- Bluetooth finds a device.
- Weak signal after a lid repair usually means a pinched antenna lead.

Use an approved card. HP warns that an unauthorized card can make the system unresponsive. Use the HP spare part, or move the card from a donor of the same model.


R6 Touchpad and touchpad cable replacement

LEVEL 2

Fixes	Touchpad dead, erratic, cracked or won't click (keyboard works)
Part	Touchpad L99224-001 (gray) / L92823-001 (sage); bracket L89791-001; cable in Cable Kit L93821-001
Time	20–30 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, Kapton tape


In plain words. The touchpad is a flat glass or plastic pad held from underneath by a few small screws and a bracket. A ribbon cable connects it to the board.

At a glance

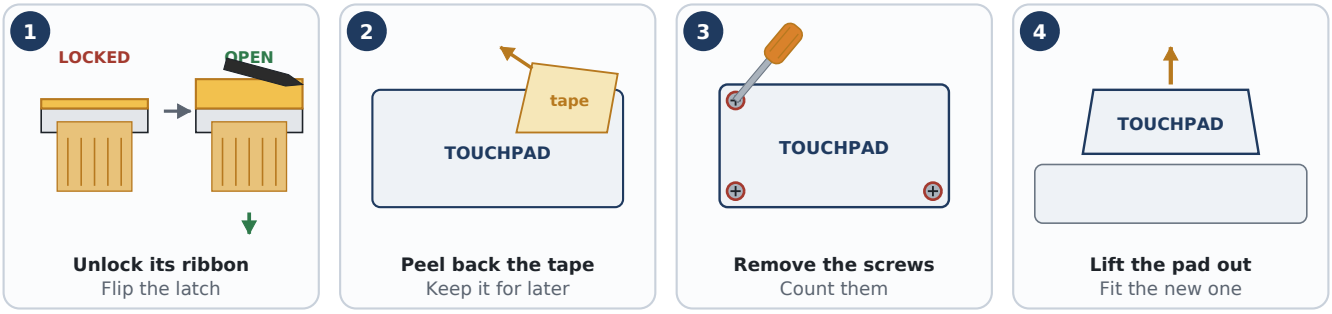

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

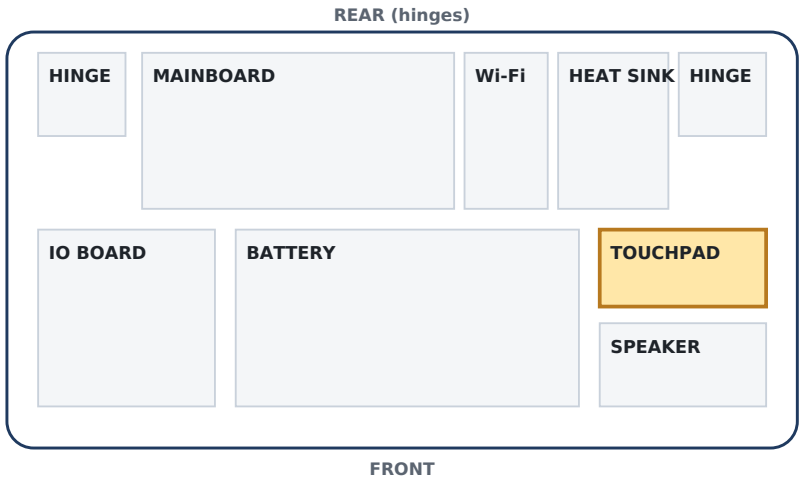

1. Battery disconnected first.
2. Unlock the ZIF latch before sliding the ribbon out.
3. Lift tape or Mylar; remove the screws.
4. Conductive tape must touch the pad on reassembly.

Illustration: base interior, touchpad highlighted. Position illustrative.

Check first: touchpad turned on in Settings, S1 done, and the cable reseated.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery. The touchpad is in the underside of the deck.
2. ☐ Peel back the pad or tape over the touchpad cable, unlock its ZIF (a flip-up latch that clamps a flat ribbon cable) latch at the touchpad, and remove the cable.

3. ☐ Release any shielding along the top edge of the touchpad.
4. ☐ Remove the 3 Phillips M2.0×2.2 broad-head (wide, flat-headed) screws, then 4 Phillips M2.0×2.9 screws that hold the touchpad and its bracket.
5. ☐ Remove the bracket, then lift out the touchpad.
6. ☐ Fit the new touchpad and bracket, refit the screws, restick the shielding, and reconnect the cable.

Common mistakes
✗ Forgetting the conductive tape (the pad acts strange).
✗ Over-tightening screws (click stops working).
✗ Ribbon not locked.

If something goes wrong
Click doesn't work → Loosen the bracket screws a little.
Cursor jumps around → Check the tape and ribbon; try S3.

Verify before closing the ticket


- Cursor moves, clicks and two-finger scrolls.
- Click works at all four corners.
- Passes the S2 touchpad test.

R7 Speaker replacement — LEVEL 2

Fixes	No sound or crackling from the speakers, with headphones working
Part	Speakers L89788-001 (pair, with 2 rubber isolators)
Time	20 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers

In plain words. The speakers are two small boxes joined by one cable. They unplug from the board, unroute from a few clips, and lift out. The rubber pieces stop them rattling, so keep them.

At a glance

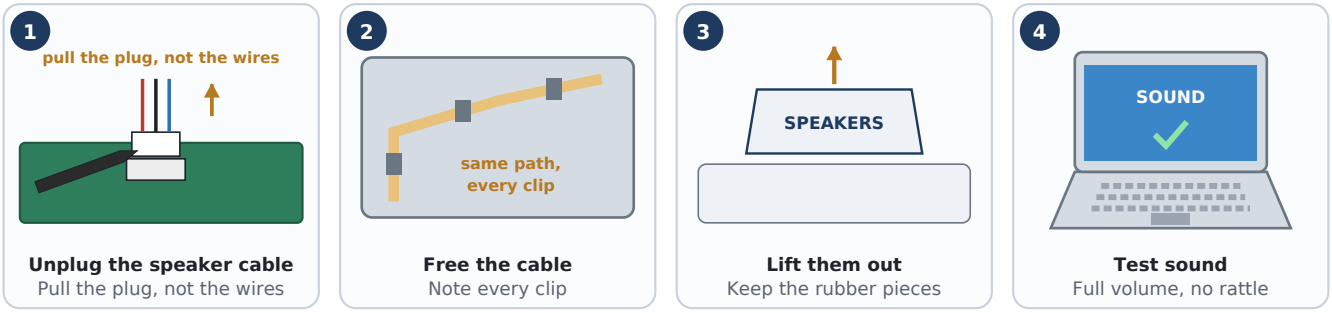

Unplug the speaker cable
Pull the plug, not the wires


Free the cable
Note every clip

Lift them out
Keep the rubber pieces

Test sound
Full volume, no rattle

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

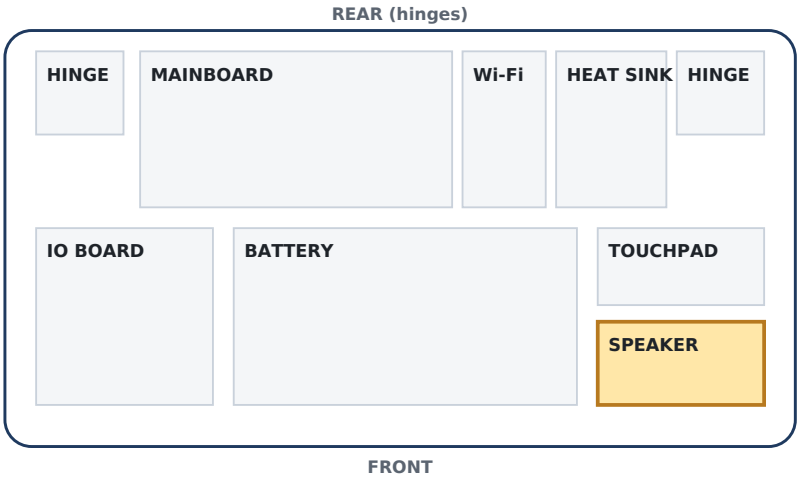

1. Battery disconnected.
2. Unplug the speaker cable at the board.
3. Unroute the cable, noting each clip.
4. Keep the rubber isolators: they stop rattle.

Illustration: base interior, speaker highlighted. Position illustrative.

Check first: if headphones also have no sound, the fault is software or the system board, not the speakers.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Lift any tab and disconnect the speaker cable from the system board.
3. ☐ Release the speaker cable from its routing clips.
4. ☐ Remove the 3 Phillips M2.0×4.2 screws (release the shielding over the battery cable first).
5. ☐ Lift out the speakers with their rubber isolators (rubber anti-rattle pieces).
6. ☐ Fit the new speakers (isolators in place), route the cable through every clip, and reconnect.

Common mistakes

✗ Losing the rubber isolators (speakers buzz).
✗ Pinching the cable under the cover.
✗ Replacing speakers when headphones are silent too.

If something goes wrong

Headphones also silent → Software or board: S1, S3, then lead tech.
Rattle at high volume → Missing isolator or loose screw.

Verify before closing the ticket

- Clear sound from both sides with no rattle at full volume.
- Headphone jack still works.


R8 I/O (USB) daughterboard replacement

LEVEL 2

Fixes	Dead USB-A, audio jack with the system board working
Part	Connector board L92816-001 (USB + audio jack); left I/O bracket L89793-001; cables in Cable Kit L93821-001
Time	20–30 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers

In plain words. The I/O board is a small separate board that holds some of the ports (like the USB-A port or headphone jack). It connects to the main board with a ribbon cable, so it can be swapped by itself.

At a glance

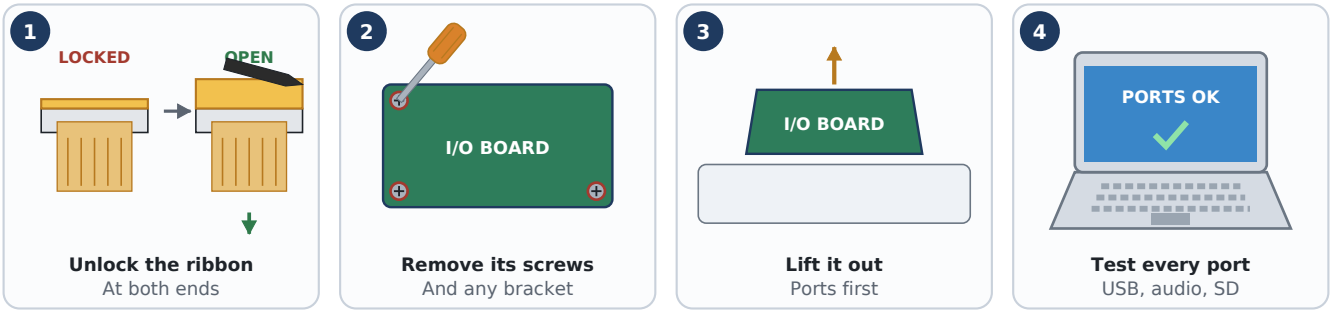

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

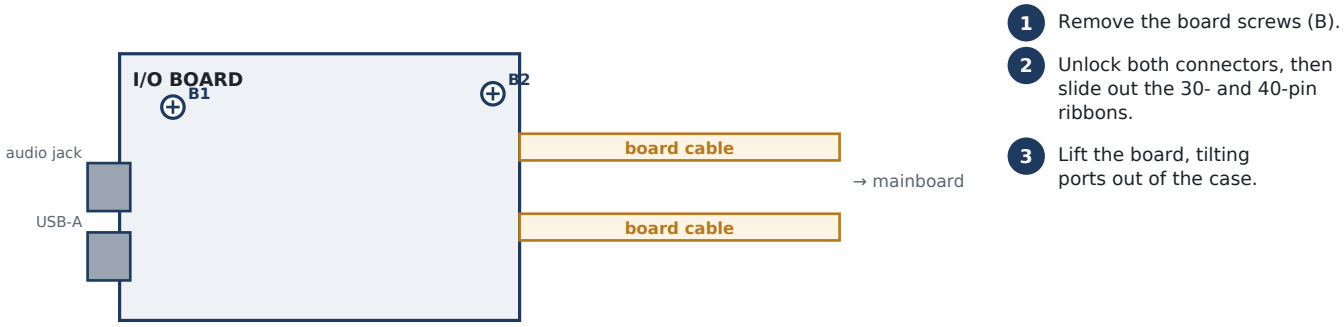


Illustration: USB board from above. Port order and screw spots illustrative. Confirm on yours.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Release the shielding and unlock the ZIF (a flip-up latch that clamps a flat ribbon cable) connectors at both ends of the connector board cables; remove the cables.
3. ☐ Check whether a speaker or bracket covers the board; move it aside if so.
4. ☐ Remove the 2 Phillips M2.0×4.2 screws.
5. ☐ Remove the I/O bracket, then lift out the board.

6. ☐ Fit the new board and bracket, refit the screws, refit the cables with the latches locked, reconnect the battery and test every port.

Common mistakes
✗ Ribbon in upside down or crooked.
✗ Forgetting the bracket.
✗ Testing only one port.

If something goes wrong
Ports still dead → Ribbon cable or the main board connector.
USB-C dead → Usually on the main board: Section 6.

Verify before closing the ticket


- Every port on the board works (flash drive, charger, SD card, headphones as fitted).
- Bracket and all screws refitted.

R9 Display bezel replacement — LEVEL 2

Fixes	Cracked, loose or missing screen bezel; the first step for panel, camera and display-cable repairs
Part	Display bezel L89773-001; hinge cover L89769-001 (gray) / L89770-001 (sage)
Time	10 minutes
Tools	Plastic picks, Phillips driver


In plain words. The bezel is the plastic frame around the screen. It clips (and sometimes glues) onto the lid. You remove it to get to the screen, camera or display cable.

At a glance

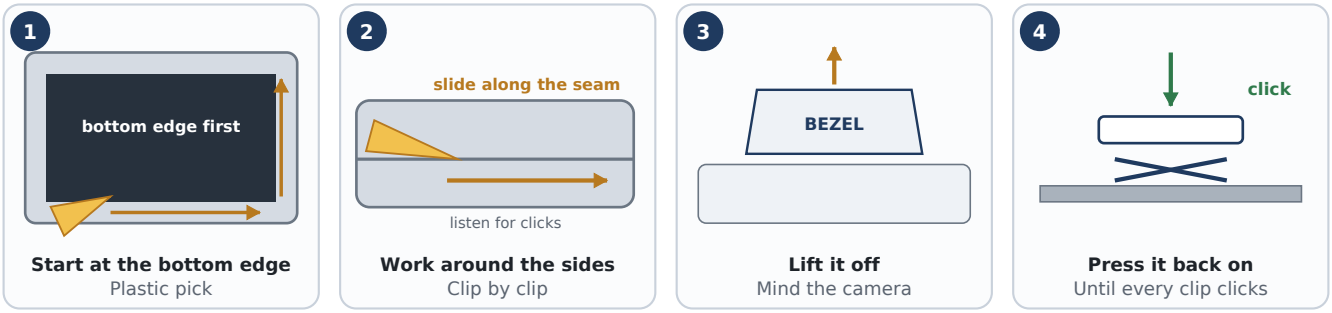

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

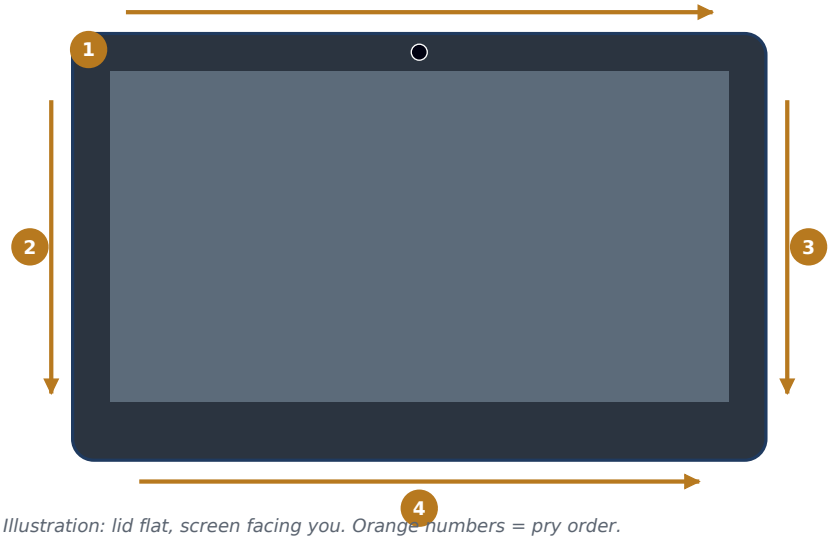

1. No screws: this bezel clips on.
2. Start at the top edge with a plastic pick.
3. Work down the left and right sides.
4. Do the bottom (hinge) edge last.
5. Don't pull on the camera window.

Illustration: lid flat, screen facing you. Orange numbers = pry order.

Step by step

1. ☐ Shut down and unplug. Open the lid flat on the mat.
2. ☐ Pry off the hinge cover along the bottom of the display with a thin plastic tool.
3. ☐ Release the top edge of the bezel (the plastic frame around the screen) with a plastic pick.
4. ☐ Work down the left and right sides.
5. ☐ Release the bottom edge last.
6. ☐ To fit: line up the camera window, press around the edge until every clip seats.

Common mistakes

✗ Prying against the screen (cracks it).
✗ Bending the bezel too far.
✗ Forgetting new adhesive on glued bezels.

If something goes wrong

Gap after refitting → A clip isn't seated or broke.
Camera blocked → Bezel isn't lined up.

Verify before closing the ticket

- Bezel sits flush all round.
- Camera window lined up; privacy shutter slides freely.
- Lid closes fully.


R10 LCD panel replacement

LEVEL 2

Fixes	Cracked screen, dead pixels, blotches, black screen not fixed by the display cable
Part	Panel L92827-001 (HD UWVA) / L92826-001 (HD SVA) / L92828-001 (touch)
Time	25–35 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, safety glasses, Kapton tape


In plain words. The LCD panel is the screen itself. Once the bezel is off, it's held by small screws or stretchy tape. It tips forward so you can unplug its cable from the back.

At a glance

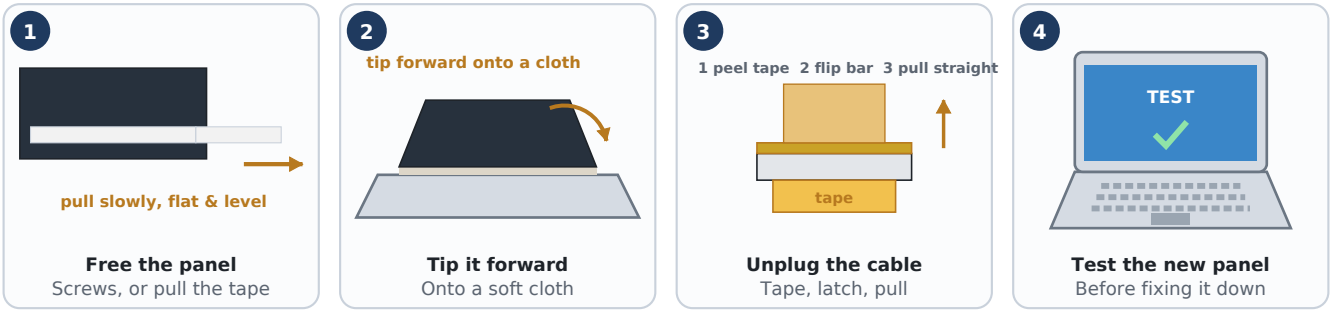

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

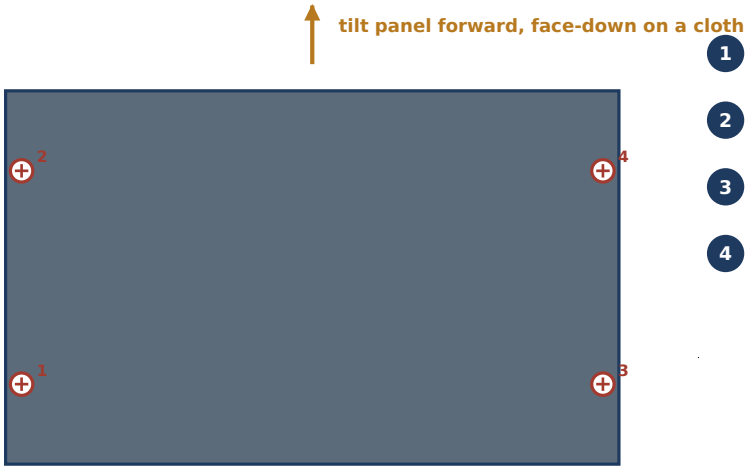

1. Remove the 4 panel screws (sides of the panel).
2. Lay the panel face-down on the keyboard (cloth under it).
3. On the back: peel the tape over the connector, open the clip, pull the cable straight out.
4. Connect the new panel and TEST before screwing it down.

Illustration: lid with bezel removed. Screw positions are typical. Count them on yours.

Cracked glass. Wear safety glasses. Tape across a shattered panel before handling it.

Test first: if an external USB-C display works, the system board is fine and the fault is the panel or its cable.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Remove the bezel (the plastic frame around the screen).

3. ☐ Remove the 4 Phillips M2.0×2.9 screws that hold the panel to the back cover.
4. ☐ Lift the top edge and swing the panel forward until it rests face down on the keyboard (cloth underneath).
5. ☐ Release the adhesive support strip, lift the locking bar, and disconnect the panel cable.
6. ☐ Connect the new panel, close the locking bar, restick the strip, and test the picture **before** screwing the panel down.
7. ☐ Refit the screws, bezel and keyboard deck.

Common mistakes
✗ Pressing on the screen face.
✗ Pulling the cable before opening the latch.
✗ Ordering the wrong panel (touch vs non-touch).

If something goes wrong
New panel also black → Display cable or board: cable repair next.
Touch not working → Wrong panel type or touch cable not connected.

Verify before closing the ticket


- Full image: no lines, dead pixels or uneven backlight.
- Brightness works across its whole range.
- Image steady through full lid travel.

R11 Display (eDP) cable replacement — LEVEL 2

Fixes	Flicker, lines or black screen that changes with lid angle; external display works
Part	Panel cable L89775-001 (non-touch) / L89776-001 (touch)
Time	40–50 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, Kapton tape

In plain words. The display cable carries the picture from the main board up through the hinge to the screen. Hinges bend it every time the lid moves, so it wears out. Symptoms change when you move the lid.

At a glance

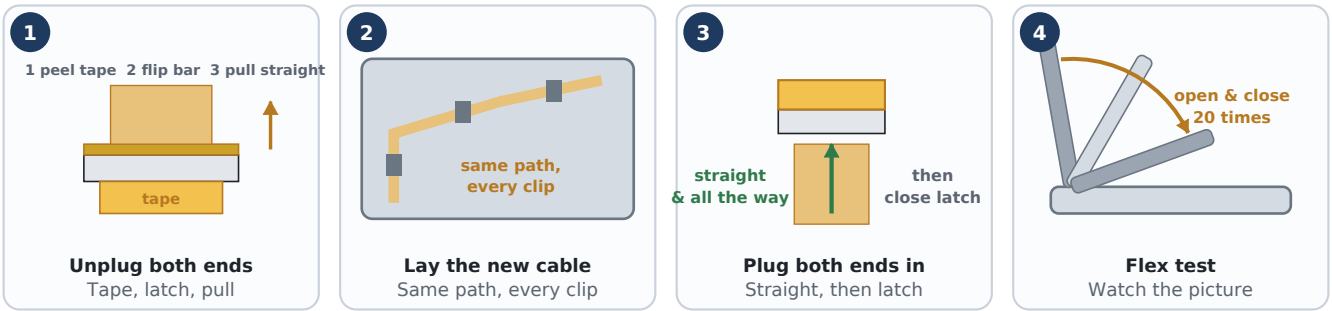

Unplug both ends
Tape, latch, pull

Lay the new cable
Same path, every clip

Plug both ends in
Straight, then latch

Flex test
Watch the picture

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

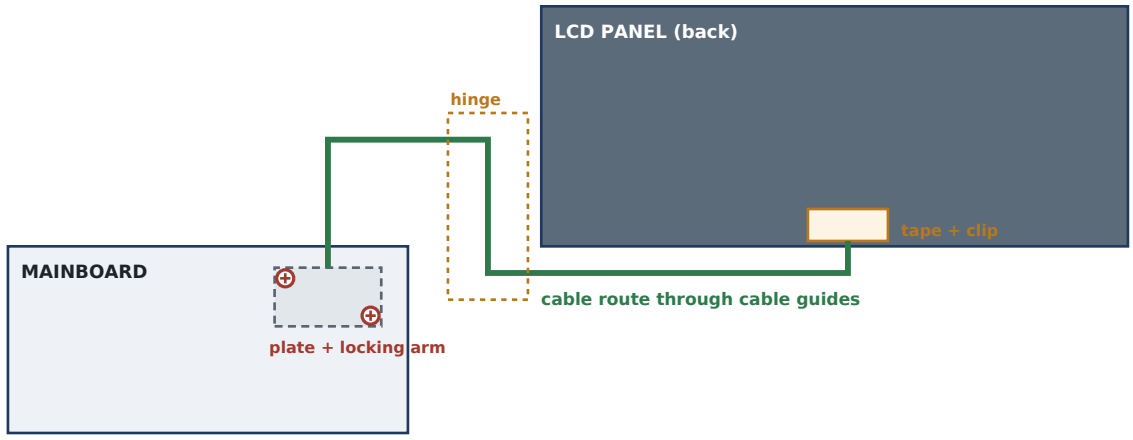


Illustration: display cable path, mainboard to panel (route simplified). Photograph the real route before removing.

Step by step

1. ☐ Remove the keyboard deck, disconnect the battery, and disconnect the panel cable at the system board.
2. ☐ Remove the bezel (the plastic frame around the screen) and panel (panel repair steps).
3. ☐ Photograph the route, then free the cable from the retention clips and routing channel.
4. ☐ Peel it off the back cover (double-sided adhesive).
5. ☐ Route the new cable exactly along the old path, through every clip, and reconnect both ends.
6. ☐ Test at every lid angle before reassembly.

Common mistakes

✗ Routing the cable a new way (it gets pinched).
✗ Leaving the tape off the connector.
✗ Not testing at different lid angles.

If something goes wrong

Flicker only at some angles → Cable still pinched or not seated.
Black screen, external display works → Panel: LCD panel repair.

Verify before closing the ticket

- Steady image at every angle: open and close the lid 20 times while watching.
- Camera still works if it shares the cable.


R12 Camera module replacement

LEVEL 2

Fixes	Camera not detected, black image, broken lens
Part	Webcam module L92824-001 (adhesive); cable in Cable Kit L93821-001
Time	15–20 minutes
Tools	Plastic picks, plastic tweezers

In plain words. The camera is a small strip at the top of the screen. It's usually held by sticky tape and connected by a tiny cable. Behind the bezel, it lifts out easily.

At a glance

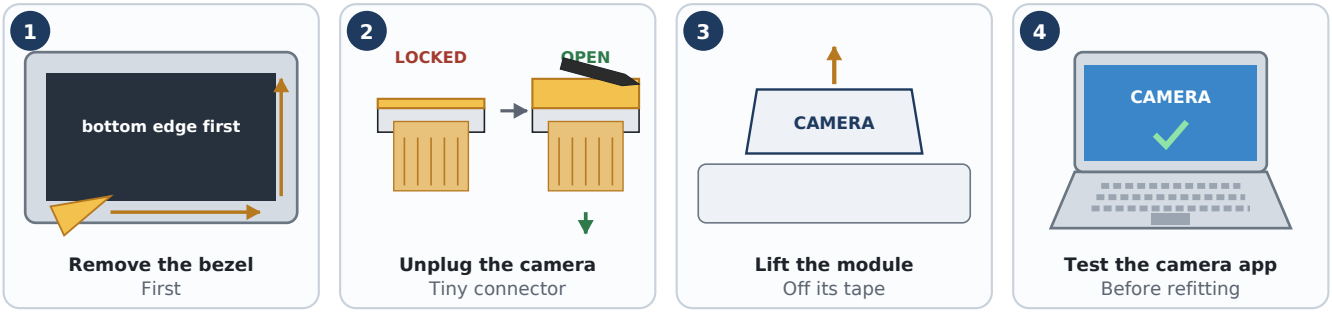

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model



Illustration: camera at the top-center of the lid. Cap shapes simplified.

Check first: privacy shutter open? Camera works after S1 and a powerwash (S3)?

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Remove the bezel (the plastic frame around the screen).
3. ☐ The camera module is held by double-sided adhesive at the top of the lid. Slide a thin plastic pick under it.
4. ☐ Release the ZIF (a flip-up latch that clamps a flat ribbon cable) connector and disconnect the camera cable.
5. ☐ Fit the new module (it comes with adhesive), reconnect, and test before refitting the bezel.

Common mistakes
✗ Touching the lens.
✗ Forgetting the privacy shutter is closed.
✗ Bending the camera strip.

If something goes wrong
Still not detected → Check the cable; try S3.
Image blurry → Lens dirty or fingerprinted.

Verify before closing the ticket


- Camera app shows a clear image.
- Privacy shutter fully covers the lens when closed.
- Works in a Google Meet test call.

R13 Hinge replacement — LEVEL 2

Fixes	Floppy lid, cracked hinge, grinding, lid won't stay up
Part	Hinges L89768-001 (pair); display bracket L89774-001
Time	30–45 minutes
Tools	Phillips driver, plastic picks


In plain words. Hinges are metal brackets that hold the lid to the base and keep it at any angle. A cracked or loose hinge makes the lid floppy.

At a glance

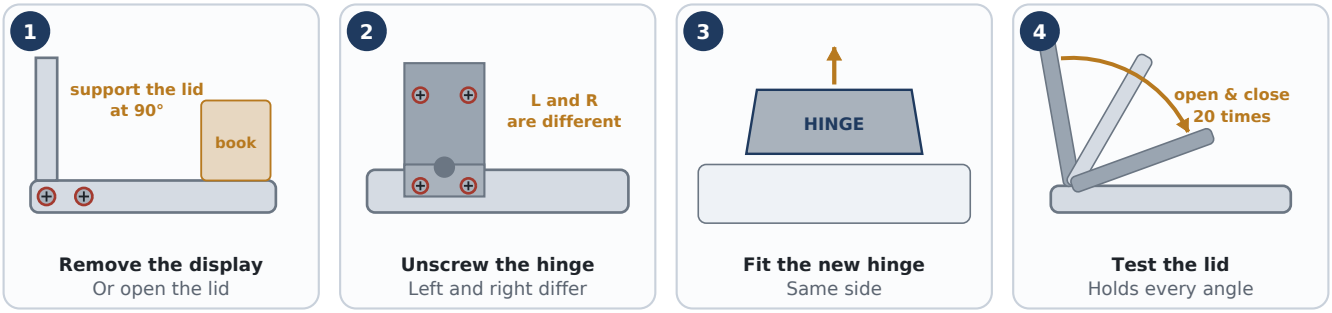

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

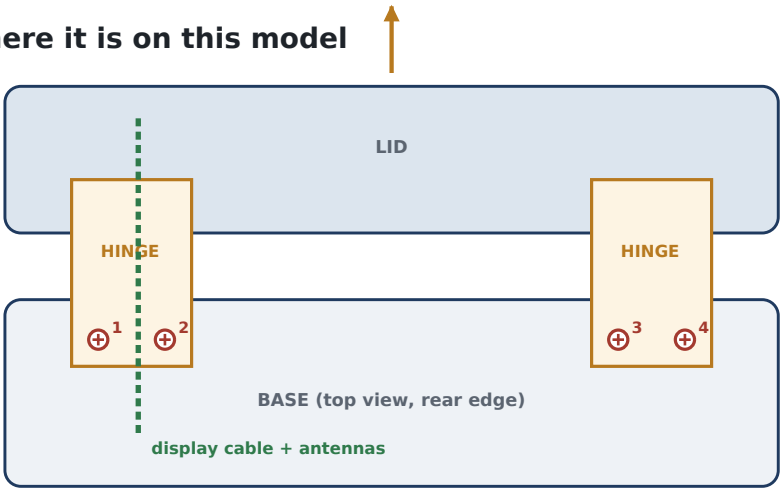

1. Battery out, display cable unplugged at the mainboard.
2. Unthread cable and Wi-Fi antennas from the guides FIRST.
3. Remove the 4 Phillips M2.5×4.7 screws (hinges to bottom cover).
4. Support the lid, then lift it away from the base.

Illustration: hinge area seen from above with the D cover off. Positions approximate.

Check first: tighten the hinge screws. A screw that spins without tightening means a stripped post: that's a cover replacement.

Step by step

1. ☐ Remove the keyboard deck and disconnect the battery.
2. ☐ Disconnect the Wi-Fi antennas and the display and camera cables at the system board.
3. ☐ Remove the 4 Phillips M2.5×4.7 screws that hold the hinges to the bottom cover.
4. ☐ Open the display fully, slide the hinges out, and lift the display off the base.
5. ☐ To replace the hinges on the lid: remove the bezel (the plastic frame around the screen) and hinge cover, then the 6 Phillips M2.5×3.0 broad-head (wide, flat-headed) screws that hold the back cover to the hinges.
6. ☐ Fit the new hinges (left and right are mirror images), refit every screw, route the cables back through the hinges, and reconnect.

Common mistakes
✗ Mixing up left and right hinges.
✗ Pinching the display cable in the hinge.
✗ Forcing a stripped screw.

If something goes wrong
Screw spins and never tightens → Stripped post: cover replacement.
Lid floppy on one side → Wrong hinge or loose screw.

Verify before closing the ticket

- Lid holds any angle through its full travel.
- Both hinges feel equally stiff.
- Display steady and Wi-Fi strength normal (no pinched cables).

First-teardown notes — fill in the first time you do this repair

Which hinge the display cable passes through _____


R14 Keyboard (top cover) replacement

LEVEL 2

Fixes	Several dead keys, a dead row, liquid-damaged keyboard, cracked palm rest
Part	Keyboard/top cover L92832-001 (gray, US) / L92833-001 (sage, US)
Time	60–90 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, ESD strap, screw mat, Kapton tape

In plain words. On this model the keyboard comes out on its own or as the deck you already removed to get inside. You swap it, plug in its ribbon, and test.

At a glance

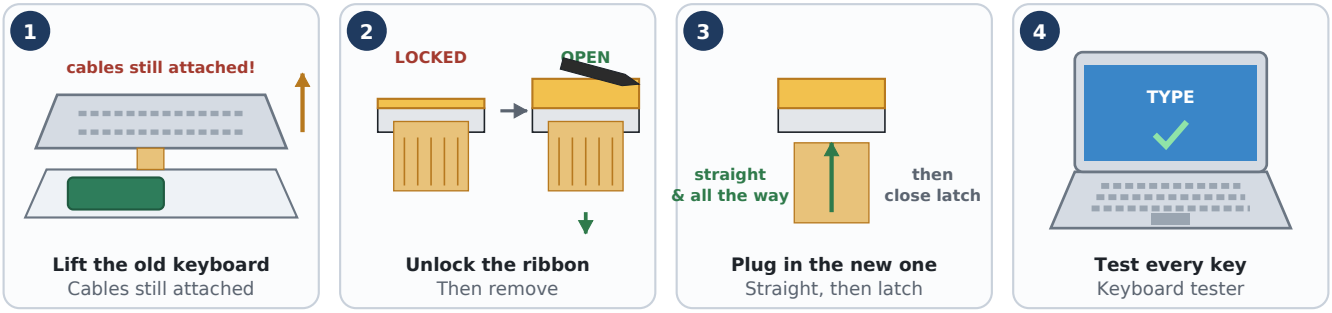

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model



Illustration: what moves to the new top assembly. Check what comes pre-fitted first.

Step by step

1. ☐ Remove the keyboard deck (top cover repair). On this model that IS the keyboard replacement.
2. ☐ Compare old and new decks. Move anything the new one lacks: touchpad and bracket, rubber bumpers, Mylar (a thin plastic sheet), tape.
3. ☐ Reconnect the keyboard and touchpad ribbons to the system board and lock the latches.
4. ☐ Fit the new deck and refit the bottom screws.

Common mistakes
✗ Ribbon not fully in.
✗ Forgetting to move the touchpad or tape.
✗ Using a keyboard with the wrong language.

If something goes wrong
Some keys dead → Ribbon not seated: reseat.
Wrong symbols → S4, or wrong-language part.

Verify before closing the ticket


- Every key passes the S2 keyboard test.
- Touchpad, display, camera, ports, speakers and Wi-Fi all work.
- No screws left over.

R15 Heat sink replacement — LEVEL 3

Fixes	Overheating, thermal shutdowns, loud or rattling fan
Part	Heat sink L92817-001 (with thermal pads); Thermal Pad Kit L93823-001
Time	20–30 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, isopropyl alcohol, lint-free cloth

In plain words. The heat sink is a copper plate that pulls heat off the processor. A thin layer of thermal paste between them helps heat move. Whenever the heat sink comes off, the old paste must be cleaned off and new paste put on.

At a glance

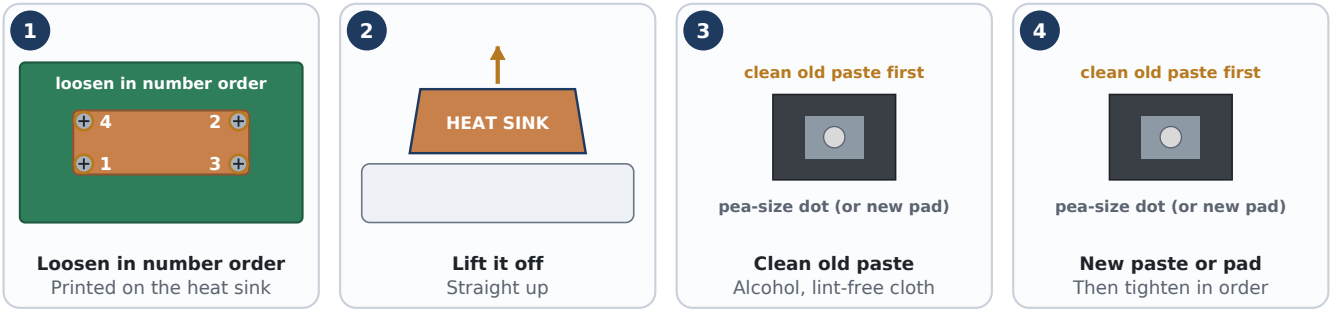

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

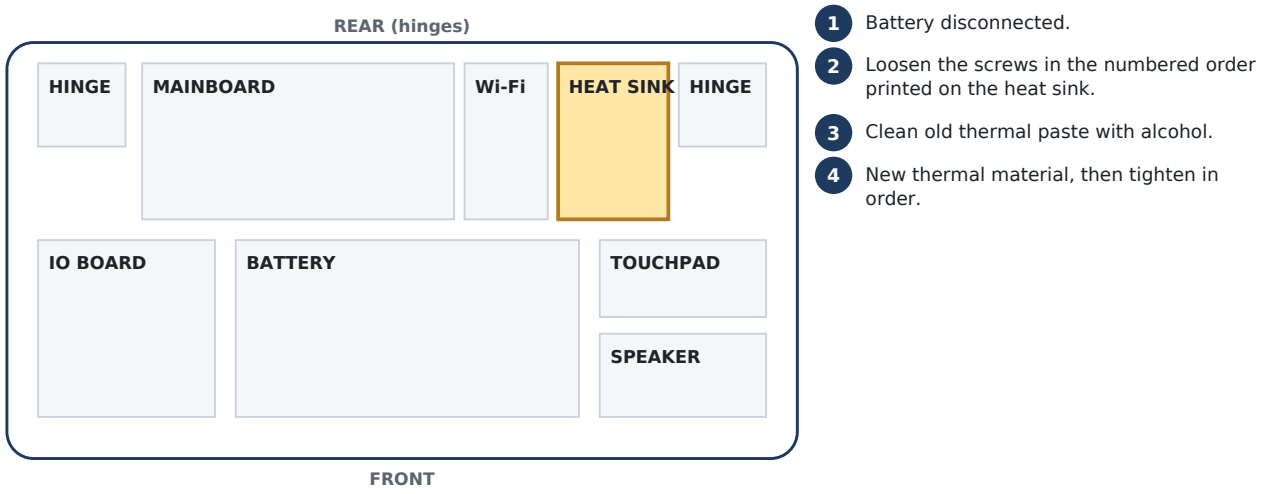


Illustration: base interior, cooling highlighted. Position illustrative.

Thermal material. Clean old thermal material off the processor and heat sink every time, and fit new material. Never run the board without the heat sink.

Step by step

1. ☐ Remove the keyboard deck, disconnect the battery, and remove the system board (R16 steps 1–4).
2. ☐ Turn the board over on the ESD (static electricity) mat.
3. ☐ Remove the 2 Phillips M2.0×2.0 broad-head (wide, flat-headed) screws holding the heat sink to the board.
4. ☐ Lift off the heat sink. Clean old thermal pads off the processor and heat sink with alcohol.
5. ☐ Fit new thermal pads (Thermal Pad Kit L93823-001), refit the heat sink, and reinstall the board.

Common mistakes
✗ Reusing old paste.
✗ Using way too much paste.
✗ Tightening one corner all the way first (cracks the chip).

If something goes wrong
Still overheating → Paste missing or uneven; fan blocked or dead.
Fan rattles → Replace the fan.

Verify before closing the ticket

- Device runs a 10-minute video without shutting down.
- Fan (if fitted) spins up under load and is quiet at idle.


R16 Liquid spill response

LEVEL 3

Fixes	Any liquid on or in the device
Part	Often none; sometimes keyboard/top cover or system board
Time	10 min first response; 24–48 h drying
Tools	90%+ isopropyl alcohol, soft brush, lint-free cloths

In plain words. Water and electricity don't mix. The goal is to cut the power fast, drain the liquid, and let it dry completely before it's ever turned on again. Speed matters more than anything.

At a glance

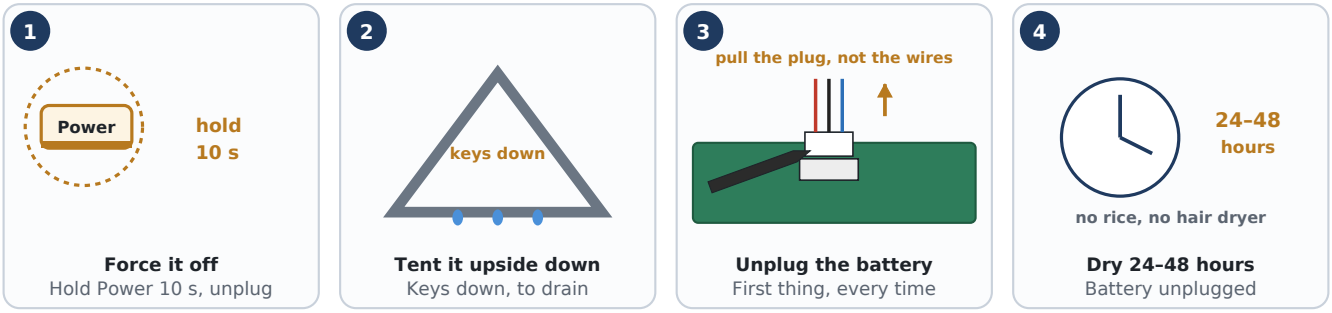

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

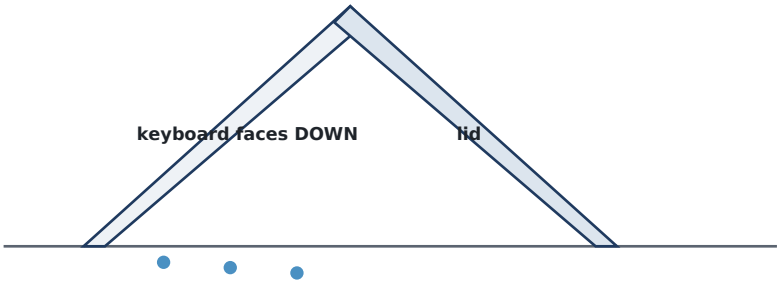


Illustration: drain position after a spill.

1. Power off (hold 10 s), unplug.
2. Tent upside down so liquid drains OUT.
3. Open and disconnect the battery ASAP.
4. Dry 24–48 h. No hair dryer, no rice.

Spill-resistant keyboards resist drips, not a full cup. Speed matters more than anything. HP's keyboard deck is a drip tray: liquid often stops above the system board.

Do not power on to test. Current through liquid causes the corrosion that kills boards.

Step by step

1. ☐ Hold Power for 10 seconds to force off. Unplug.
2. ☐ Tent the device upside down (lid at 90°, keyboard down) to drain.
3. ☐ Open it and disconnect the battery as soon as possible.
4. ☐ Blot visible liquid; don't wipe it around.
5. ☐ Sugary or sticky spills: clean affected areas with a soft brush and isopropyl alcohol.

6. ☐ Dry open, battery disconnected, for 24 hours minimum (48 if soaked). No hair dryer, no rice.
7. ☐ Inspect for white or green corrosion; clean connectors.
8. ☐ Reconnect the battery, plug in, and run S2 fully.

Common mistakes
✗ Turning it on "just to check".
✗ Using rice or a hair dryer.
✗ Wiping liquid around instead of blotting.

If something goes wrong
White or green crust on the board → Corrosion: lead tech, Section 6.
Keys sticky afterwards → Keyboard repair.

Verify before closing the ticket


- All S2 tests pass.
- Sticky or dead keys: keyboard repair.
- Corrosion on the system board: Section 6.

R17 System board replacement (lead tech) LEVEL 3

Fixes	Dead USB-C ports, no power with a good battery, failed storage, RAM errors, failed recovery
Part	System board by CPU/RAM/storage, e.g. M08407-001 (A6, 4 GB, 64 GB)
Time	45–90 minutes
Tools	Phillips driver, plastic spudger, plastic tweezers, ESD strap


In plain words. The system board (main board) is the brain: processor, memory and storage are soldered onto it. Replacing it means unplugging everything, swapping the board, and setting the Chromebook up again. Only after every simpler fix has failed.

At a glance

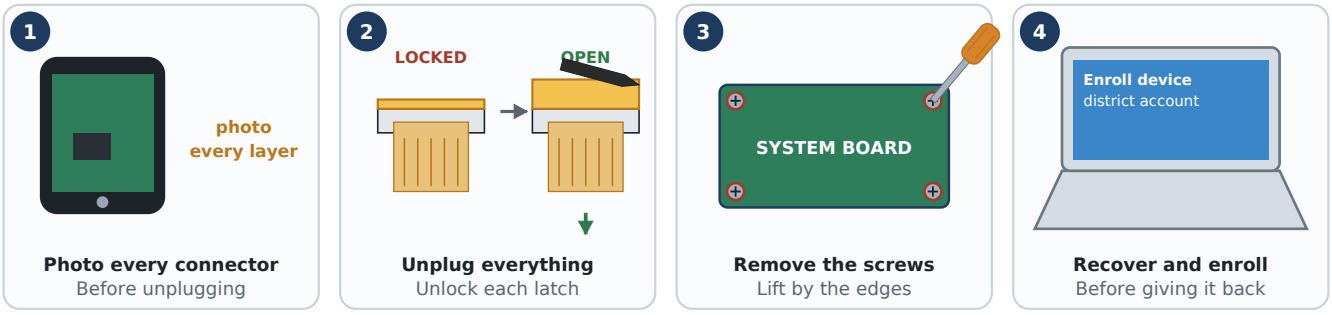

The pictures show the idea, not your exact model. The numbered steps below have the details.

Where it is on this model

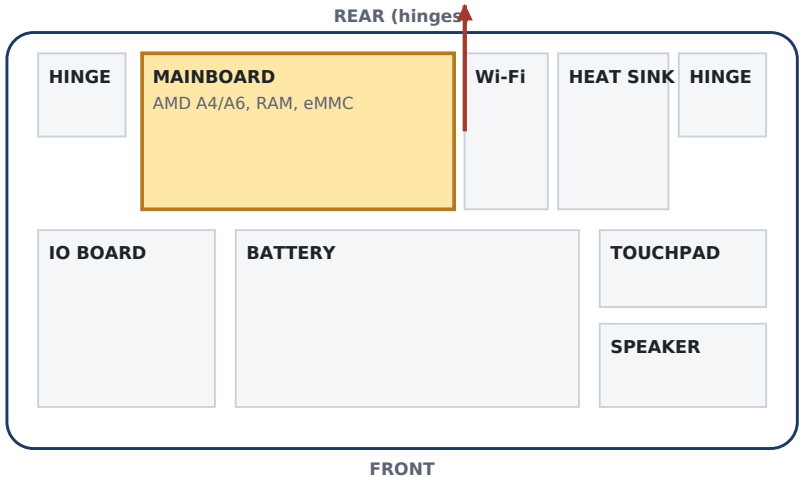

1. Battery out first (and the Wi-Fi card if it's socketed).
2. Unplug: connector board cables, webcam cable, display panel cable and speaker cable
3. Lift and slide out at an angle.
4. Lift by the edges onto the ESD mat.

Illustration: base interior, mainboard highlighted. Red arrow = lift side.

Identity and enrollment. Storage, serial number and enrollment live on the system board. The lead tech updates the asset record, deprovisions the old device in the Admin console if needed, and plans re-enrollment. Ask the manufacturer whether the new board ships with the serial set.

Confirm first with S1, S2, S3 and a connector reseat. Most "dead boards" are a battery, cable or connector.

Step by step

1. ☐ Remove the keyboard deck, disconnect the battery, and remove the Wi-Fi card.
2. ☐ Disconnect the connector board cables, webcam cable, display panel cable and speaker cable.
3. ☐ Remove the 6 Phillips M2.0×4.2 screws and the I/O bracket.
4. ☐ Remove the right-side I/O bracket (L89793-001), then lift and slide the board out at an angle.
5. ☐ The heat sink is on the underside of the board (2 Phillips M2.0×2.0 broad-head (wide, flat-headed) screws): move it to the new board with fresh thermal pads, or use the board kit's.
6. ☐ Fit the new board, reconnect everything, reconnect the battery, then run recovery (S3) if needed and enroll.

Common mistakes

✗ Replacing the board when a cable was the problem.
✗ Forgetting to move parts that stay (heat sink, SSD).
✗ Not updating the asset record.

If something goes wrong

Still dead with new board → Check the battery and charger first.
Won't enroll → Lead tech checks the Admin console.

Verify before closing the ticket

- Boots, enrolls and passes all of S2.
- Asset record and Admin console show the correct serial number.

6 Out of scope: escalate

These need soldering or board-level work, or parts that aren't sold. Tag the device with the ticket and send it to the lead tech.

Fault	Why	Route
USB-C port loose or dead	Soldered to the system board	System board swap or HP warranty
Not charging with good battery and charger	Charging circuit on the system board	System board or HP warranty
Storage (eMMC) or RAM failure	Soldered	System board or HP warranty
Corrosion on the system board	Board-level work	System board or HP warranty
Burn marks, melted plastic, burnt smell	Fire hazard	Lead tech immediately
Any repair needing a soldering iron or hot air	Program policy	HP warranty or lead tech

HP support

- **HP Education support:** support.hp.com (search the model for warranty status and drivers)
- **HP parts lookup:** partsurfer.hp.com (enter the serial number for exact part numbers)
- **Service guide:** HP Chromebook 11A G8 EE Maintenance and Service Guide

7 Sources

Checked October 2026. The procedures are the guide author's adaptation of these sources for a student bench; they are not manufacturer-issued instructions.

- HP, *Maintenance and Service Guide: HP Chromebook 11A G8 Education Edition* (kaas.hpcloud.hp.com/pdf-public/pdf_12631995_en-US-1.pdf) — every screw count, size and part number.
- HP PartSurfer (partsurfer.hp.com).