


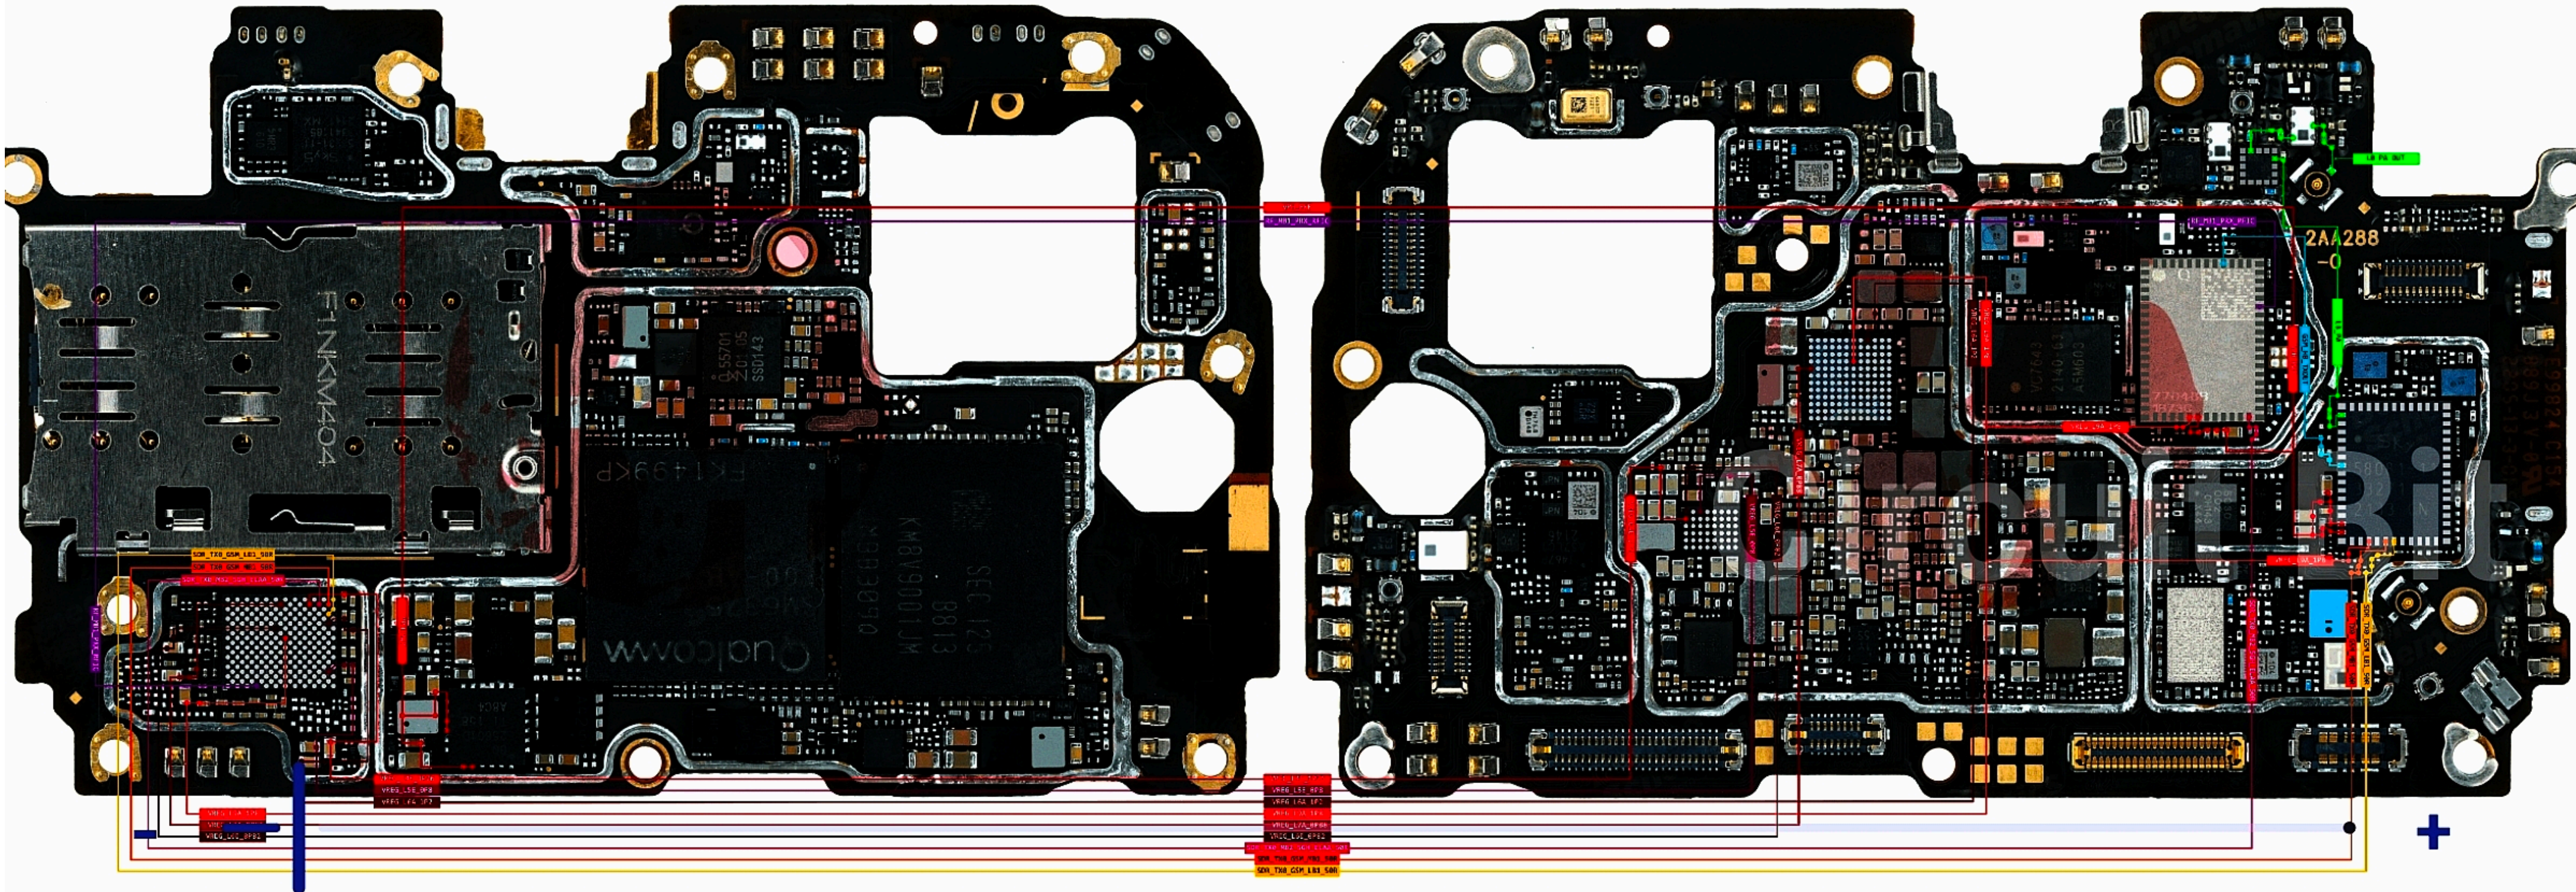

LB_PA_OUT

LB_PA

SDR_TX0_GSM_MB1_50R

SDR_TX0_GSM_LB1_50R

GSM_HB_TXOUT

RF_MB1_PRX_RFIC

SDR_TX0_MB2_5GH_ELAA_50R