4.5.7 Configuring Idle Motion

Idle motion refers to a preset motion when the PTZ does not receive any valid command within a certain period.

Prerequisites

You have set PTZ motions such as preset, tour, scan and pattern in advance.

Procedure

Step 1 Click and then select **PTZ** > **PTZ Speed**.

Step 2 Click to enable idle motion.

Step 3 Configure idle interval time, and then select idle motion type.

Figure 4-59 Idle motion

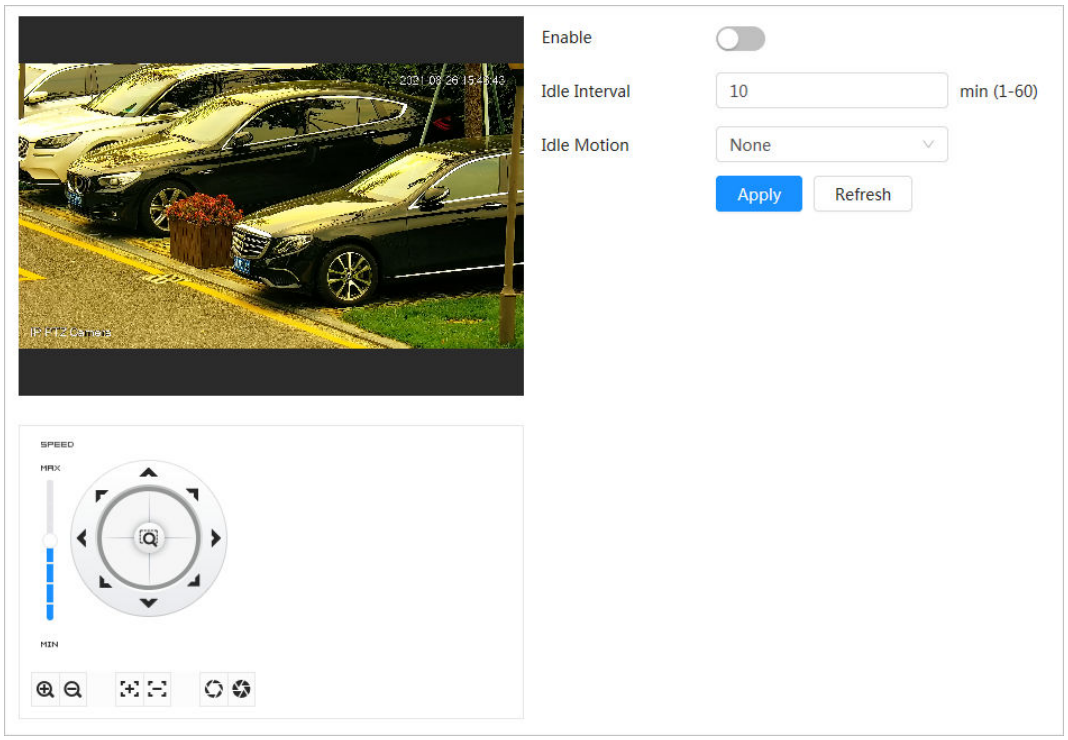

Step 4 Click **Apply**.

4.5.8 Configuring Power Up

After configuring PowerUp, the Camera will automatically perform the defined motion after being powered up.

Prerequisites

You have set PTZ motions such as preset, tour, scan and pattern in advance.

Procedure

Step 1 Click , and then select **PTZ** > **PowerUp**.

Step 2 Click to enable PowerUp function.

Step 3 Select PowerUp type.

Select **Auto** and the system will implement the last action performed for more than 20 seconds before the Camera is shut down.

Figure 4-60 PowerUp

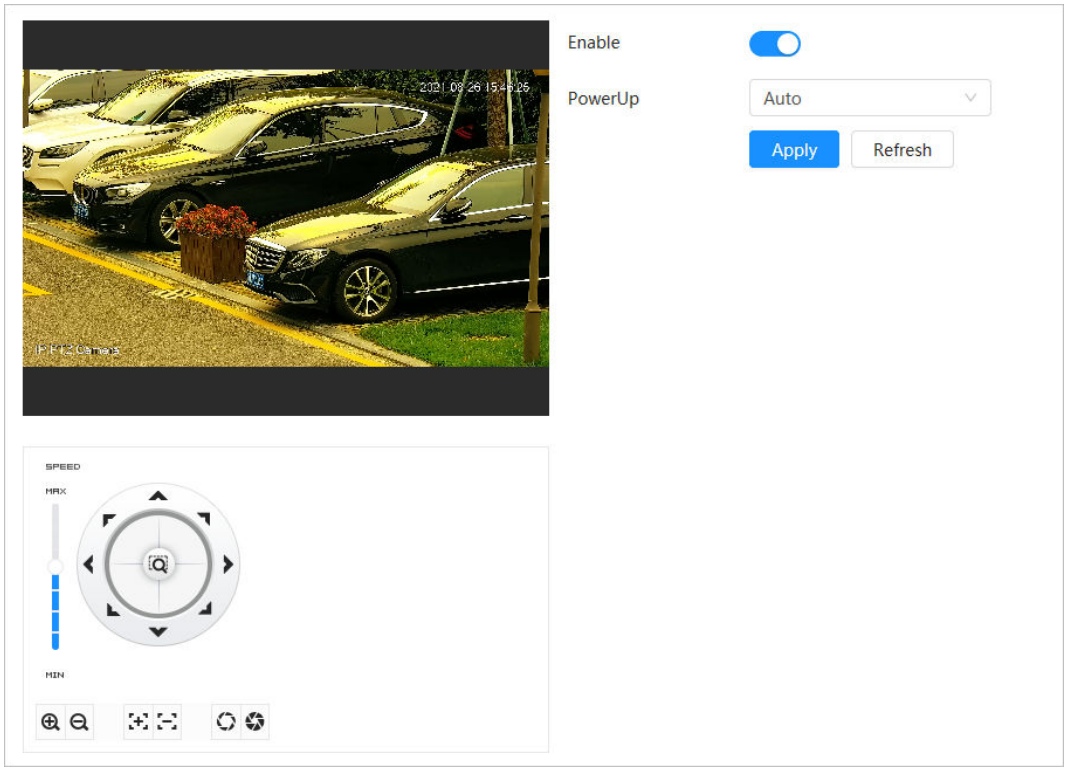

Step 4 Click **Apply**.

4.5.9 Configuring PTZ Rotation Limit

Configure PTZ rotation limit to enable the Camera to move only within the defined PTZ area, and to rotate only within the limit range when calling functions such as tour and pan.

Procedure

Step 1 Click , and then select **PTZ** > **PTZ Rotation Limit**.

Step 2 Adjust the device direction to the "Up Limit", and then click up limit **Setting** to set the current position to the up limit.

Step 3 Adjust the device direction to the "Down Limit", and then click down limit **Setting** to set the current position to the down limit.

Step 4 Click **Go to** to preview the defined up/down limit.

Figure 4-61 PTZ rotation limit

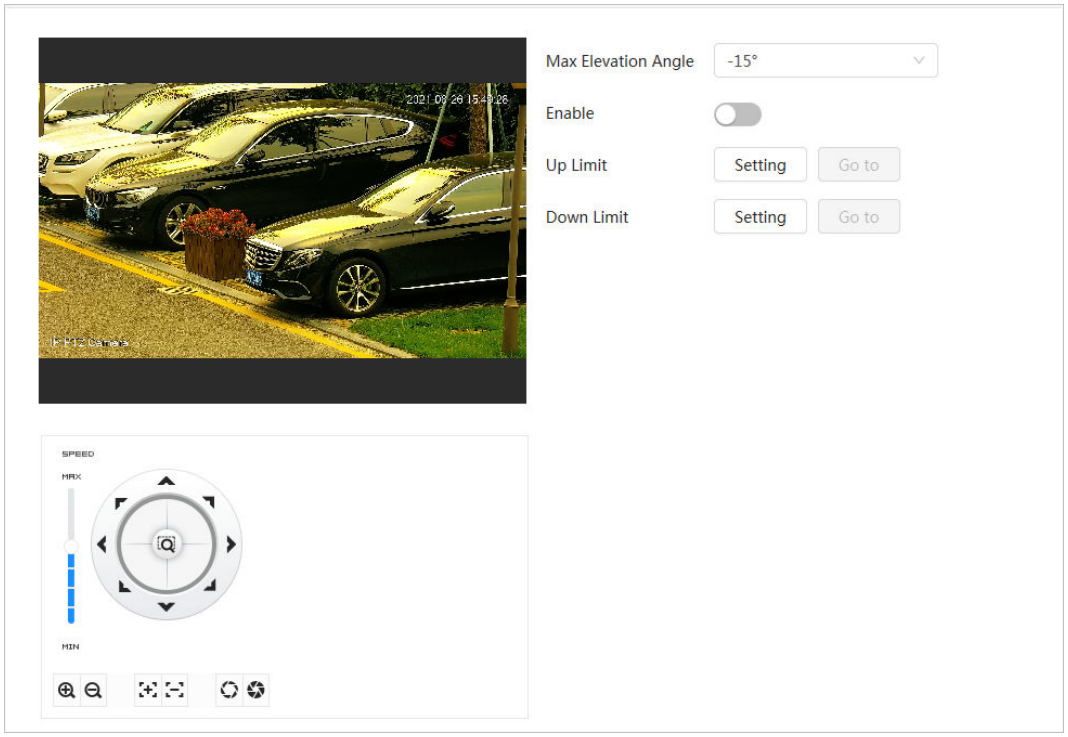

Step 5 Select the elevation value from the drop-down list of **Max Elevation Angle**.

This function is available on select models.

Step 6 Click **Enable** to enable **PTZ Rotation Limit**.

4.5.10 Configuring Scheduled Task

After setting scheduled task, the Camera performs the relevant motions during the set period.

Prerequisites

You have set PTZ motions such as preset, tour, scan and pattern in advance.

Procedure

Step 1 Click , and then select **PTZ** > **Scheduled Task**.

Step 2 Click **Add Scheduled Task**.

Step 3 Select **Task Action**.

Some task actions need to select corresponding action number.

Step 4 Select **Time Plan** or click **Add Schedule**, configure the name and time of the scheduled task in the pop-up page, and then click **Apply**.

To configure arming/disarming period, see"4.6.1.2.1 Adding Schedule".

Figure 4-62 Scheduled task

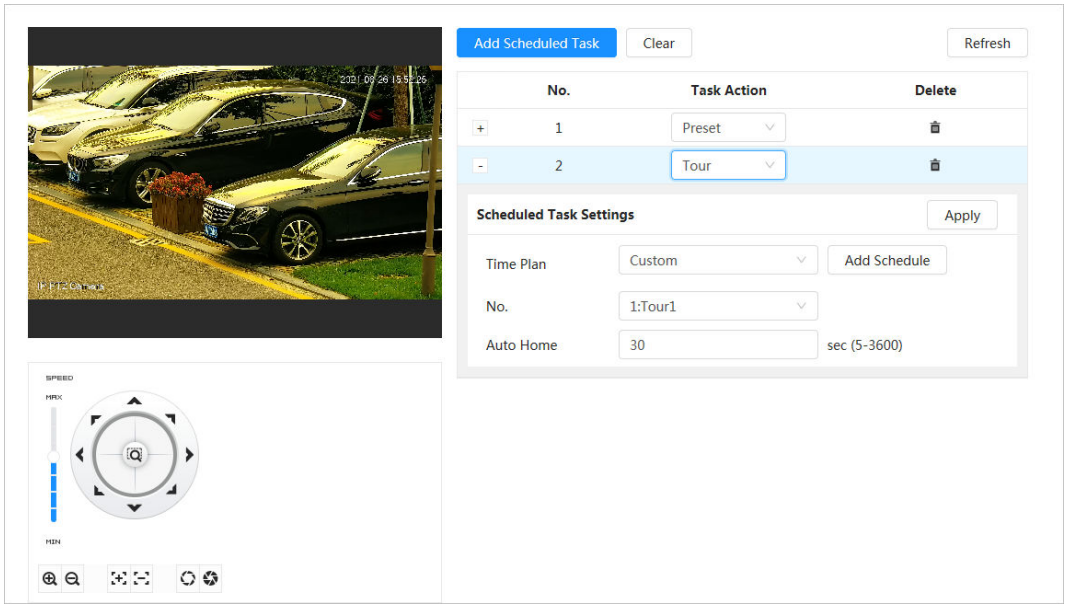

Step 5 Set the time for "Auto Home".

"Auto Home": When the scheduled task is interrupted by an artificial call to the PTZ, the device will automatically resume the scheduled task after the auto home time.

Step 6 Click **Apply**.

4.5.11 Configuring PTZ Maintenance

PTZ maintenance includes **PTZ Restart** and **Default**.

Procedure

Step 1 Click , and then select **PTZ** > **PTZ Maintenance**.

Step 2 Click **PTZ Restart** to restart PTZ or click **Default** to restore PTZ to defaults.

Default PTZ will restore the Camera to defaults. Think twice before clicking **Default**.

4.5.12 Configuring Protocol

Configure parameters for RS-485.

Procedure

Step 1 Click , and then select **PTZ** > **Protocol**.

Figure 4-63 Configure protocol

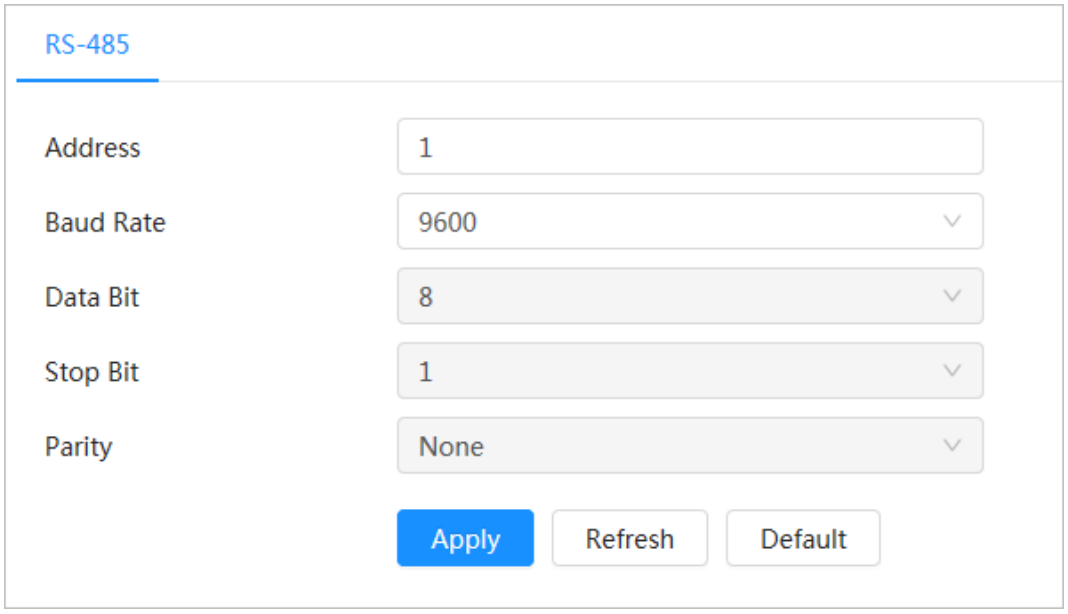

Step 2 Click **Apply**.

4.6 Event

Click **Event** to configure general events, including alarm linkage, exception, video detection, and audio detection.

You can go to the **Event** page through two methods. This following section uses method 1 as an example.

- Method 1: Click on the right-upper corner of the main page, and then click **Event**.
- Method 2: Click **Event** on the page.

4.6.1 Setting Alarm Linkage

4.6.1.1 Setting Alarm-in

When an alarm is triggered by the Camera connected to the alarm-in port, the system performs the defined alarm linkage.

Procedure

Step 1 Select > **Event** > **Alarm**.

Step 2 Click next to **Enable** to enable alarm linkage.

Step 3 Select an alarm-in port and a sensor type.

- **Anti-Dither** : Only record one alarm event during the anti-dither period.
- Sensor Type: **NO** or **NC**.

Figure 4-64 Alarm linkage

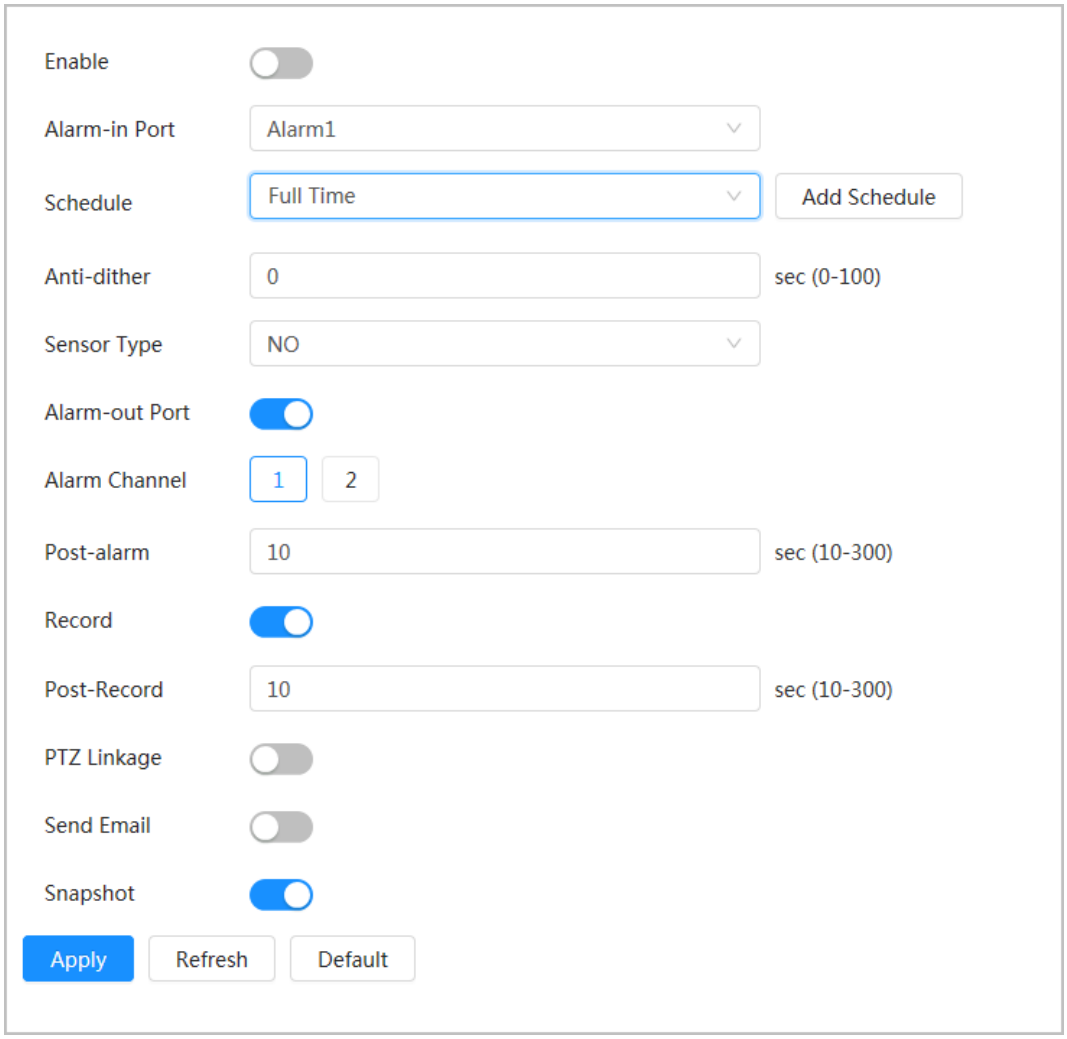

Step 4 (Optional) Configure the parameters for PIR alarm.

For models that support PIR alarm, you also need to configure the following parameters.

- Sensitivity: The larger the value, the easier an alarm will be triggered.
- Audio Linkage: Select the audio file and set the play times, and then the audio will be played for the defined times when an alarm is triggered.
- Warning Light: The default mode is **Flicker**, and the flickering frequency and duration can be set.
- Send Email: Send messages to the preset email address.

Figure 4-65 PIR alarm

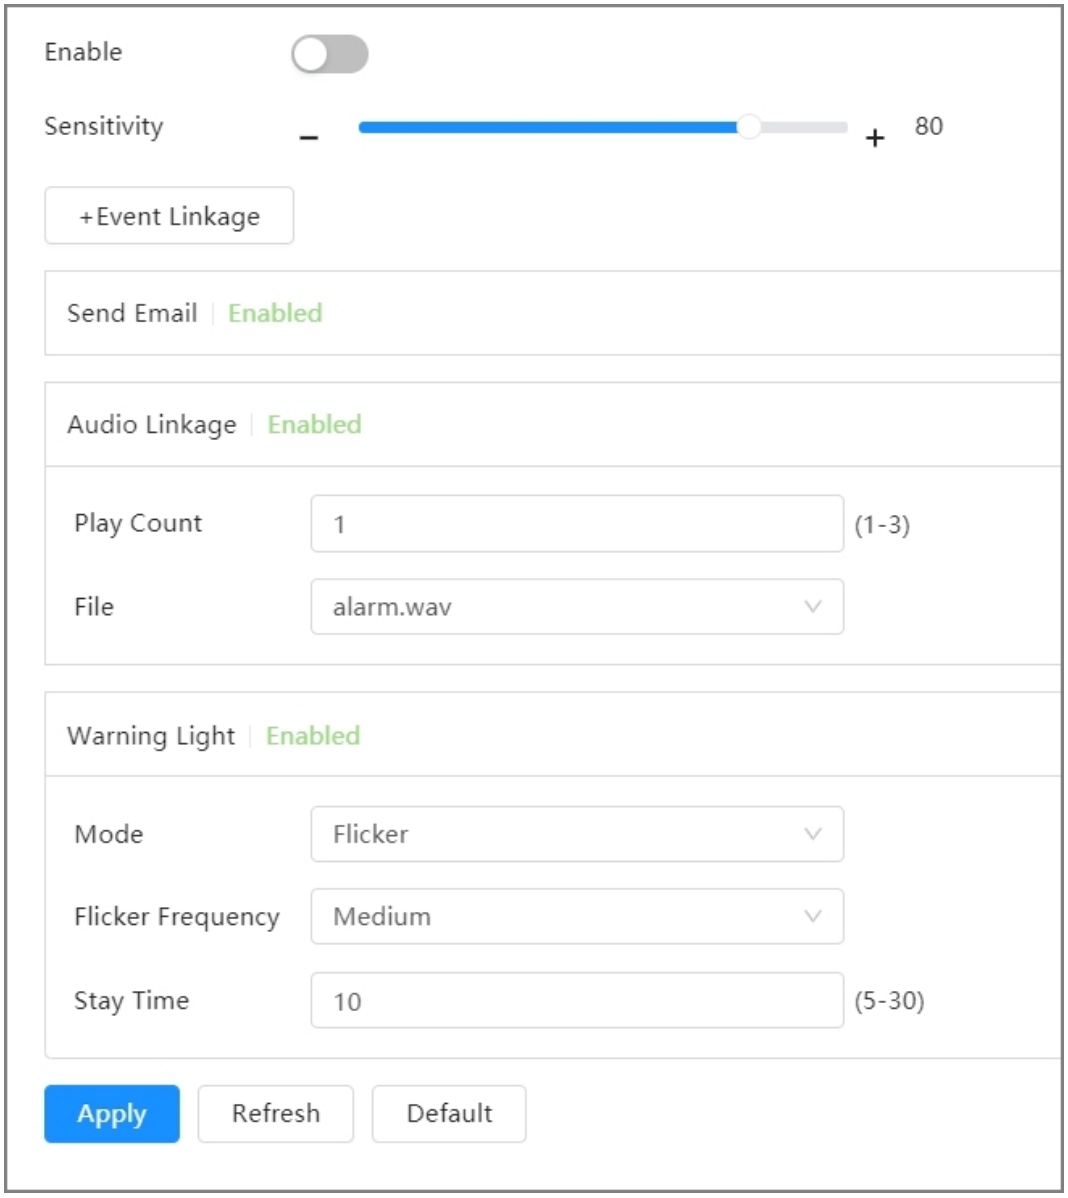

Step 5 Select the schedule and arming periods and alarm linkage action. For details, see "4.6.1.2 Configuring Alarm Linkage".

If the exiting schedules cannot meet the scene requirement, you can click **Add Schedule** to add new schedule. For details, see "4.6.1.2.1 Adding Schedule".

Step 6 Click **Apply**.

4.6.1.2 Configuring Alarm Linkage

When configuring alarm events, select alarm linkages (such as record, snapshot). When the corresponding alarm is triggered in the defined arming period, the system will trigger an alarm linkage.

Select > **Event** > **Alarm**, and then click next to **Enable** to enable alarm linkage.

Figure 4-66 Alarm linkage

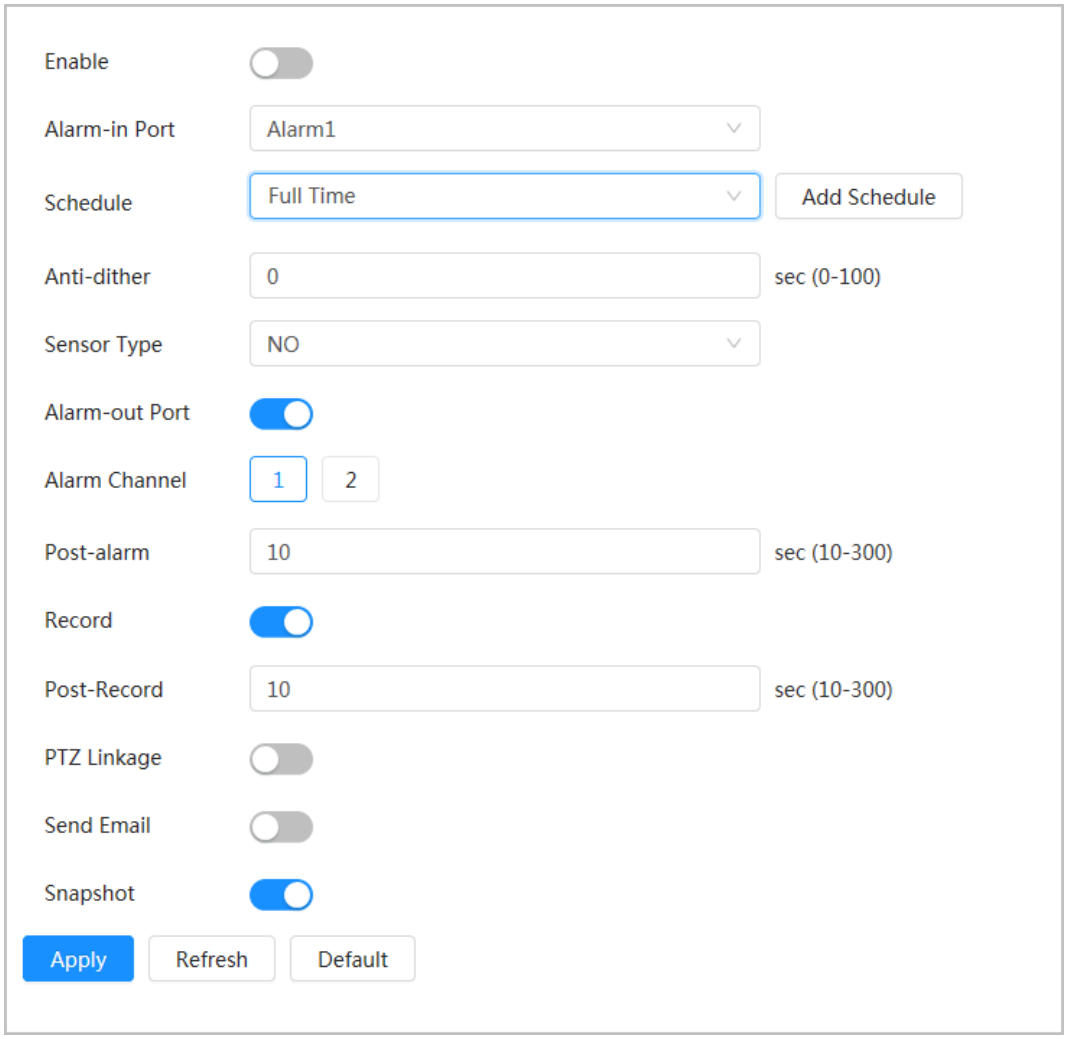

4.6.1.2.1 Adding Schedule

Configure arming schedule. The system only performs corresponding linkage action in the defined period.

Procedure

Step 1 Click **Add Schedule** next to **Schedule**.

Step 2 Click **Time Plan Table**.

You can set up multiple time plan tables for selection.

Step 3 Configure the name of the **Time Plan Table**.

Step 4 Configure arming periods.

1. Press and drag the left mouse button on the timeline to set arming periods. The green area on the timeline means that this time period has been armed.

Figure 4-67 Configure arming period

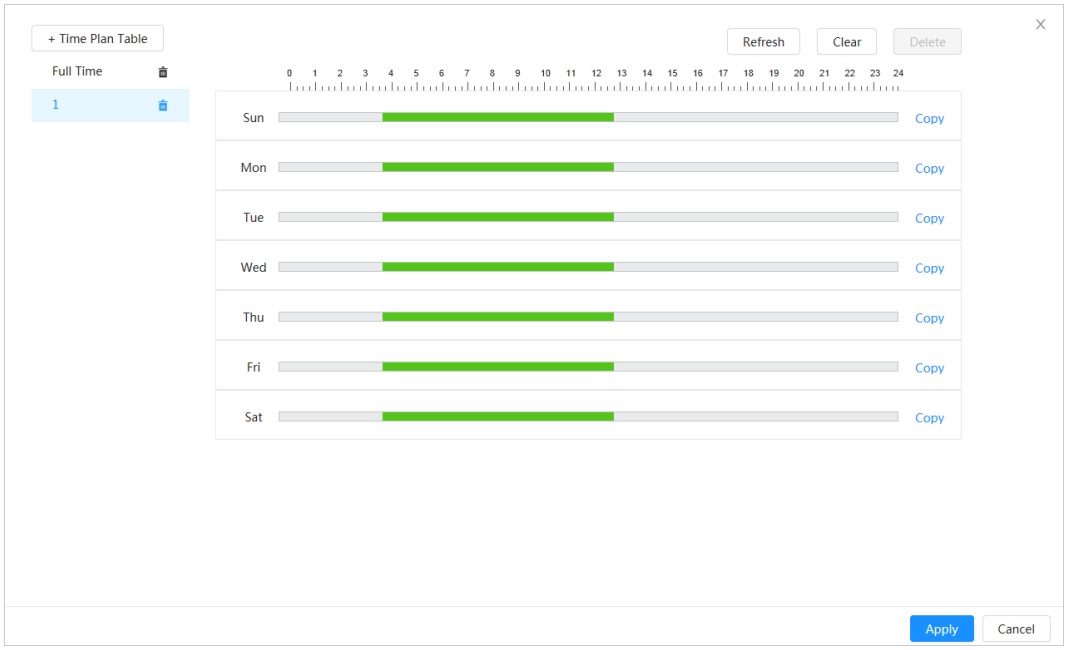

2. Click the selected time period, and then enter the specific time in the text box to configure exact arming period.

Figure 4-68 Configuring exact arming period

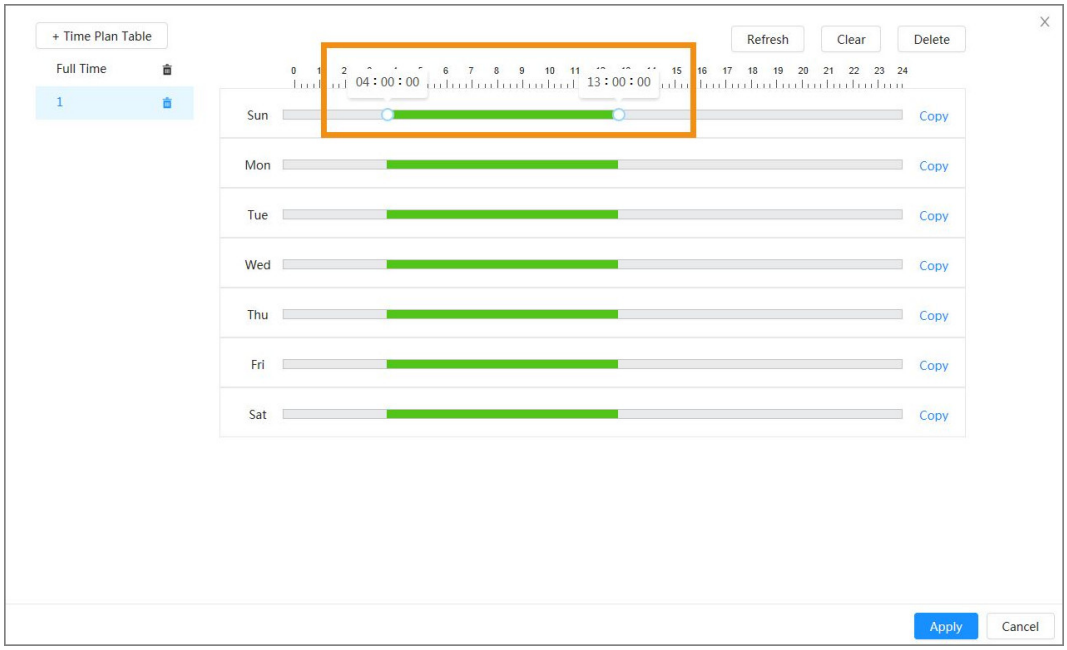

Step 5 (Optional) Click **Copy** , select weeks, and then click **Apply**.

Time plans for the current week can be quickly copied to other weeks.

Step 6 Click **Apply**.

4.6.1.2.2 Record Linkage

After enabling **Record Linkage** , the system can link record channel when an alarm event occurs. After the alarm, the system stops recording after an extended time period according to the **Post-Record** setting.

Prerequisites

- Enable the corresponding alarm type (**Normal** , **Motion**, or **Alarm**) before the record channel links recording. For details, see "7.3 Setting Record Plan".
- Enable auto record mode before the record linkage takes effect. For details, see "7.2 Setting Record Control".

Setting Record Linkage

On the **Alarm** page, click to enable record linkage, select the channel, and then set **Post-Record** to set alarm linkage and record delay.

After **Post-Record** is configured, alarm recording continues for an extended period after the alarm ends.

Figure 4-69 Record linkage

4.6.1.2.3 Snapshot Linkage

After snapshot linkage is configured, the system can automatically alarm and take snapshots when an alarm is triggered.

Prerequisites

Enable the corresponding alarm type (**Normal** , **Motion**, or **Alarm**) before the snapshot channel links capturing. For details, see "7.3 Setting Record Plan".

Setting record linkage

On the **Alarm** page, click to enable snapshot linkage.

Figure 4-70 Snapshot linkage

4.6.1.2.4 Alarm-out Linkage

When an alarm is triggered, the system can automatically link with alarm-out device.

On the **Alarm** page, click to enable alarm-out linkage, and then configure **Post alarm**.

When alarm delay is configured, alarm continues for an extended period after the alarm ends.

Figure 4-71 Alarm-out linkage

4.6.1.2.5 Email Linkage

When an alarm is triggered, the system will automatically send an email to defined users.

Prerequisites

Email linkage takes effect only when SMTP is configured. For details, see "4.4.5 Email".

Setting Email Linkage

On the **Alarm** page, click to enable email linkage.

Figure 4-72 Email linkage

4.6.1.3 Alarm Linkage

When configuring alarm events, select alarm linkages (such as record, snapshot). When the corresponding alarm is triggered in the defined arming period, the system will trigger alarm linkage.

Procedure

Step 1 Select > **Event** > **Alarm**, and then click next to **Enable** to enable alarm linkage.

Step 2 Click **Apply**.

Figure 4-73 Alarm linkage

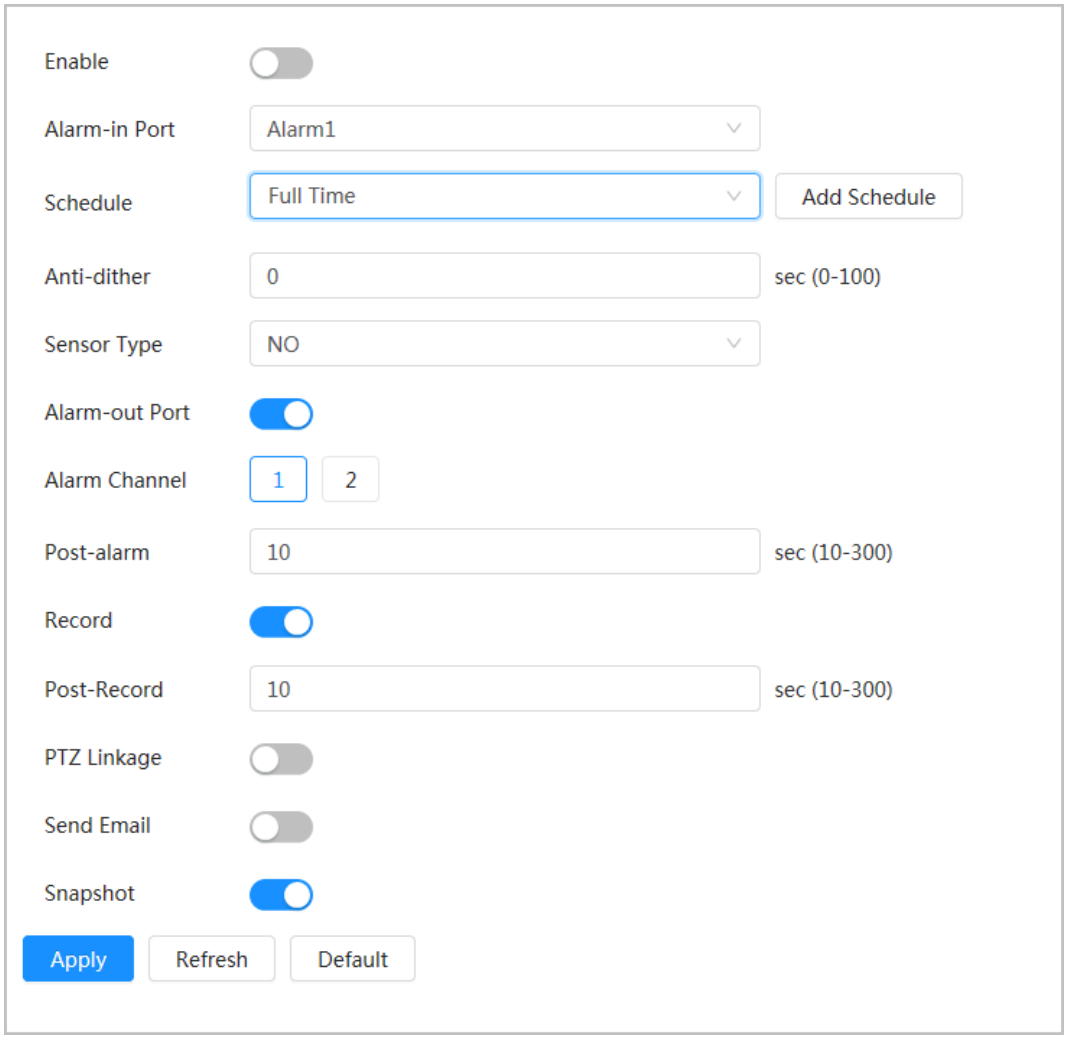

4.6.1.4 Subscribing to Alarm

4.6.1.4.1 Alarm Types

Following are the alarm types and preparations of alarm events.

Table 4-26 Description of alarm types

Alarm Type	Description	Preparation
Motion Detection	The alarm is triggered when a moving object is detected.	Motion detection is enabled. For details, see "4.6.3.1 Setting Motion Detection".
Disk Full	The alarm is triggered when the free space of SD card is less than the configured value.	Insufficient SD card space detection is enabled. For details, see "4.6.2.1 Setting SD Card Exception".
Disk Error	The alarm is triggered when there is a failure or malfunction in the SD card.	SD card failure detection is enabled. For details, see "4.6.2.1 Setting SD Card Exception".

Alarm Type	Description	Preparation
Video Tampering	The alarm is triggered when the camera lens is covered or there is a defocus in video images.	Video tampering is enabled. For details, see "4.6.3.2 Setting Video Tampering".
External Alarm	The alarm is triggered when there is an external alarm input.	The device has alarm input port and external alarm function is enabled. For details, see "4.6.1.1 Setting Alarm-in".
Security Warning	The alarm is triggered when there is a security warning.	Security warning is enabled. For details, see "10.6 Security Warning"
Audio Detection	The alarm is triggered when there is an audio connection problem.	Abnormal audio detection is enabled. For details, see "4.6.5 Setting Audio Detection".
IVS	The alarm is triggered when an intelligent rule is triggered.	IVS, face detection, people counting, or other intelligent functions is enabled.
Scene Changing	The alarm is triggered when the device monitoring scene changes.	Scene changing detection is enabled. For details, see "4.6.3.3 Setting Scene Changing".
Voltage Detection	The alarm is triggered when the device detects abnormal voltage input.	Voltage detection is enabled. For details, see "4.6.2.3 Setting Tampering Detection".
Security Exception	The alarm is triggered when the device detects malicious attack.	Voltage detection is enabled. For details, see "10.1 Security Status".

4.6.1.4.2 Subscribing to Alarm Information

Background Information

You can subscribe alarm event. When a subscribed alarm event is triggered, the system records detailed alarm information on the bottom of the page.

Functions of different devices might vary.

Procedure

Step 1 Click on the right-upper corner of the main page.

Step 2 Click next to **Alarm** to enable alarm subscription, and then the system prompts and records alarm information according to actual conditions.

- When the subscribed alarm event is triggered and the alarm subscription page is not displayed, a number is displayed on , and the alarm information is recorded automatically. Click to view the details on the alarm list. You can click **Clear** to clear the record.
- When the subscribed alarm event is triggered and the system is in the alarm page, the corresponding alarm information will be displayed in the alarm list below.

Figure 4-74 Alarm (subscription)

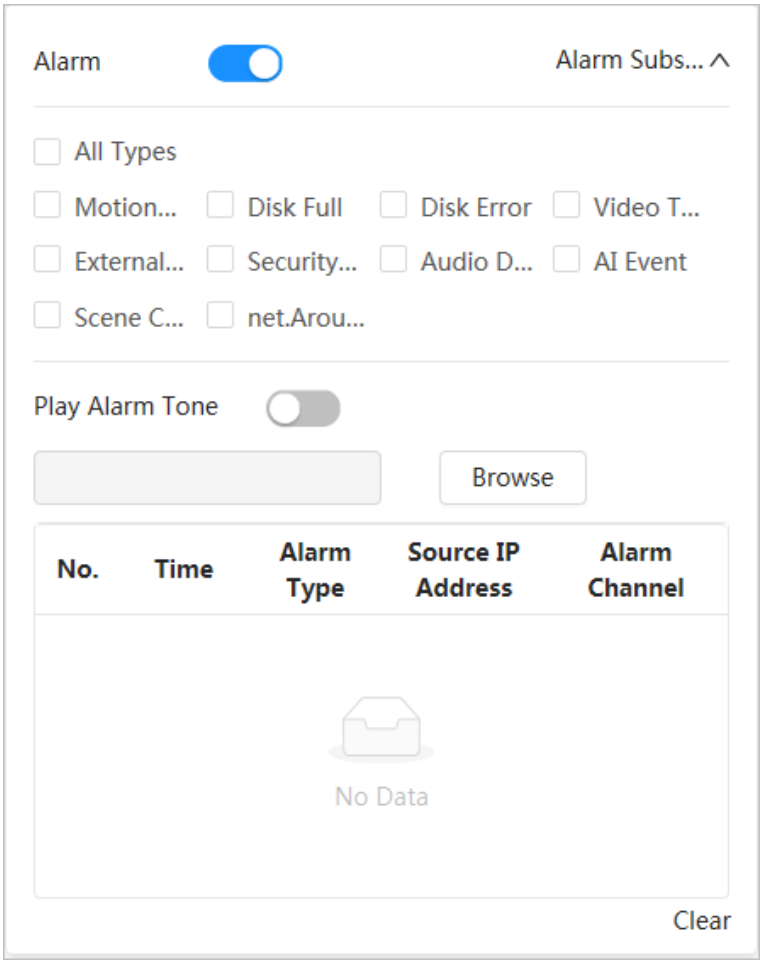

Step 3 Click next to **Play Alarm Tone**, and then select the tone path.

The system will play the selected audio file when the subscribed alarm is triggered.

4.6.2 Setting Exception

Abnormality includes SD card exception, network exception and tampering detection.

Only the device with SD card function has exception setting functions, including **No SD Card** , **SD Card Error**, and **Low SD card space**.

4.6.2.1 Setting SD Card Exception

In case of SD card exception, the system performs alarm linkage.

Background Information

The event types include **No SD Card** , **Low SD Card Space**, and **SD Card Error**. Functions might vary with different models.

Procedure

Step 1 Select > **Event** > **Exception** > **SD Card Exception**.

Step 2 Select event type, and then enable SD card exception detection.

When the event type is **Low SD card space** , you can configure **Free Space**. When the remaining free space is less than this value, an alarm is triggered.

Figure 4-75 SD card exception

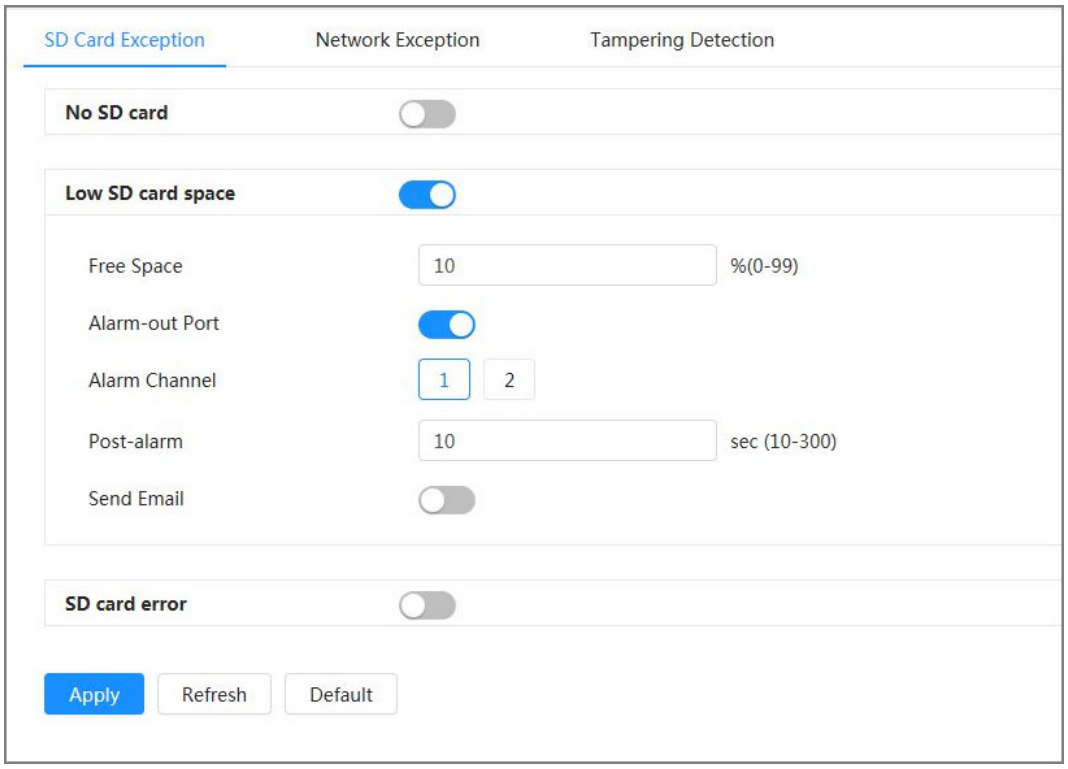

Step 3 Click to enable the SD card detection functions.

When **Low SD Card Space** is enabled, set **Capacity Limit**. When the remaining space of SD card is less than this value, the alarm is triggered.

Step 4 Set alarm linkage actions. For details, see "4.6.1.2 Configuring Alarm Linkage".

Step 5 Click **Apply**.

4.6.2.2 Setting Network Exception

In case of network exception, the system performs alarm linkage.

Background Information

The event types include **Offline** and **IP Conflict**.

Procedure

Step 1 Select > **Event** > **Exception** > **Network Exception**.

Figure 4-76 Network exception

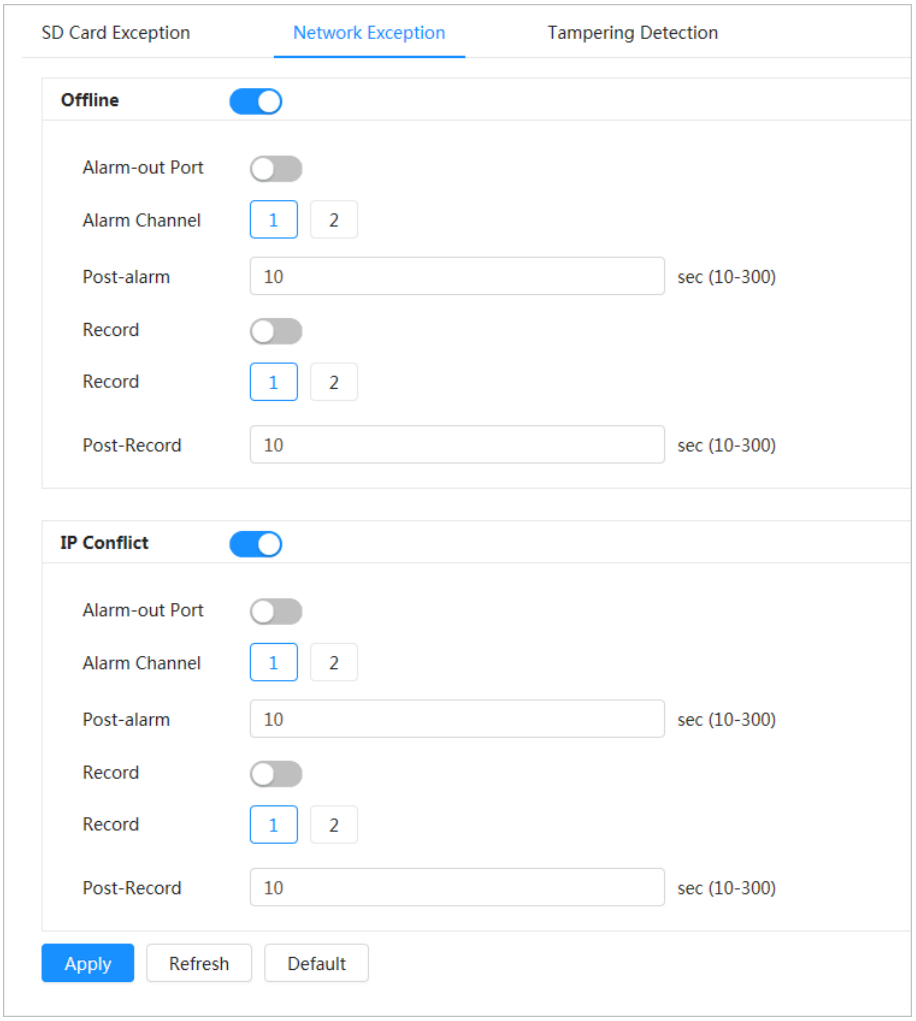

Step 2 Click to enable the network exception detection.

Step 3 Set alarm linkage actions. For details, see "4.6.1.2 Configuring Alarm Linkage".

Step 4 Click **Apply**.

4.6.2.3 Setting Tampering Detection

Procedure

Step 1 Select > **Event** > **Exception** > **Tampering Detection**.

Step 2 Click to enable the tampering detection function.

Step 3 Configure alarm parameters.

Figure 4-77 Setting tampering detection

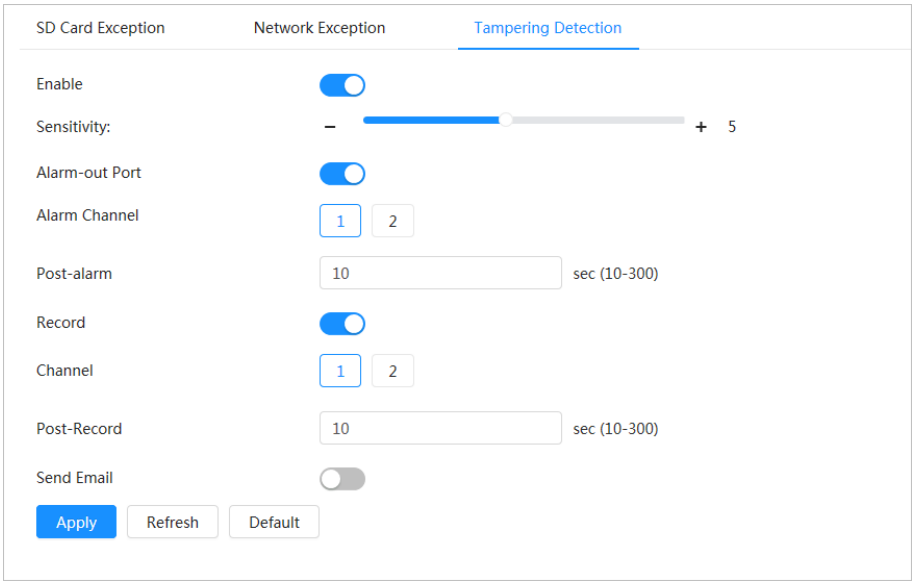

Step 4 Click **Apply**.

4.6.3 Setting Video Detection

Check whether there are considerable changes on the video by analyzing video images. In case of any considerable change on the video (such as moving object, fuzzy image), the system performs an alarm linkage.

4.6.3.1 Setting Motion Detection

Background Information

The system performs an alarm linkage when a moving object appears in the image and its moving speed reaches the defined sensitivity.

- If you enable motion detection and smart motion detection simultaneously, and configure the linked activities, the linked activities take effect as follows:
  - When motion detection is triggered, the camera will record videos and take snapshots, but other configured linkages such as sending emails, PTZ operation will not take effect.
  - When smart motion detection is triggered, all the configured linkages take effect.
- If you only enable motion detection, all the configured linkages take effect when motion detection is triggered.

Procedure

Step 1 Select > **Event** > **Video Detection** > **Motion Detection**.

Figure 4-78 Motion detection

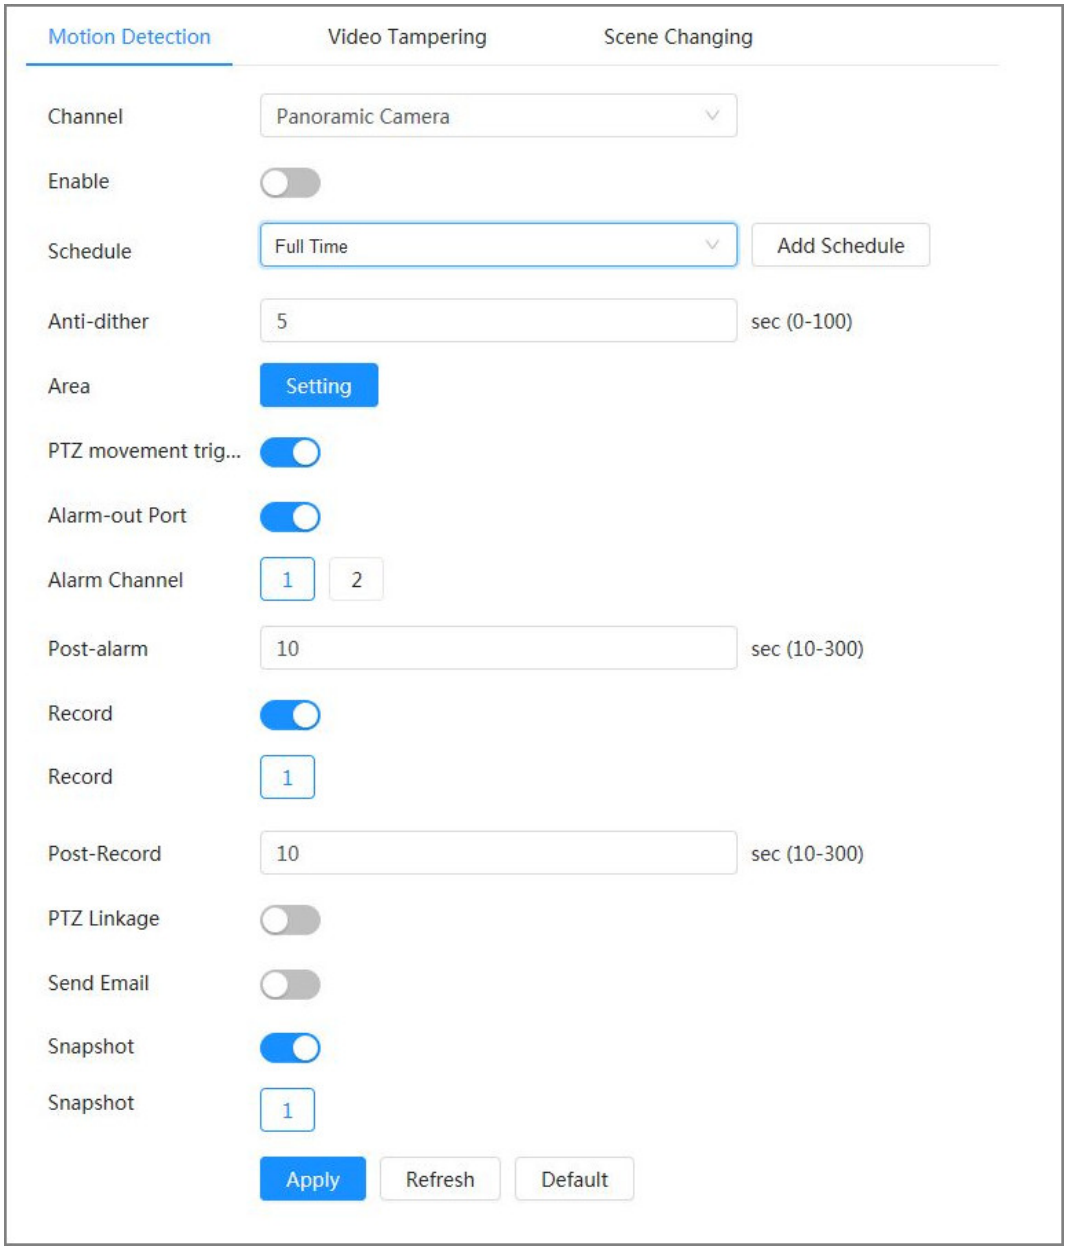

Step 2 Click to enable the motion detection function.

Step 3 Set the area for motion detection.

1. Click **Setting** next to **Area**.

Figure 4-79 Area

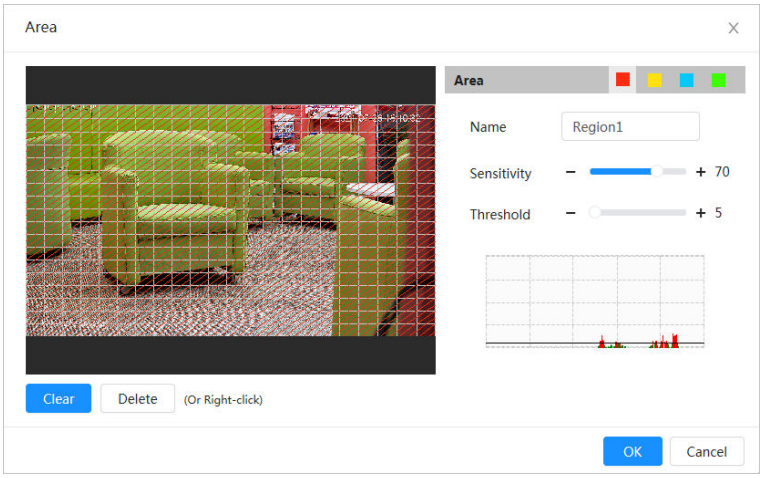

2. Select a color and set the region name. Select an effective area for motion detection in the image and set **Sensitivity** and **Threshold**.
   - Select a color on to set different detection parameters for each region.
   - Sensitivity: Sensitive degree of outside changes. The higher sensitivity is, the easier to trigger the alarm.
   - Threshold: Effective area threshold for Motion Detection. The smaller the threshold is, the easier the alarm is triggered.
   - The whole video image is the effective area for Motion Detection by default. Select color blocks to configure different detection parameters for different regions.
   - The red line in the waveform indicates that the Motion Detection is triggered, and the green line indicates that there is no motion is detected. Adjust sensitivity and threshold according to the waveform.
3. Click **OK**.

Step 4 Set arming periods and alarm linkage action. For details, see "4.6.1.2 Configuring Alarm Linkage".

If the exiting schedules cannot meet the scene requirement, you can click **Add Schedule** to add a new schedule. For details, see "4.6.1.2.1 Adding Schedule".

Anti-dither: After the **Anti-dither** time is set, the system only records one motion detection event in the period.

Step 5 Click **Apply**.

4.6.3.2 Setting Video Tampering

The system performs alarm linkage when the lens is covered or video output is mono-color caused by light and other reasons.

Procedure

Step 1 Select > **Event** > **Video Detection** > **Video Tampering**.

Step 2 Click next to **Enable** to enable the video tampering detection.

Figure 4-80 Video tampering

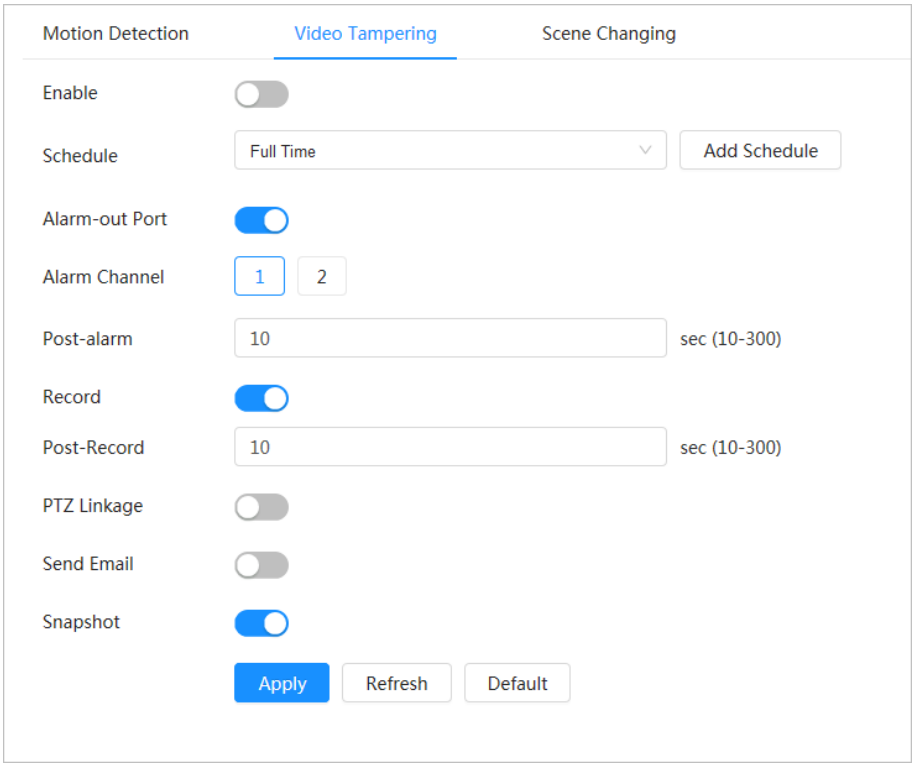

Step 3 Set arming periods and alarm linkage action. For details, see "4.6.1.2 Configuring Alarm Linkage".

If the exiting schedules cannot meet the scene requirement, you can click **Add Schedule** to add a new schedule. For details, see "4.6.1.2.1 Adding Schedule".

Anti-dither: After the **Anti-dither** time is set, the system only records one motion detection event in the period.

Step 4 Click **Apply**.

4.6.3.3 Setting Scene Changing

The system performs alarm linkage when the image switches from the current scene to another one.

Procedure

Step 1 Select > **Event** > **Video Detection** > **Scene Changing**.

Step 2 Click next to **Enable** to enable the video tampering detection.

Figure 4-81 Scene changing

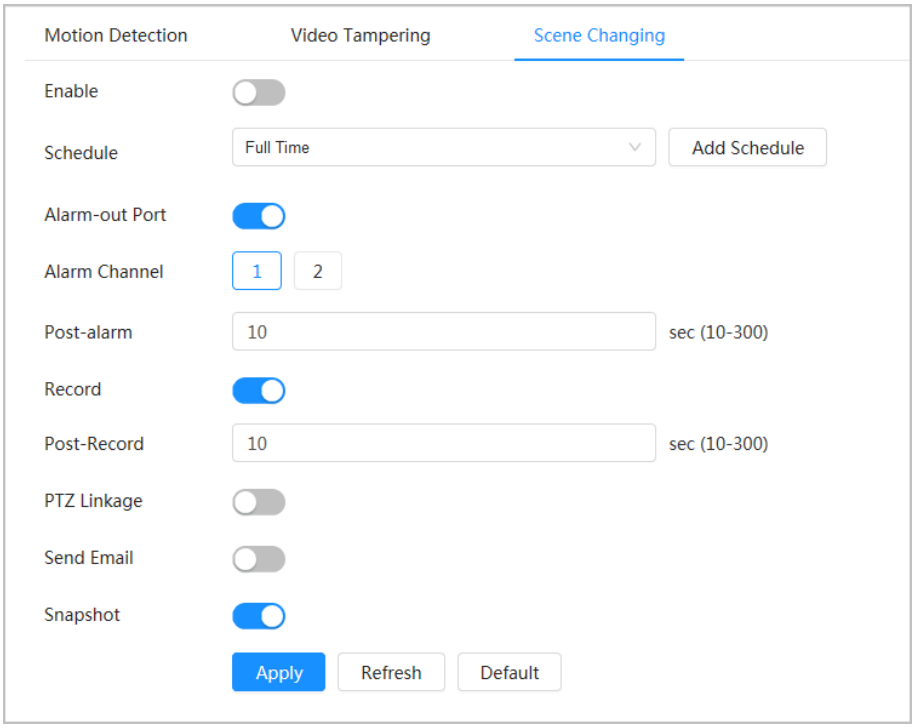

Step 3 Set arming periods and alarm linkage action. For details, see "4.6.1.2 Configuring Alarm Linkage".

If the exiting schedules cannot meet the scene requirement, you can click **Add Schedule** to add a new schedule. For details, see "4.6.1.2.1 Adding Schedule".

Anti-dither: After the **Anti-dither** time is set, the system only records one motion detection event in the period.

Step 4 Click **Apply**.

4.6.4 Setting Smart Motion Detection

After you set smart motion detection, when the human, non-motor vehicles and motor vehicles appear and move fast enough to reach the preset sensitivity value, the alarm linkage actions will be performed. The function can help you to avoid the alarms triggered by natural environment change.

Prerequisites

- Select **Setting** > **Event** > **Video Detection** > **Motion Detection**, and then enable the motion detection function.
- Set the arming period and detection area. The sensitivity of each region is larger than 0, and the threshold is not equal to 100.

- The function depends on the result of motion detection, and all other parameters (except sensitivity) of motion detection function are used, including arming period, area settings, and linkage configurations. If no motion detection is triggered, smart motion detection will not be triggered.
- If motion detection is not enabled, when smart motion detection is enabled, motion detection will also be enabled. If both functions are enabled, when motion detection is disabled, smart motion detection will also be disabled.

- When smart motion detection is triggered and recording is linked, back-end devices can filter recording with human or vehicles through smart search function. For details, see the corresponding user's manual.

Procedure

Step 1 Select **Setting** > **Event** > **Smart Motion Detection**.

Figure 4-82 Smart motion detection

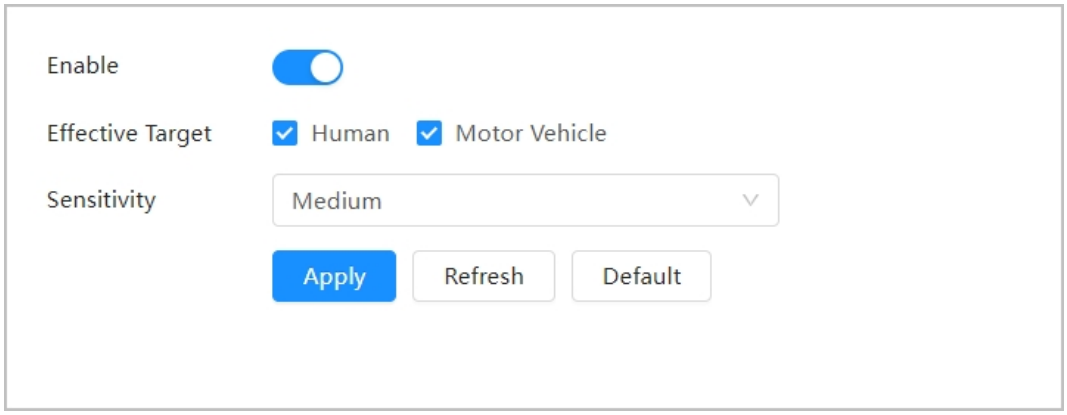

Step 2 Click to enable **Smart Motion Detection**.

Step 3 Select the effective target and sensitivity.

- **Effective Target** : Select **Human** or **Motor Vehicle**.
- **Sensitivity** : Select **High**, **Medium**, or **Low**. The higher the sensitivity, the easier the alarm is triggered.

Step 4 Click **Apply**.

4.6.5 Setting Audio Detection

The system performs alarm linkage when vague voice, tone change, or rapid change of sound intensity is detected.

Procedure

Step 1 Select > **Event** > **Audio Detection**.

Step 2 Configure parameters of audio detection.

- Input abnormal: Click to enable **Audio Exception**, and the alarm is triggered when the system detects abnormal sound input.
- Intensity change: Click to enable **Intensity Change** and then configure **Sensitivity** and **Threshold**. The alarm is triggered when the system detects that the sound intensity exceeds the configured threshold.
  - The alarm is easier to be triggered with higher sensitivity or smaller threshold. Set a high threshold for noisy environment.
  - The red line in the waveform indicates audio detection is triggered, and the green one indicates no audio is detected. Adjust sensitivity and threshold according to the waveform.

Figure 4-83 Audio detection

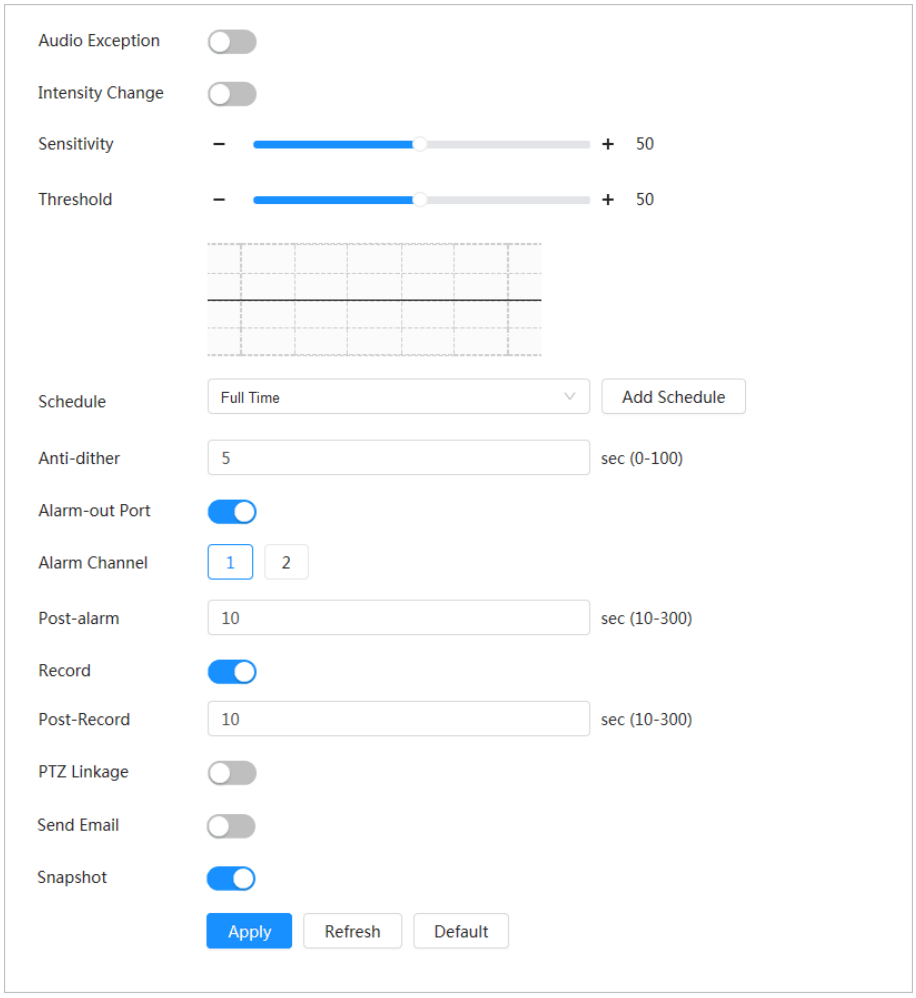

Step 3 Set arming periods and alarm linkage action. For details, see "4.6.1.2 Configuring Alarm Linkage".

If the exiting schedules cannot meet the scene requirement, you can click **Add Schedule** to add a new schedule. For details, see "4.6.1.2.1 Adding Schedule".

Anti-dither: After the **Anti-dither** time is set, the system only records one motion detection event in the period.

Step 4 Click **Apply**.

4.6.6 Setting One-click Disarm

You can disarm some or all alarm linkage events as needed through one-click.

Procedure

Step 1 Select **Setting** > **Event** > **One-click Disarm**.

Step 2 Enable or disable the function of one-click disarm as needed.

- Click next to **One-click Disarm** to enable the one-click disarm. After this function is enabled, execute Step 3 .
- Click next to **One-click Disarm** to disable the disarm by period. After this function is disabled, execute Step 4 .

Figure 4-84 Set one-click disarm

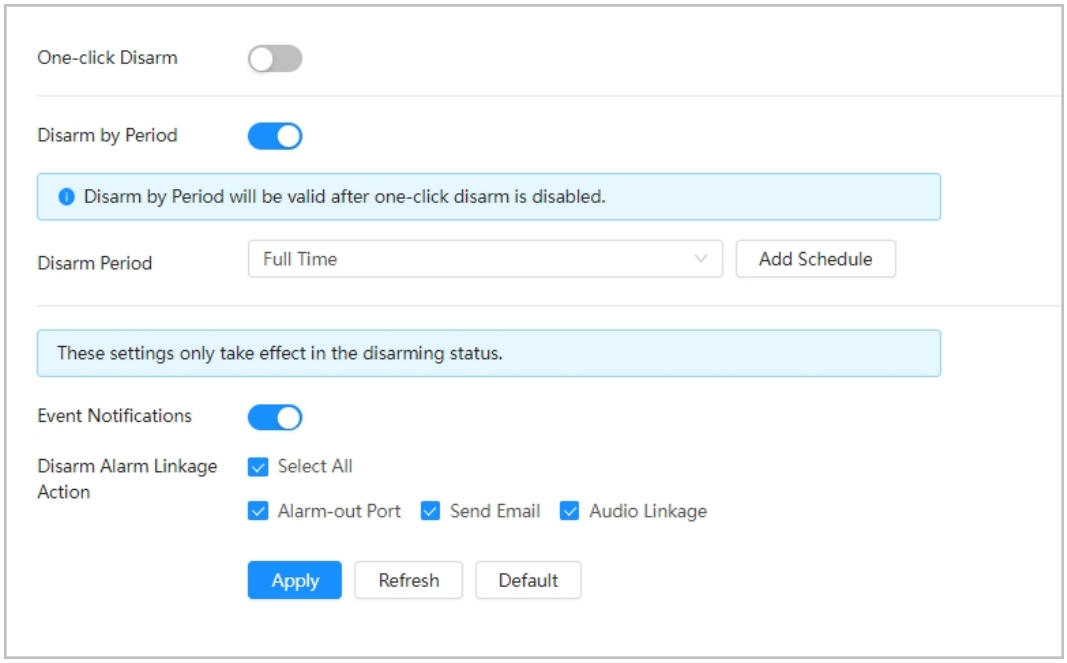

Step 3 Enable the function of disarm by period and configure the disarm period.

1. Click next to **Disarm by Period** to enable the function.
2. Configure the **Disarm Period**.

   If the added period fails to meet your need, you can click **Add Schedule** to newly add the arming period. For details, see "4.6.1.2.1 Adding Schedule".

Step 4 Select the disarm alarm linkage action. You can select the **Alarm-out Port** , **Send email**, **Audio Linkage** or **Select All**.

- Selected linkage actions: no actions triggered during the alarm.
- Unselected linkage actions: actions triggered during the alarm.

Step 5 Click **Apply**.

4.6.7 Auto Upload of Events

The Camera supports automatically uploading events to the server.

Procedure

Step 1 Select > **Event** > **Auto Upload**.

The **Upload Mode** is **HTTP** by default.

Figure 4-85 Auto upload of events

Step 2 Click to enable the function of auto upload.

Step 3 Click **Add** and configure the IP/domain name, port, HTTPS, path, authentication and event type.

- It supports adding up to a maximum of two servers.
- If **HTTPS** is enabled, you have to download the CA certificate and upload it to the server.

1. In the home page, scroll down to the next page, click **Security** > **CA Certificate** > **Device Certificate**.
2. Click under **Download** to download the CA certificate.

Figure 4-86 Download certificate

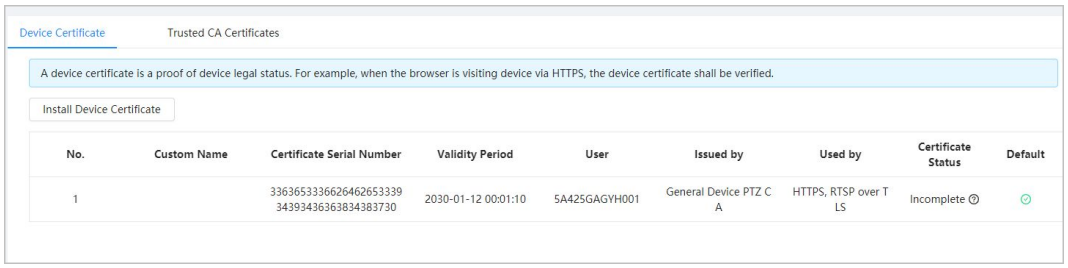

3. Upload the certificate to the server.

Step 4 Click **Test** to check whether the server runs successfully.

4.7 Storage

Display the information of the local SD card. You can set it as read only or read & write; you can also hot swap and format SD card.

Background Information

- If you enter an incorrect password for five consecutive times during authentication, password change or password clearing, the account will be locked for five minutes.
- Before using the recording and playback function, ensure that the SD card has been authenticated.
- The health status of the SD card is classified as follows.
  - Green: The SD card status is optimal.
  - Blue: The SD card status is good.
  - Orange: The SD card status is moderate.
  - Red: The SD card status is bad. Change the SD card in time.
- If the capacity of the SD card is obviously smaller than the nominal capacity when it is read by the computer, it means the SD card has been formatted to a private file system. You need to download DiskManager from Dahua Tool Manager to read the SD card. For details, contact Dahua technical personnel.
- Functions might vary with different models.

Procedure

Step 1 Select > **Storage**.

Step 2 Select the SD card to be configured, and then perform the following operations as needed.

- Click **Read-Only**, and then the SD card is set to read only.
- Click **Read & Write**, and then the SD card is set to read & write.
- Click **Hot Swap**, and then you can pull out the SD card.
- Click **Format**, and you can format the SD card.

  Click **OK** in the pop-up dialog box to format the SD card.

Figure 4-87 Storage



4.8 System

This section introduces system configurations, including general, date & time, account, peripheral management, manager and upgrade.

You can go to the **System** page through two methods. This following section uses method 1 as an example.

- Method 1: Click on the right-upper corner of the main page, and then click **System**.
- Method 2: Click **System** on the main page.

4.8.1 General

4.8.1.1 Basic

You can configure device name and video standard.

Procedure

Step 1 Select > **System** > **General** > **Basic**.

Figure 4-88 Basic

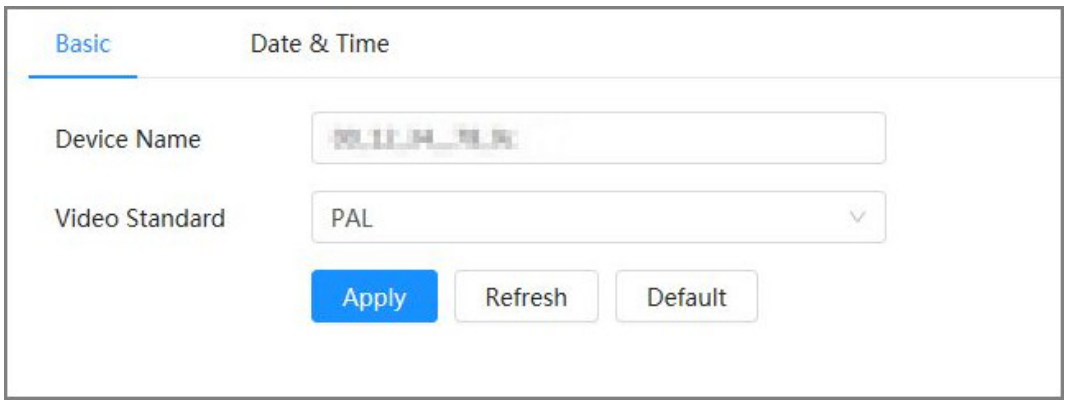

Step 2 Configure general parameters.

Table 4-27 Description of general parameters

Parameter	Description
Name	Enter the device name. When a device is added by another device, the device name is displayed as the defined device name. Different devices have different names.
Video Standard	Select video standard from **PAL** and **NTSC**.
Analog Output	This function is available only for devices that support analog output. ● Some devices automatically turn off AI function when enabling analog output, and automatically turn off analog output when enabling AI function. ● Some devices support SDI (Serial Digital Interface) and HDCVI (High Definition Composite Video Interface) function.

Step 3 Click **Apply**.

4.8.1.2 Date & Time

You can configure date and time format, time zone, current time, DST (Daylight Saving Time) or NTP (Network Time Protocol) server.

Procedure

Step 1 Select > **System** > **General** > **Date & Time**.

Figure 4-89 Date and time

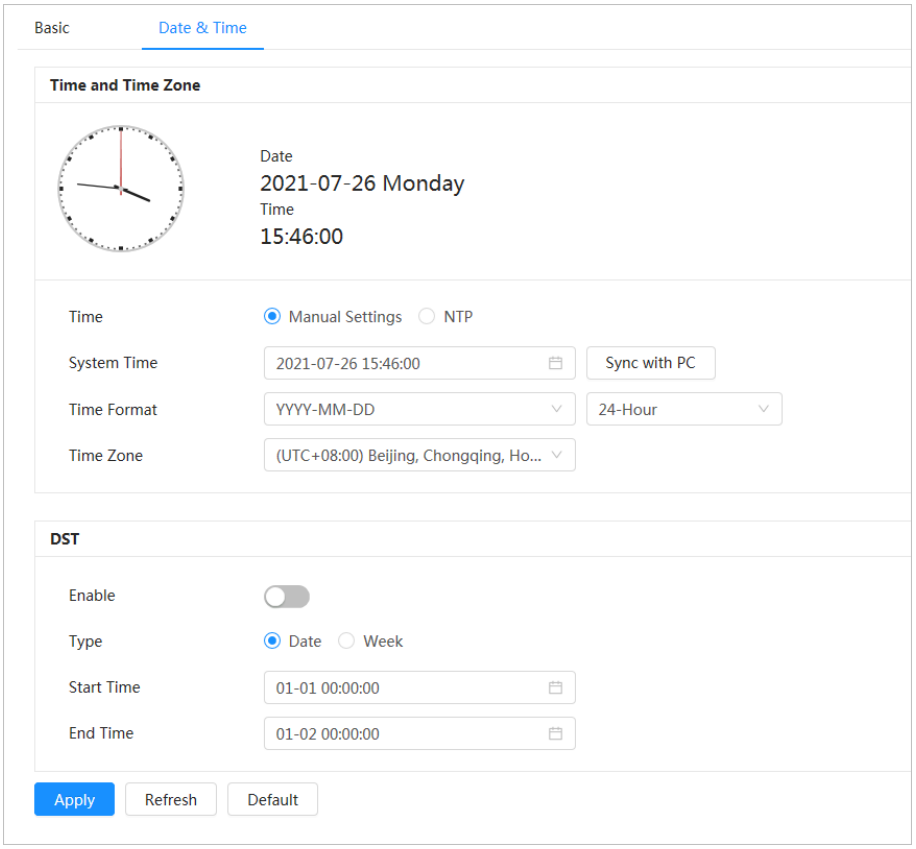

Step 2 Configure date and time parameters.

Table 4-28 Description of date and time parameters

Parameter	Description
Time	• **Manually Setting** : Configure the parameters manually. • **NTP** : When selecting NTP, the system then syncs time with the internet server in real time. You can also enter the IP address, time zone, port, and interval of a computer running NTP server to use NTP.
System Time	Configure system time. Click **Sync with PC**, and the system time changes to the computer time.
Time Format	Configure the time format.
Time Zone	Configure the time zone that the camera is at.
DST	Enable DST as needed. Click , and then configure start time and end time of DST with **Date** or **Week**.

Step 3 Click **Apply**.

4.8.2 Power Consumption Mode

You can configure the power consumption mode of the Camera to sleep mode or general mode. Both modes include parameters that can help to reduce power consumption. Sleep mode is enabled by default.

4.8.2.1 Sleep Mode

Under this mode, except for the 4G module and microcontroller that are working in low power consumption, other components of the Camera are not working. You can also configure the scheduled wakeup function for the Camera to automatically wake up at the specified time, or wake up when the PIR alarm is triggered.

Procedure

Step 1 Select > **System** > **Power Consumption Mode** > **Sleep Mode**.

Step 2 Enable **Scheduled Wakeup** if you need to, set the **Wakeup Policy** to **By Duration** or **By Interval**, and then configure the parameters.

- By interval:
  1. Set the daytime and nighttime by clicking and dragging on the timeline or by entering the specific numbers in the text box.
  2. Set the wakeup time interval for the day and night respectively.

Figure 4-90 Wake up by interval

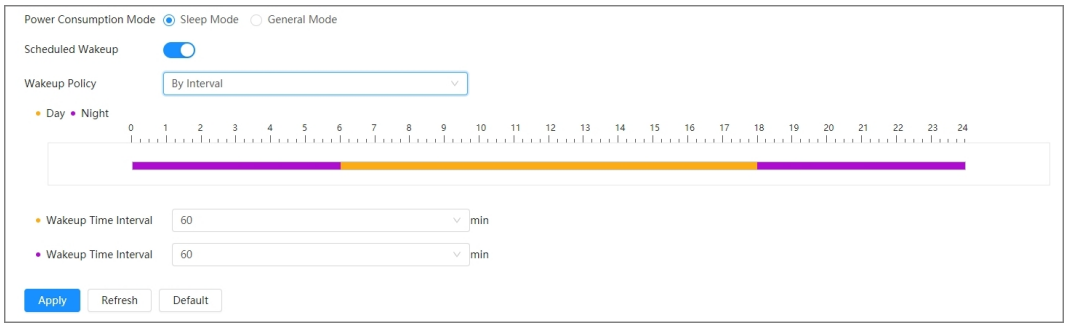

- By duration:
  1. Set the wakeup duration for each day of a week by clicking and dragging on the timeline or by entering the specific numbers in the text box.
  2. Set the wakeup period for a day, click **Copy** , select the days to share the wakeup periods with the day, and then click **Apply**.

Figure 4-91 Wake up by duration

Step 3 Click **Apply**.

4.8.2.2 General Mode

Under this mode, the Camera works with continuous power supply. You can also enable the sleep function for the device to automatically sleep when the battery level reaches the threshold.

Procedure

Step 1 Select > **System** > **Power Consumption Mode** > **General Mode**.

Figure 4-92 General Mode

Step 2 Enable **Sleep** if you need to, and then set the threshold.

The default threshold of the battery level is 20%.

Step 3 Click **Apply**.

4.8.3 Account

You can manage users, such as add, delete, or edit them. Users include admin, added users and ONVIF users.

Only administrator users can manage users and groups. The operations include adding or deleting users and user groups, modifying user information.

- The maximum length of the user or group name is 31 characters which consist of number, letter, underline, dash, dot and @.
- The password must consist of 8–32 non-blank characters and contain at least two types of the following characters: Uppercase, lowercase, numbers, and special characters (excluding ' " ; : &).

- You can have up to 18 users (excluding the admin user) and 1 anonymous user, and you can have six user groups (excluding the admin and user groups).
- You can manage users through a single user or group, and duplicate usernames or group names are not allowed. A user can only be in one group at a time, and the group users can only own authorities within the group authority range.
- Online users cannot edit their own authority.
- The default user name of the system is admin, which has the highest authority.
- Select **Anonymous Login** , and then log in with only IP address instead of username and password. Anonymous users only have preview authorities. During anonymous login, click **Logout** to log in with other username.

4.8.3.1 Adding User

You are admin user by default. You can add users and configure different authorities.

Procedure

Step 1 Select > **System** > **Account** > **User**.

Figure 4-93 User

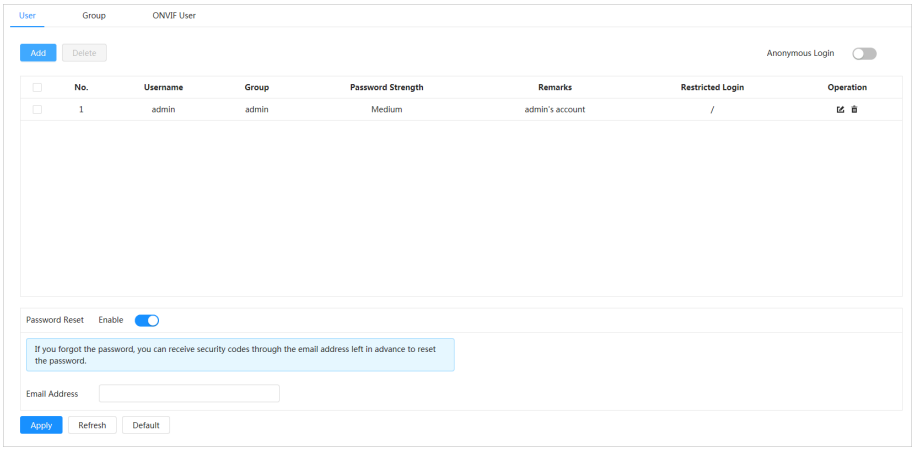

Step 2 Click **Add**.

Figure 4-94 Add user (system)

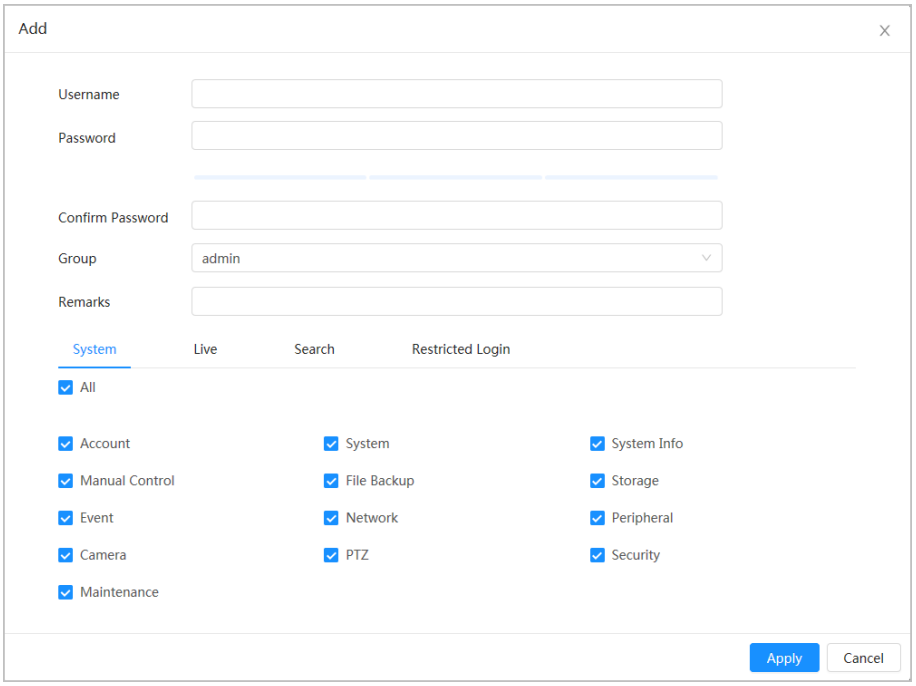

Figure 4-95 Add user (live)

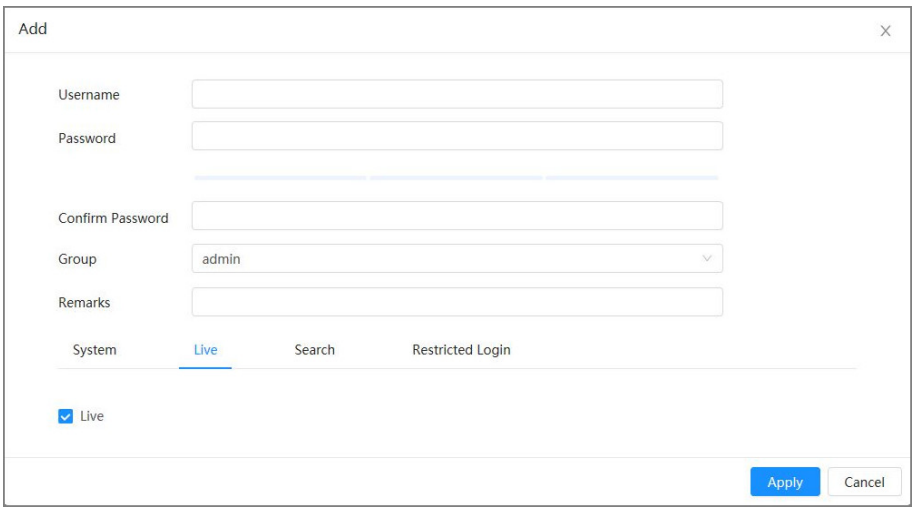

Figure 4-96 Add user (search)

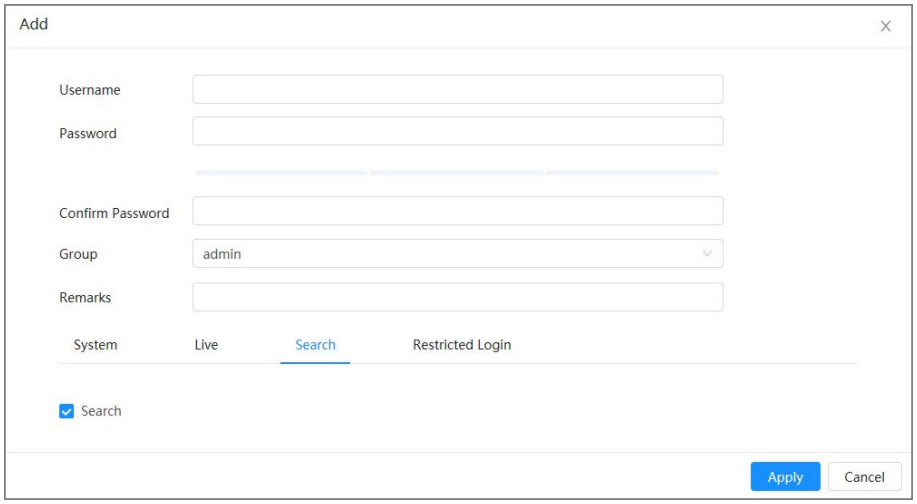

Figure 4-97 Add user (restricted log)

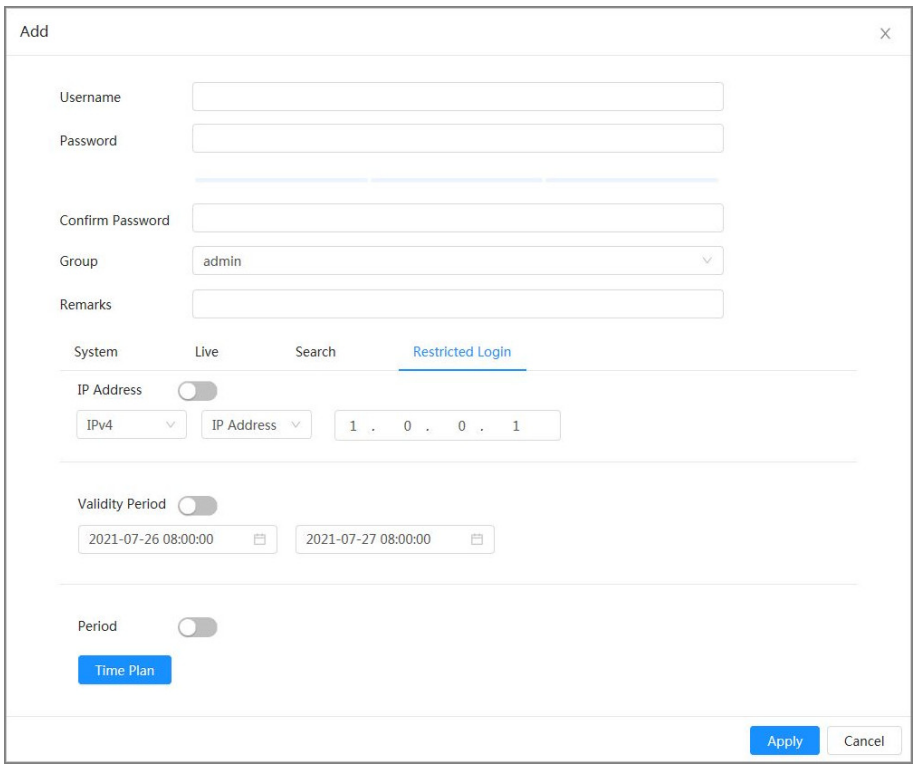

Step 3 Configure user parameters.

Table 4-29 Description of user parameters

Parameter	Description
Username	User's unique identification. You cannot use existing user name. The max. length of the user or group name is 31 characters which consist of number, letter, underline, dash, dot and @.

Parameter	Description
Password	Enter password and confirm it again. The password must consist of 8–32 non-blank characters and contain at least two types of the following characters: Uppercase, lowercase, numbers, and special characters (excluding ' " ; : &). Set a high-security password based on the password strength prompt.
Confirm Password	
Group	The group that users belong to. Each group has different authorities.
Remarks	Describe the user.
System	Select system authorities as needed. We recommend giving fewer authorities to normal users than premium users.
Live	Select the live view authority for the user to be added.
Search	Select the search authority for the user to be added.
Restricted Login	Set the computer address that allows the defined user to log in to the Camera and the validity period and time range. You can log in to the webpage with the defined IP in the defined time range of validity period. Set as follows: ● Enable **IP address**, select IP type and then configure IP address. ◇ IP address: Enter the IP address of the host to be added. ◇ IP segment: Enter the start address and end address of the host to be added. ● Enable **Validity Period**, and then configure start and end time. ● Enable **Period** , and then click **Time Plan** to set the login period.

Step 4 Click **Apply**.

The newly added user is displayed in the user list.

Related Operations

- Modify user group information.

  Click to edit password, group, remarks or authorities.

  For admin account, you can only edit the password.

- Delete user group.

  Click to delete the added user group.

  The admin account and user group cannot be deleted.

4.8.3.2 Resetting Password

When you need to reset the password for the admin account, there will be a security code sent to the linked email address which can be used to reset the password.

Procedure

Step 1 Select > **System** > **Account** > **User**.

Figure 4-98 Resetting password

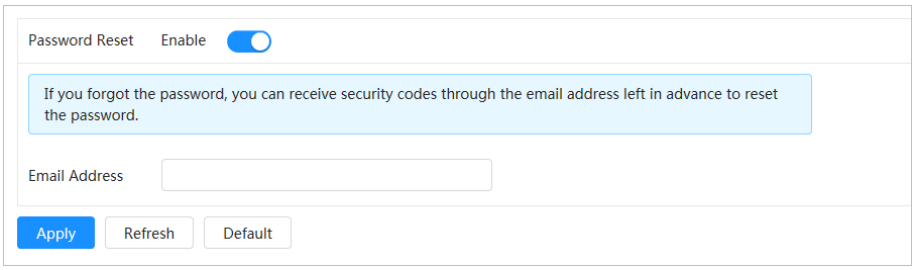

Step 2 Click to enable **Password Reset**.

If the function is not enabled, you can only reset the password by resetting the Camera.

Step 3 Enter the reserved email address.

After configuring the reserved email address, you can set a new password by clicking **Forgot password?** on the login page.

Step 4 Click **Apply**.

4.8.3.3 Adding User Group

You have 2 groups named admin and user by default, and you can add new group, delete added group or edit group authority and remarks.

Procedure

Step 1 Select > **System** > **Account** > **Group**.

Figure 4-99 Group name

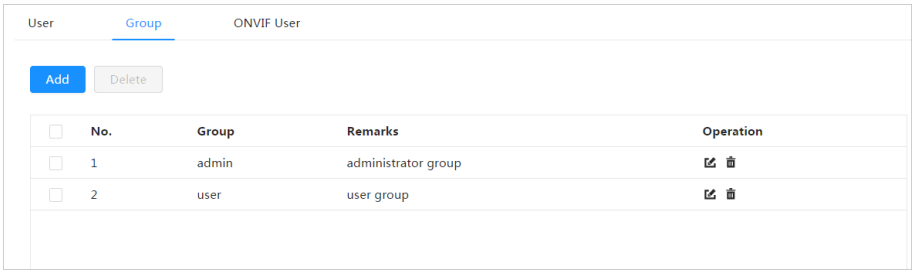

Step 2 Click **Add**.

Step 3 Enter the user group name and remarks, and then select the system, preview and playback authorities for the user group.

The max length of the user or group name is 31 characters which consist of number, letter, underline, dash, dot and @.

Figure 4-100 Add group

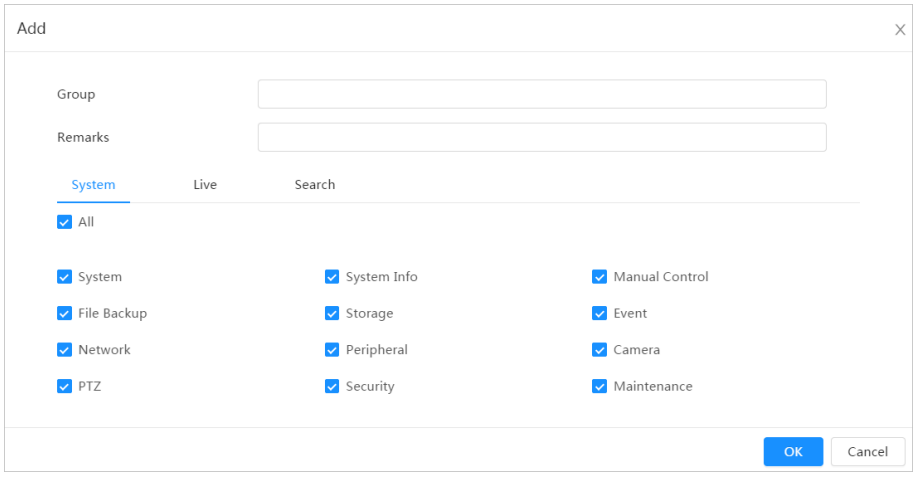

Table 4-30 Description of user group parameters

Group Authority	Admin	User	Functions
System	YES	NA	System time setting and more.
System Info	YES	NA	Version information, system logs and more.
Manual Control	YES	NA	PTZ settings.
File Backup	YES	NA	File backup.
Storage	YES	NA	Storage point configuration, snapshot recording time configuration, SFTP configuration and more.
Event	YES	NA	Video detection settings, audio detection settings, alarm settings and more.
Network	YES	NA	IP settings, SMTP settings, SNMP settings, AP Hotspot settings and more.
Peripheral	YES	NA	External light, wiper and serial port settings.
Camera	YES	NA	Camera property settings, audio and video settings and more.
PTZ	YES	NA	Preset settings, tour settings and more.
Security	YES	NA	HTTPS settings, RTSP over TLS settings and more.
Maintenance	YES	NA	Automatic maintenance settings and more.

- Any user in the **Admin** group has **User** authorities to modify group authorities. The **User** group does not have theses authorities.
- The functions of the Camera correspond to the authority control respectively. Only user with specified authority can use corresponding function; the **Admin** group has all the authorities.

Step 4 Enter the group name and remarks, and then select group authorities.

Step 5 Click **OK** to finish configuration.

The newly added group displays in the group name list.

Related Operations

- Modify user group information.

  Click to edit password, group, remarks or authorities.

  For admin account, you can only edit the password.

- Delete user group.

  Click to delete the added users.

  The admin account and user group cannot be deleted.

4.8.3.4 ONVIF User

You can add, delete ONVIF user, and change their passwords. The default ONVIF user is admin.

Procedure

Step 1 Select > **System** > **Account** > **ONVIF User**.

Figure 4-101 ONVIF user

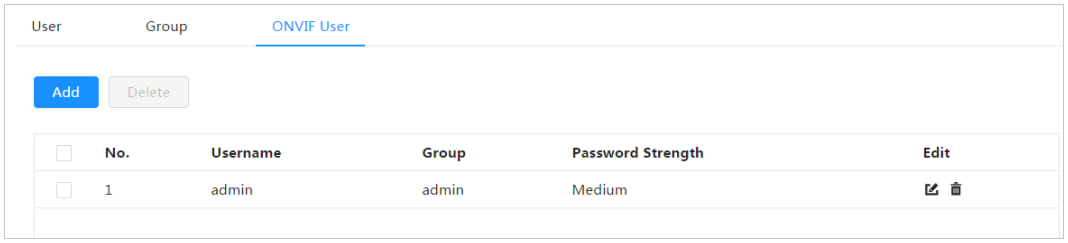

Step 2 Click **Add**.

Figure 4-102 Add ONVIF user

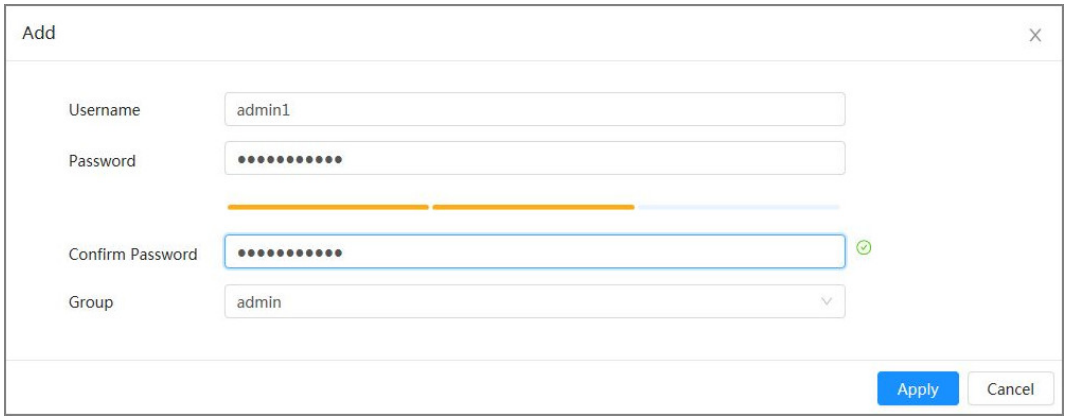

Step 3 Configure user parameters.

Table 4-31 Description of ONVIF user parameters

Parameter	Description
Username	User's unique identification. You cannot use existed username. The max length of the user or group name is 31 characters which consist of number, letter, underline, dash, dot and @.
Password	Enter password and confirm it again. The password must consist of 8 to 32 non-blank characters and contain at least two types of characters among upper case, lower case, number, and special character (excluding ' " ; : &).
Confirm Password	
Group Name	The group that users belong to. Each group has different authorities.

Step 4 Click **OK**.

The newly added user displays in the username list.

Related Operations

- Modify user group information.

  Click to edit password, group, remarks or authorities.

  For admin account, you can only edit the password.

- Delete user group.

  Click to delete the added users.

  The admin account cannot be deleted.

4.8.4 Peripheral Management

Procedure

Step 1 Select > **System** > **Peripheral** > **Wiper**.

Step 2 Configure working mode of wipers.

Figure 4-103 Wiper

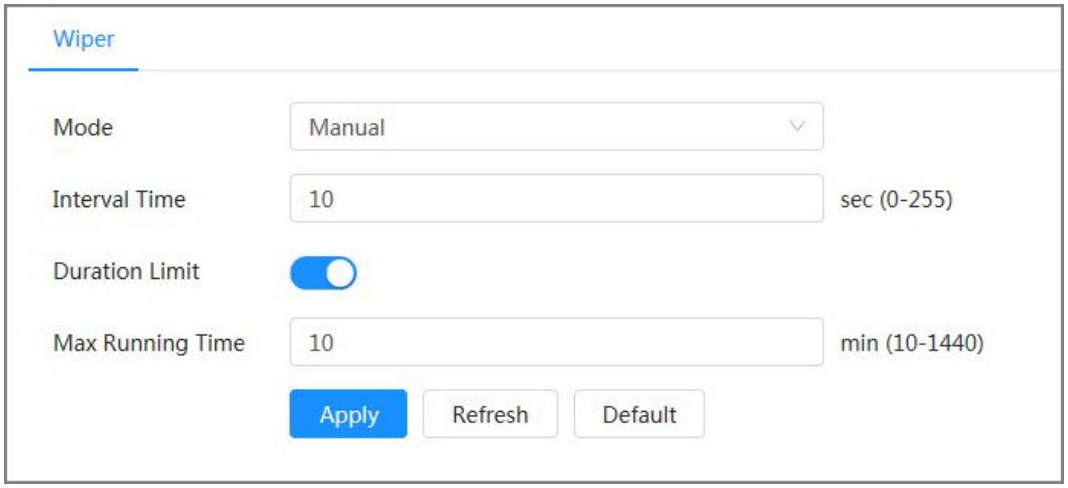

Table 4-32 Configure parameters of wiper

Parameter	Description
Mode	Select the start mode of wiper. Only manual mode is supported at present.
Interval Time	The interval time between stop mode and start mode. For example, set the time to 10 seconds, and the wiper will work every 10 seconds.
Duration Limit	Enable **Duration Limit** and configure **Max Running Time**, and then the wiper will automatically turn off when it runs up to this time.
Max Running Time	

Step 3 Click **Apply**.