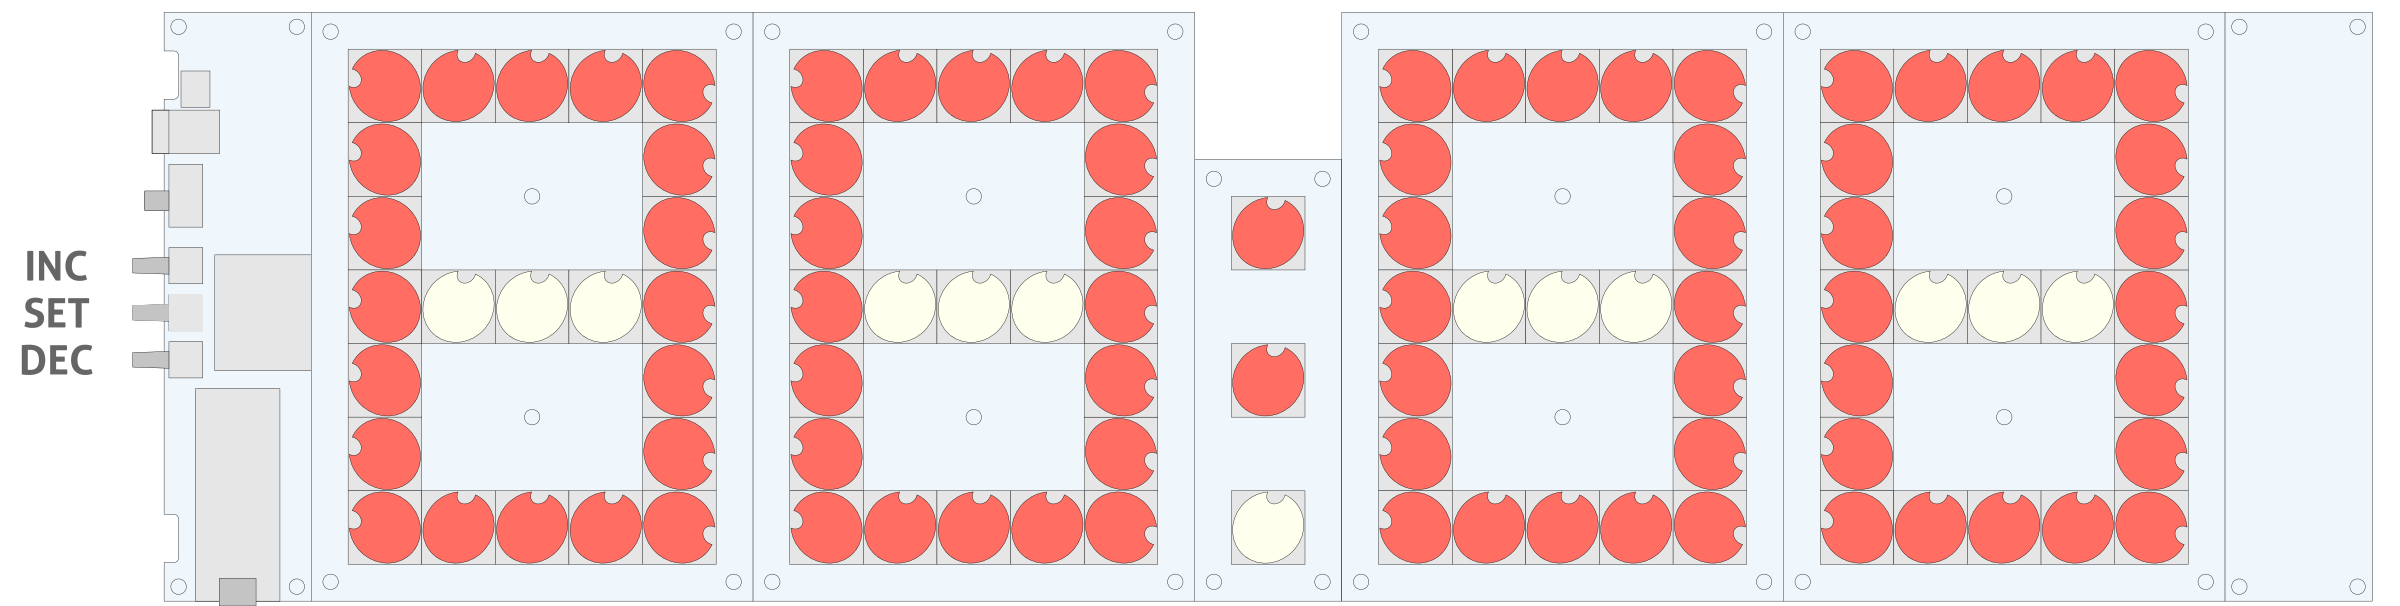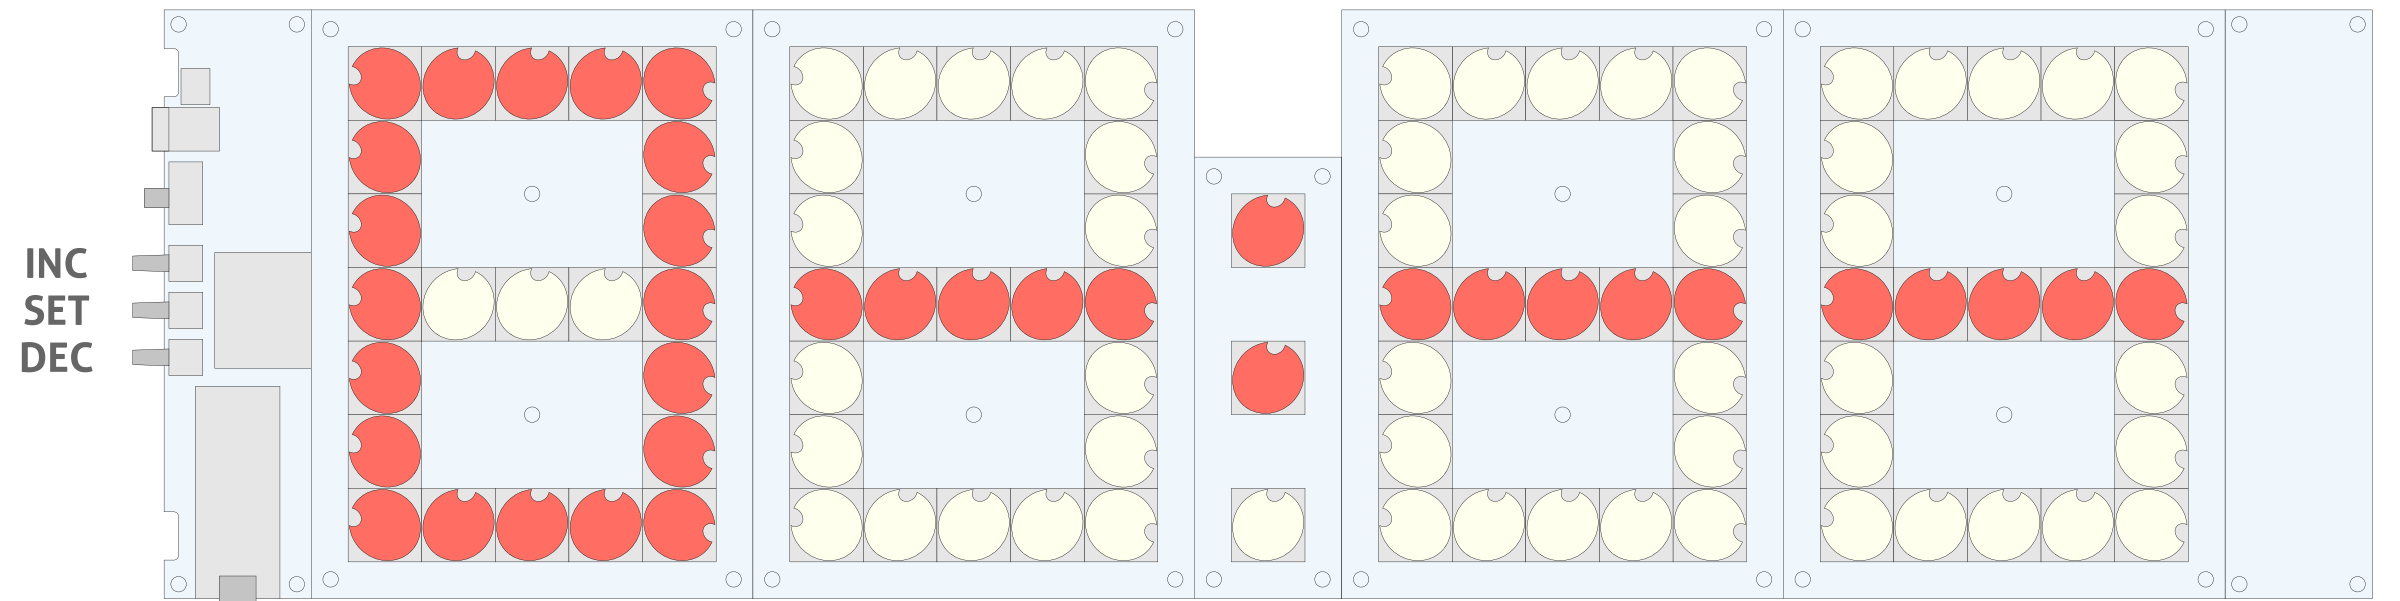# TIME SETTINGS

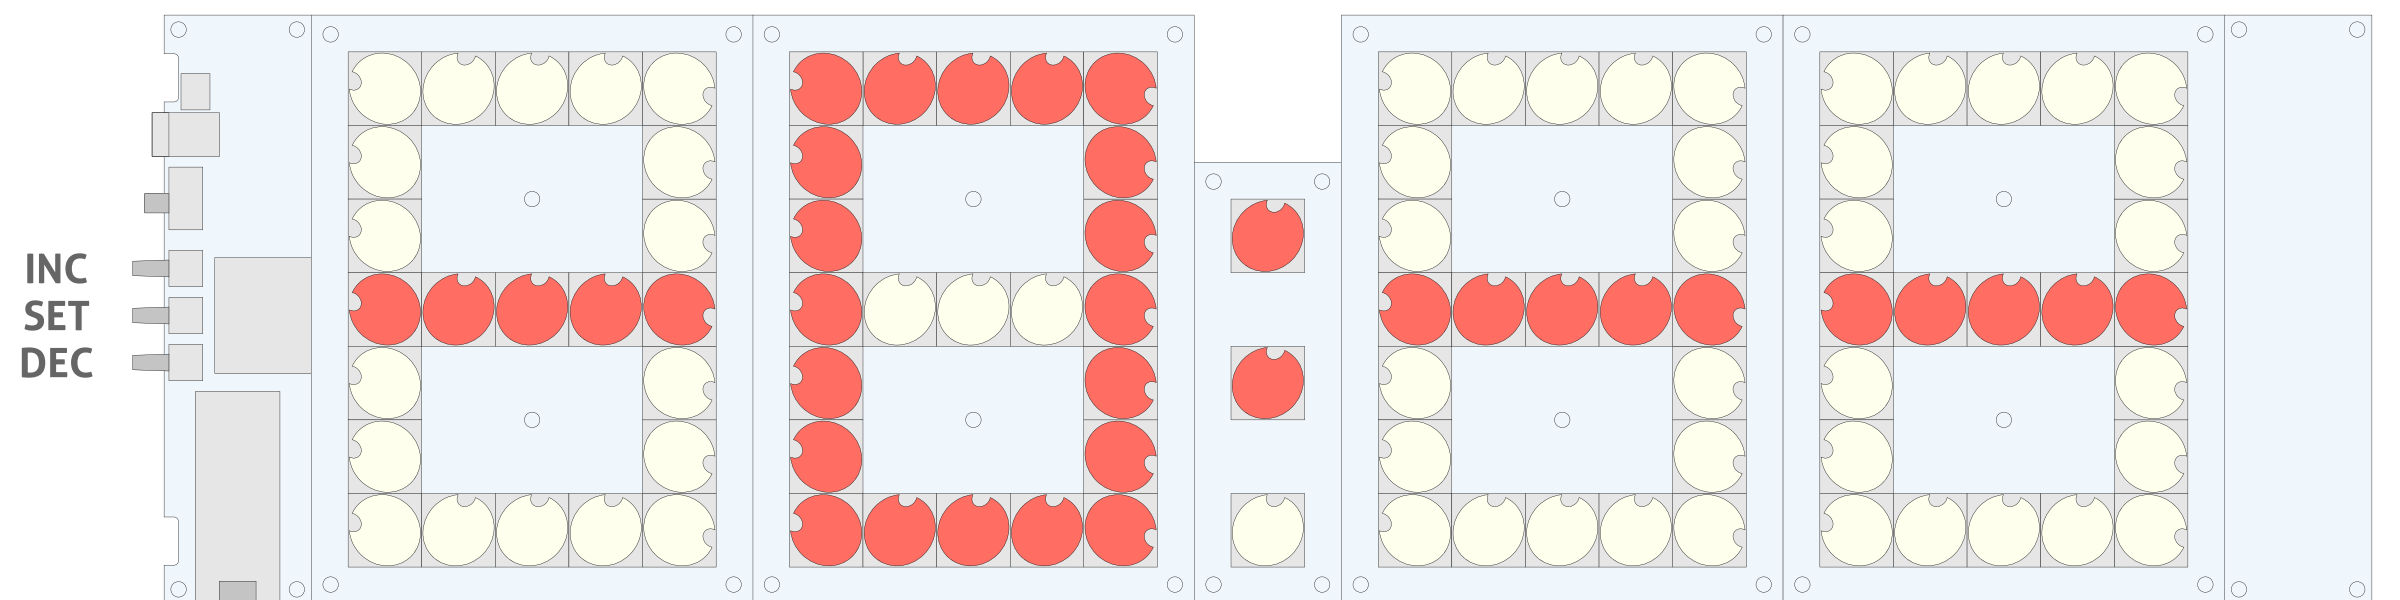**PRESS SET BUTTON FOR 3 SECONDS TO ENTER TIME SETTINGS MENU**
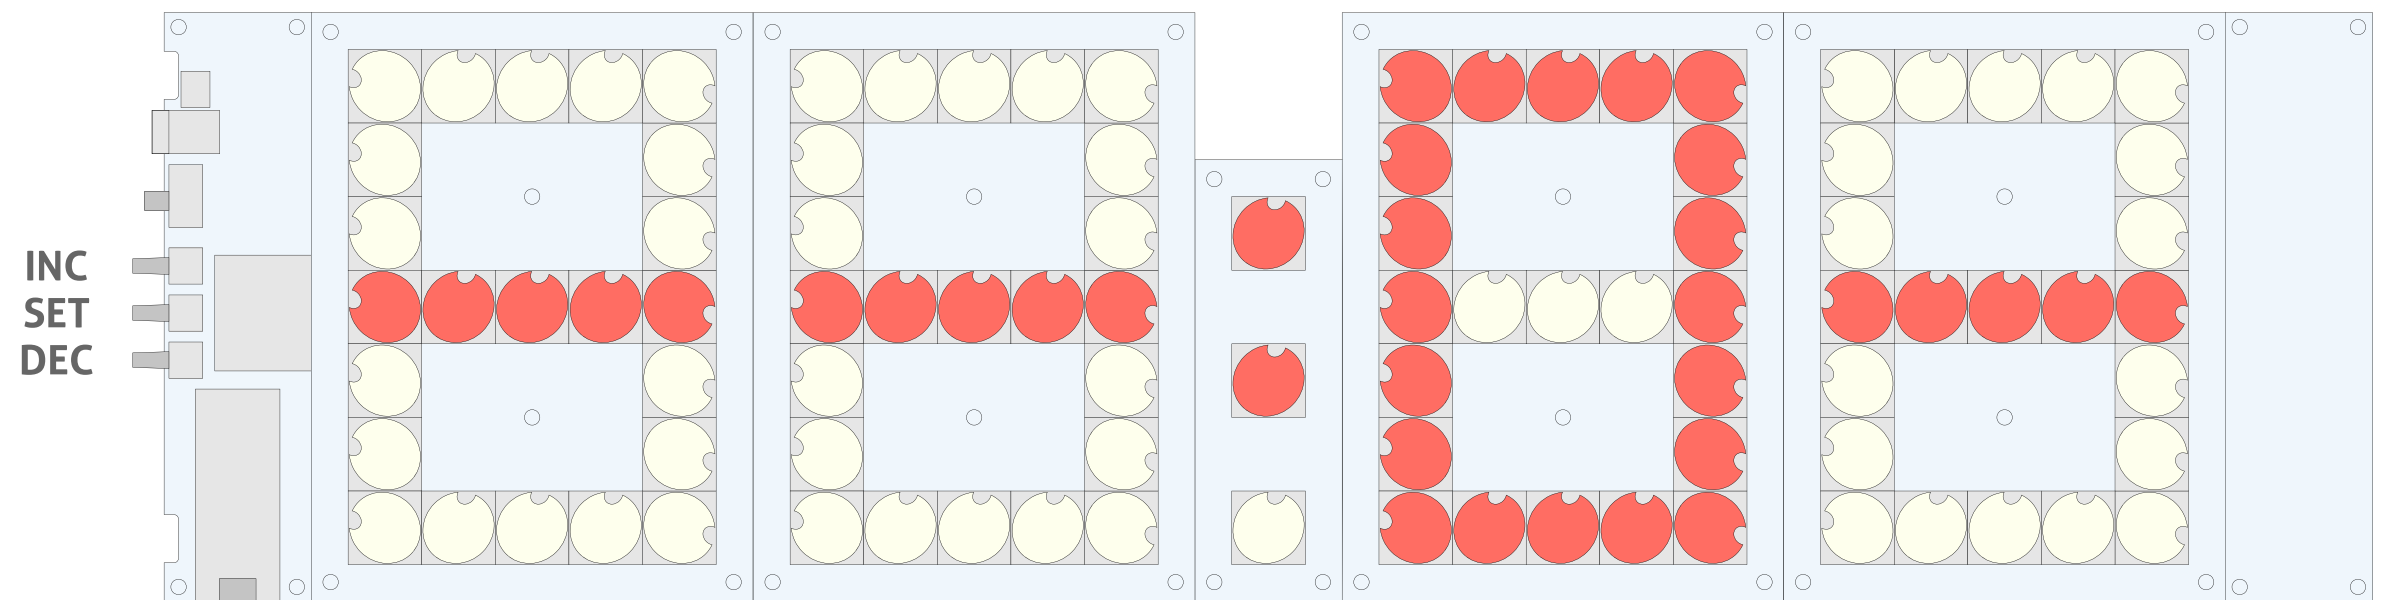


**PRESS INC OR DEC BUTTONS TO SELECT FIRST DIGIT OF HOURS THEN PRESS SET FOR 3 SECONDS TO SAVE YOUR SETTINGS AND PROCEED NEXT**
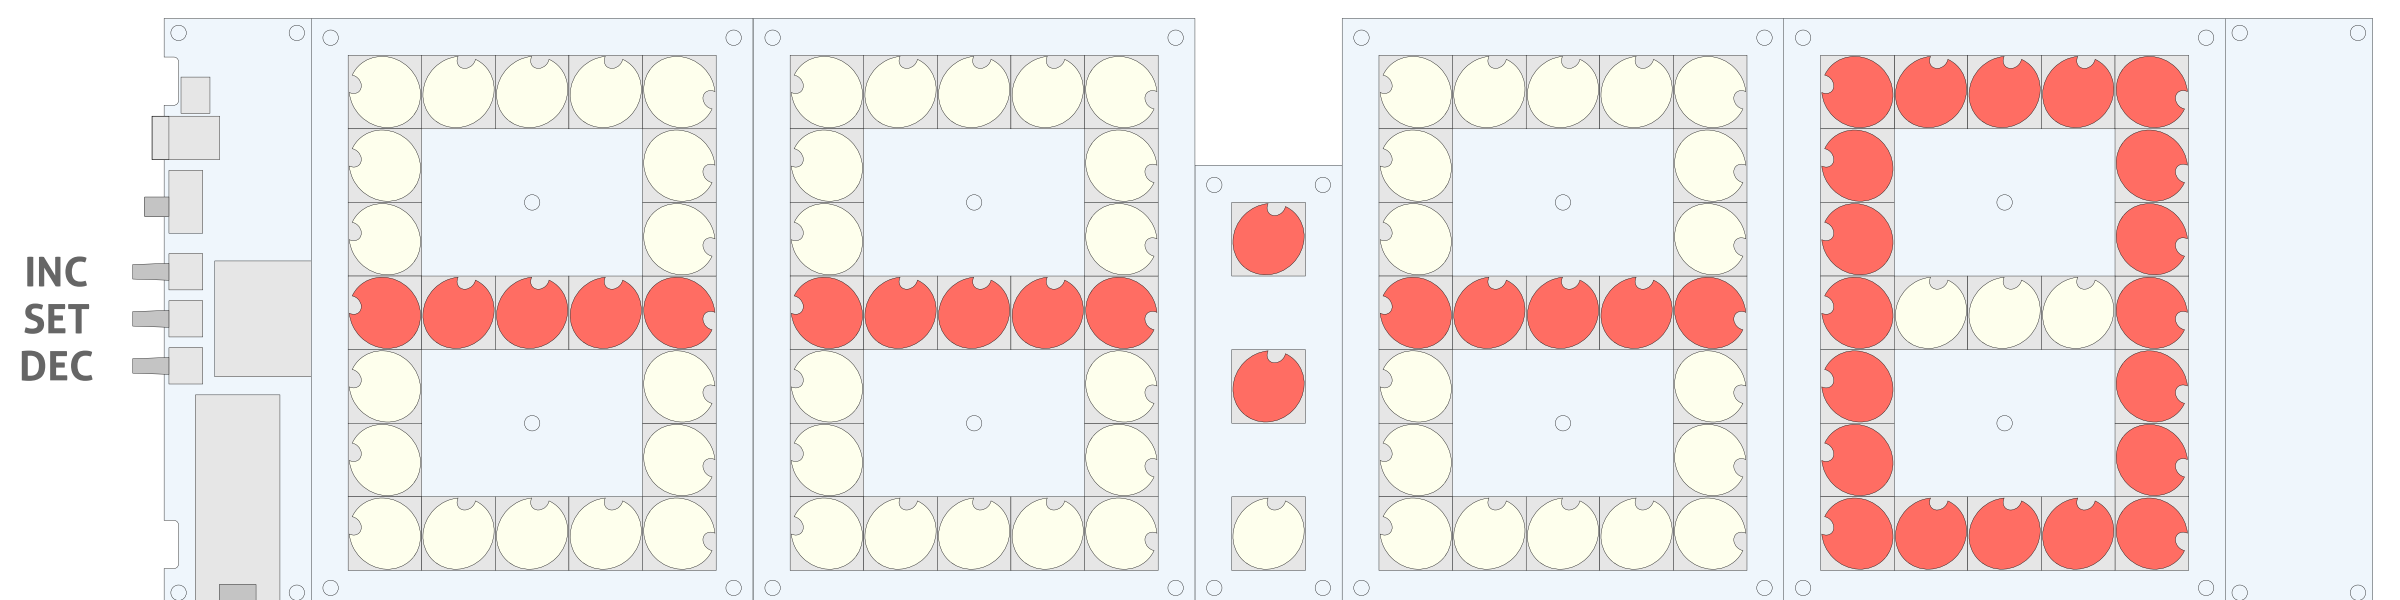


**PRESS INC OR DEC BUTTONS TO SELECT SECOND DIGIT OF HOURS THEN PRESS SET FOR 3 SECONDS TO SAVE YOUR SETTINGS AND PROCEED NEXT**



**PRESS INC OR DEC BUTTONS TO SELECT FIRST DIGIT OF MINUTES THEN PRESS SET FOR 3 SECONDS TO SAVE YOUR SETTINGS AND PROCEED NEXT**



**PRESS INC OR DEC BUTTONS TO SELECT SECOND DIGIT OF MINUTES THEN PRESS SET FOR 3 SECONDS TO SAVE YOUR SETTINGS AND EXIT**



**DISPLAY TIME SETTINGS FINISHED**