

EN User manual

Gas Water Heater 10 liter

USER MANUAL

ZANUSSI

Contents

Safety instructions	2	Features and characteristics	8
Product description	4	Care and cleaning	8
Control panel	4	What to do if	8
Installation instructions.....	5	Technical data	9
Usage	7		

Subject to change without notice



Safety instructions



Important! Read carefully and keep for future reference.

- The safety of your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it's our duty to provide the following safety notes.
- It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move the house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.
- You **MUST** read them carefully before installing or using the appliance.
- Before first time starting up, check the appliance for any damage incurred during transport. Never connect up a damaged appliance. If parts are damaged, contact the service center.
- Never remove or damage stickers, warning labels or nameplates attached to the appliance.

General safety

- Make sure that gas type used is identical to the type specified on the nameplate.

- It is dangerous to alter the specifications or attempt to modify this product in any way unless through service center or natural gas accredited companies. No touches on hot parts of the heater such as all the tubes and exhaust pipe. Any contact with hot parts can cause burn. Children and laymen must keep remote from the heater during its operation.
- For long term nonuse of the appliance, close water and gas source well and remove batteries.
- Any leakage from the heater to be found can be caused by parts failure or deficient installation. Please make contact with Service center.
- For regular operation of the appliance, No blocking or obstruction at the entrance/intakes on the front panel.
- Repair and maintenance for the heater should be provided once at least every year. It is recommended to provide repair and maintenance after a period of operation.
- All repair and maintenance should be carried out by Service center authorized professionals.
- Installation, maintenance and check should be done by Service center authorized professionals.
- This appliance must be installed in a room separate from living rooms and have a good ventilation.

Installation

This Appliance must be installed in a good ventilated room. It is prohibited to install natural discharge type gas water heater in a room with poor ventilation condition. User should apply for local gas administrative institution/distributor approval before installation, installation should be carried out by Service center authorized professionals

- The appliance can only be operated after being equipped with an exhaust pipe. The exhaust pipe should be installed by professionals.
- Usage of accredited gas pressure regulator is recommended.
- Do not install the appliance in the following places:
 - Bed and Living rooms
 - Bathrooms
 - Stairs, or not less than 5 meters from escape doors
 - Warehouses
- It is prohibited to put any inflammable , exploding or corrosive materials close to the appliance ,never block the exhaust pipe with anything.
- No cables ,electric appliances or gas pipes can be placed above the appliance, Keep the heater away from heat sources such as gas cockers.
- The heater must be installed onto a vertical wall in a correct vertical way.

Usage


- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed

- During operation do not put any inflammable or such materials close to the appliance.
- **In case of gas smell**
 - Close the gas valve.
 - Open all the windows and doors.
 - Any lighting of fire or ignition or start-up of electric light is not allowed. Neither is any start-up operation which will generate sparks.
 - Inform Service center or gas supply company.


Children safety

- This appliance is not intended for use by person (include children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the packing materials (cardboards, nails, bolts, plastic plate and other similar materials) within reach of children, they can be exposed to suffocation danger.

Product Description

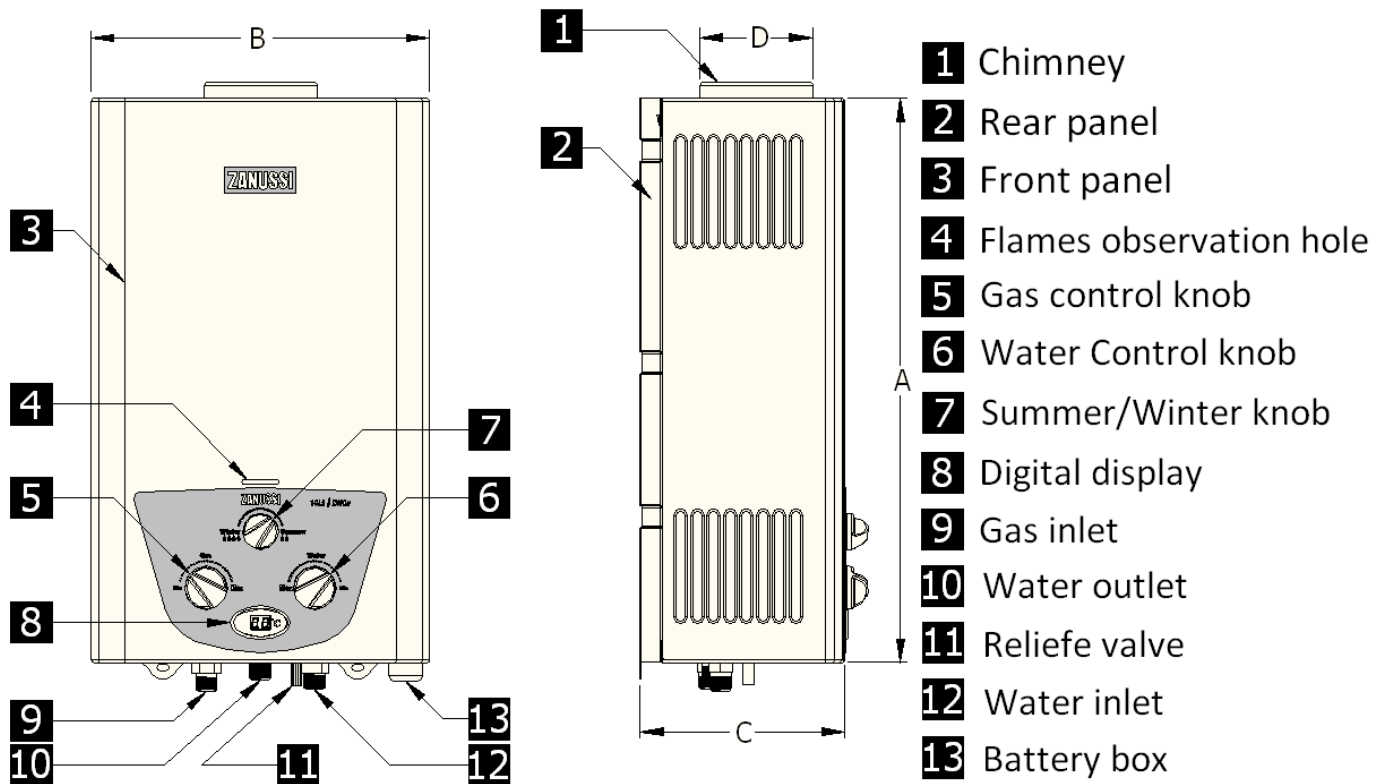

Control Panel

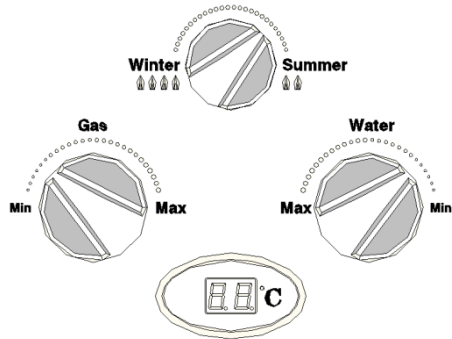


• Summer/Winter knob

- Used on Summer position to decrease number of working flame rows to the half to decrease gas consumption, and on Winter position it will work all flame rows.

• Water Control knob

- Used to control water flow rate, on (Min) position it decreases the water flow to the minimum level and start up pressure to the minimum,

and on (Max) it increase water flow to the maximum and start up pressure to the maximum.

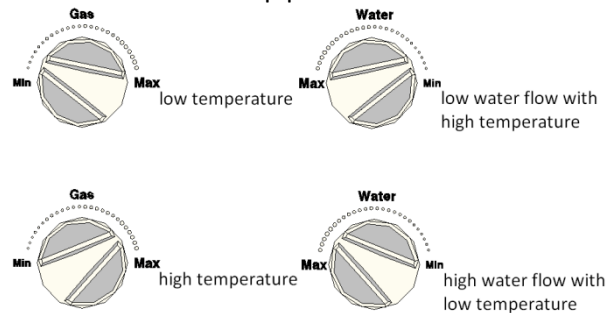

• Gas Control knob


- Used to control gas flow rate, on (Min) position it decreases the gas flow to the minimum level, and on (Max) it increase gas flow to the maximum.

• Digital Display

- Operates only when appliance in use, it displays outlet water temperature.


Installation instructions

! Caution! Gas water heater must be installed in a location out of bathroom where well ventilated. Its prohibited to install natural discharge type gas water heater in a room with a poor ventilation condition. User should apply for local gas administrative institution approval before installation. and the installation must also be approved by local civil administrative department, installation should only carried out by the Service center which are trained well to do that.

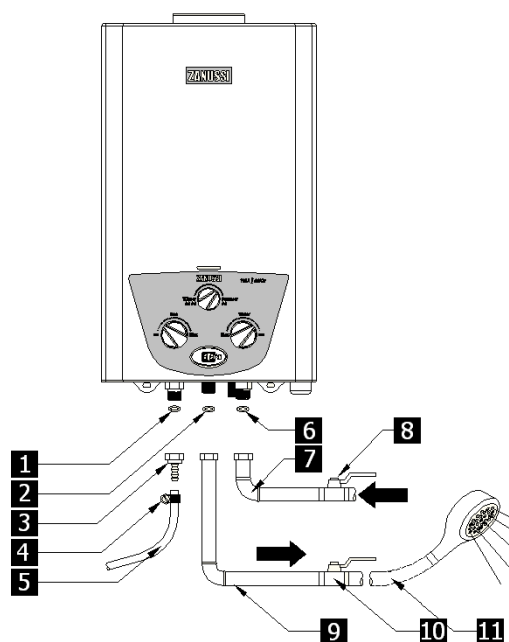

- 1 gas inlet sealing gasket
- 2 water outlet sealing gasket
- 3 gas inlet nozzle
- 4 hose pipe clip
- 5 hose pipe
- 6 water inlet sealing gasket
- 7 water inlet pipe
- 8 water inlet valve
- 9 water outlet pipe
- 10 water outlet valve
- 11 sprayer

- The appliance must be installed onto a vertical wall in a correct vertical way, and flames observation hole should be in human eyes level (about 140 to 160 cm).
- The space of exhaust pipes from ceiling should be not less than 60cm and from side walls not less than 30cm.

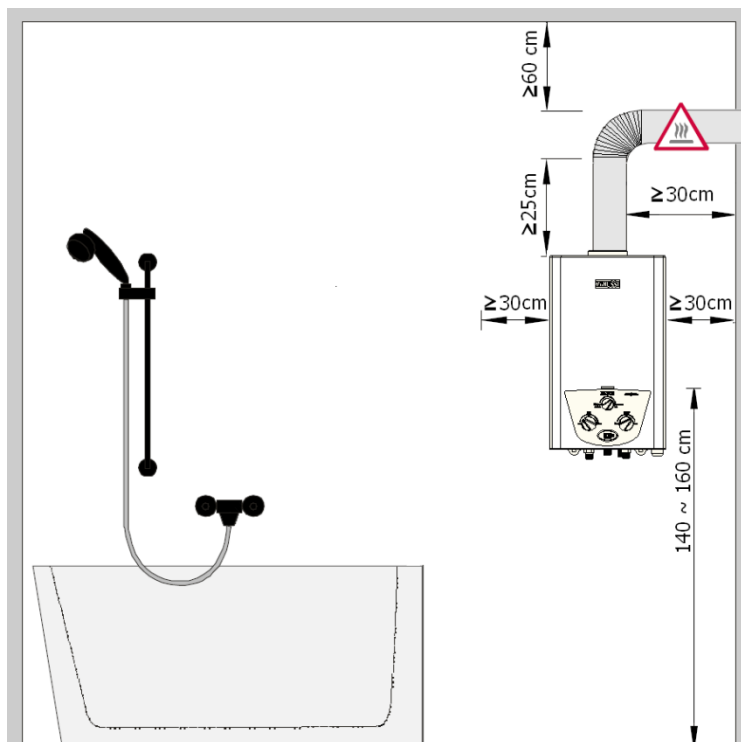

! Caution! The appliance should be equipped with an exhaust pipe or a chimney. Please pay attention to the specific regulations for installation required by the local country.


! Caution! make sure not to mount the appliance on a wall contains inflammable materials, if mounted on an inflammable material's wall like wood put heat insulation material between the wall and the appliance

! Cautions!

- It is prohibited to put any inflammable , exploding or corrosive materials close to the appliance ,never block the exhaust pipe with anything.
- No cables ,electric appliances or gas pipes can be placed above the appliance, Keep the heater away from heat sources such as gas cockers.
- The appliance must vertical on mounting.

- Do not install the appliance in the following places:
 - Bed and Living rooms
 - Bathrooms
 - Stairs, or not less than 5 meters from escape doors
 - Warehouses

• Appliance mounting

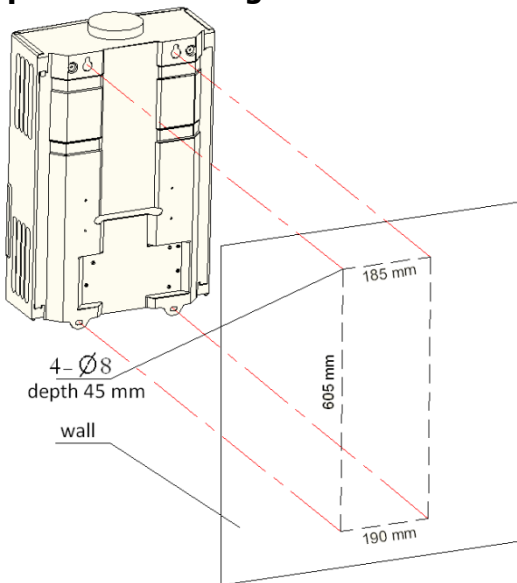

Drill holes to the proper location on the wall and fix the plastic plug in, fasten the "L" shape screw then hang the appliance.

• Appliance connections

- Water ,gas ,hot water flexible connections could be steel or rubber made, hot water hose must withstand high temperature, and gas tube must be oil-proof, anti corrosion and not more than 2 meters long.
- Sealing gasket must be applied to the connections
- Switch valves should be installed on gas and water supply pipes to make it convenient for installation or repair.

- Before connecting the gas and water connections to the appliance, please pay attention to the cleanout of these connections to remove impurities and other pollutants.

! Caution! After installation, check the gas connection with soap foam for leakage, use the appliance only when leakage free and passed the inspection by local gas administrative institution.

• Batteries installation

- Put two "D" size batteries 1.5 Volt into the battery box. make sure of the polarity order and close the box.

• Exhaust pipe installation

- This appliance has an upper opening for exhaust, connect it with an external pipe to discharge exhausts outside.
- Exhaust pipe must be made from anti corrosion thin metal, its minimum thickness is 0.3mm.
- The exhaust pipe must has as maximum 4 bending joints at 90 degrees, the horizontal part of it should be short as possible and joints must be well sealed.
- The exhaust pipe should be 15cm away from inflammables things.
- the vertical part of exhaust pipe above the appliance opening should be long as possible with minimum length of 25cm.
- A wind, rains and snow protection cap should be placed on the end of the exhaust pipe.
- Exhaust pipe must be able to with stand self weight, wind ,accumulated snow and shake.

! Caution! Don't mount exhaust pipe on a windward location.

Usage

Before using open main gas and water valve.

- Open hot water valve until ignition happen and fire starts then hot water come out from outlet.
- If it's the first time of usage after a long time without use, it may need more trials to discharge the air from the gas connection. if the first trial failed close and reopen the outlet water valve for a second trial ignition.
- Control the outlet water temperature by using the water control and gas control knobs, use water control knob to control outlet water quantity and use gas control knob to control flames intensity.
- Water control knob on (Min) position gives minimum water flow and higher outlet water temperature. On (Max) position it gives maximum water flow and lower outlet temperature.
- Gas control knob on (Min) position gives minimum gas flow and low water outlet temperature. On (Max) position it gives maximum gas flow and higher outlet water temperature.
- Summer/winter knob on Summer position to decrease number of working flame rows to the half to decrease gas consumption, and on Winter position it will work all flam rows.

• Temporary shutdown

- When hot water temporary not needed during use, just turn off the hot water valve. when hot water needed again, turn on the hot water valve again.

 **Caution!** Be careful water temperature may be too high at the moment the water flow resumes.

 **Caution!** If not using for long period close water and gas supply and remove batteries.

 **Caution!** Be careful water temperature may be too high at starting.

 **Caution!** Regularly check the connections for leakage. if gas leakage found do the following:

- o Close the gas source valve.
- o Open all the windows and doors.
- o Any lighting of fire or ignition or start-up of electric light is not allowed. Neither is any start-up operation which will generate sparks.
- o Inform Service center or gas supply company.

 **Caution!** Never leave the water outlet valve open in case that water supply is cut.

 **Caution!** It is prohibited to put any inflammable , exploding or corrosive materials close to the appliance ,never block the exhaust pipe with anything.

 **Caution!** The appliance must be installed in a well ventilated place to avoid combustion exhausts such as carbon oxides .

 **i** If cold water to be mixed with hot water at outlet water exit, make sure that cold water pressure is not too high, or appliance will shut off.

Features and characteristics

This appliance provides you with instant hot water after opening water outlet valve, there for it is sufficient for all home use purposes that requires hot water. this appliance contains the following features:

- Low pressure start up ,which make it suitable for user living in high level floors that suffers low water pressure.
- Forced shut off in case of flames extinguishing to prevent gas leakage.
- Anti-Blast on start up.
- High pressure(over 8bar) protected.

 When this feature is activated, the high pressure relief valve will leak water to ambient in form of water drops to relief pressure inside the appliance.

- Over heating protection, prevents water temperature to increase above standard temperature whatever the overheating cause is.
 When this feature is activated, the high temperature cut-off thermostat will force shut-off to the gas valve to prevent over heating from evaporating water inside appliance to protect the user and the appliance .
- Back wind protection to insure normal operation in existence of wind back flow.
- Continuous operation for only 20 minutes ,to protect from exhaust accumulation, and in case of forgot water valve open while water source is cut and back again.

Care and cleaning

- All the repair and maintenance must be carried out by customer service authorized technicians.
- Normally the batteries should be replaced once half a year.
- appliance malfunctions should be repaired on its time to keep the performance of it.
- A periodical check and maintenance of the appliance recommended to be fulfilled every 6 months.
- A clean and wet cloth can be used for the cleaning of the heater. dissolvent products are not allowed for the cleaning!
 **Caution!** Please only clean exhaust pipe in cold state!

What to do if.....

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling the service technicians, before contacting the local service center please carry out the check listed below.

Problem	Problem cause \ Solution
Flames extinguishing while use	• Low gas pressure ○ Check gas connection then open gas valve • Low inlet water pressure ○ Check water supply main pressure • Safety feature activated(20 minutes of use shut-off timer) ○ Re-start the appliance (close outlet water valve and re-open) • Low battery ○ Replace batteries • Strong wing outside ○ Wait until wind stop

Ignition Failure	• The gas valve is not completely opened ○ Open the gas valve completely • Air in the gas feeding ○ Close and open the distributor for several times • Water source valve partially closed ○ Open water source valve completely • Safety feature activated ○ Re-start the appliance (close outlet water valve and re-open) • Low battery ○ Replace batteries • Strong wind outside ○ Wait until wind stop
Yellow flames with black smoke	• Insufficient ventilation ○ Remove any air intake blocking stuff from appliance sides
Abnormal flames with peculiar smell	• Insufficient ventilation ○ Remove any air intake blocking stuff from appliance sides
Outlet water not hot	• The gas valve is not completely opened ○ Open the gas valve completely
Flames extinguishing when adjusting water control on(Max) position	• Low inlet water pressure ○ Readjust water control knob towards (Min) position slightly until problem disappear.

Technical data

Gas Type		LPG
Rated gas pressure		28mbar
Rated heat input power		20 kW
Efficiency		86%
Min water operating pressure		0.25 bar
Max water operating pressure		8 bar
Min water flow (2bar)		5.8 L/min
Max water flow (2bar)		10 L/min
Exhaust discharge type		Flue type
Connections	Gas inlet	1/2 inch
	Water inlet	1/2 inch
	Water outlet	1/2 inch
Dimension (Height "A"*Width "B"*Depth "C")		570*330*190 mm
Chimney diameter		Ø 110 mm
Nozzle diameter		Ø 0.78 mm