




Bank 0 decay: 3950-4050 MHz

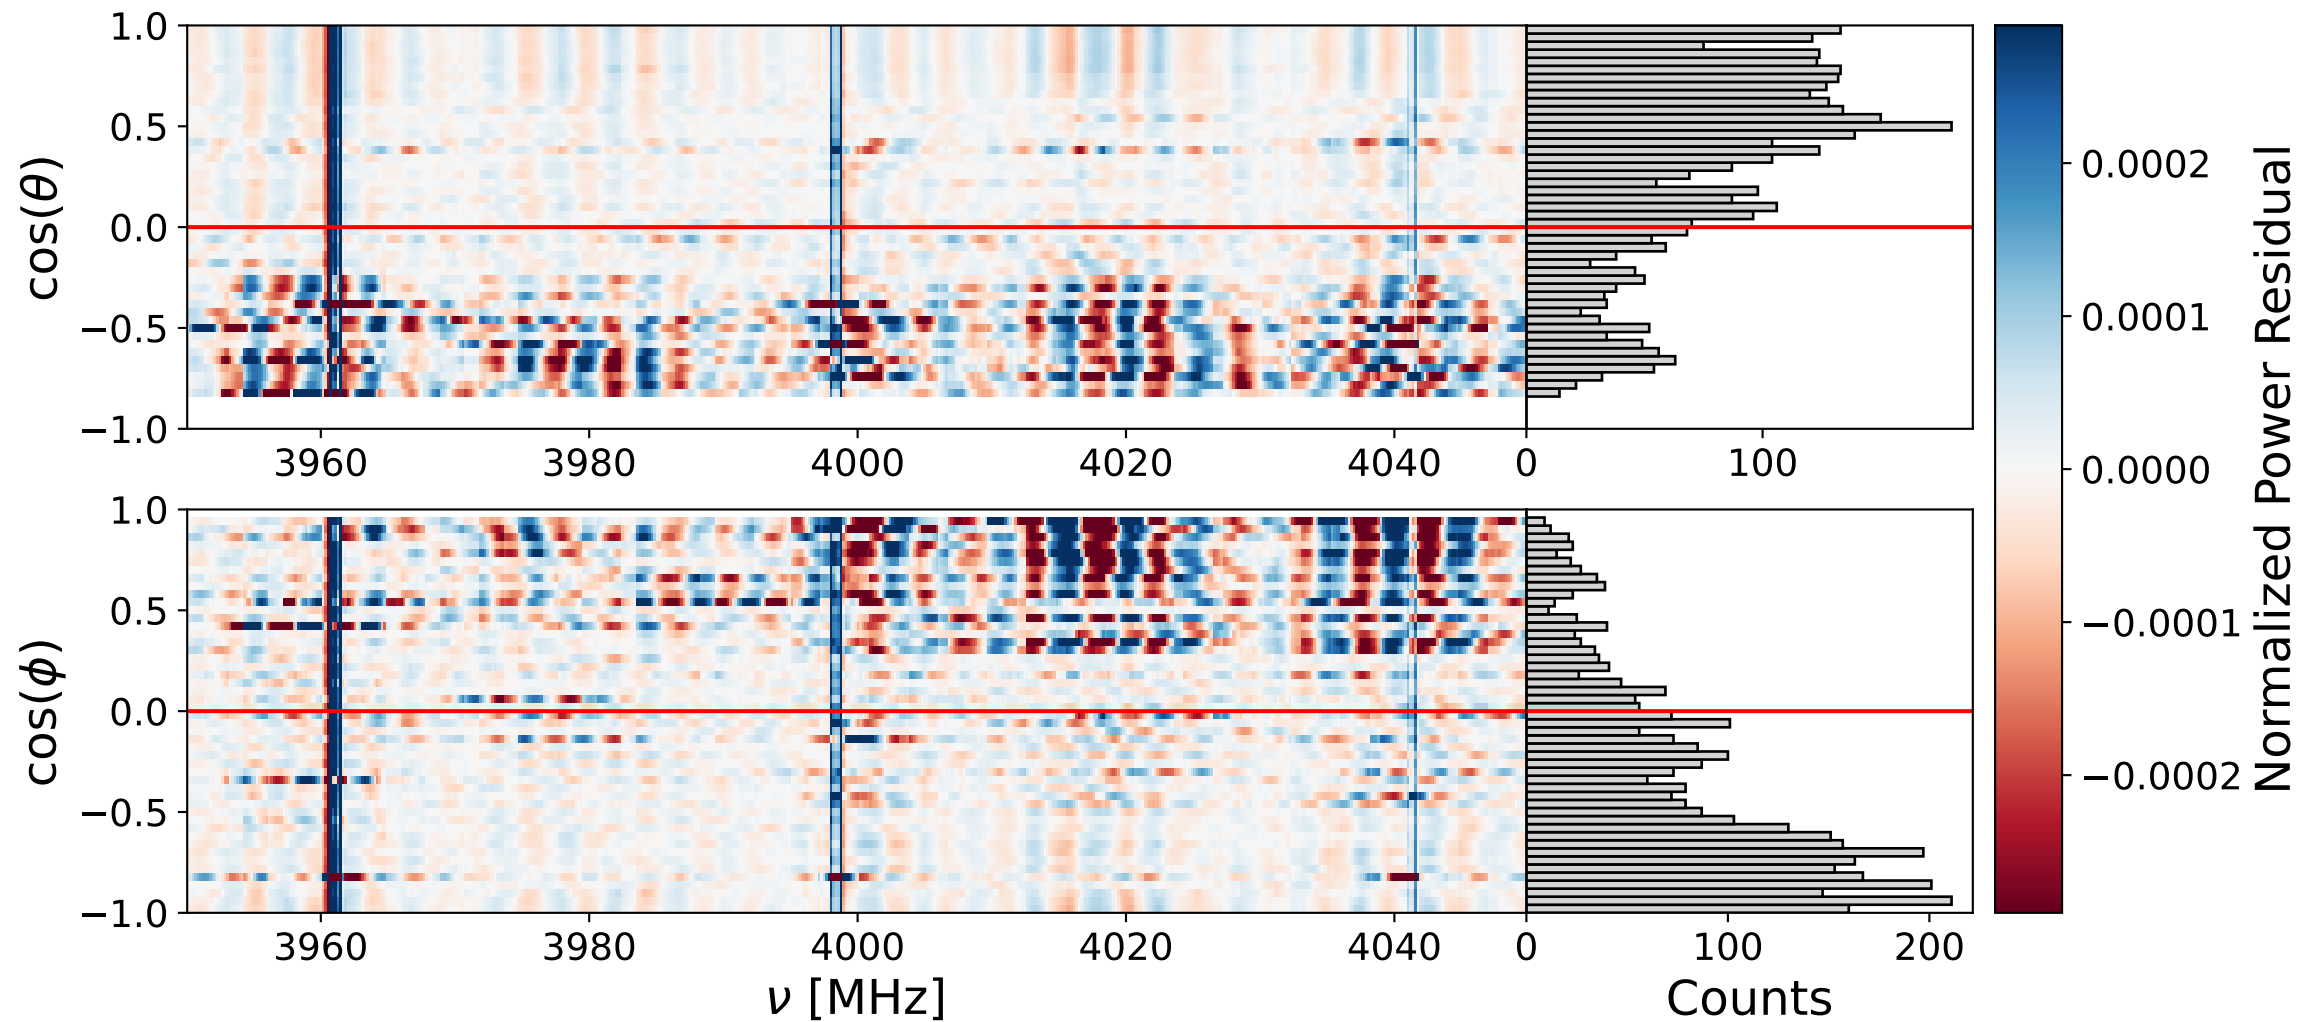


Bank 0 decay: 4050-4150 MHz

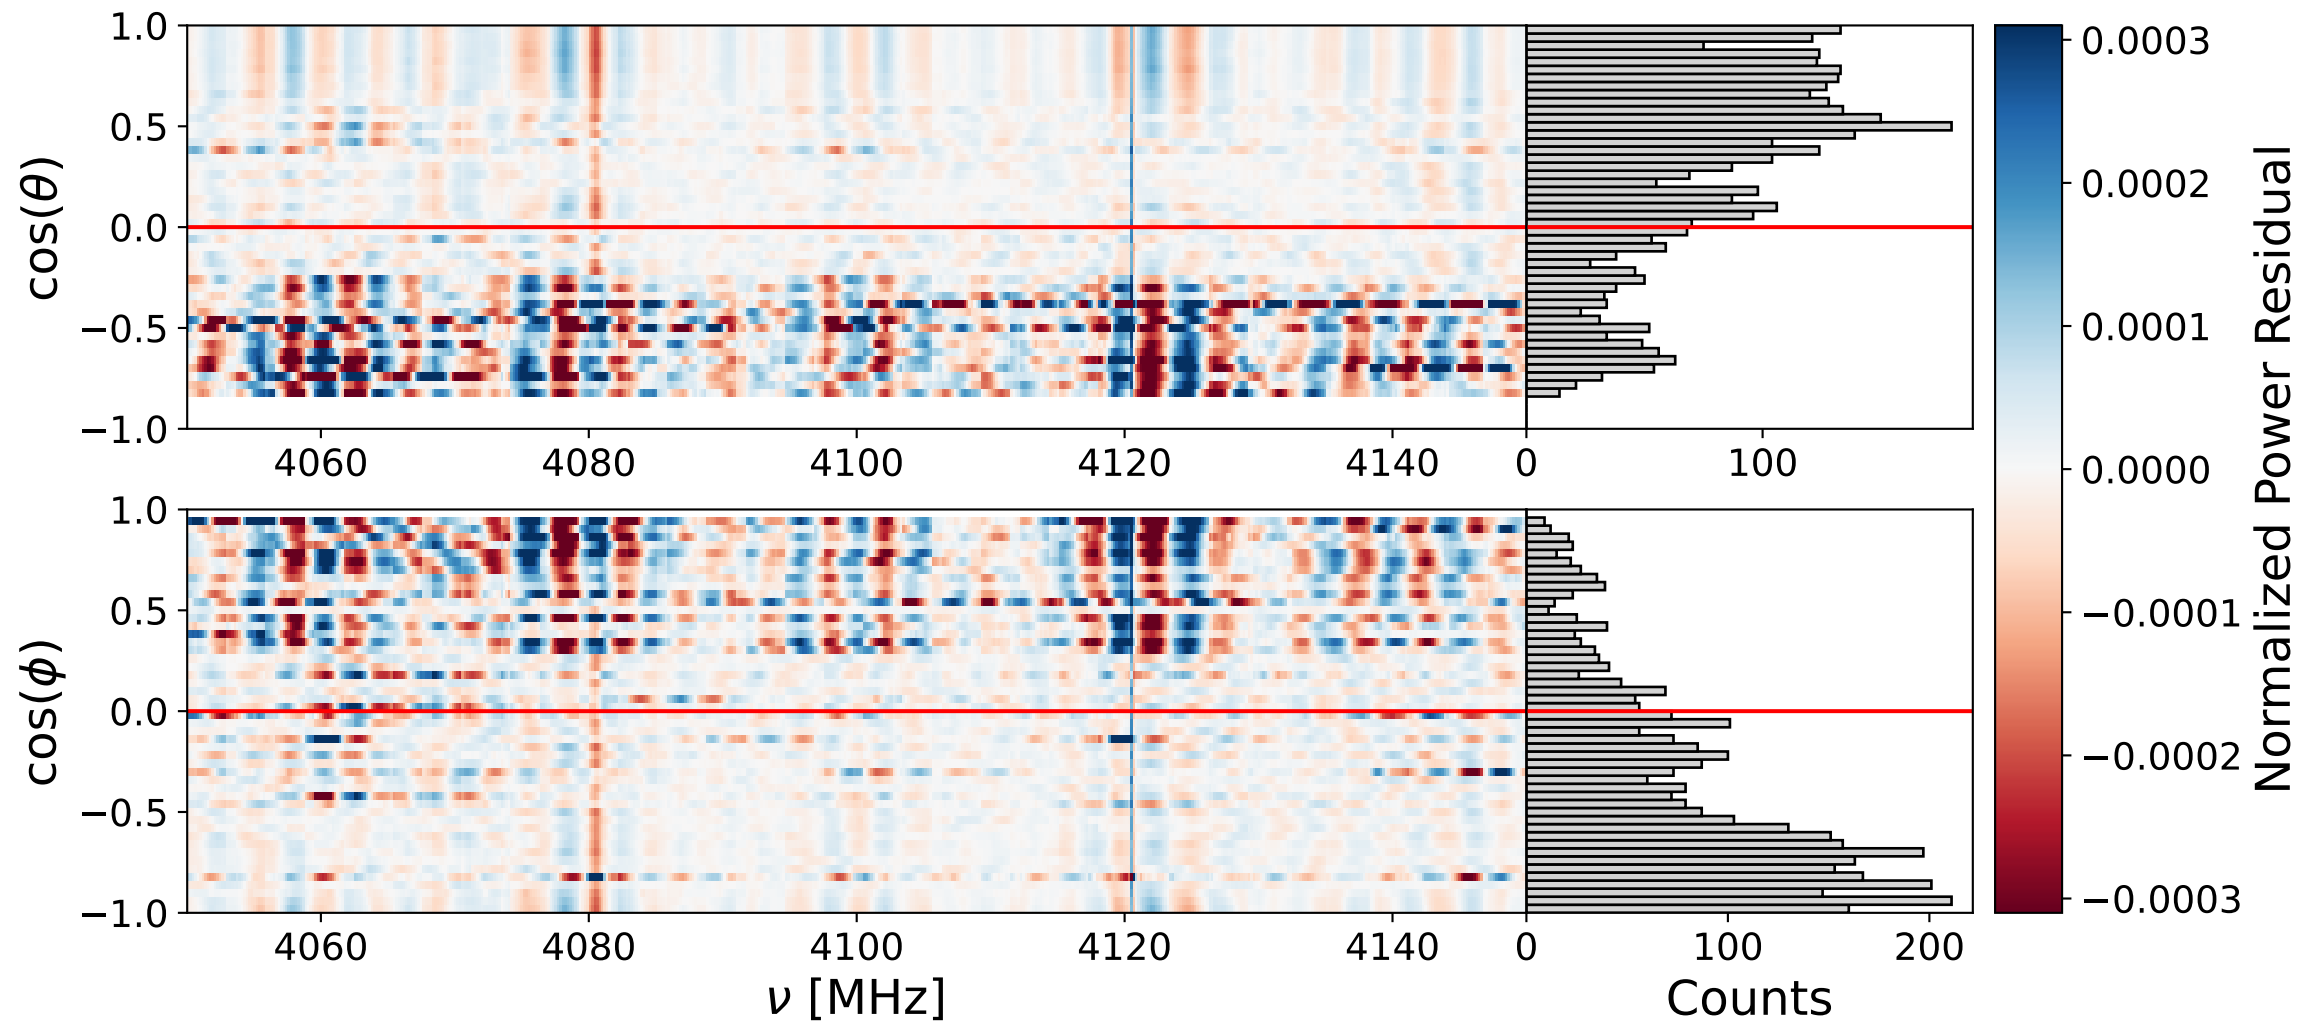


Bank 0 decay: 4150-4250 MHz

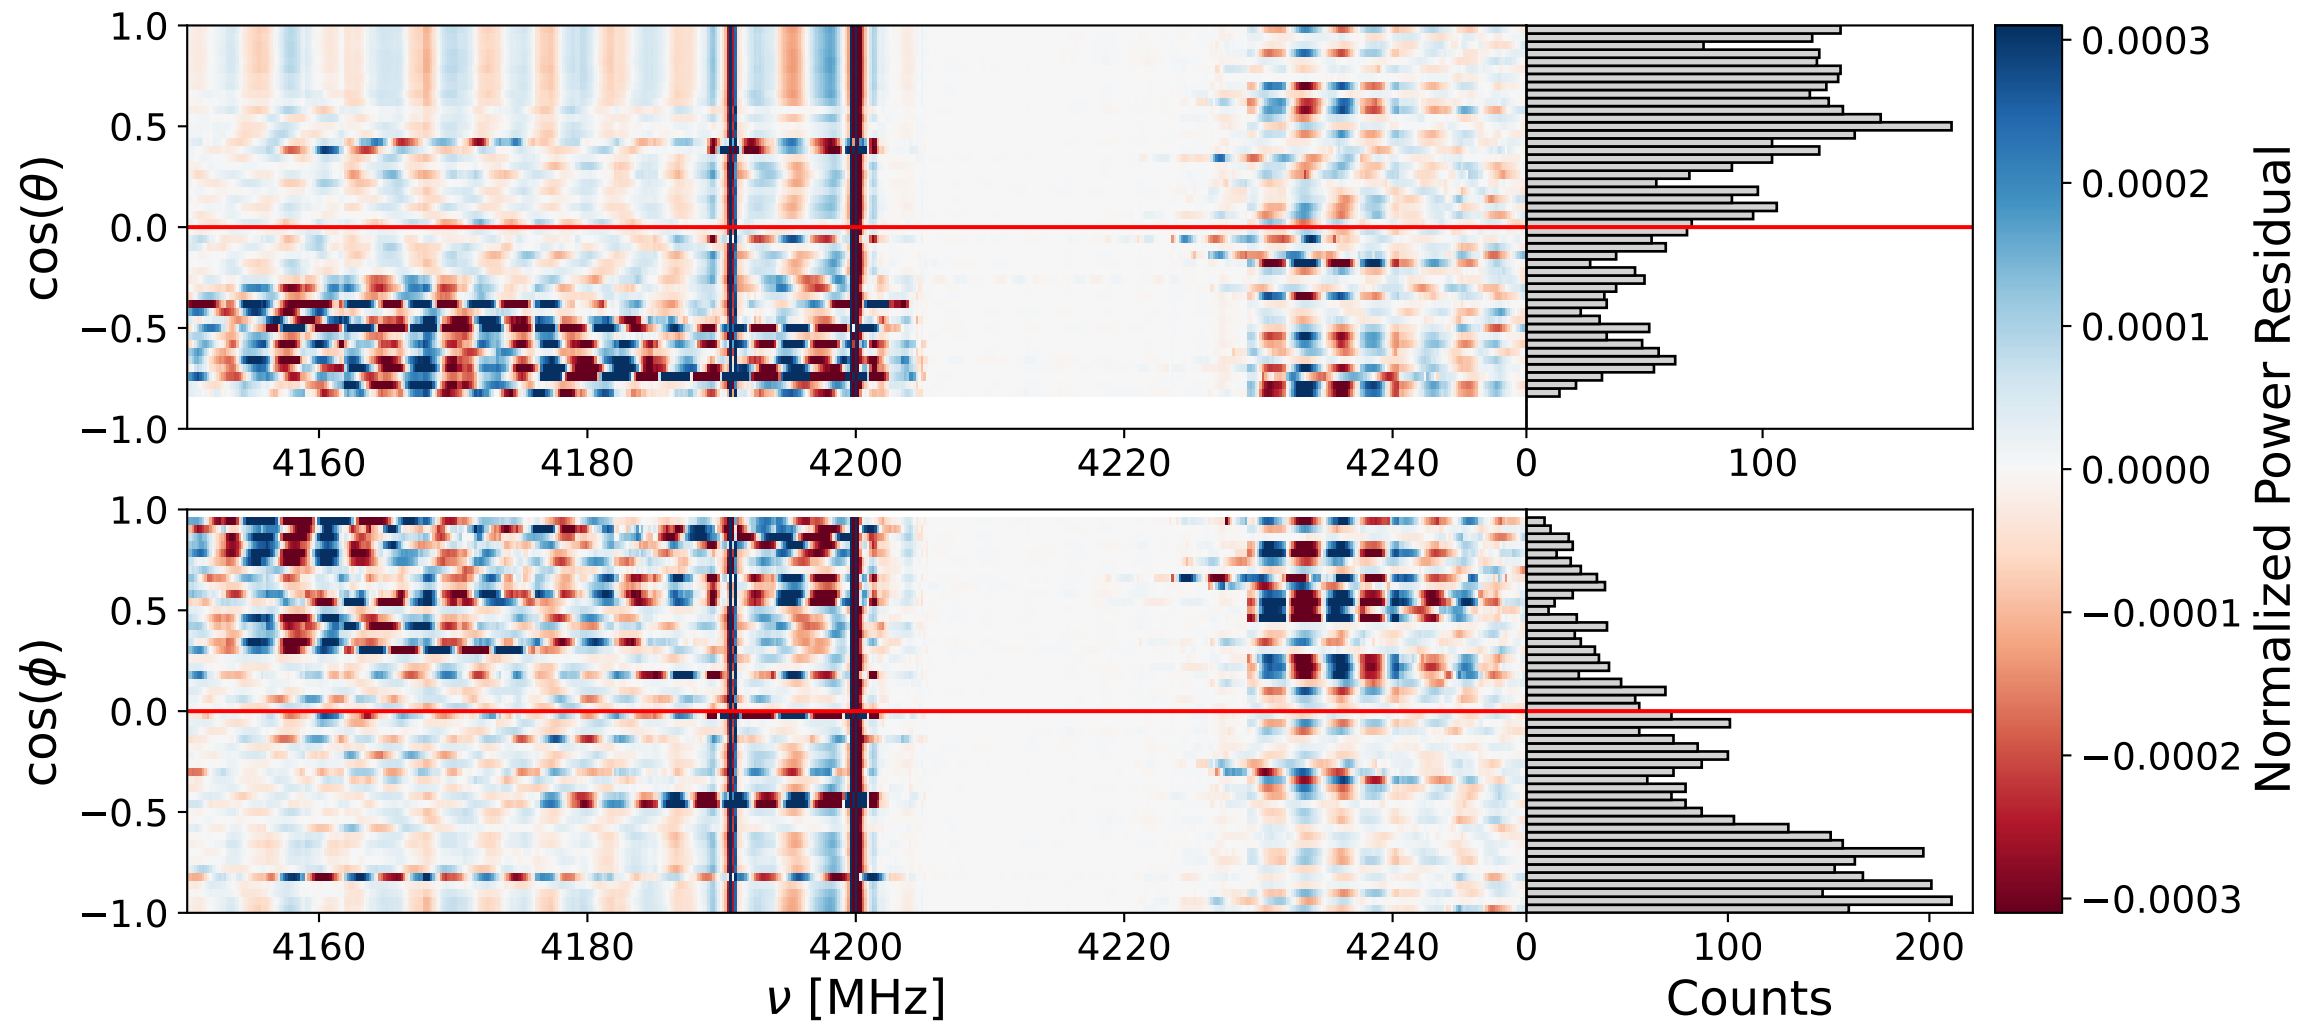


Bank 0 decay: 4250-4350 MHz

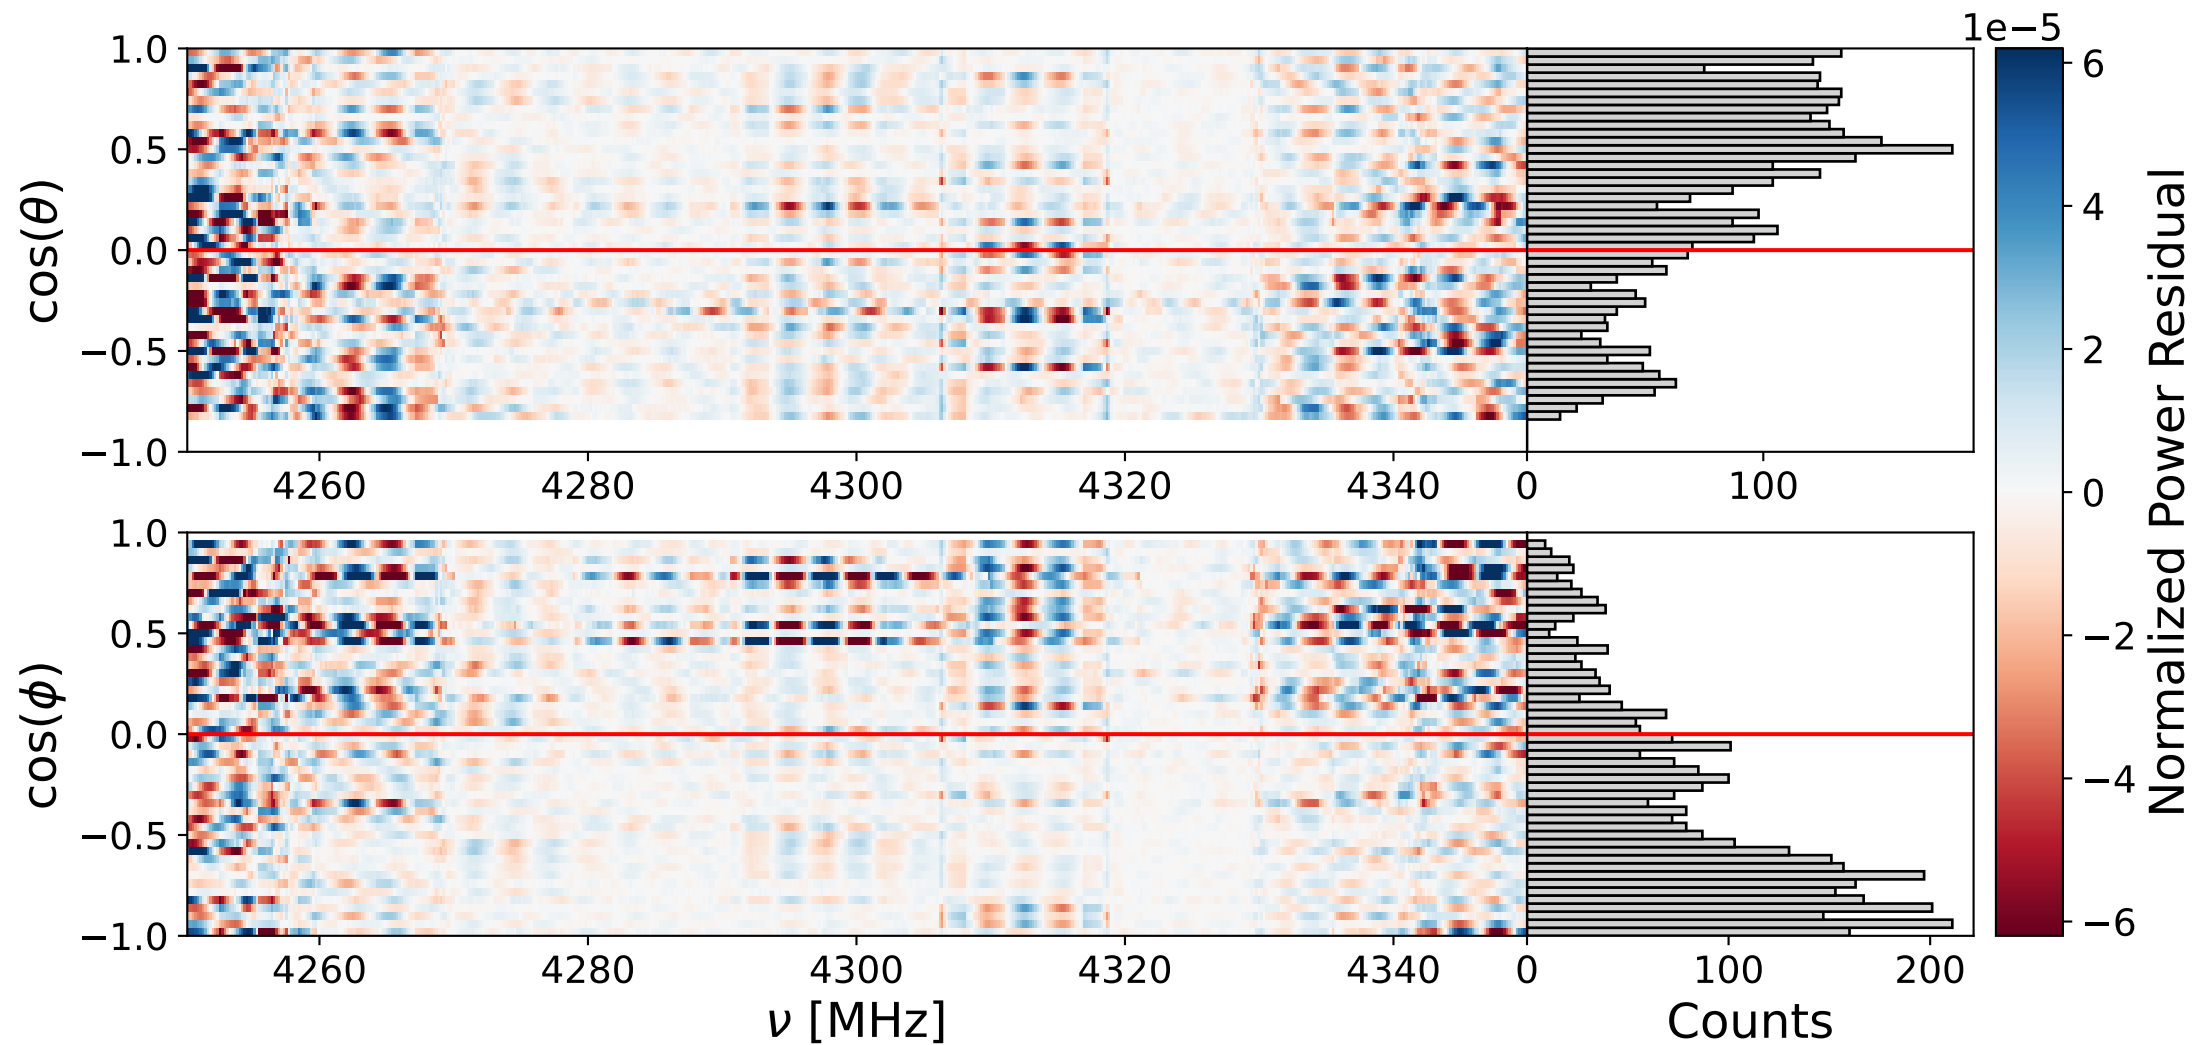


Bank 0 decay: 4350-4450 MHz

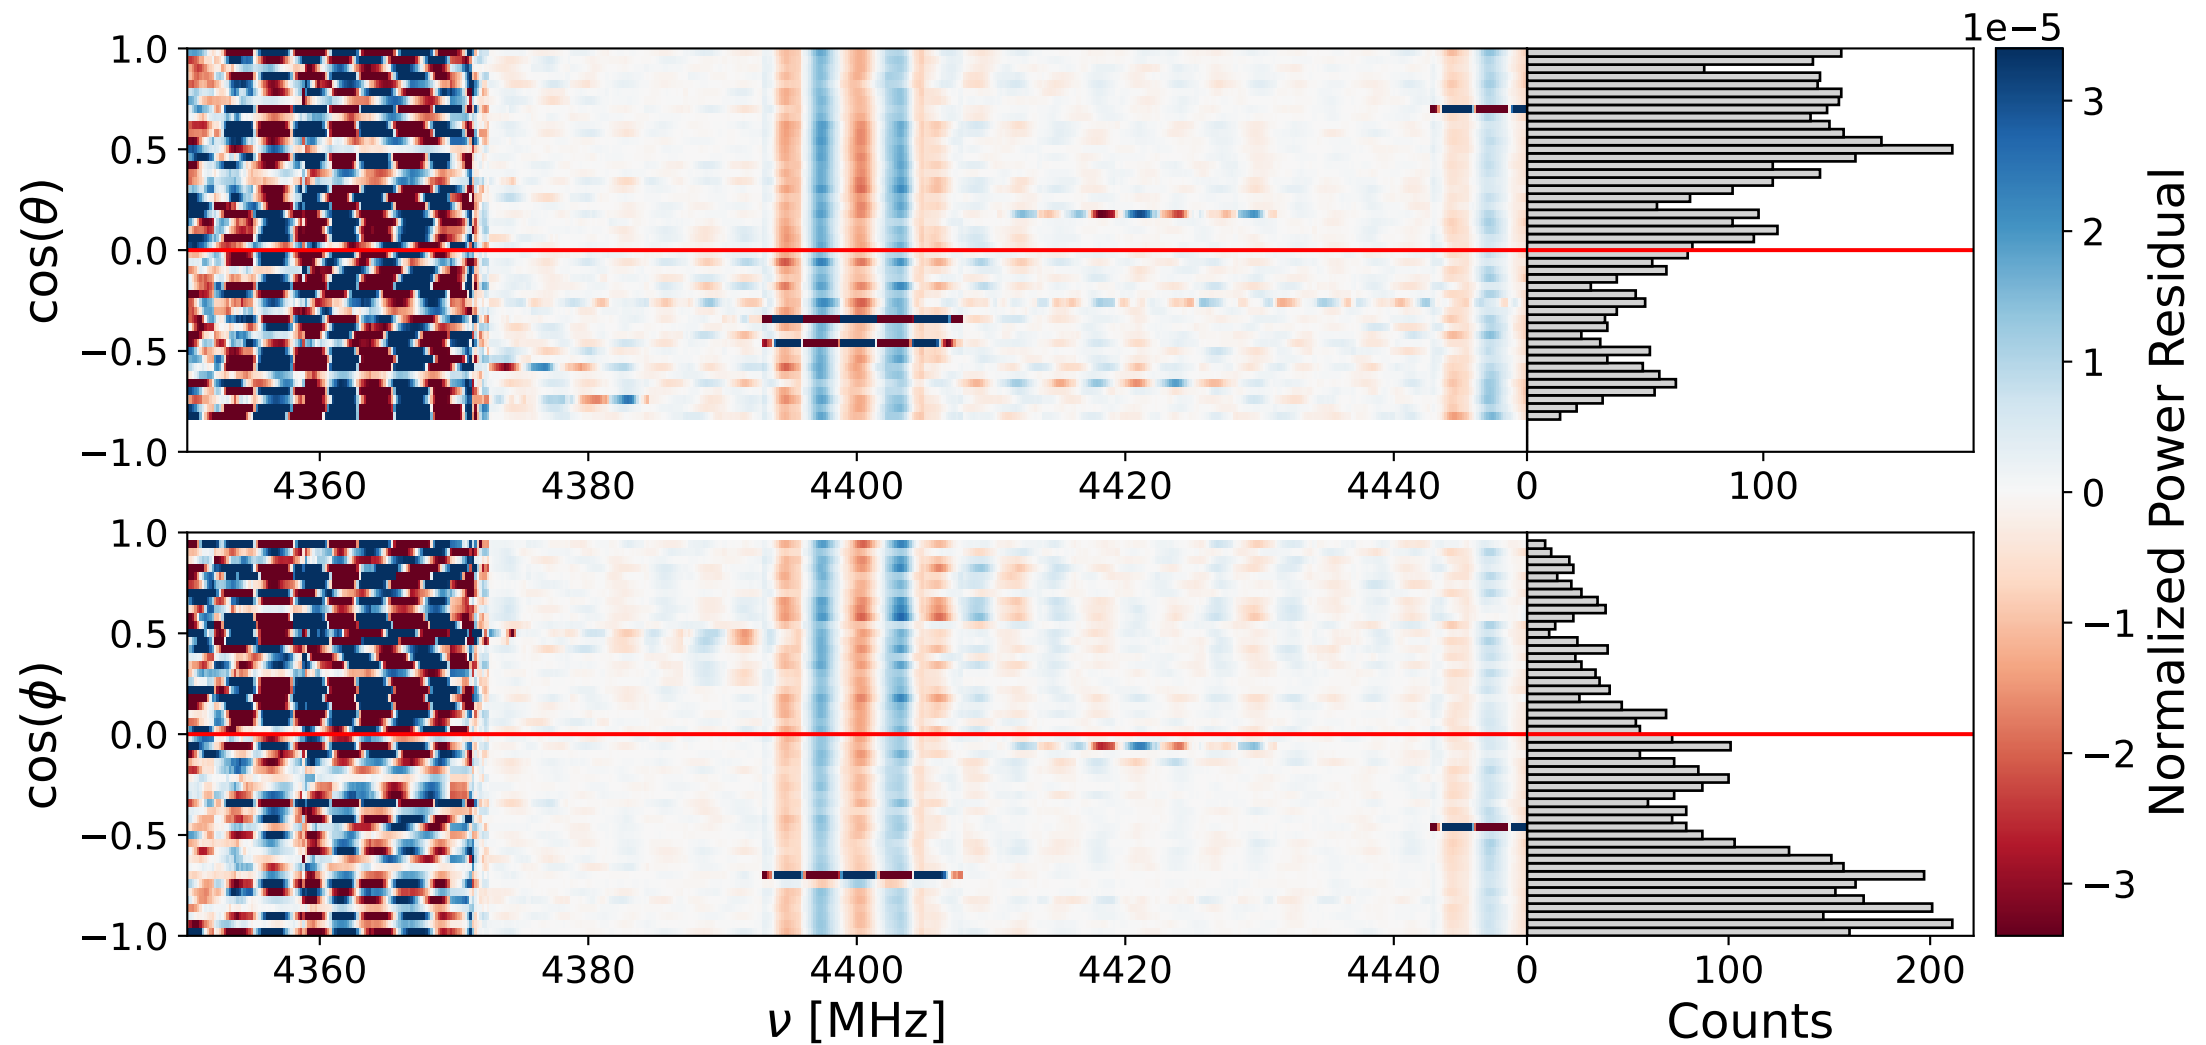


Bank 0 decay: 4450-4550 MHz

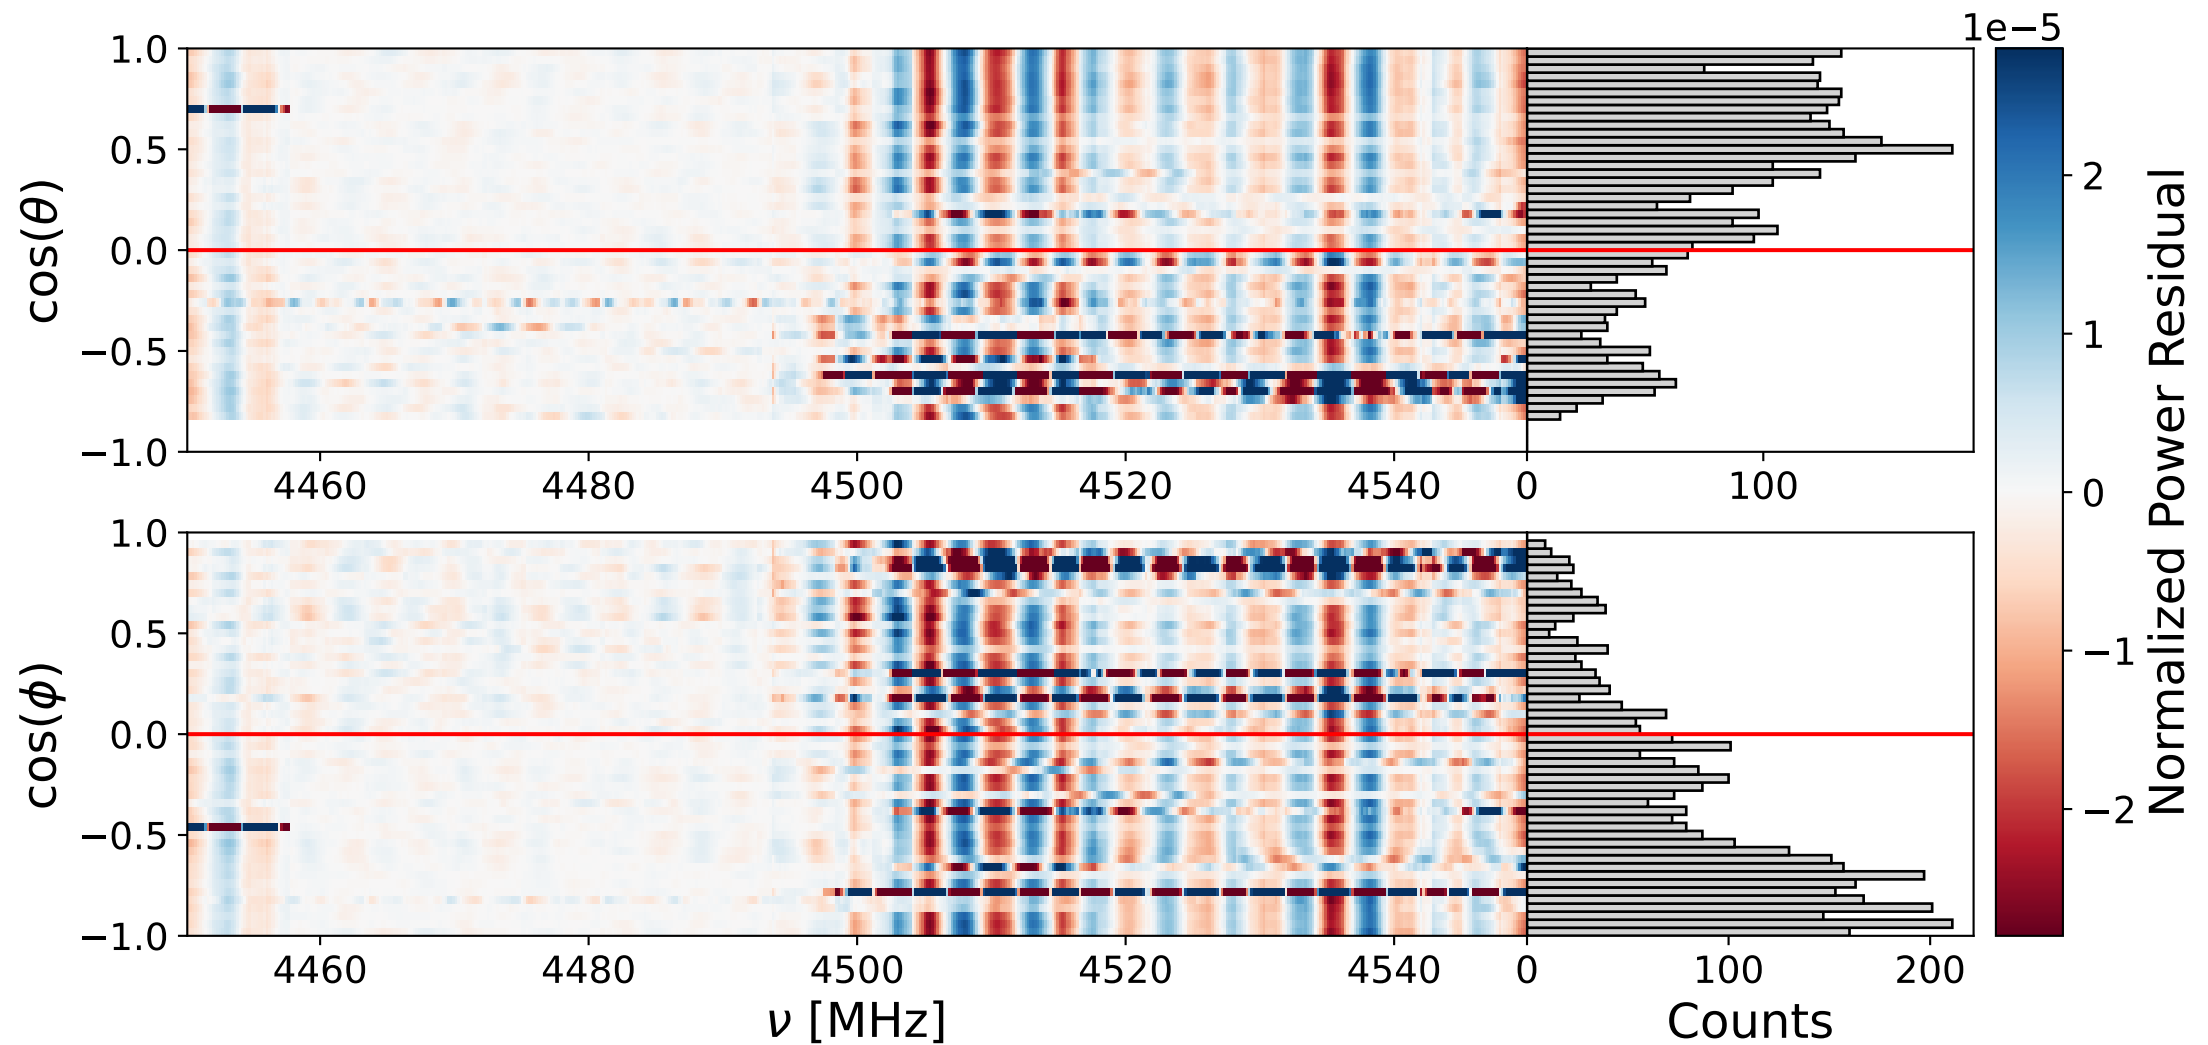


Bank 0 decay: 4550-4650 MHz

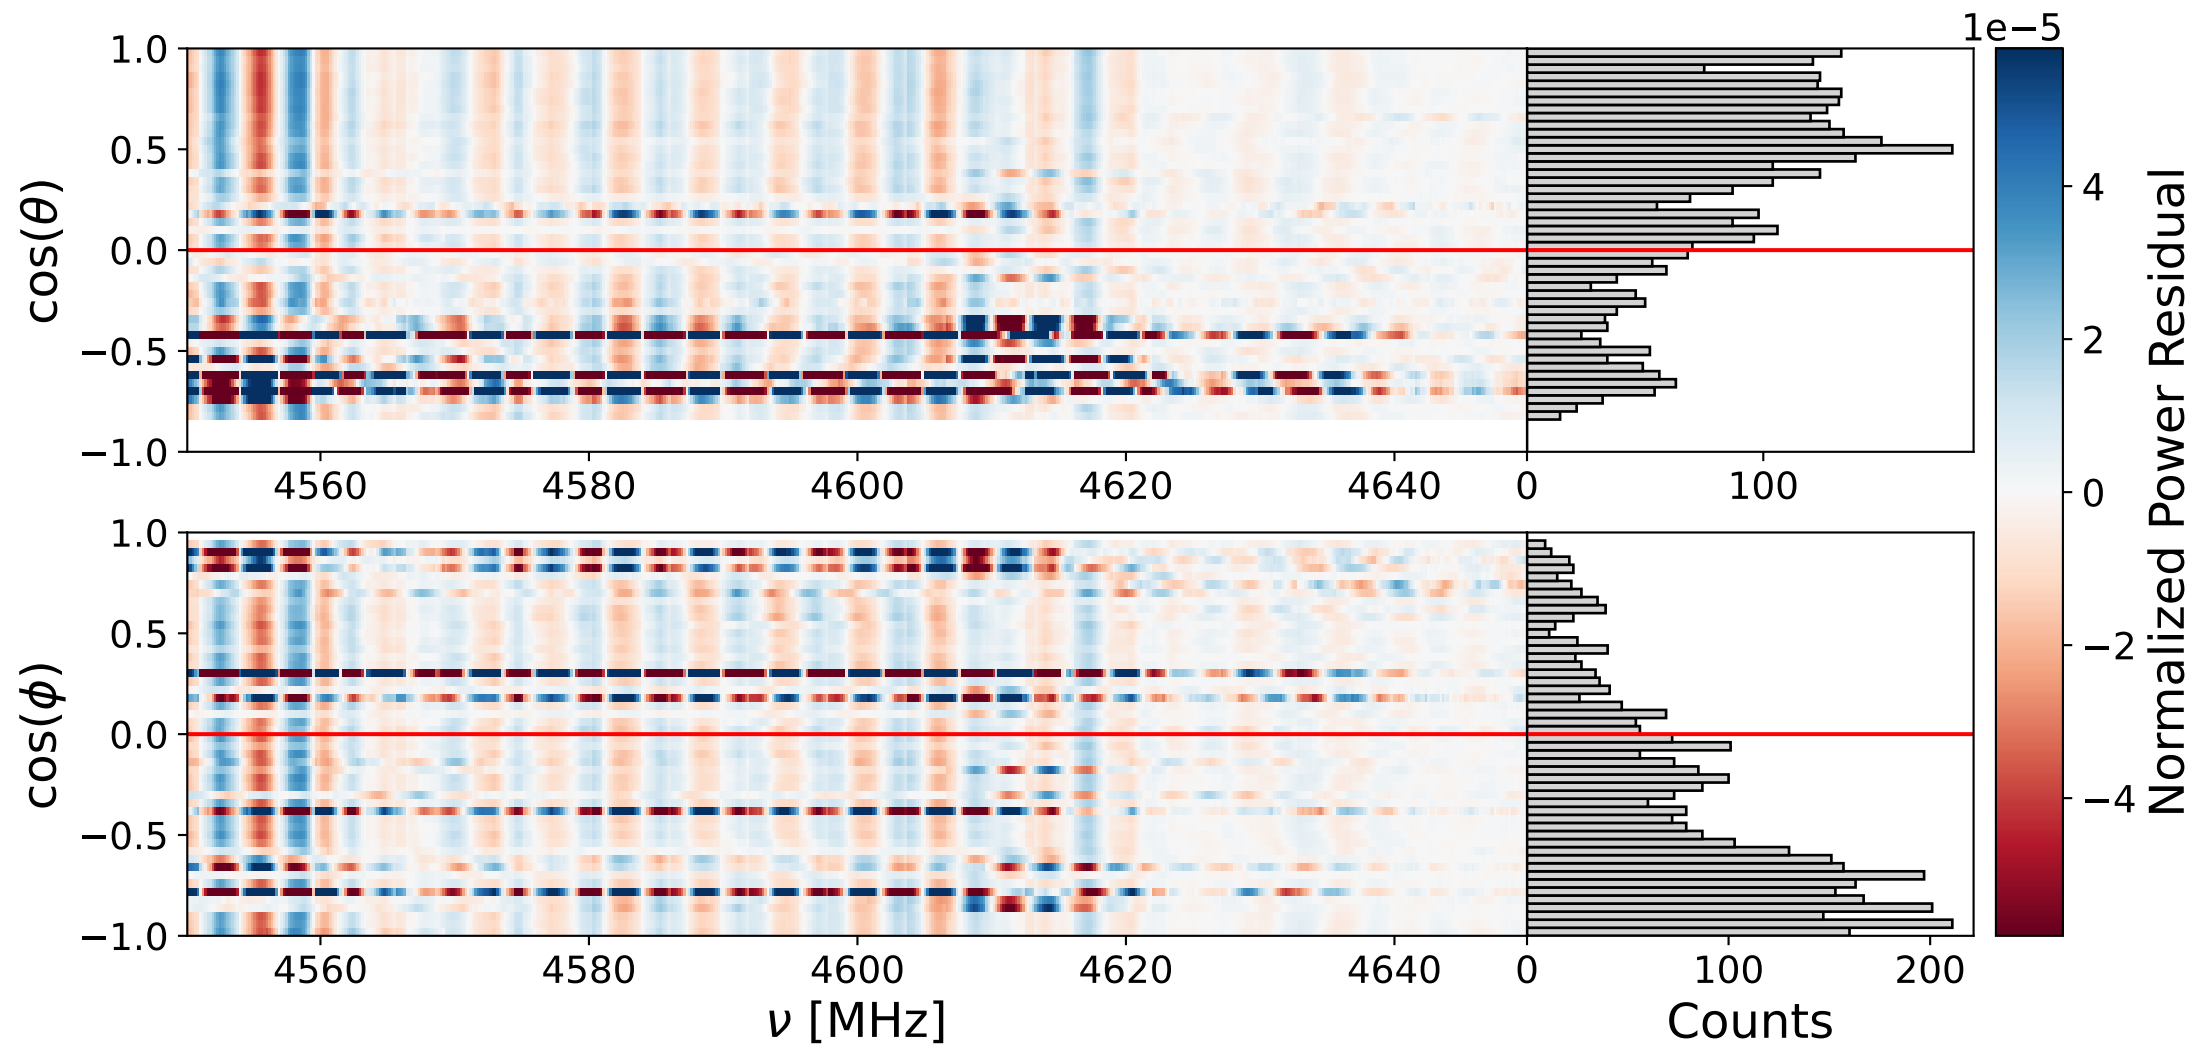


Bank 0 decay: 4650-4750 MHz

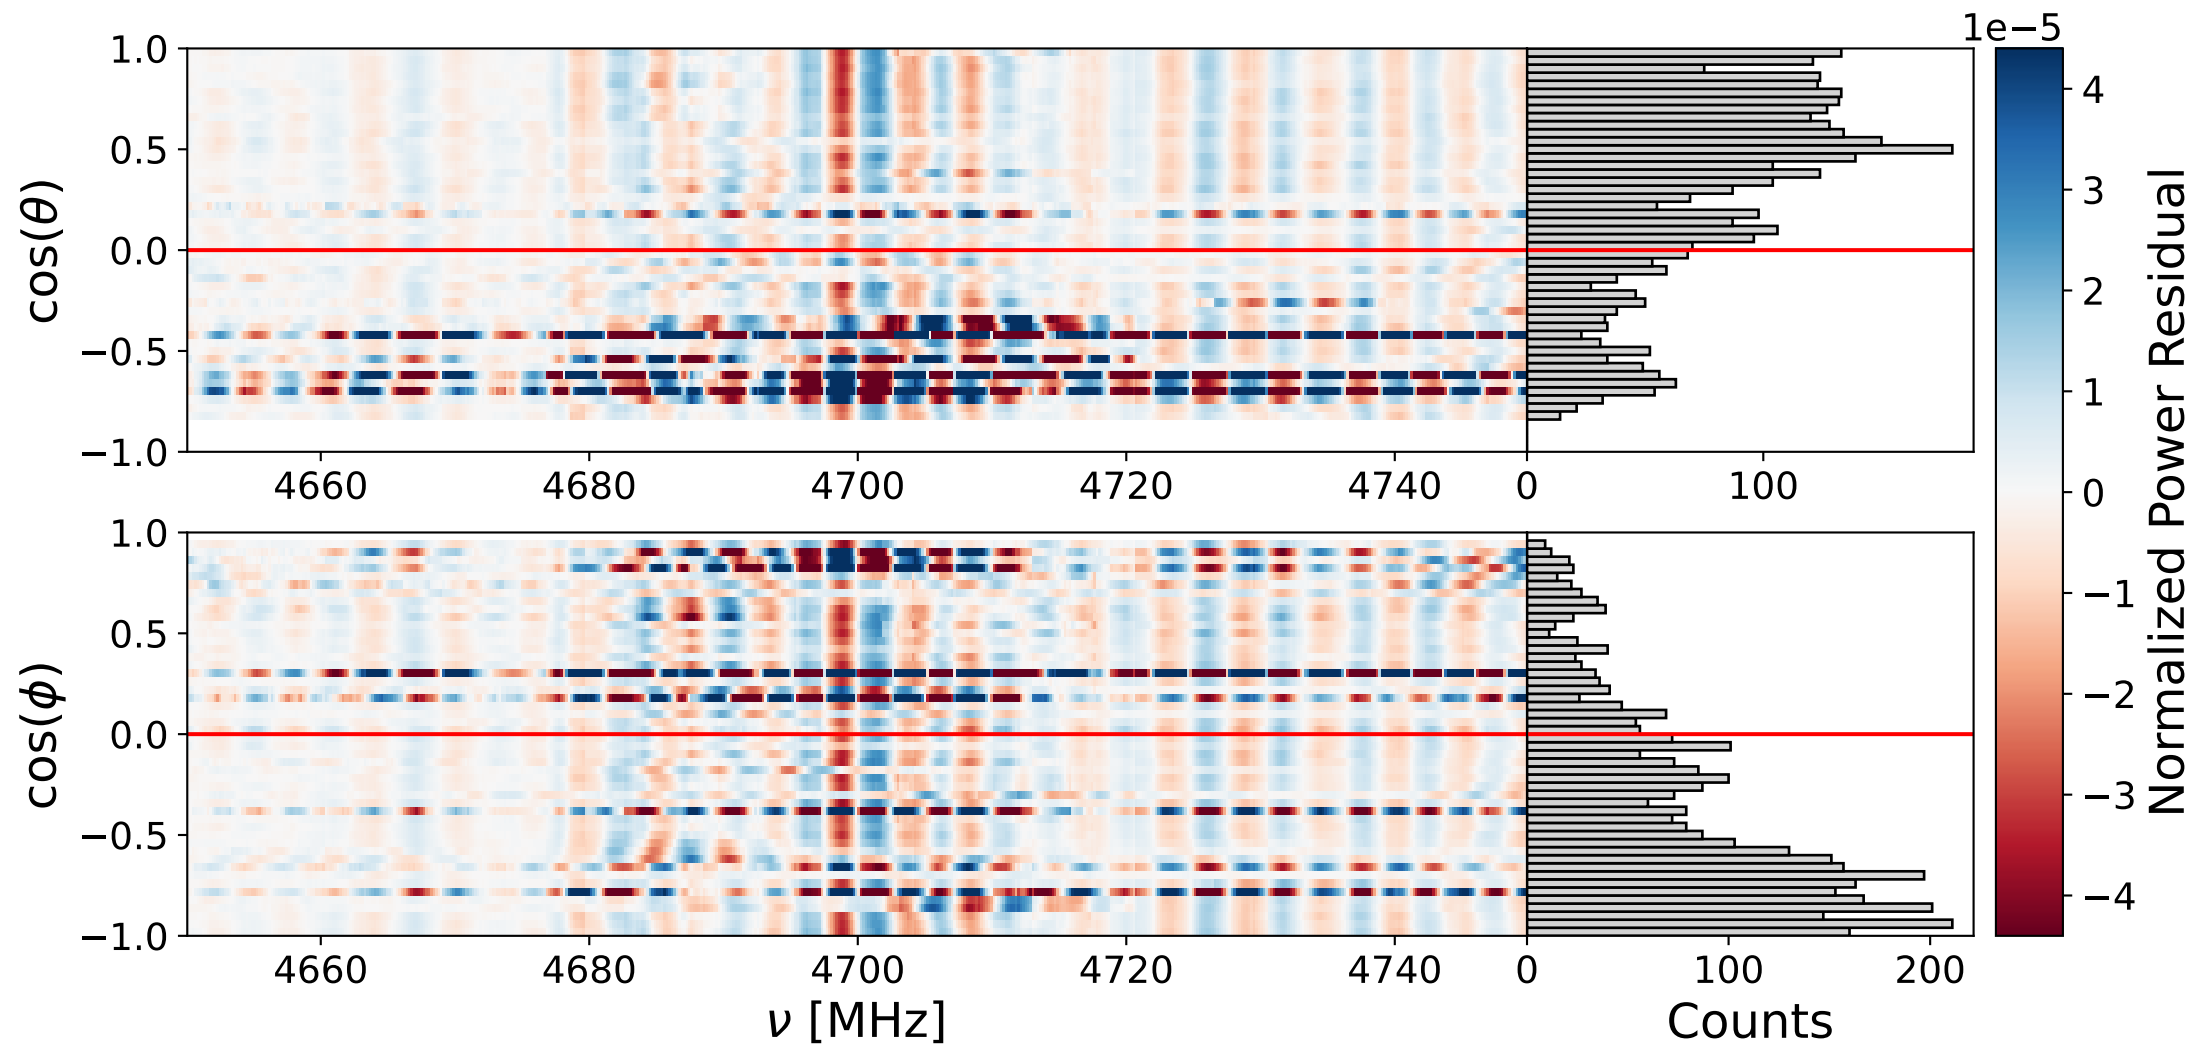


Bank 0 decay: 4750-4850 MHz

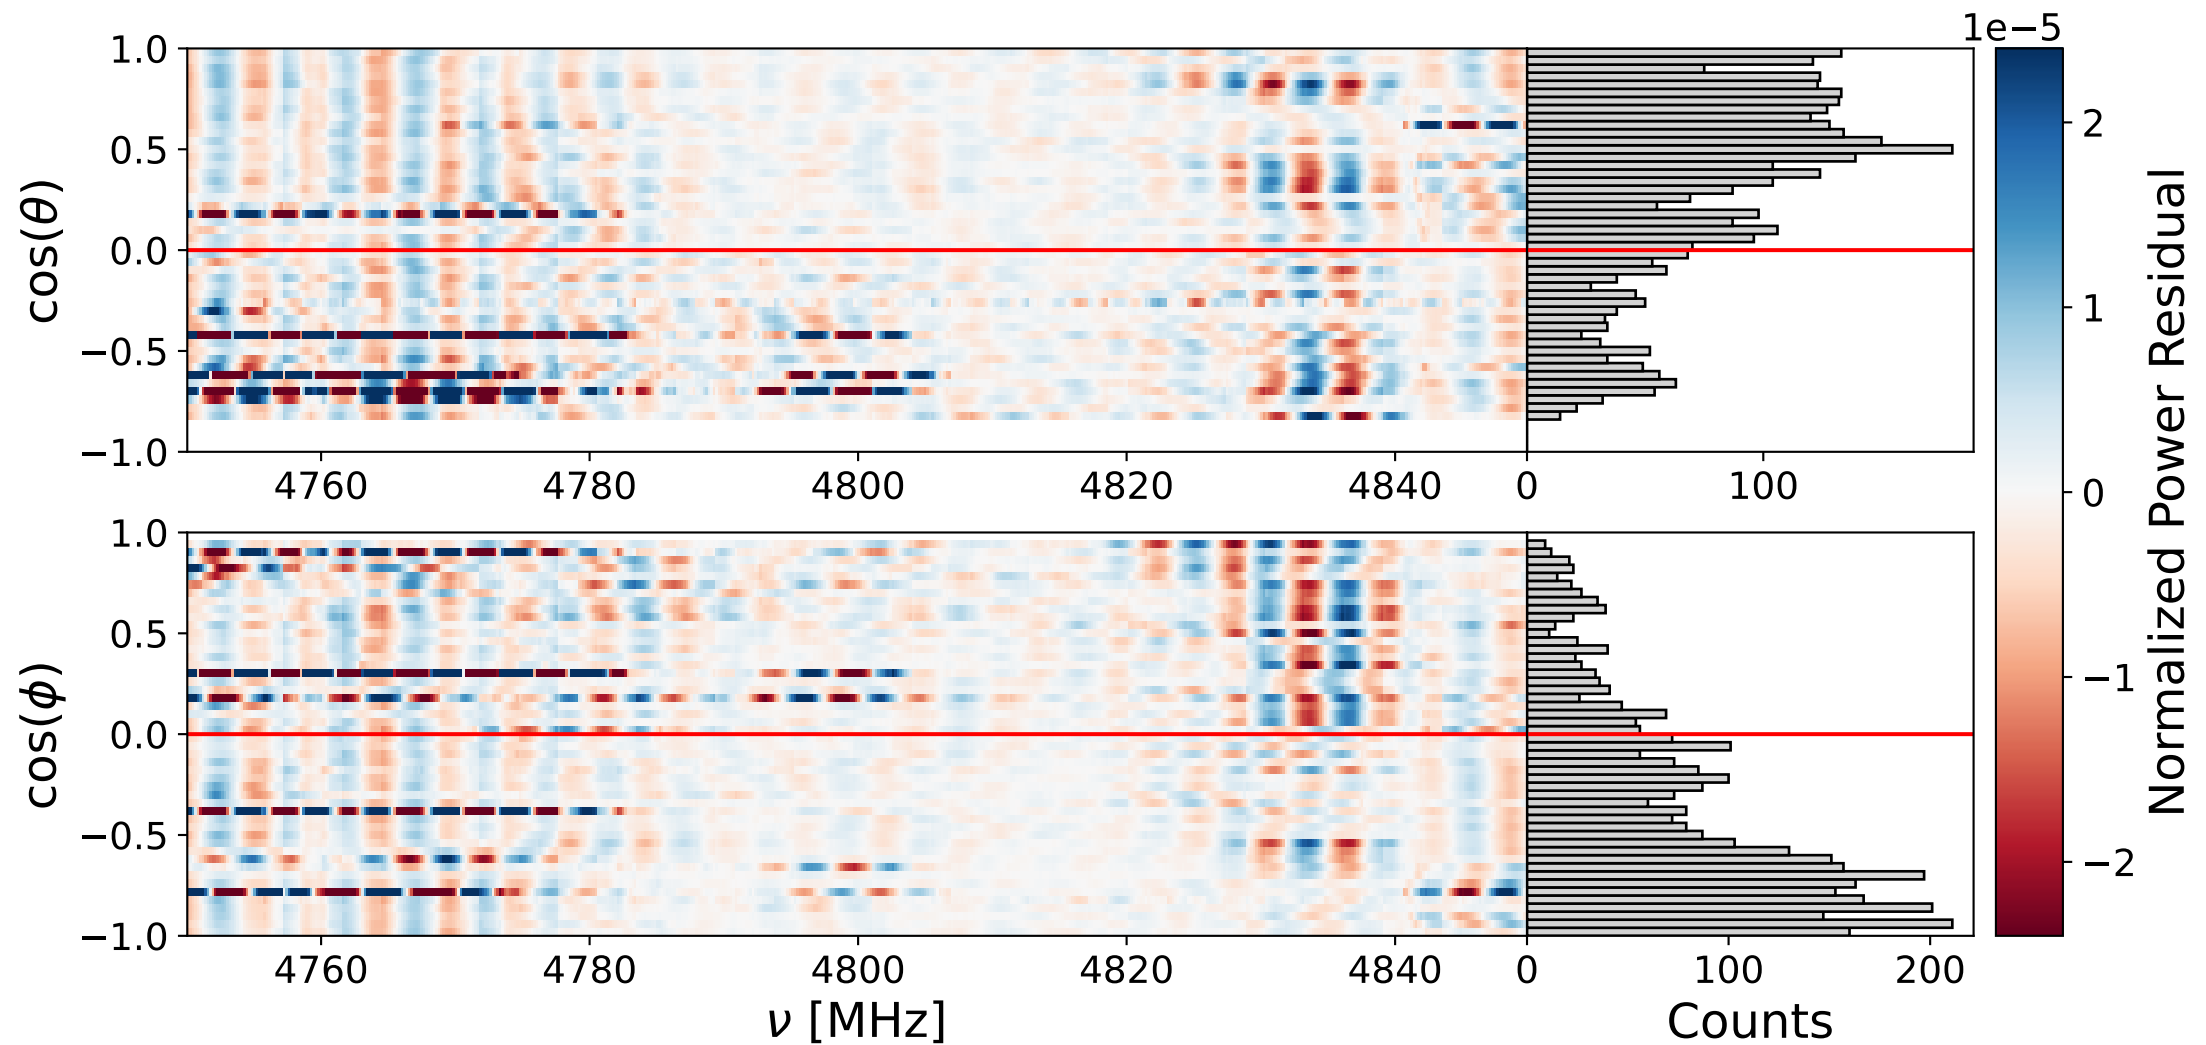


Bank 0 decay: 4850-4950 MHz

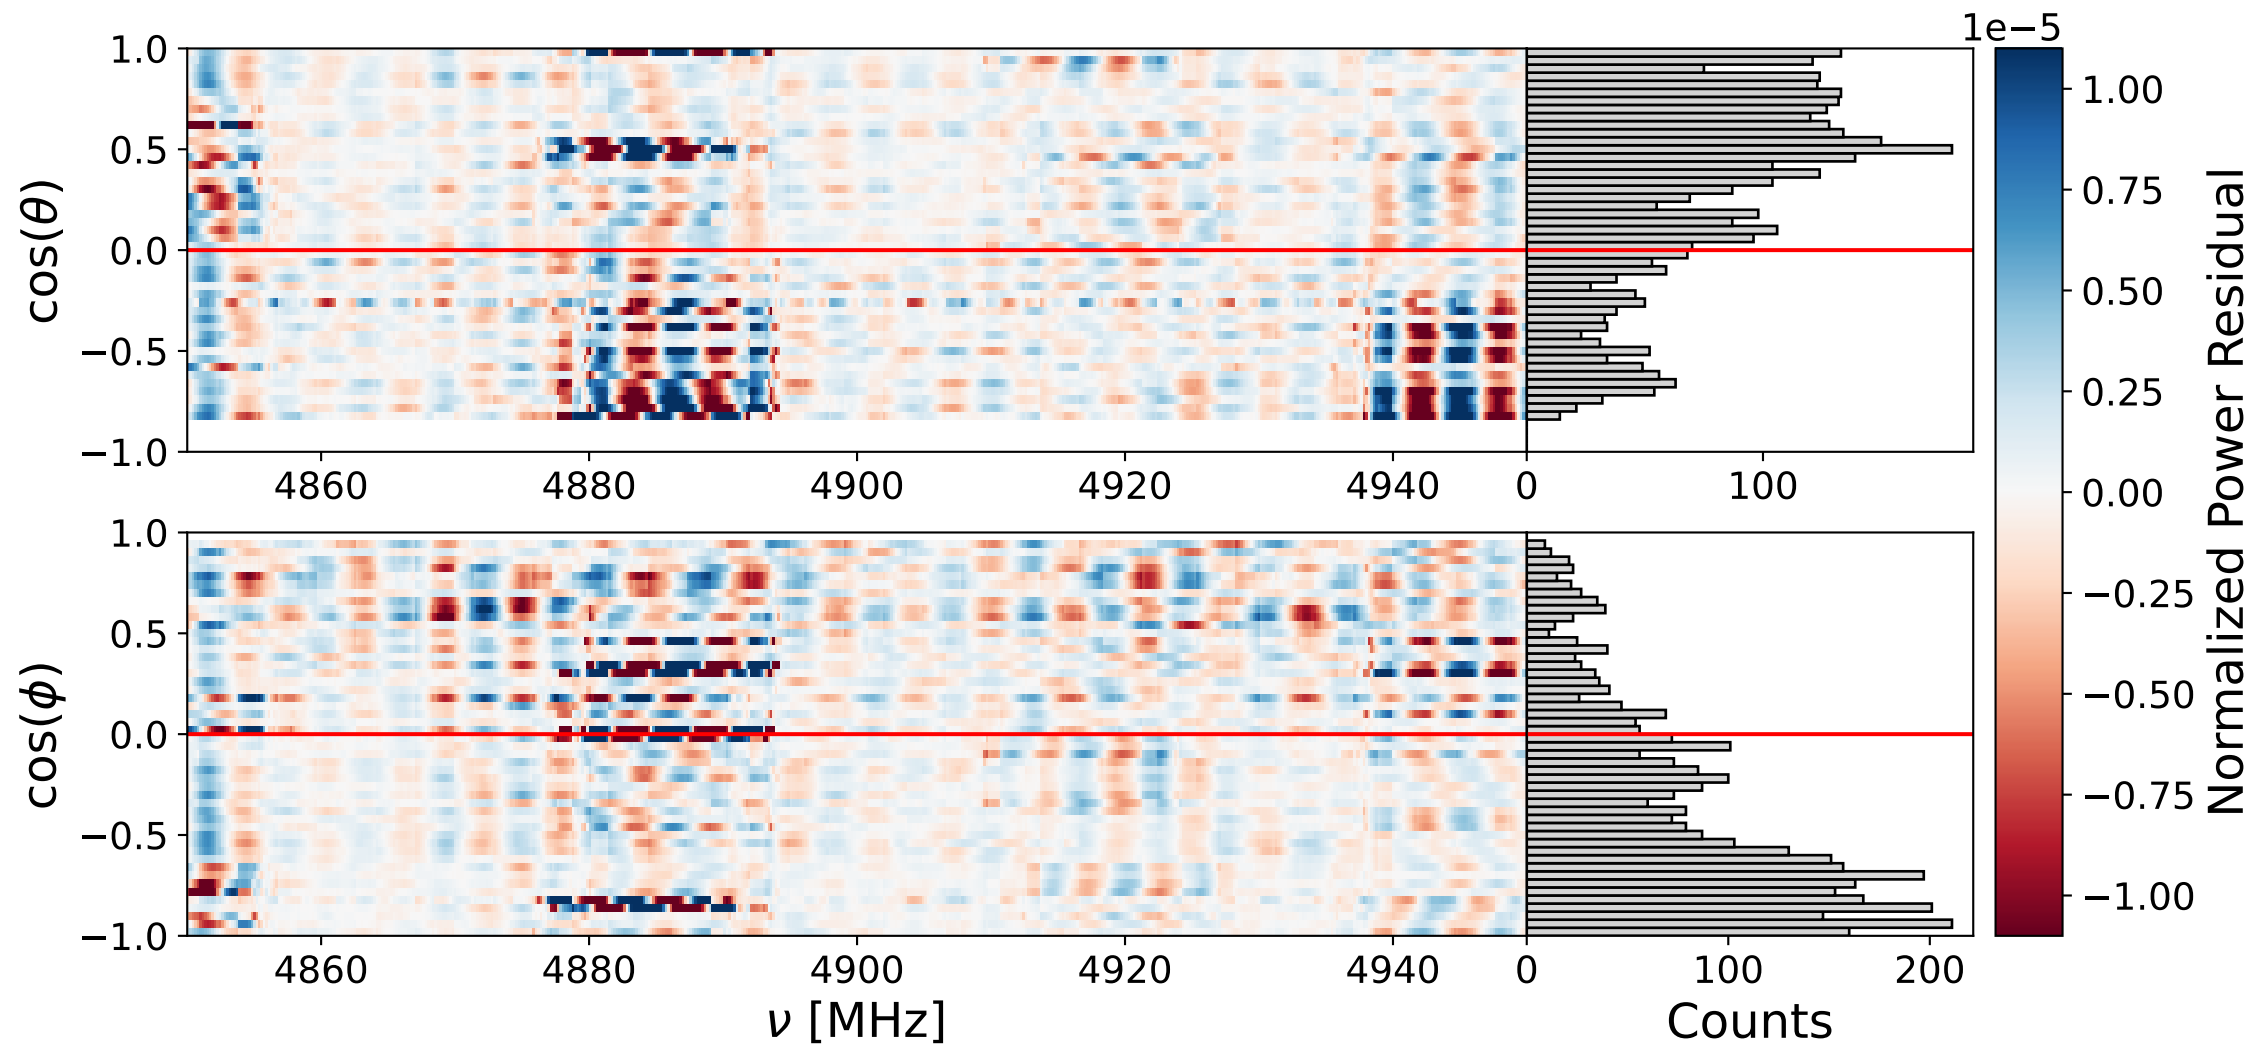


Bank 0 decay: 4950-5050 MHz

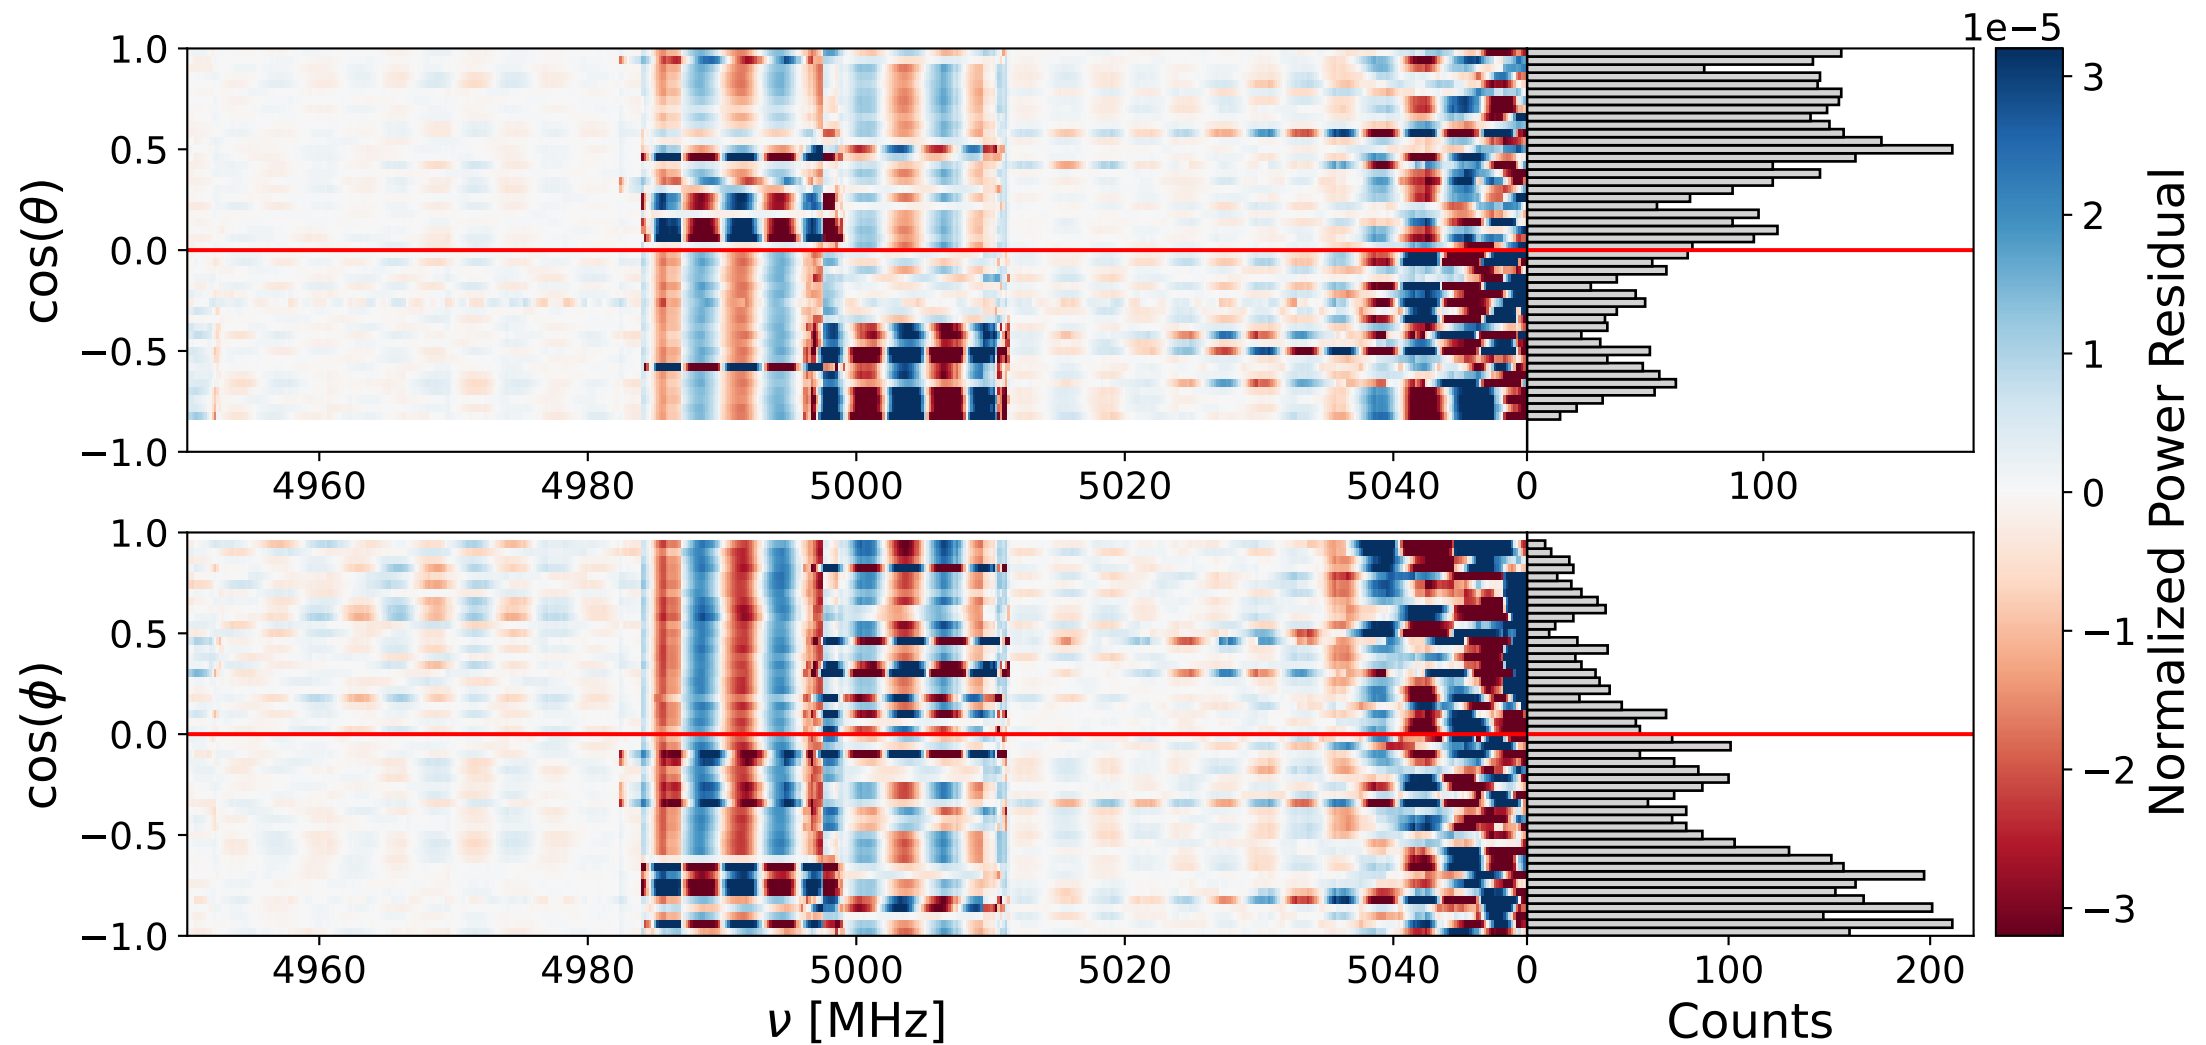


Bank 0 decay: 5050-5056 MHz

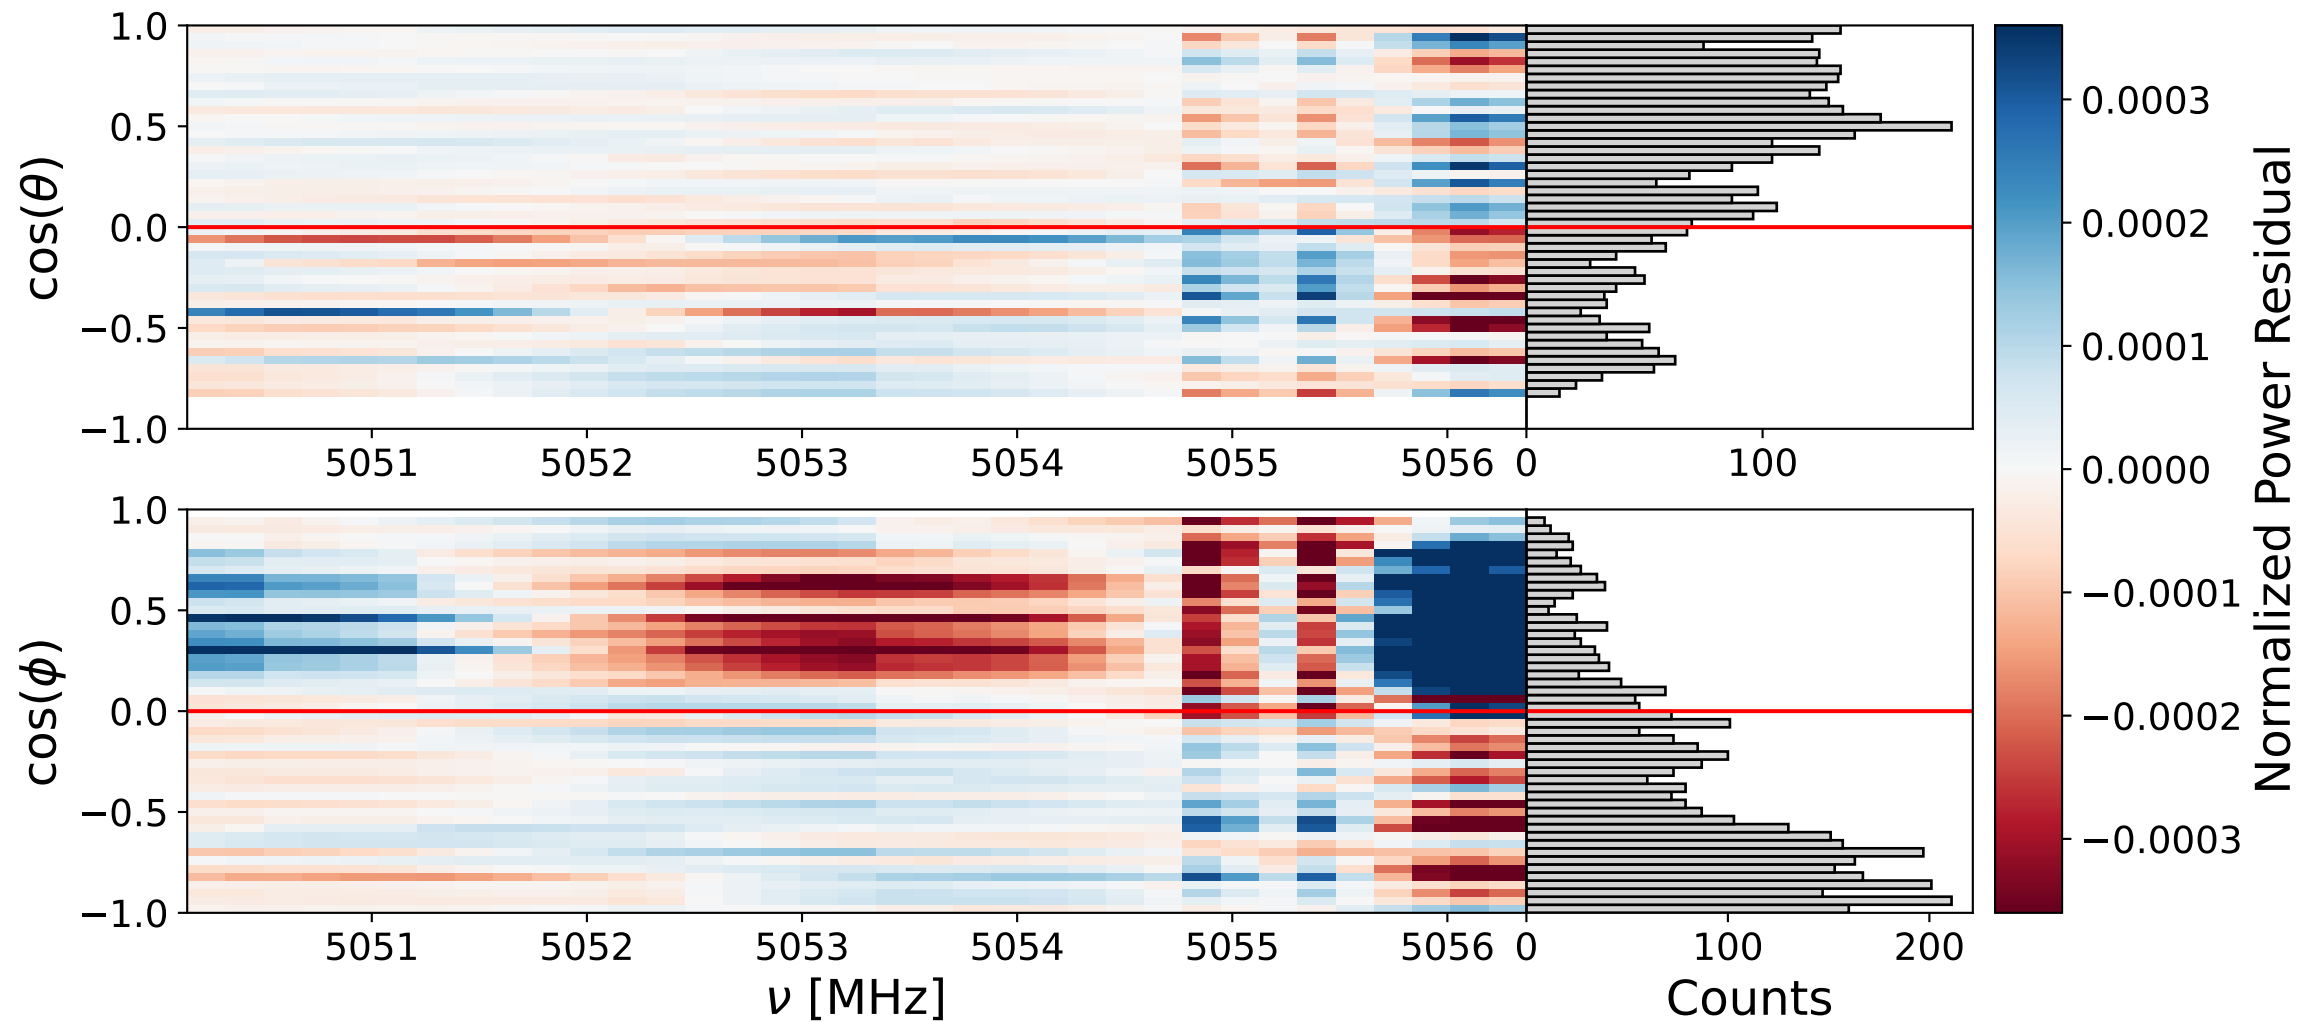


Bank 1 decay: 4700-4800 MHz

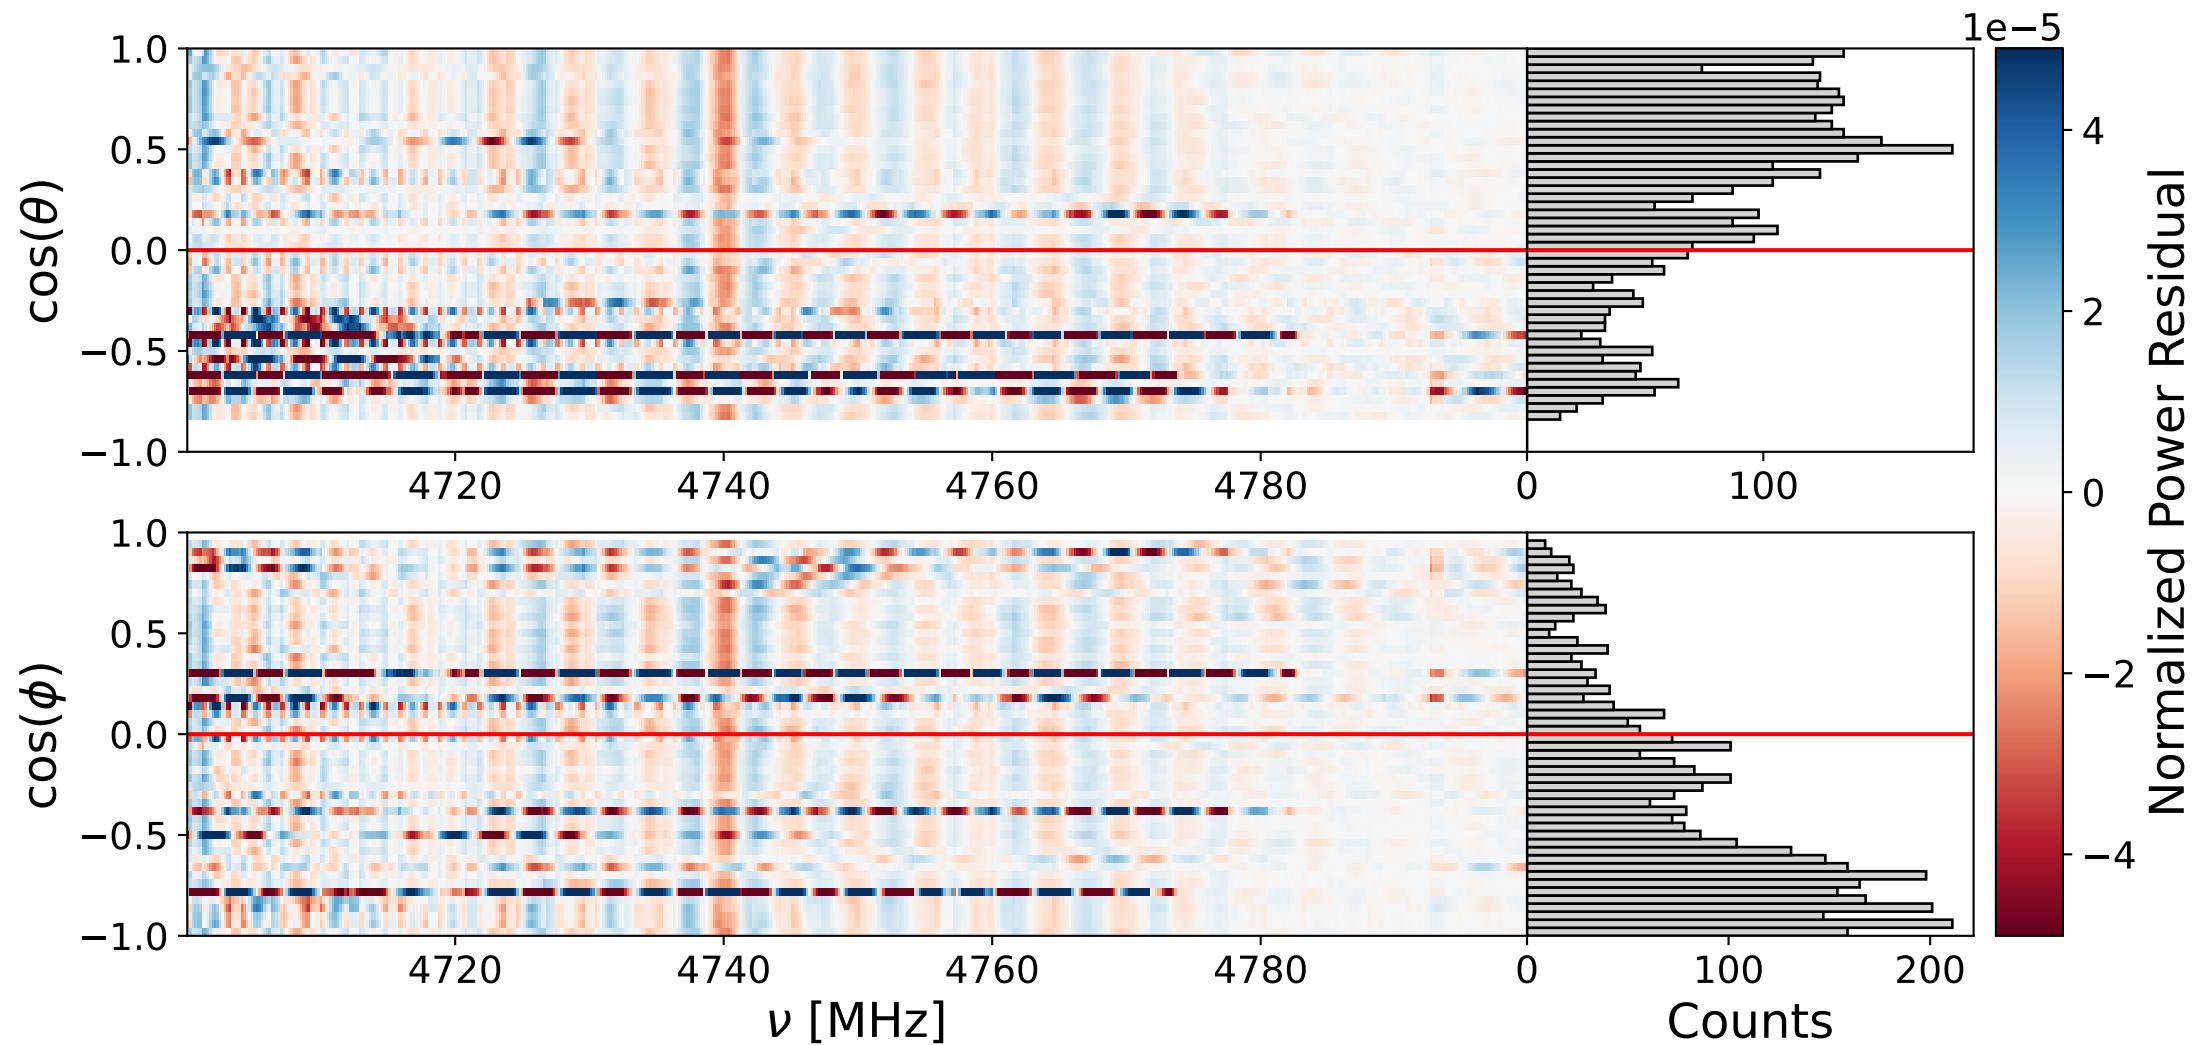


Bank 1 decay: 4800-4900 MHz

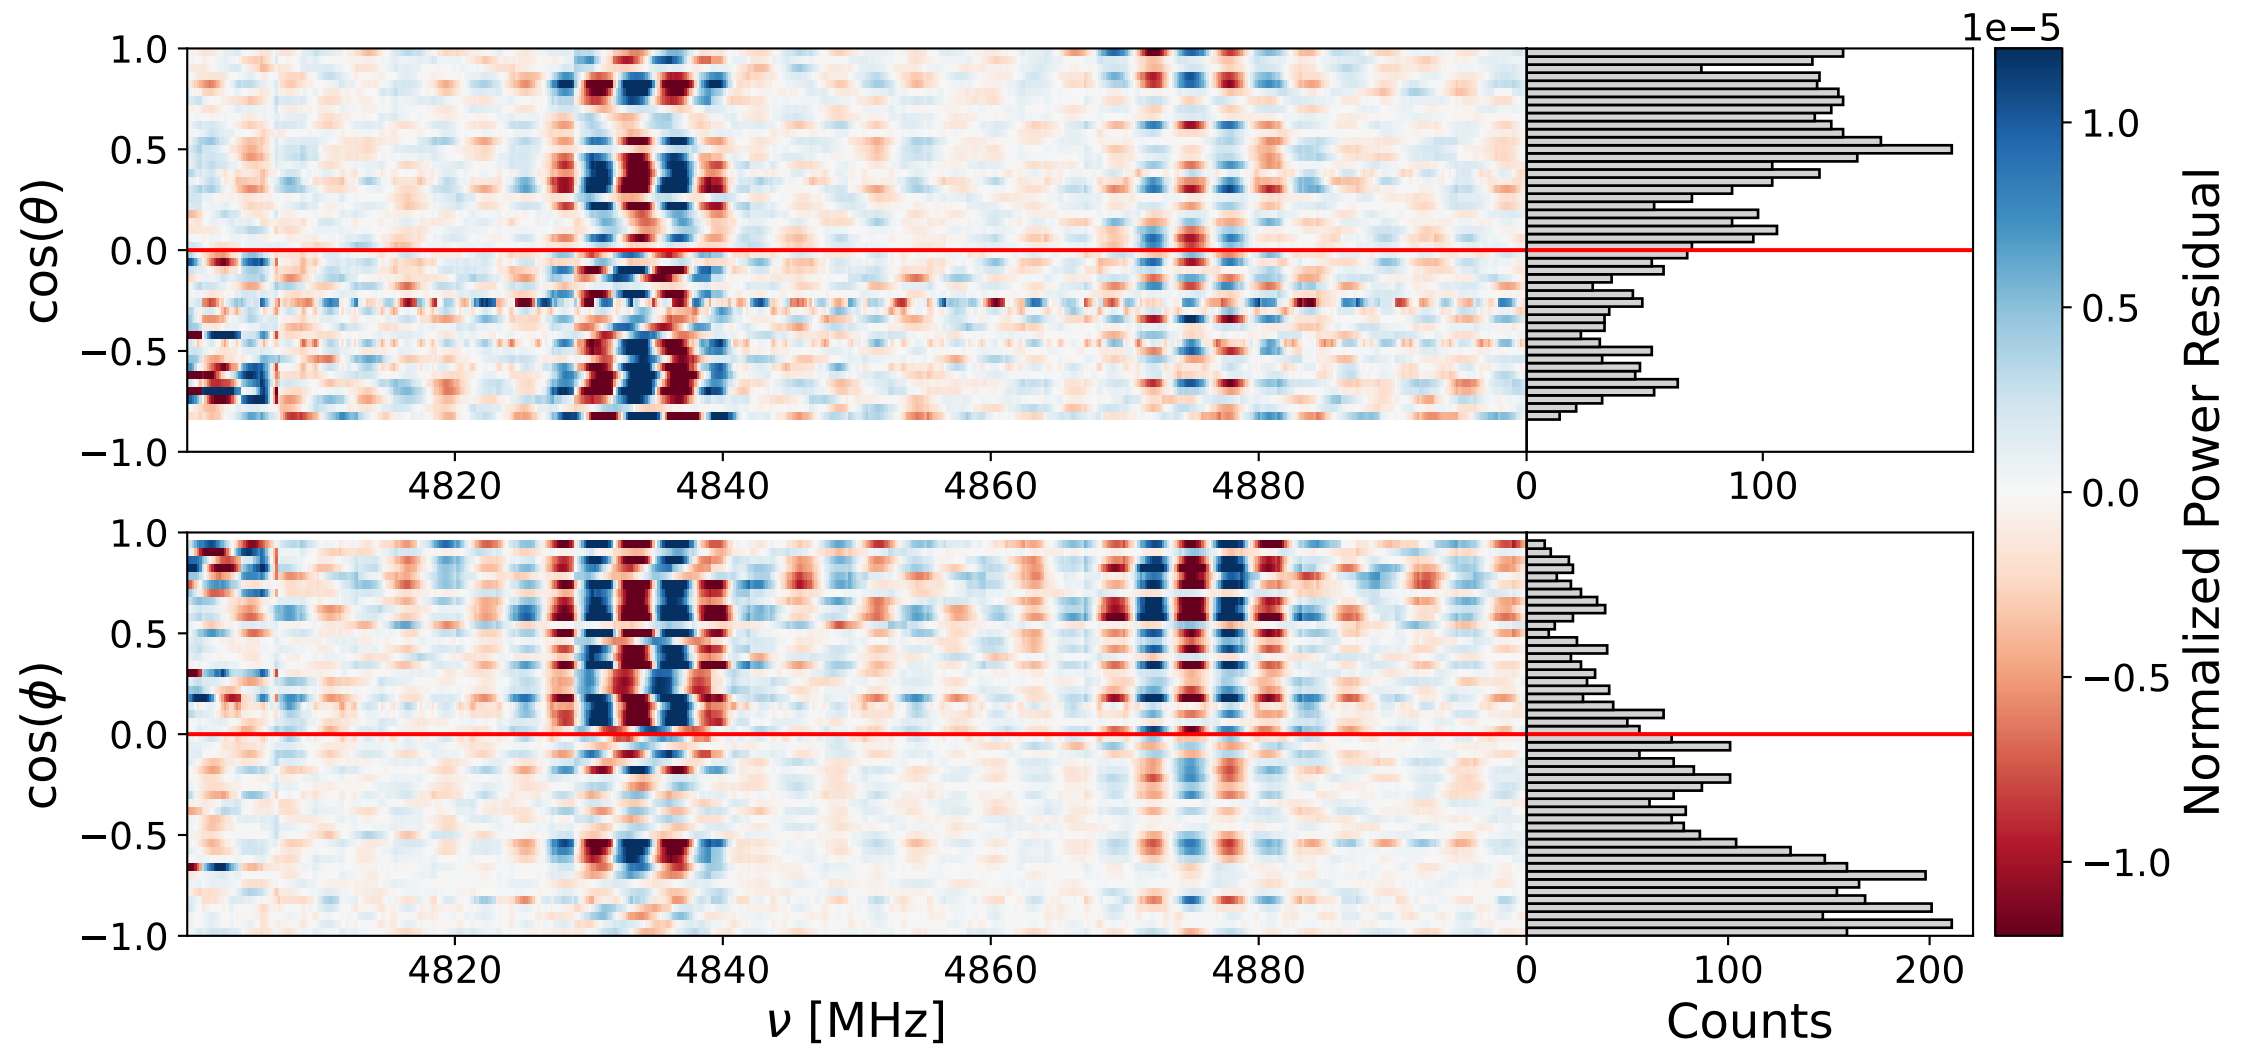


Bank 1 decay: 4900-5000 MHz

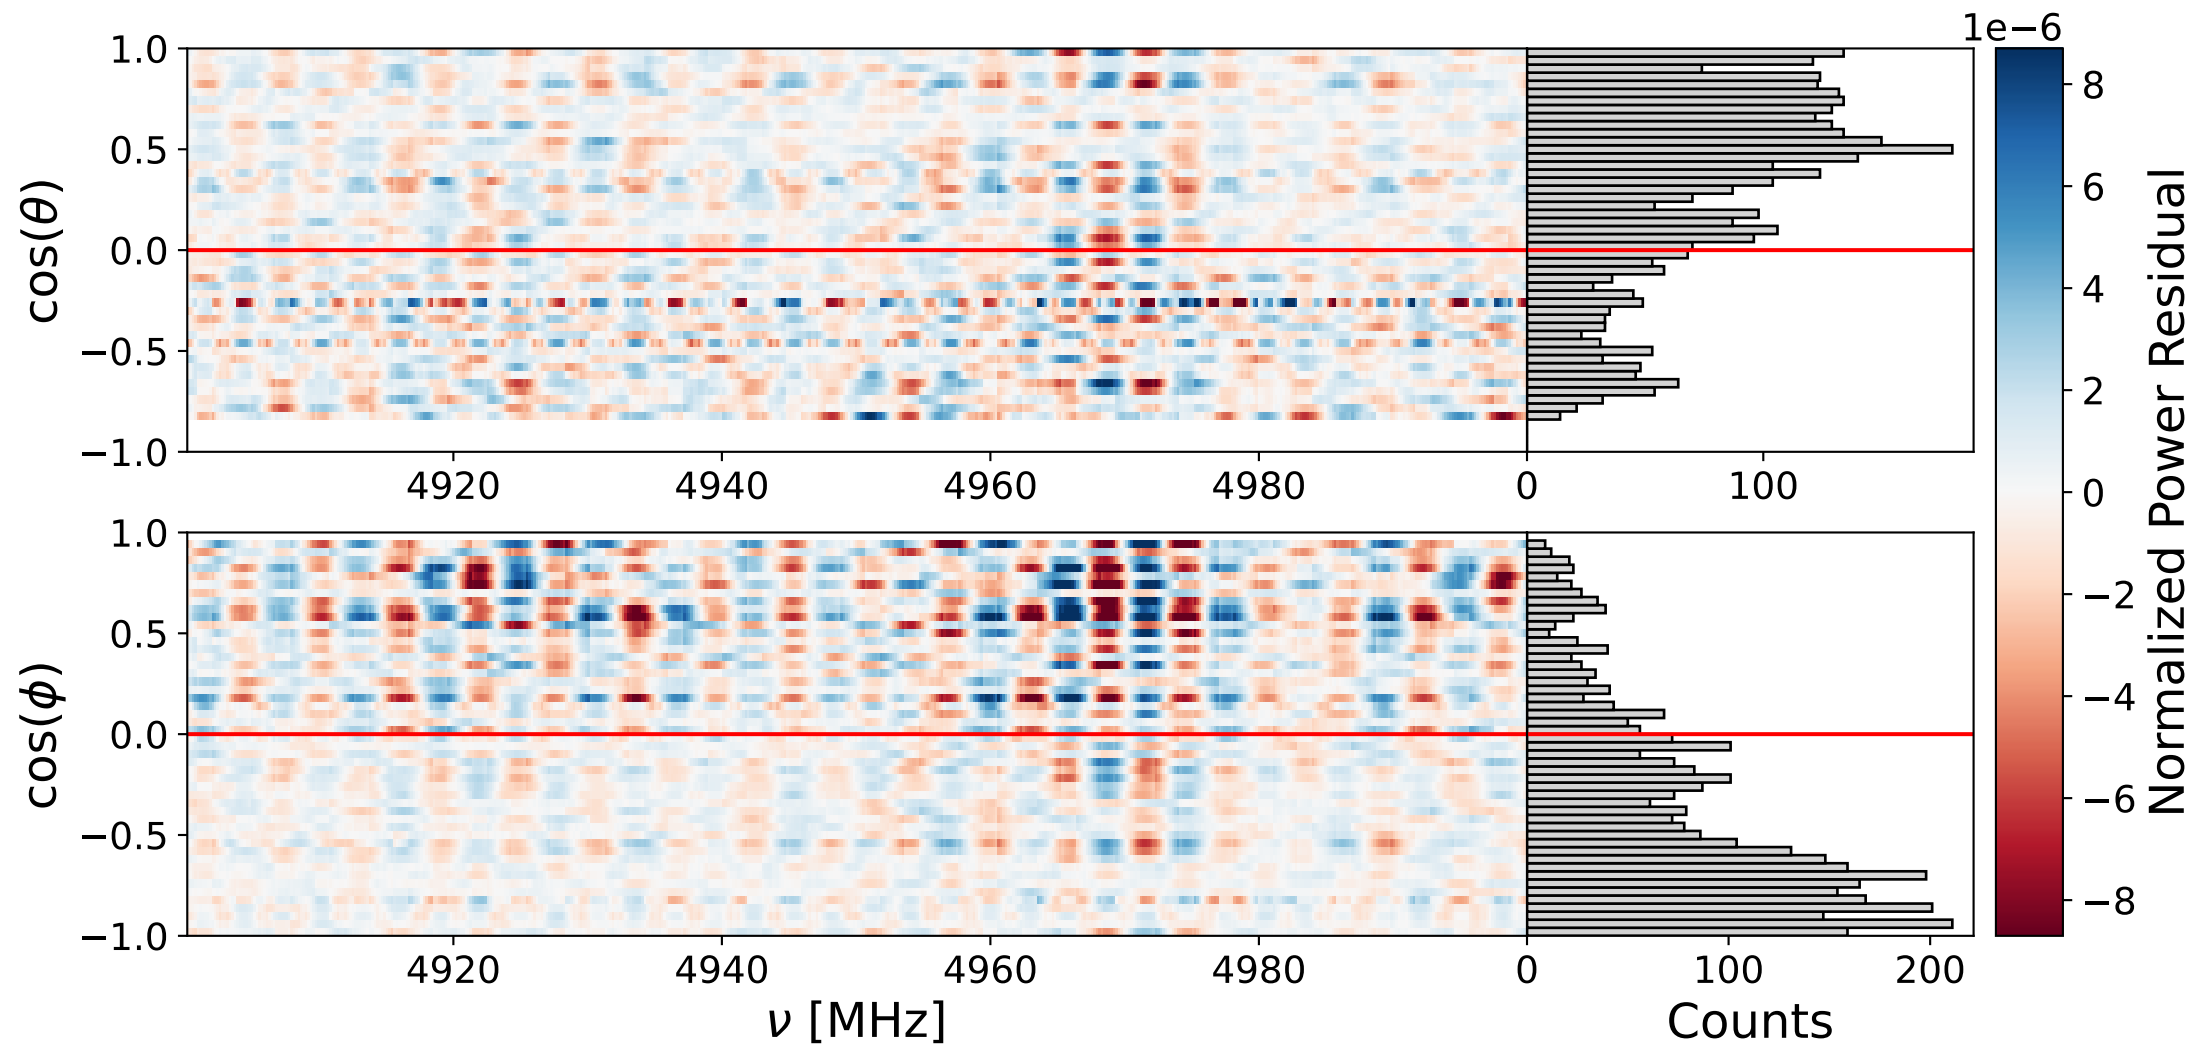


Bank 1 decay: 5000-5100 MHz

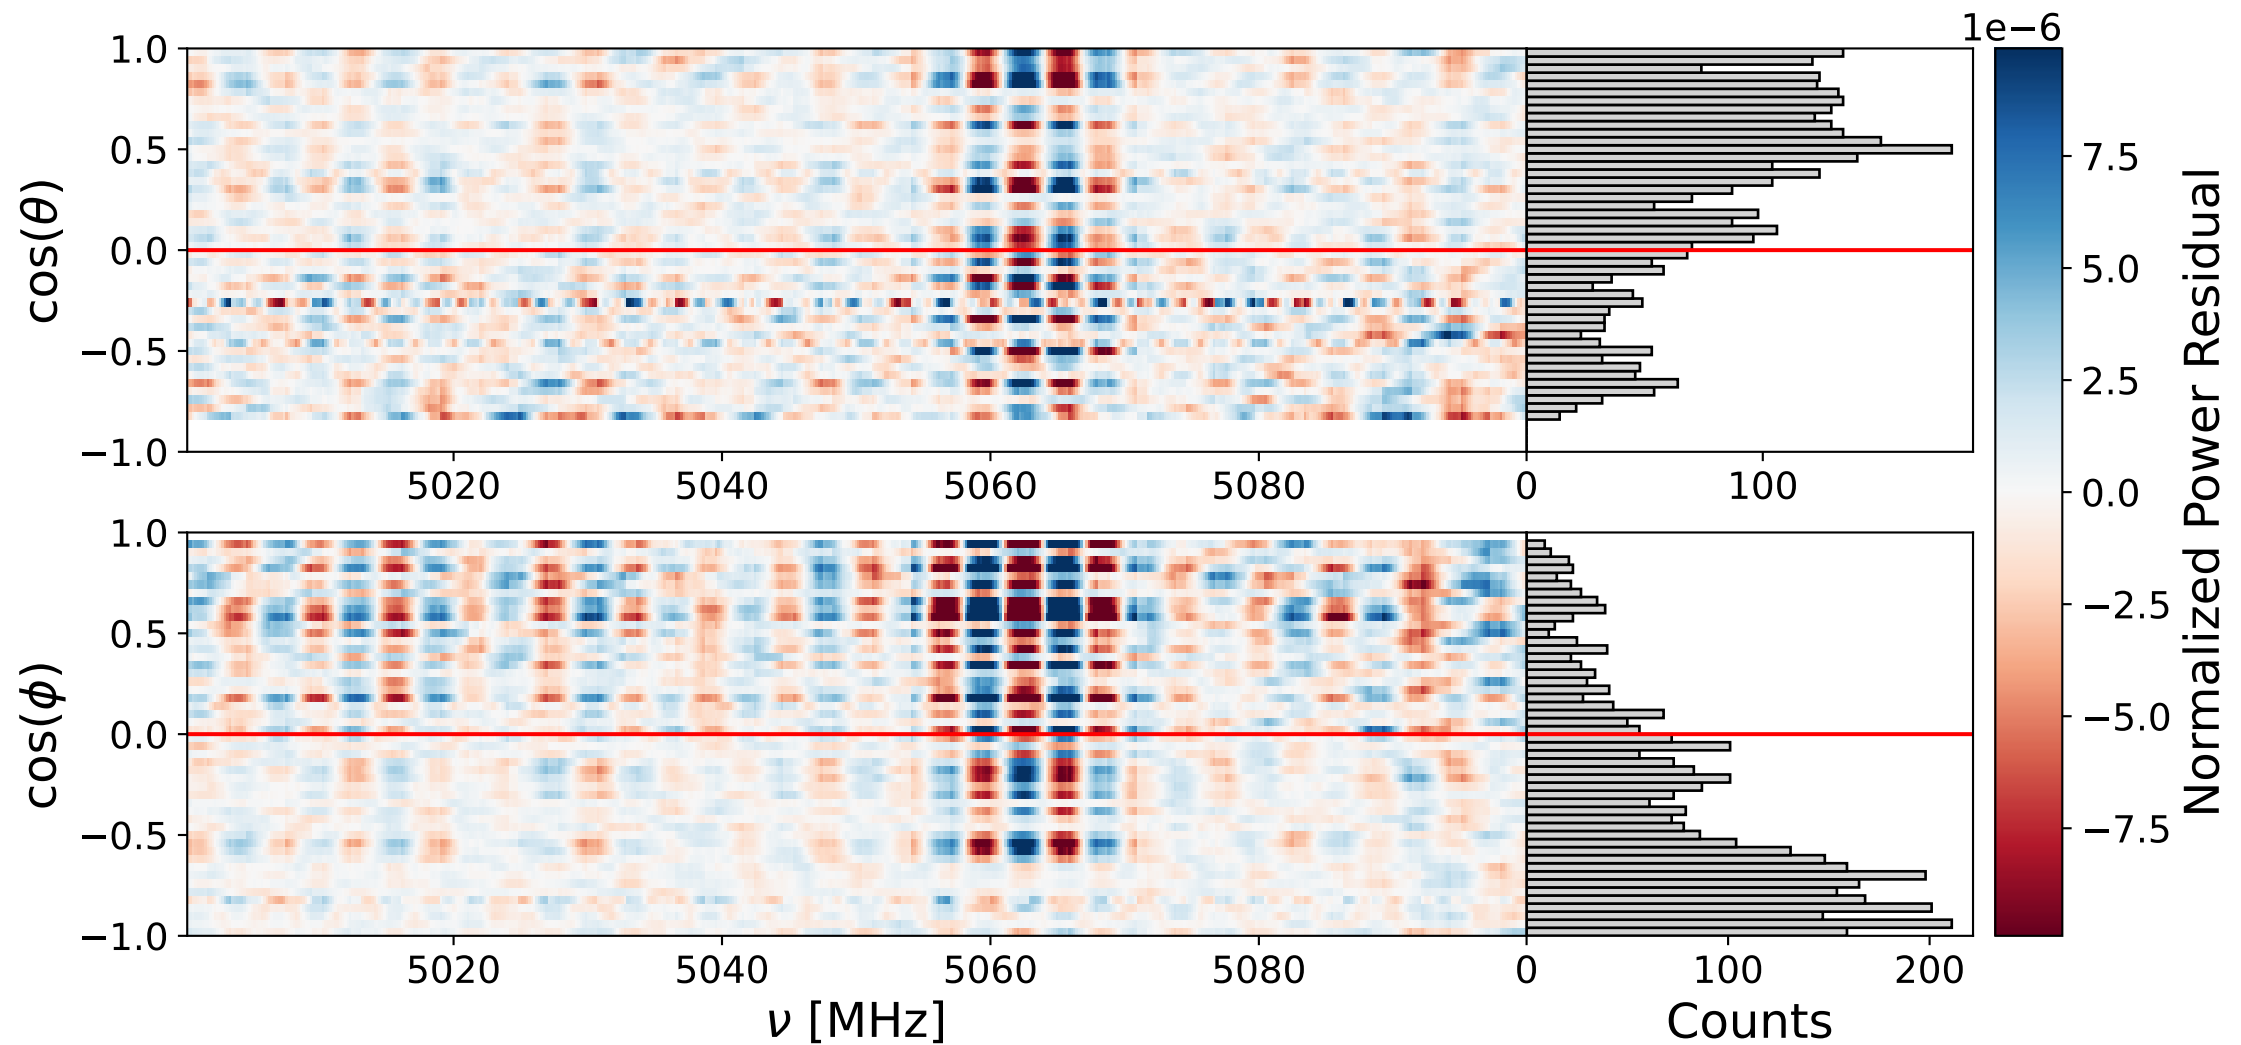


Bank 1 decay: 5100-5200 MHz

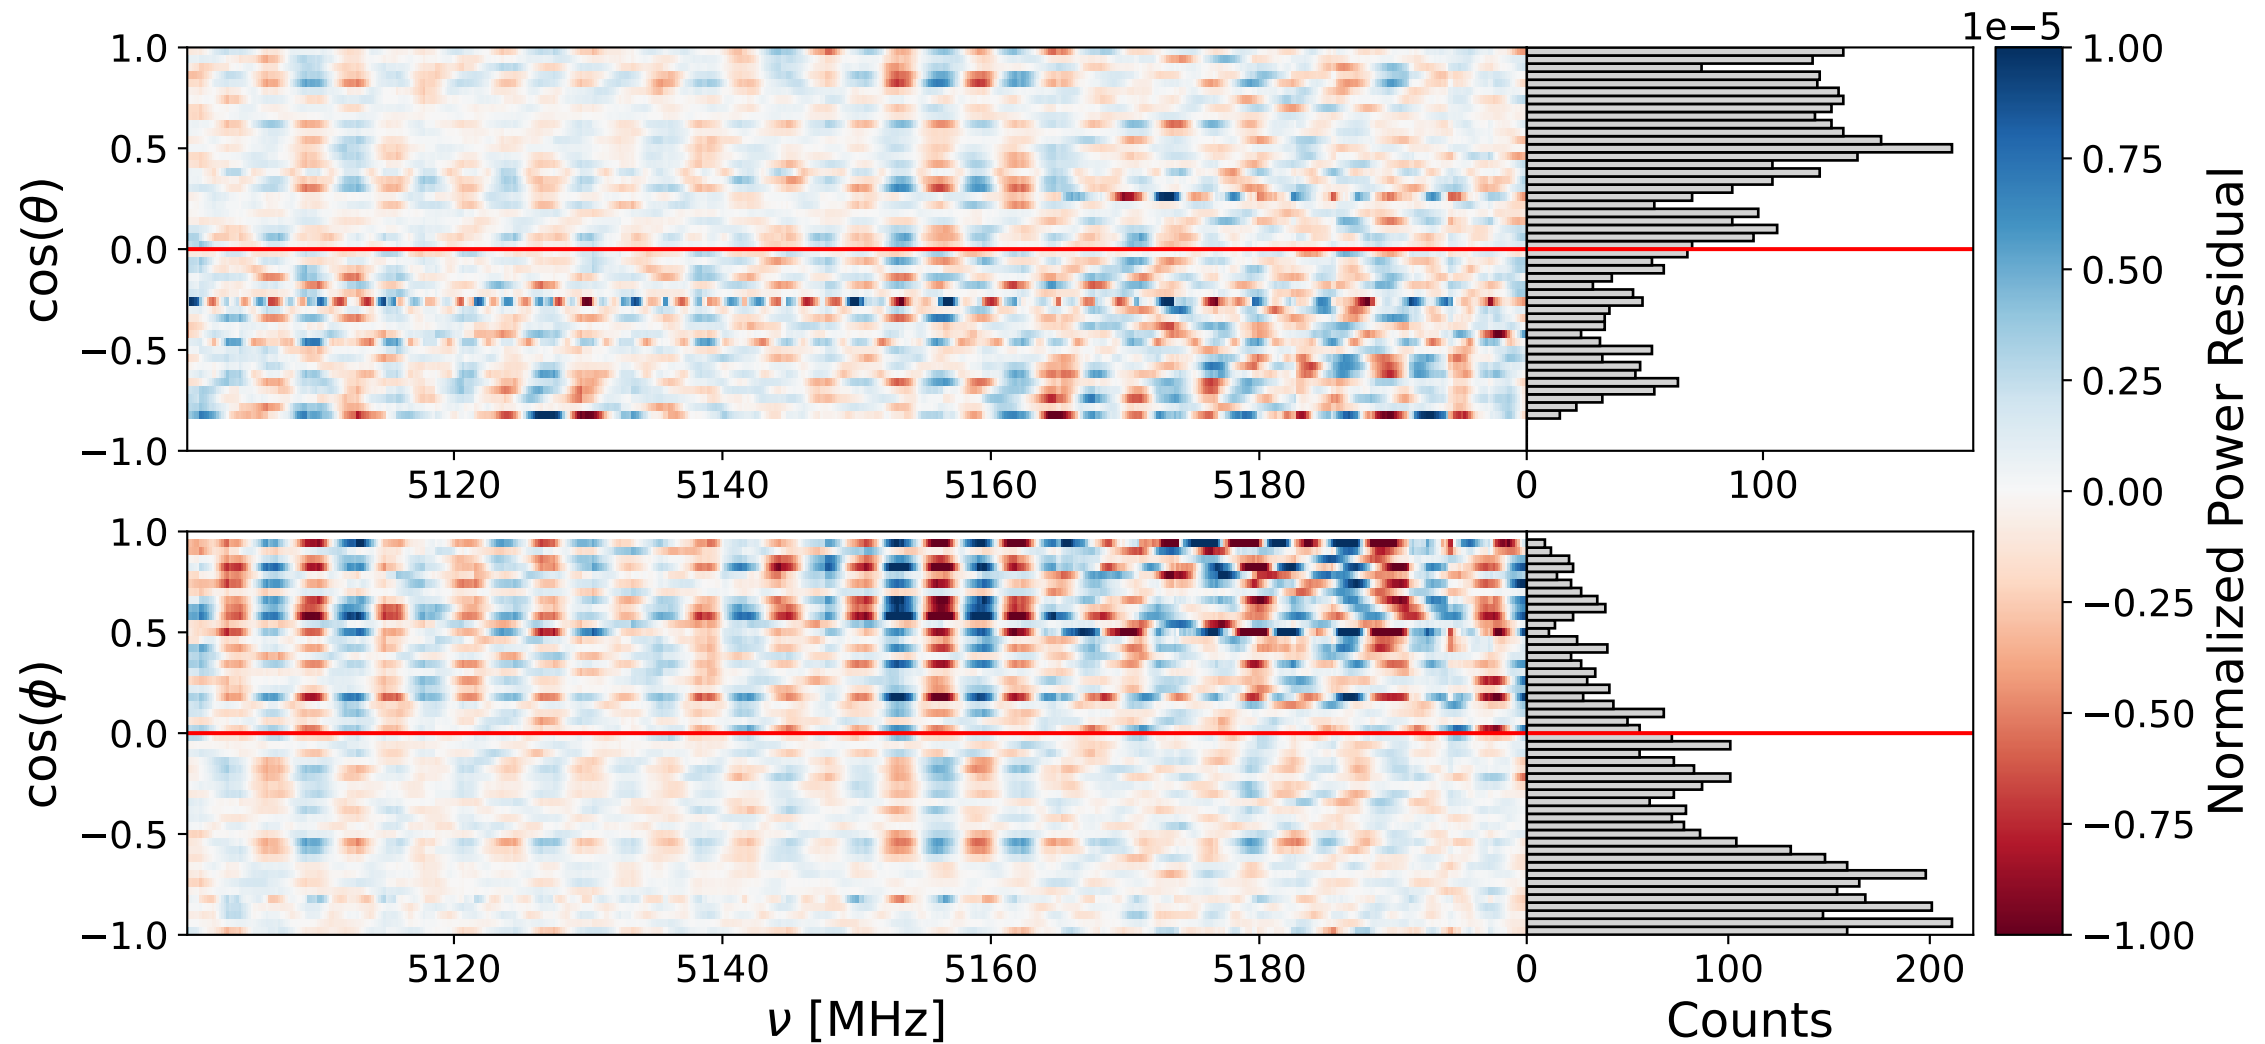


Bank 1 decay: 5200-5300 MHz

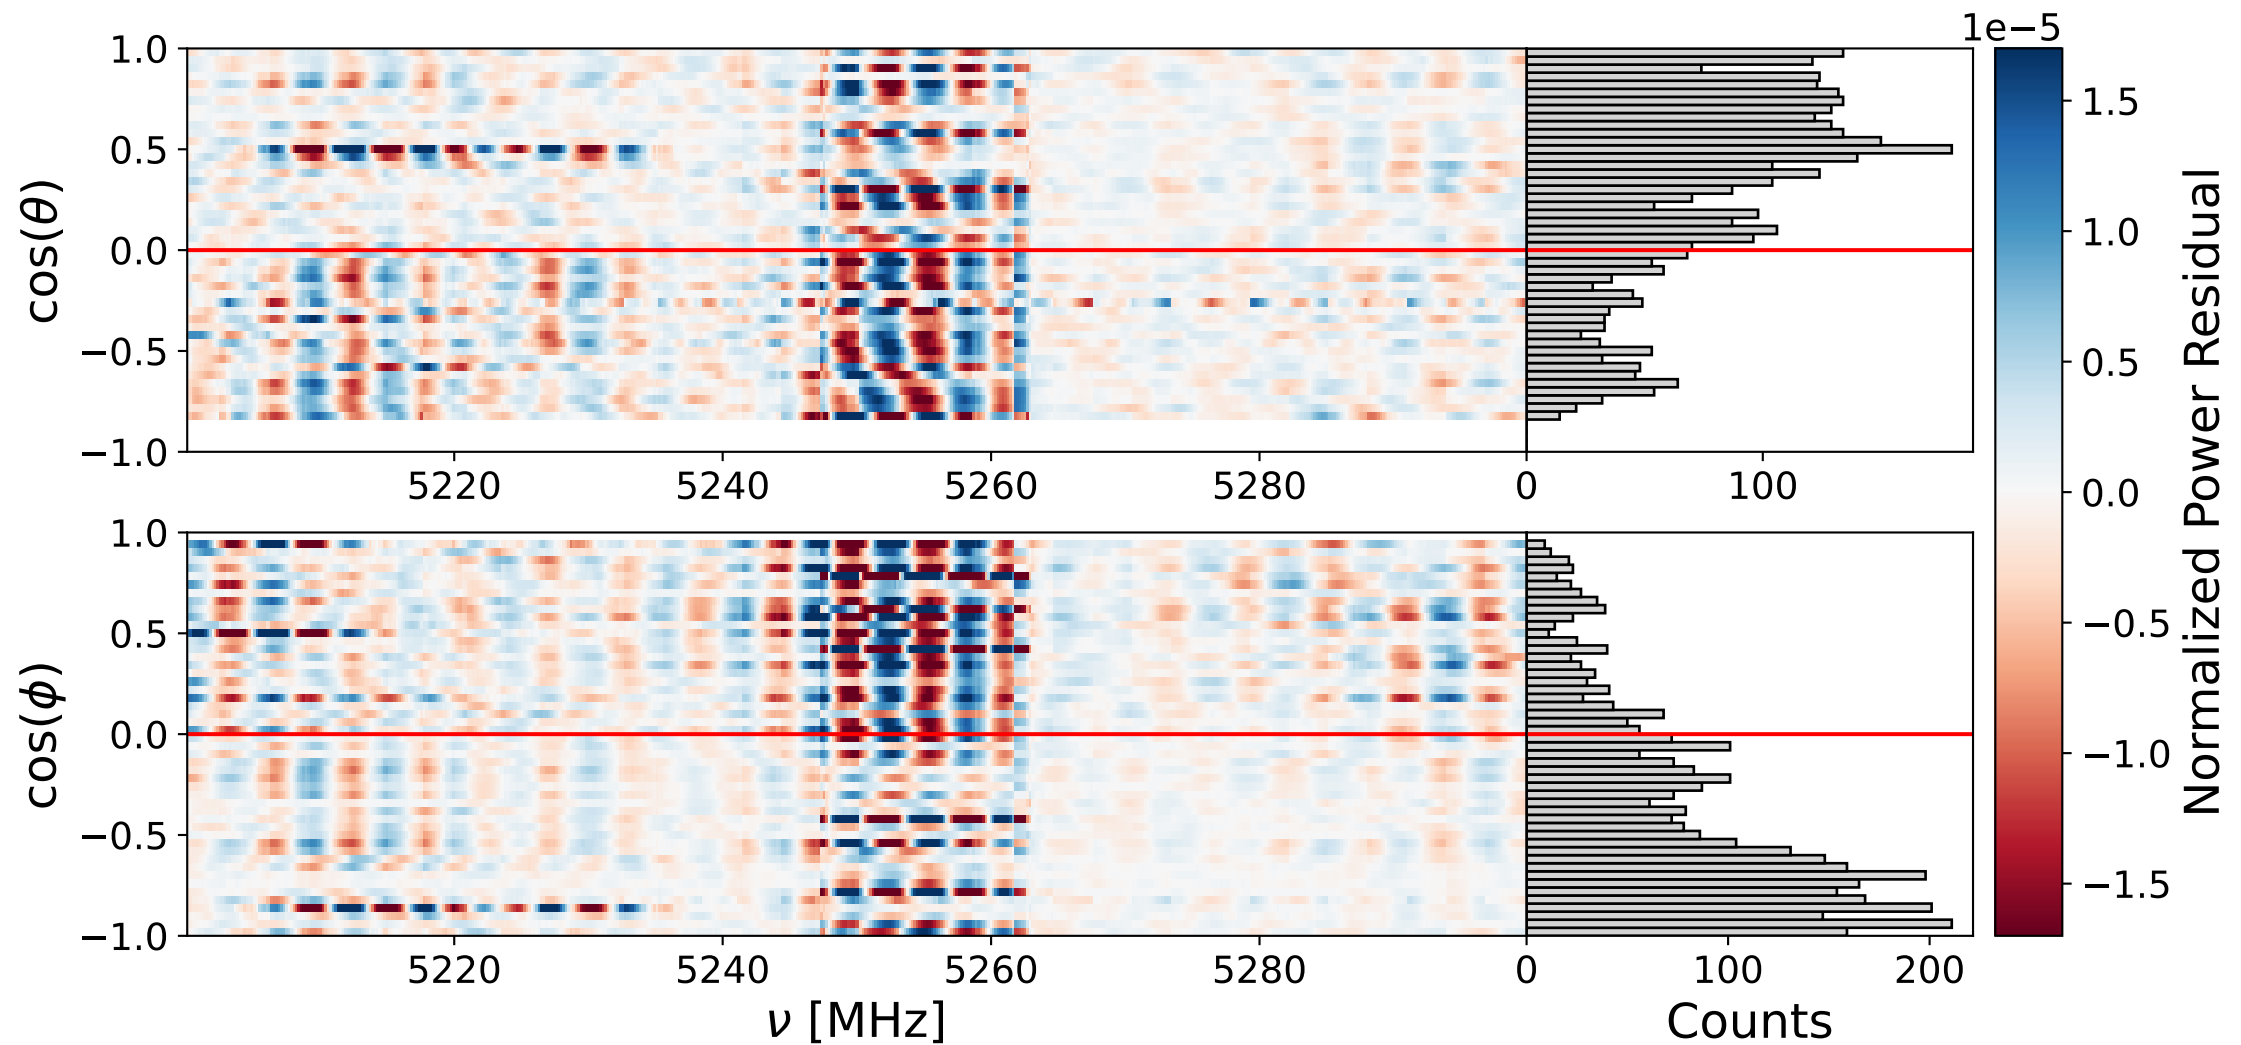


Bank 1 decay: 5300-5400 MHz

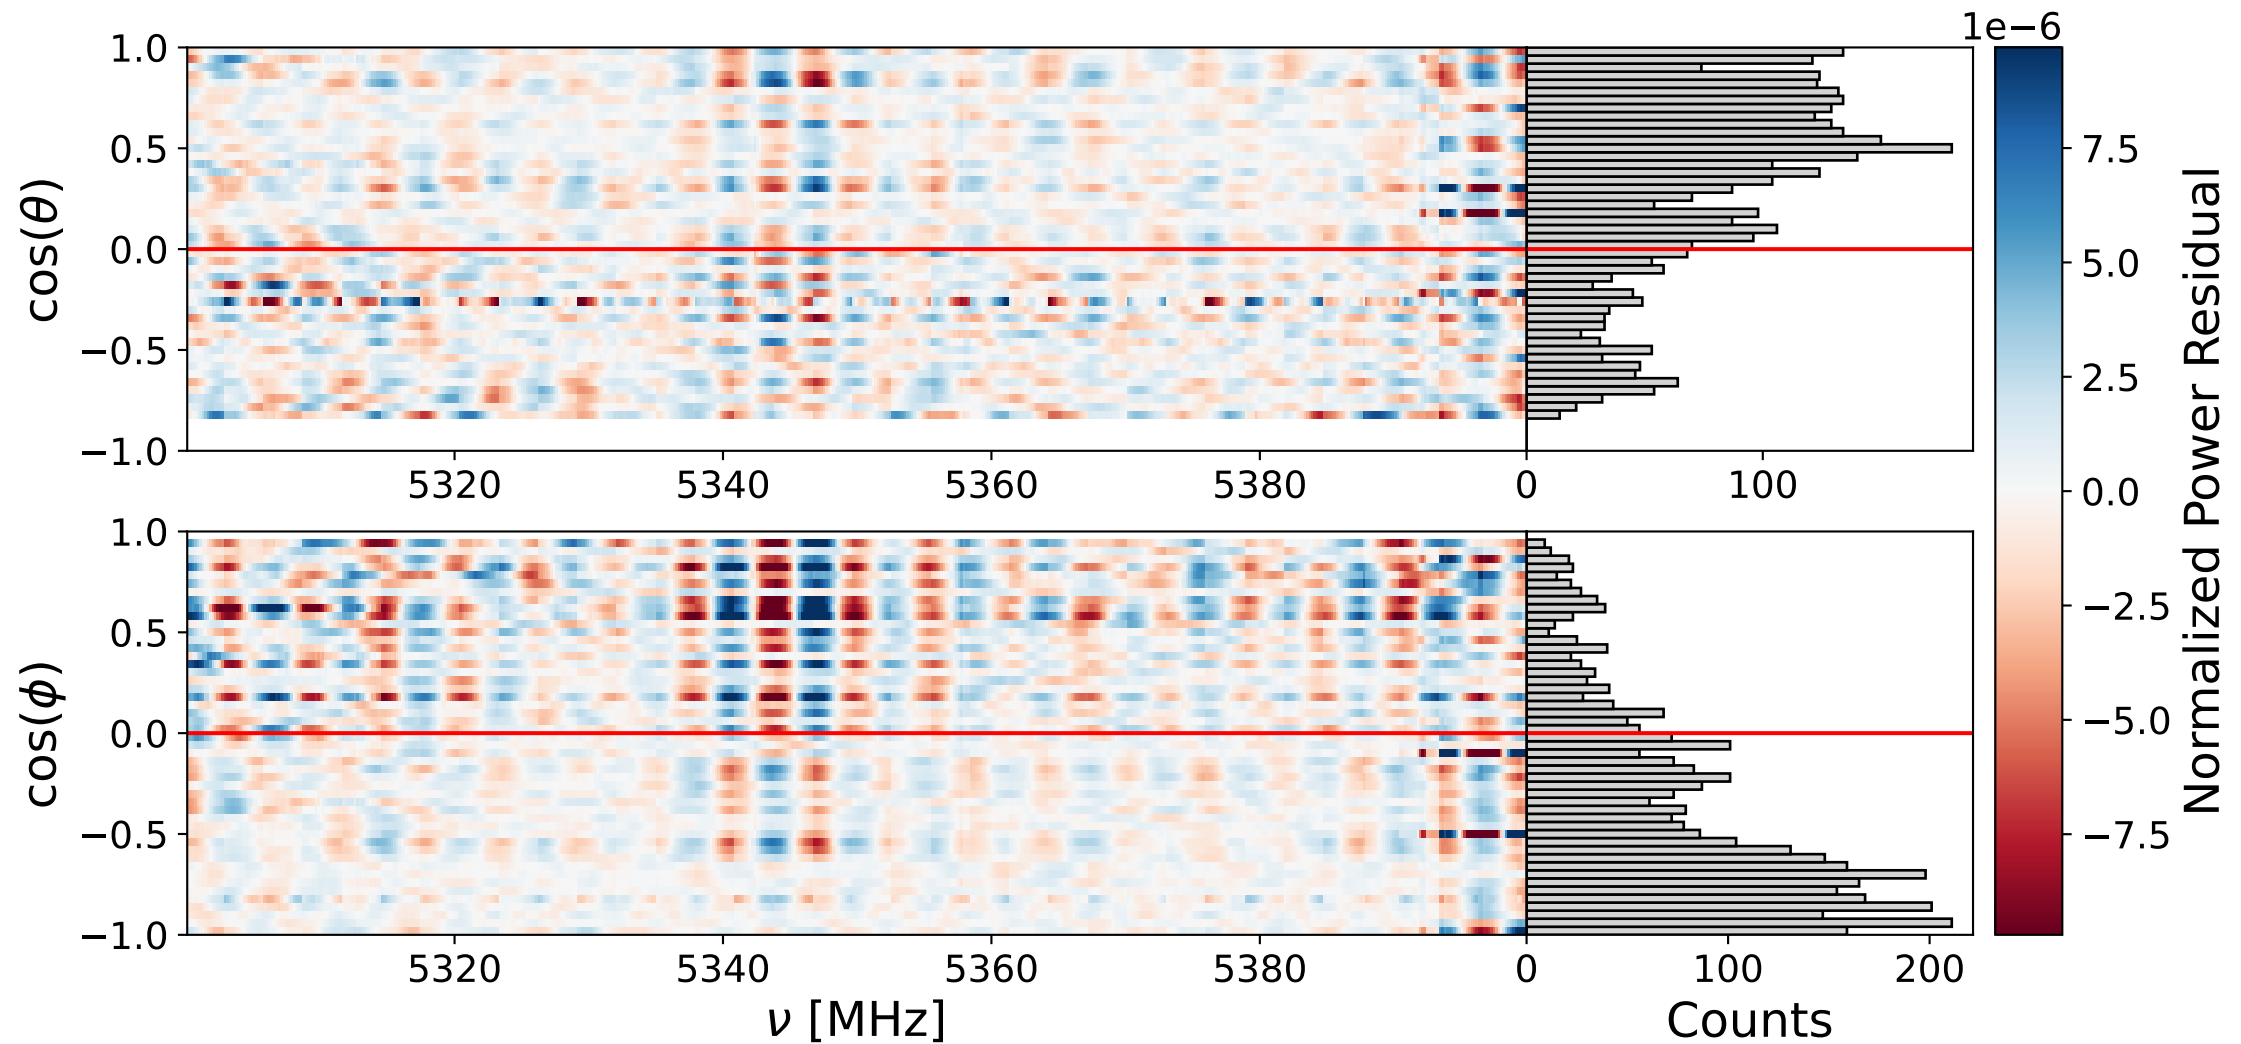


Bank 1 decay: 5400-5500 MHz

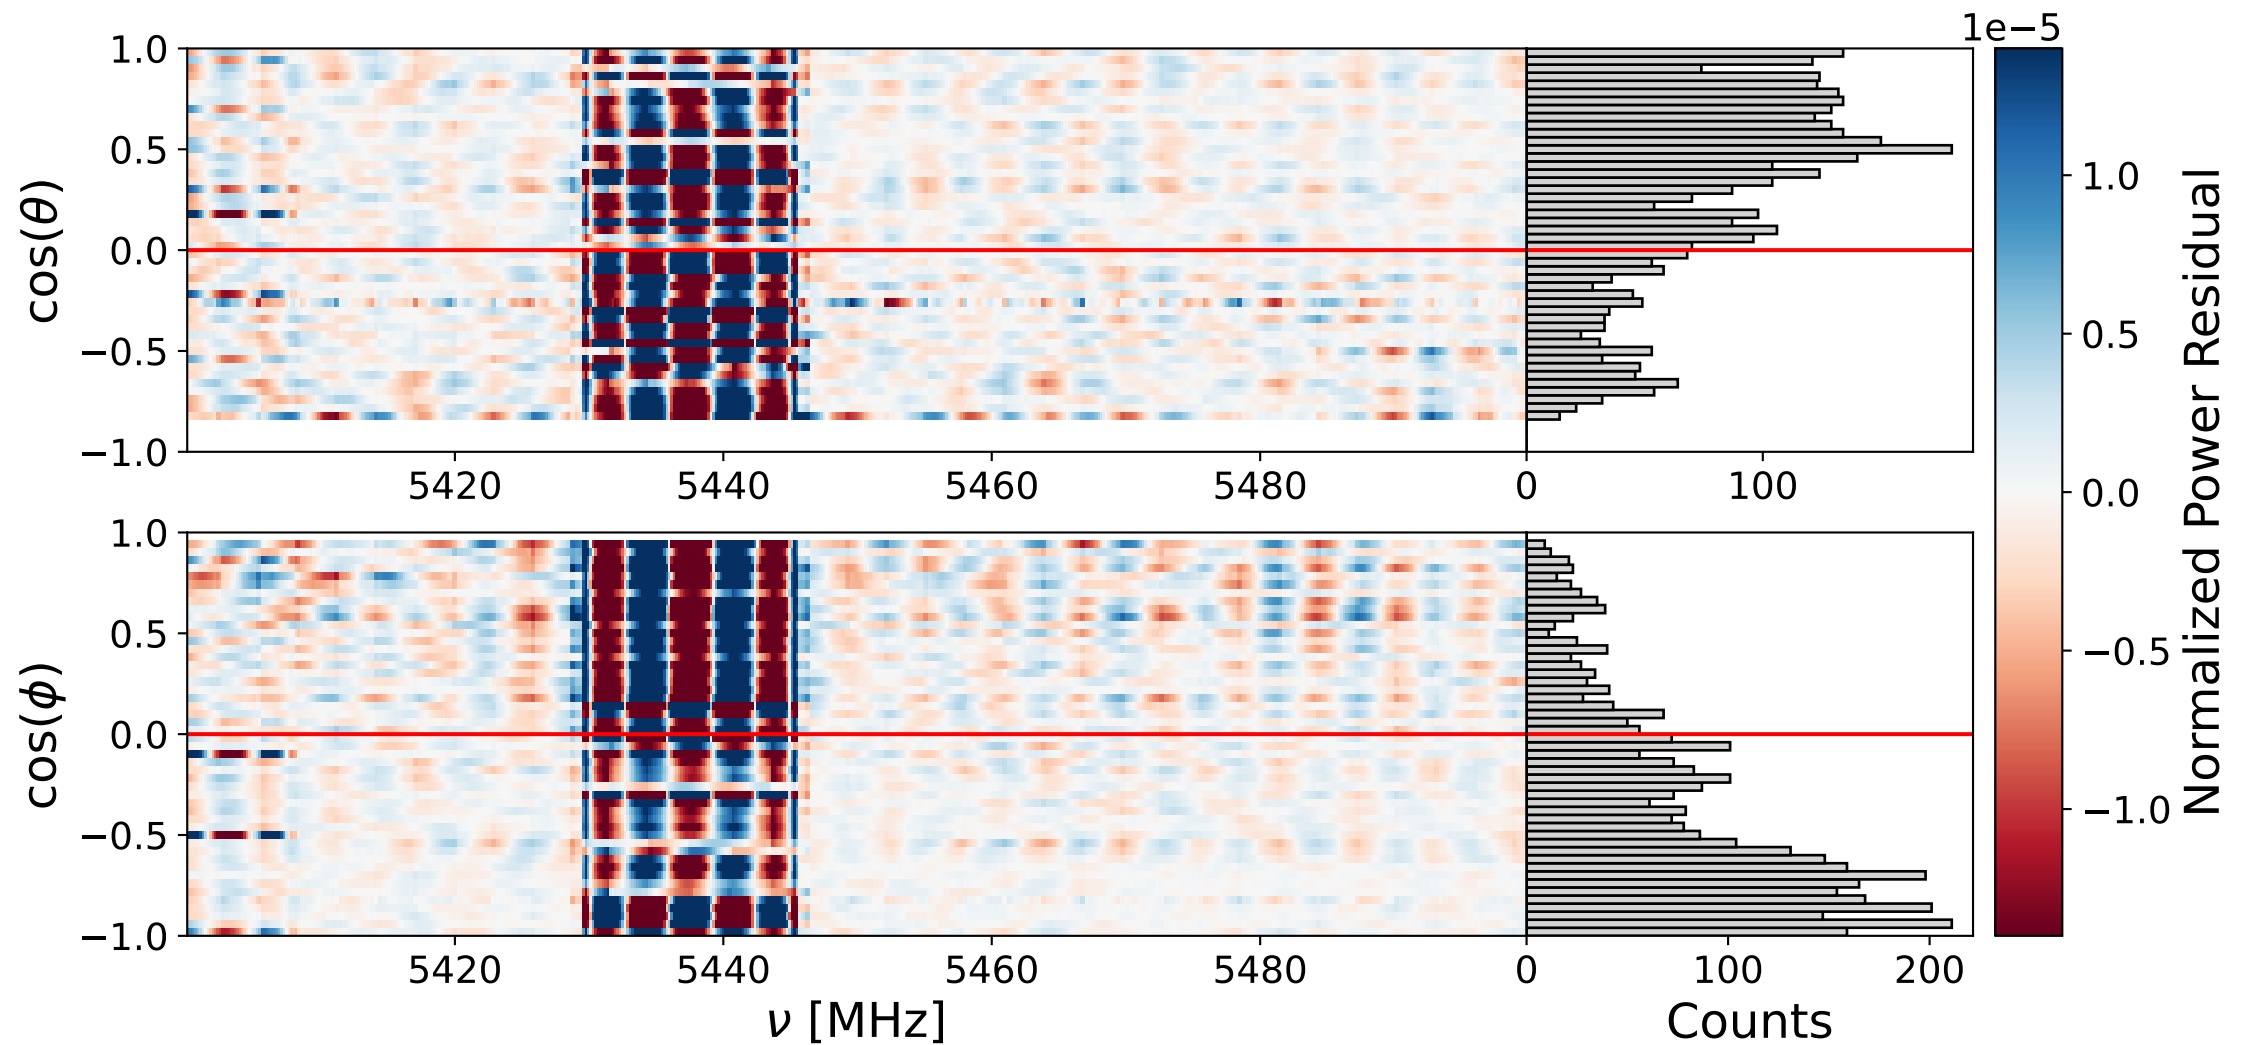


Bank 1 decay: 5500-5600 MHz

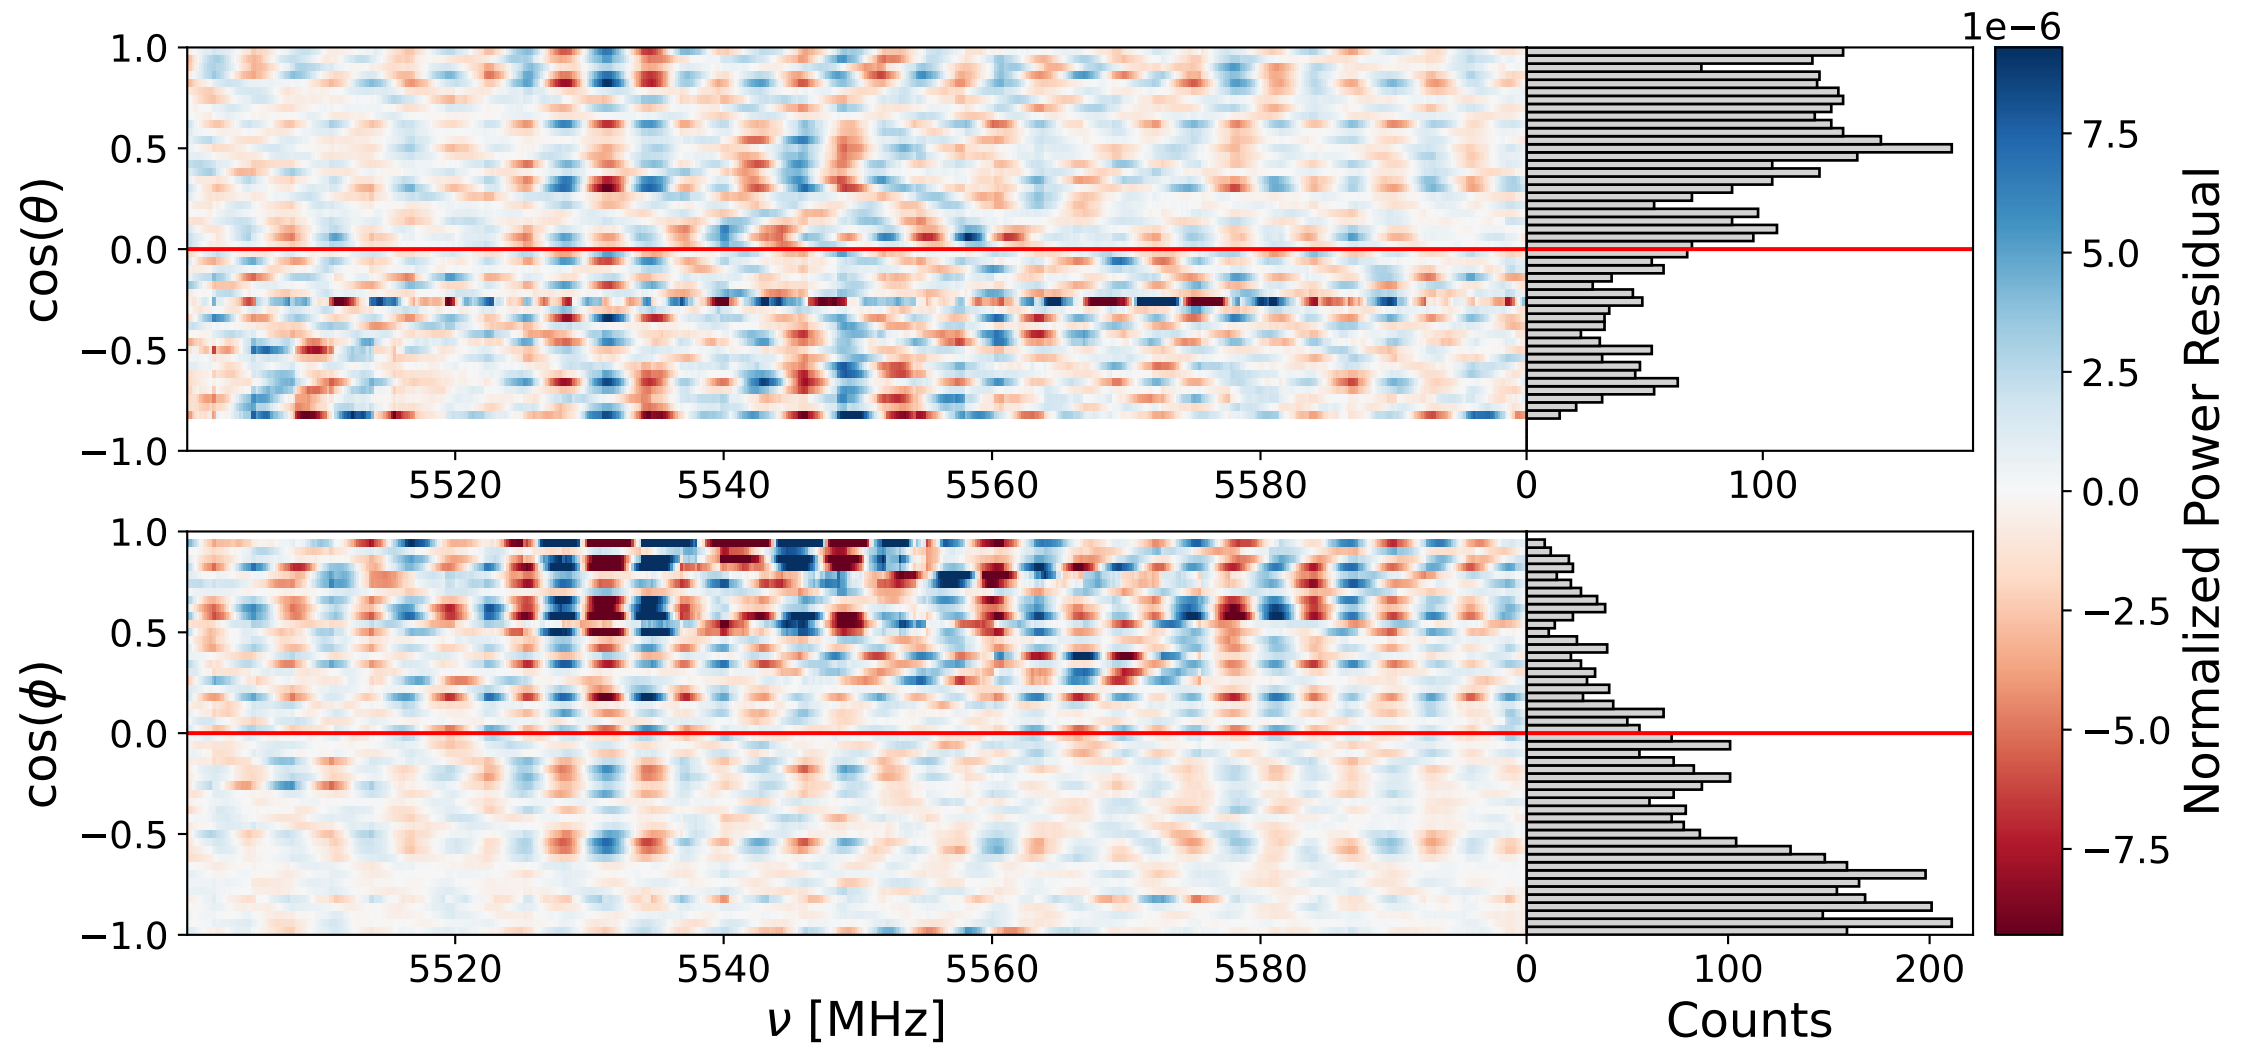


Bank 1 decay: 5600-5700 MHz

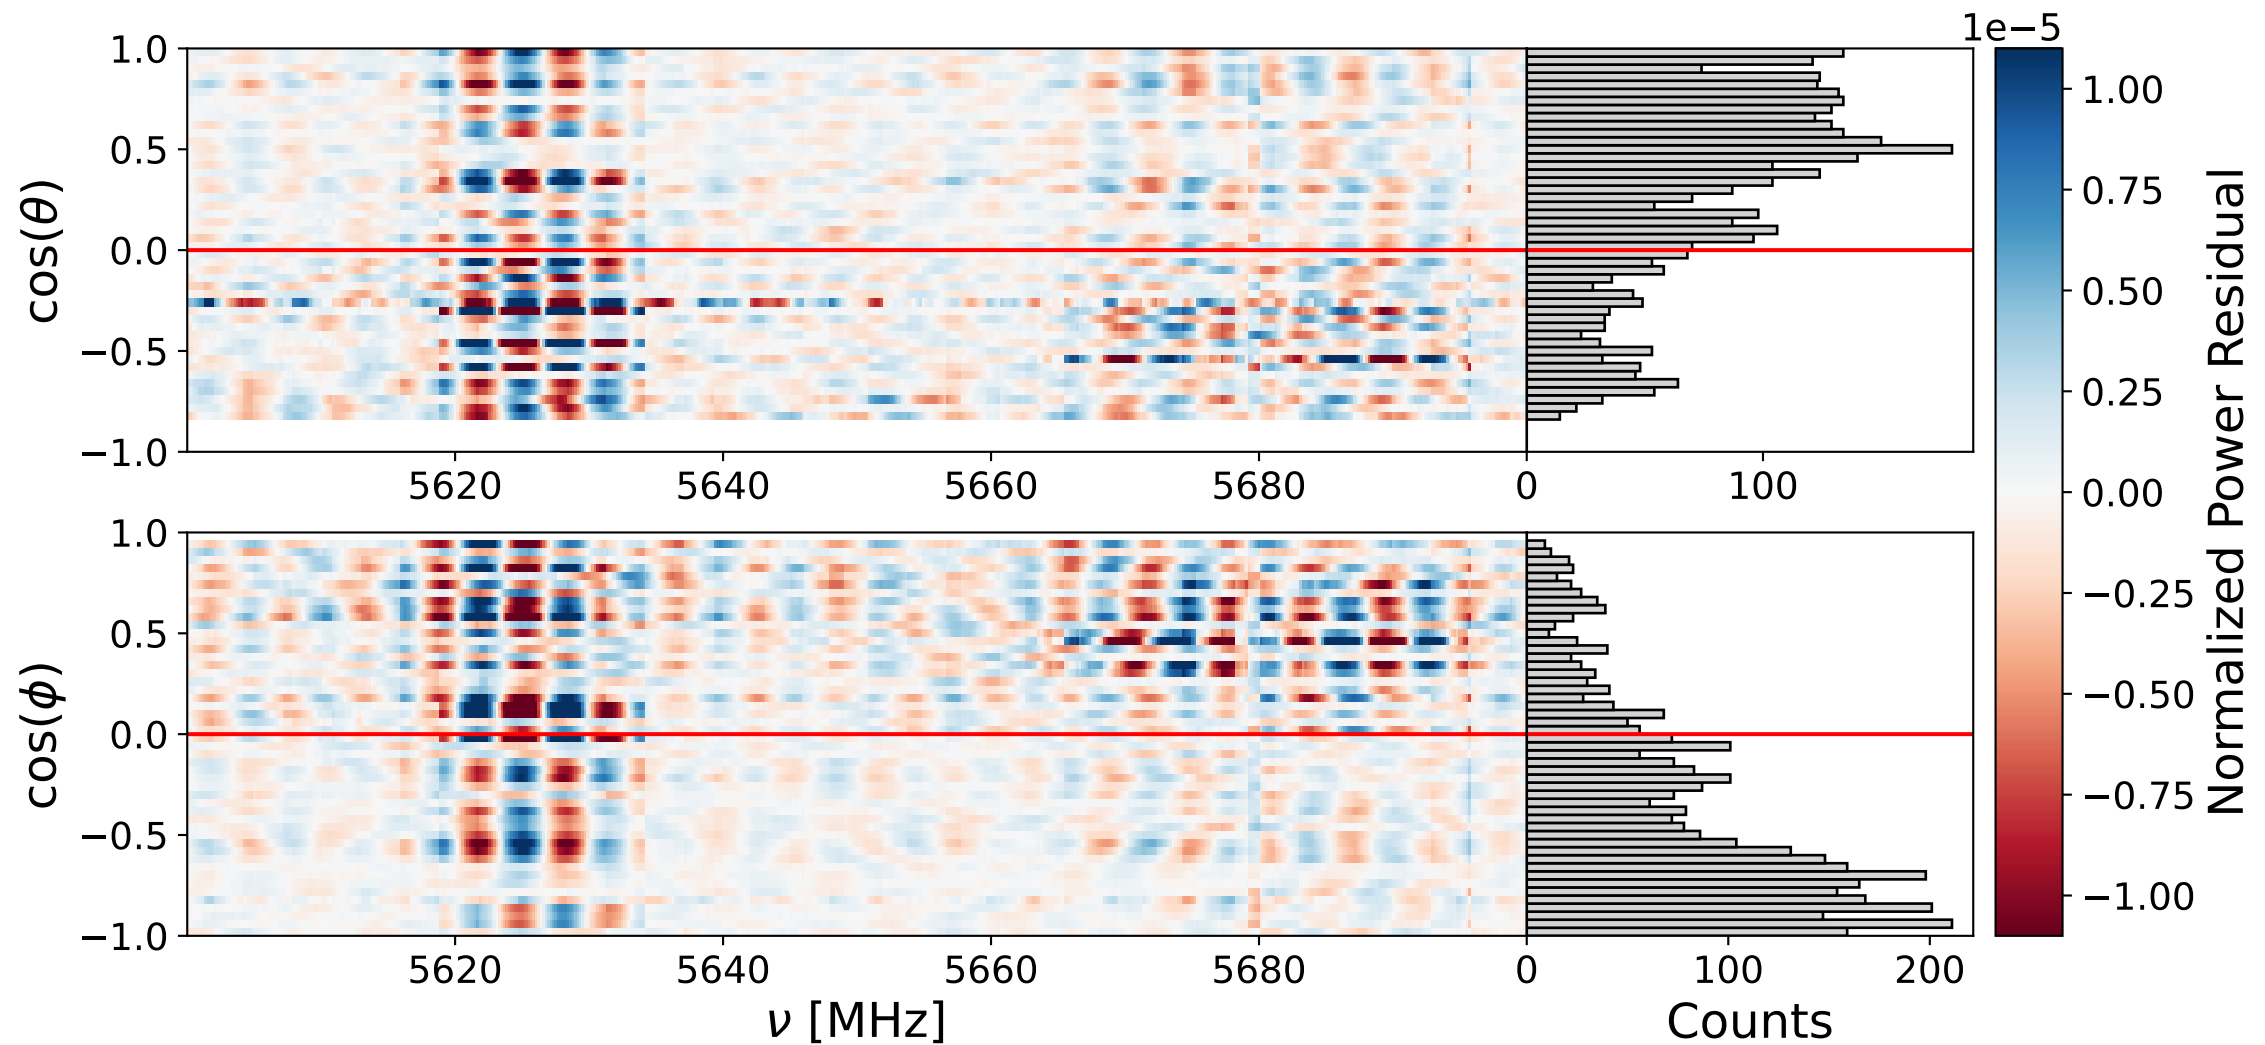


Bank 1 decay: 5700-5800 MHz

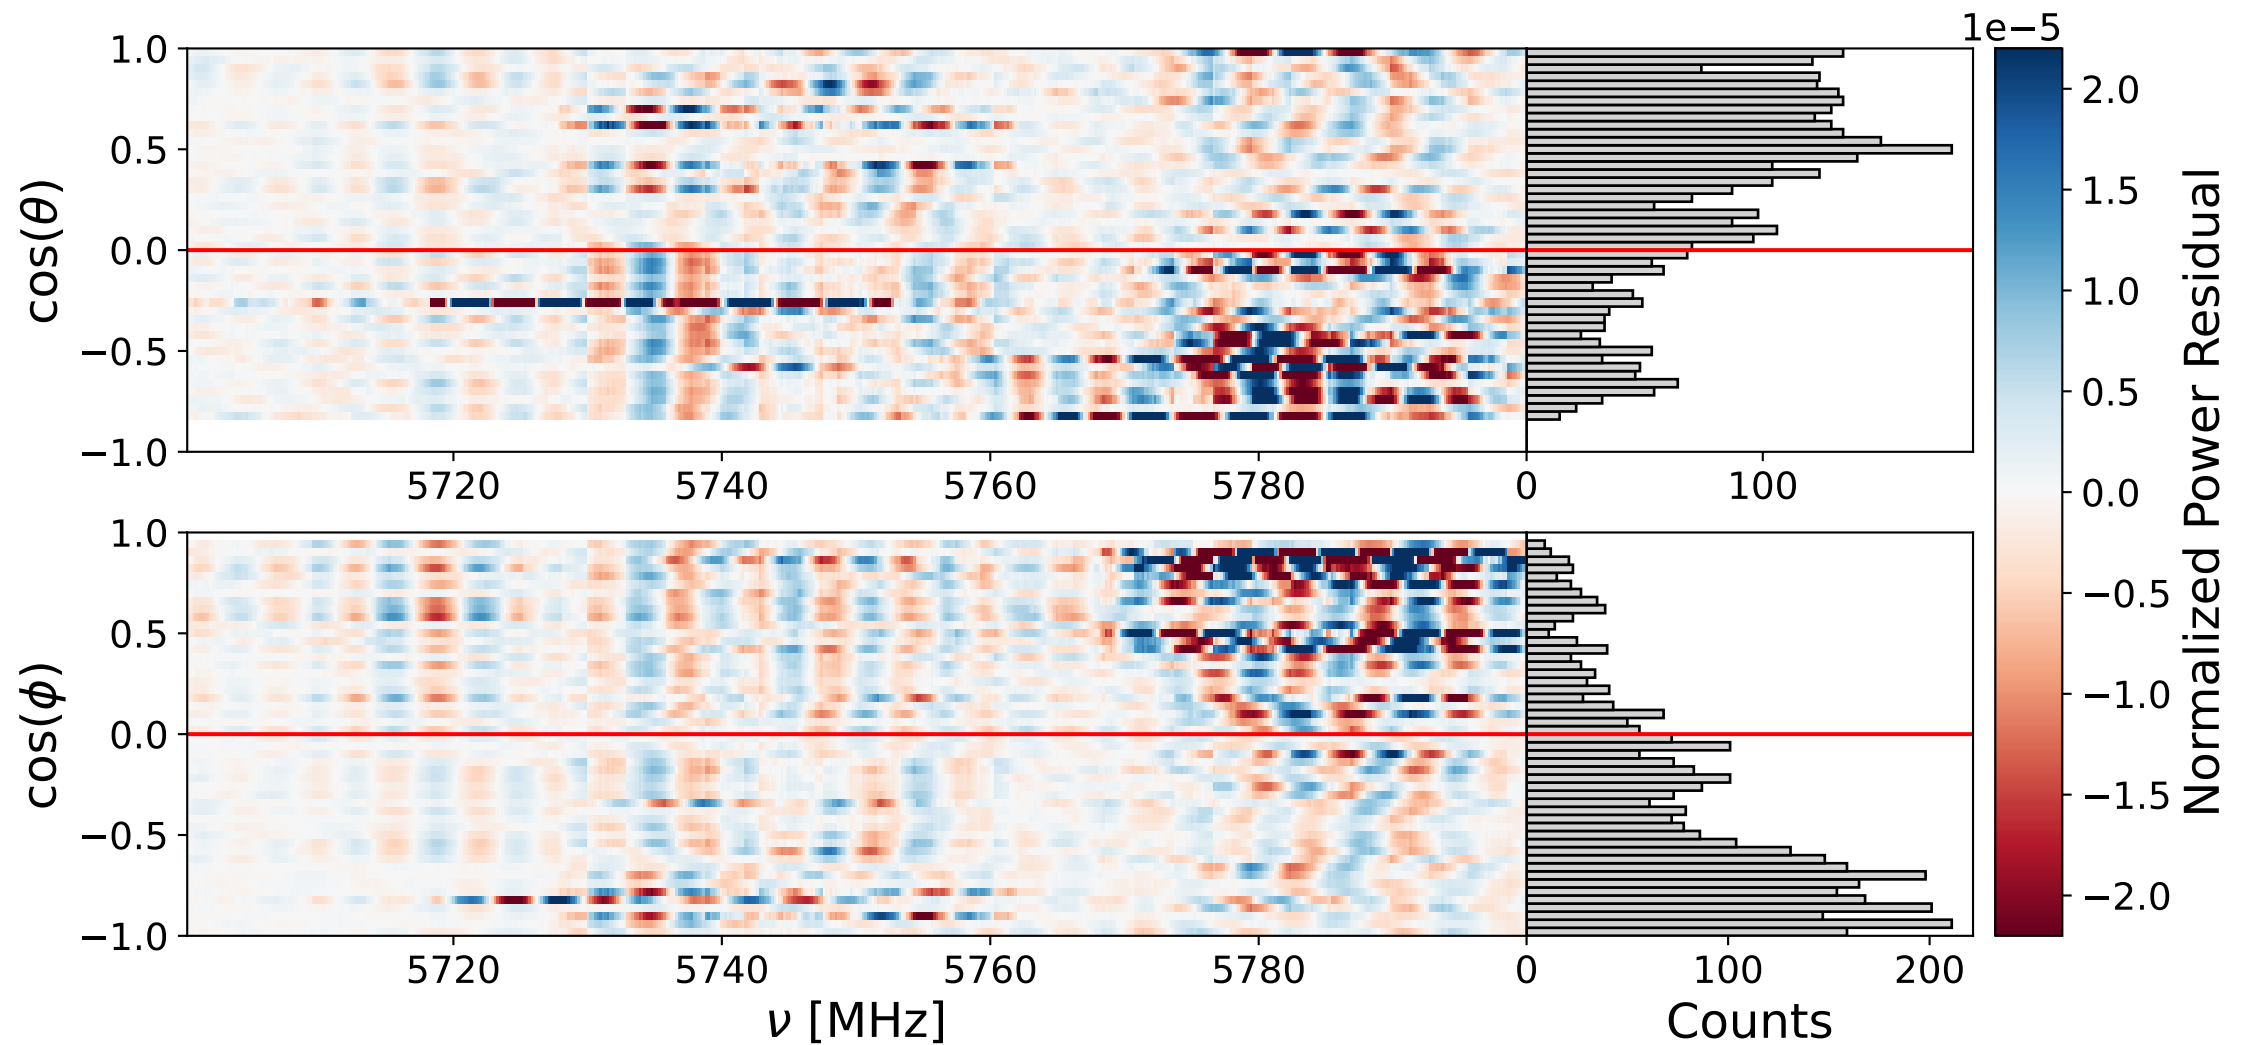


Bank 1 decay: 5800-5900 MHz

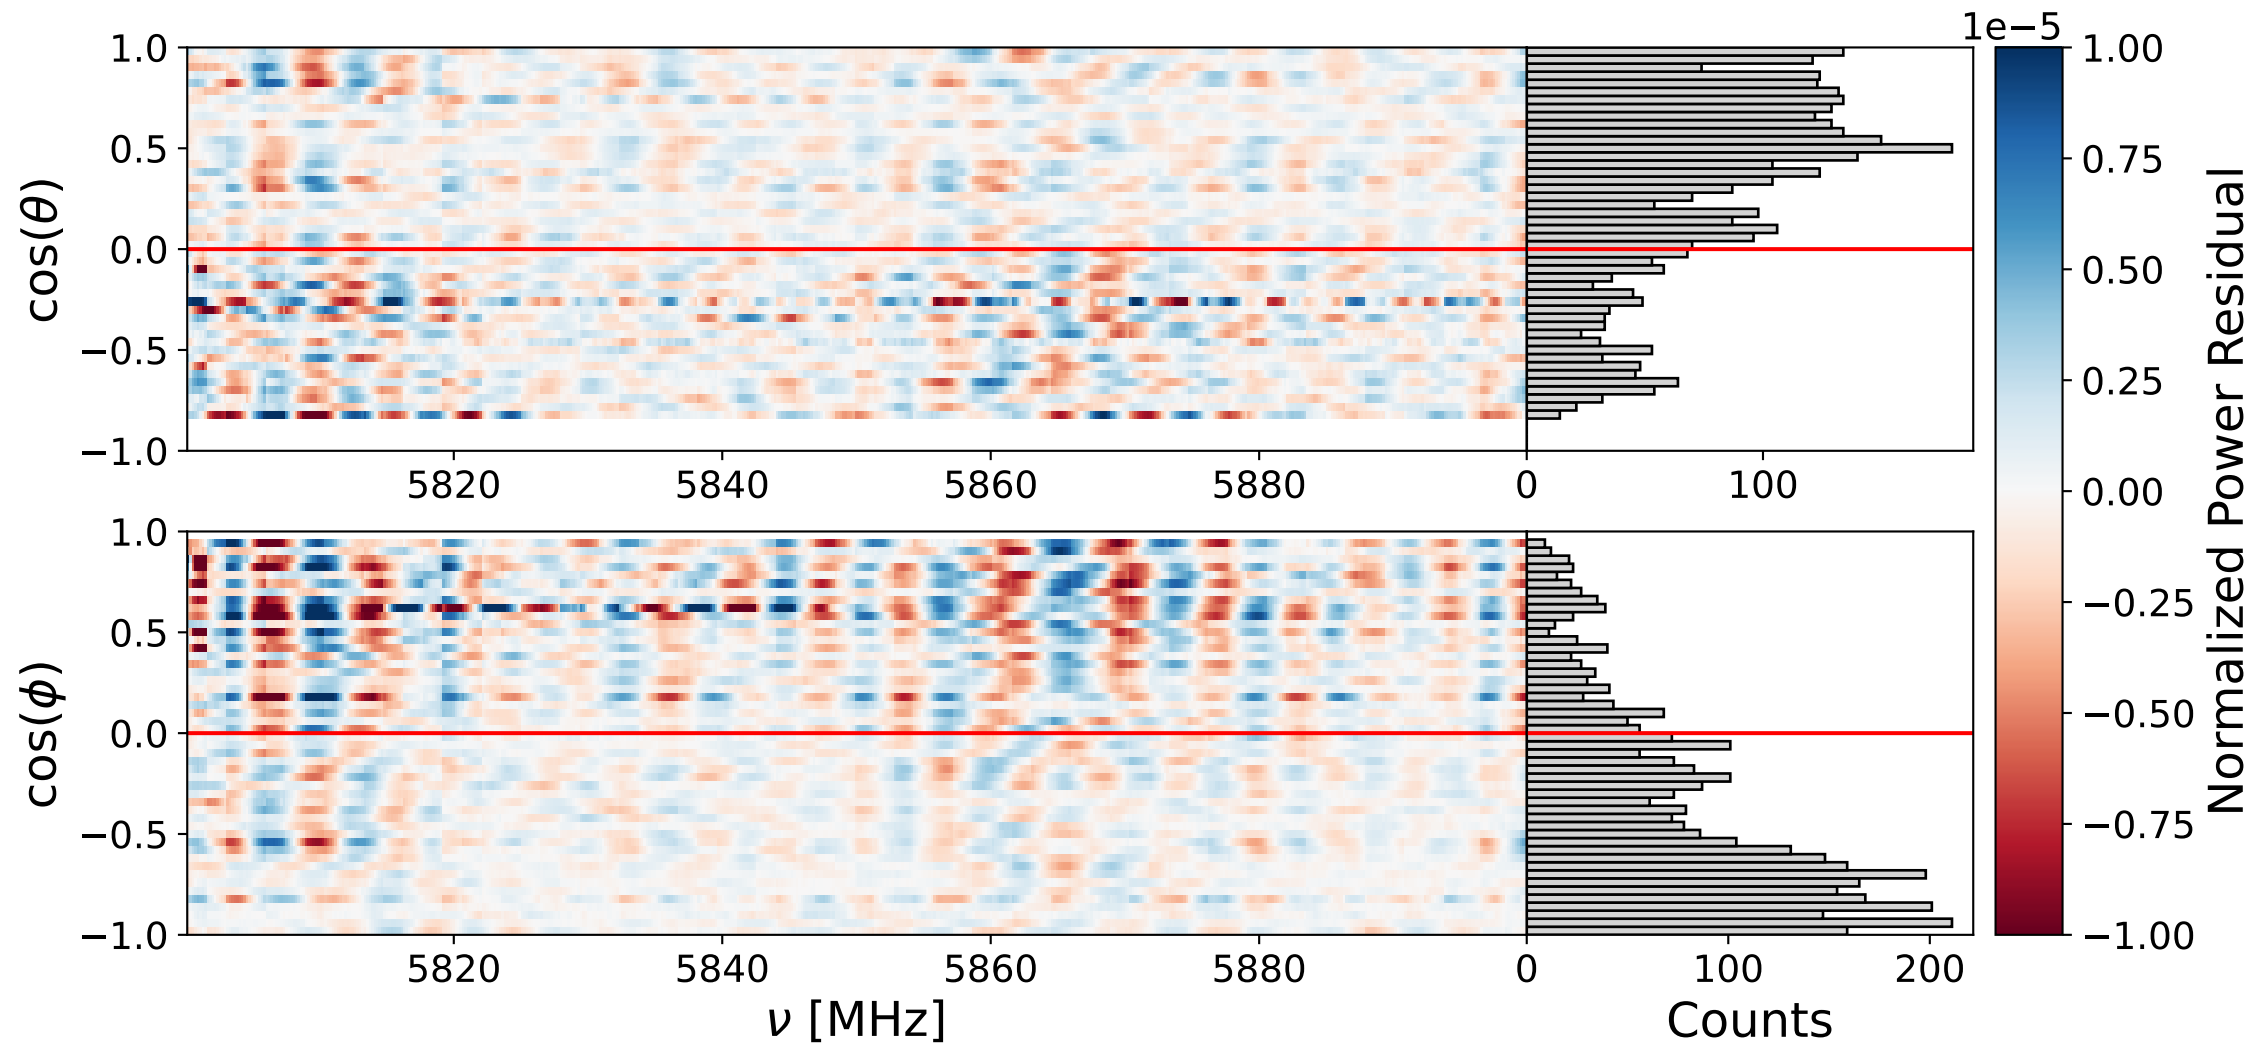


Bank 1 decay: 5900-6000 MHz

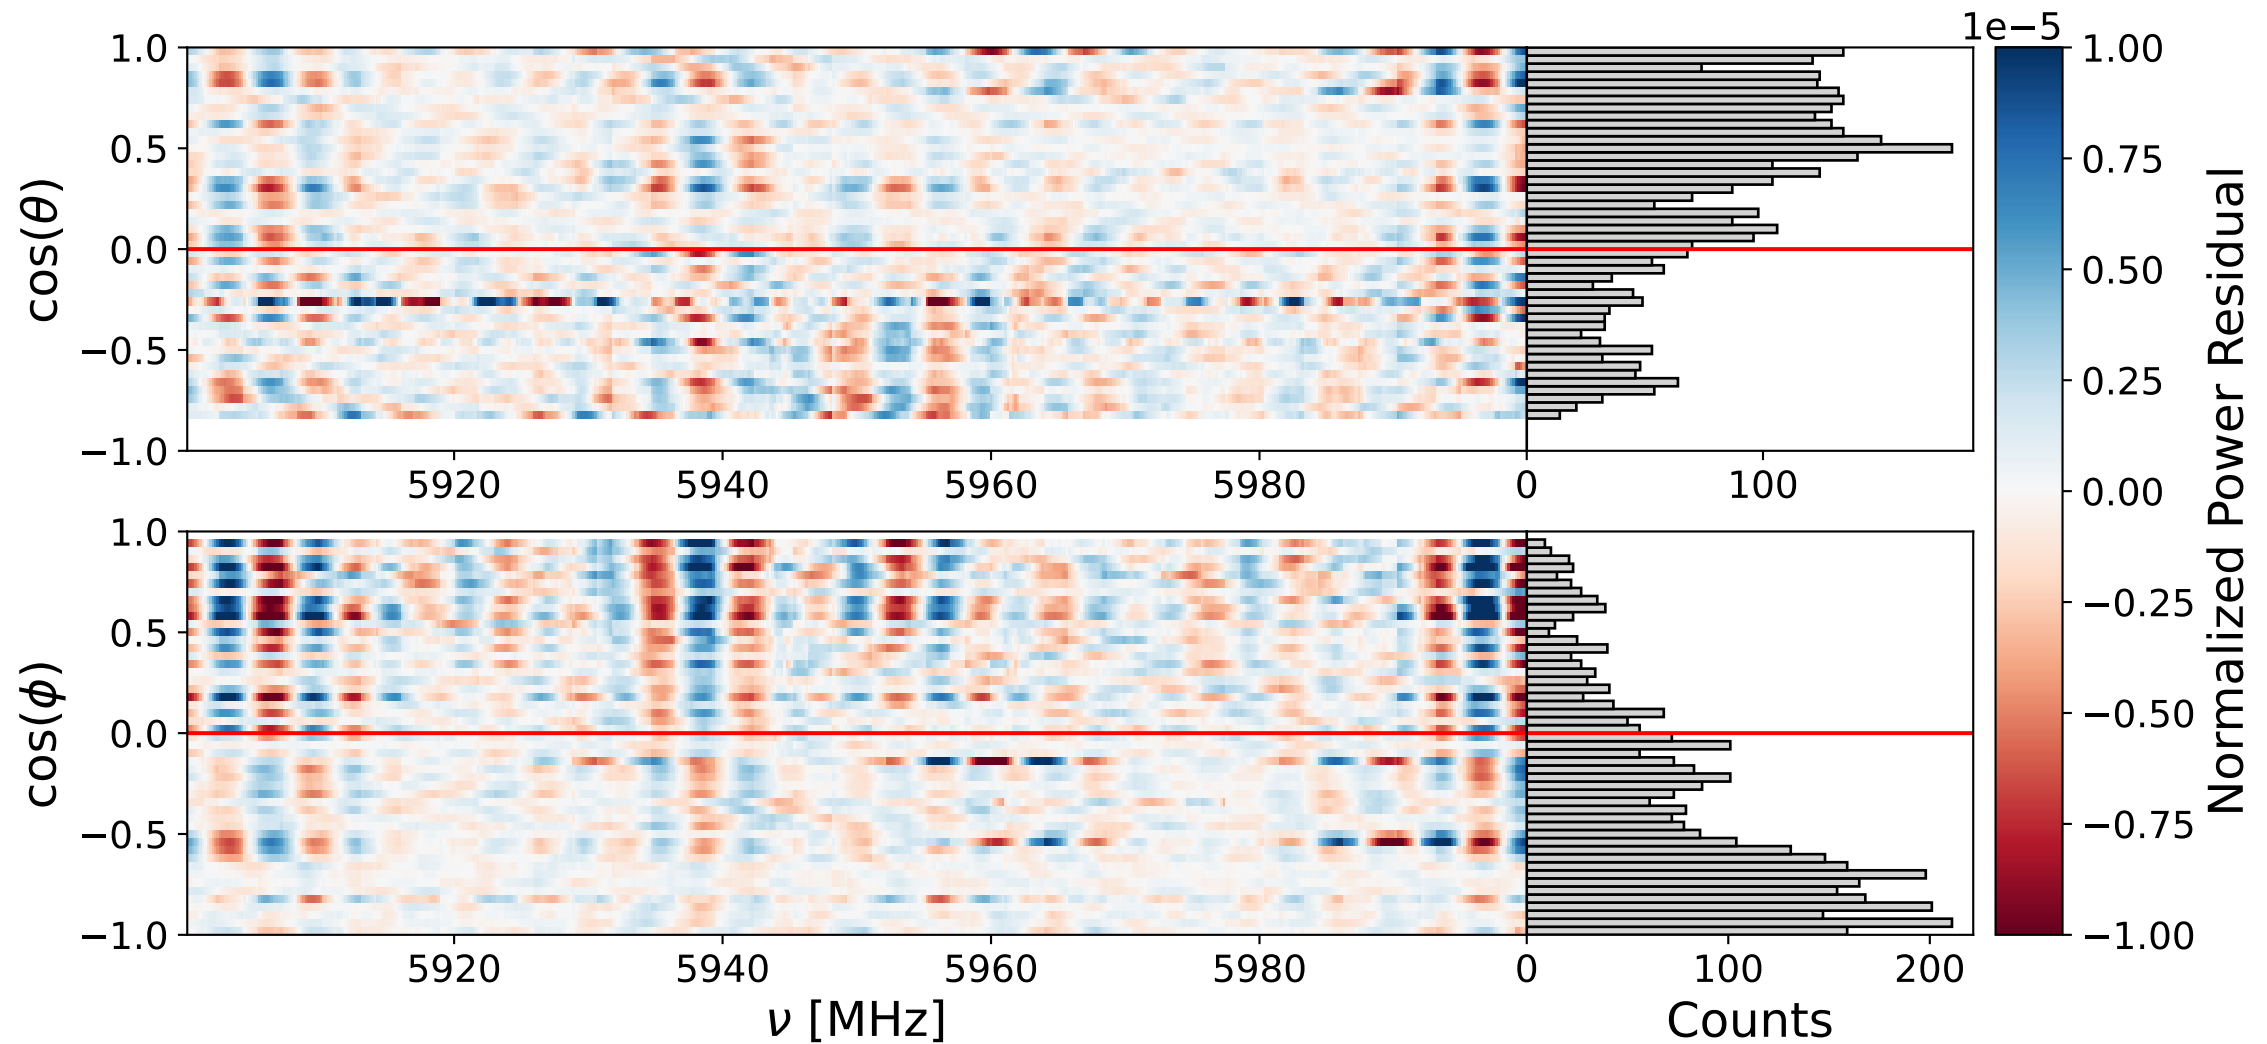


Bank 1 decay: 6000-6100 MHz

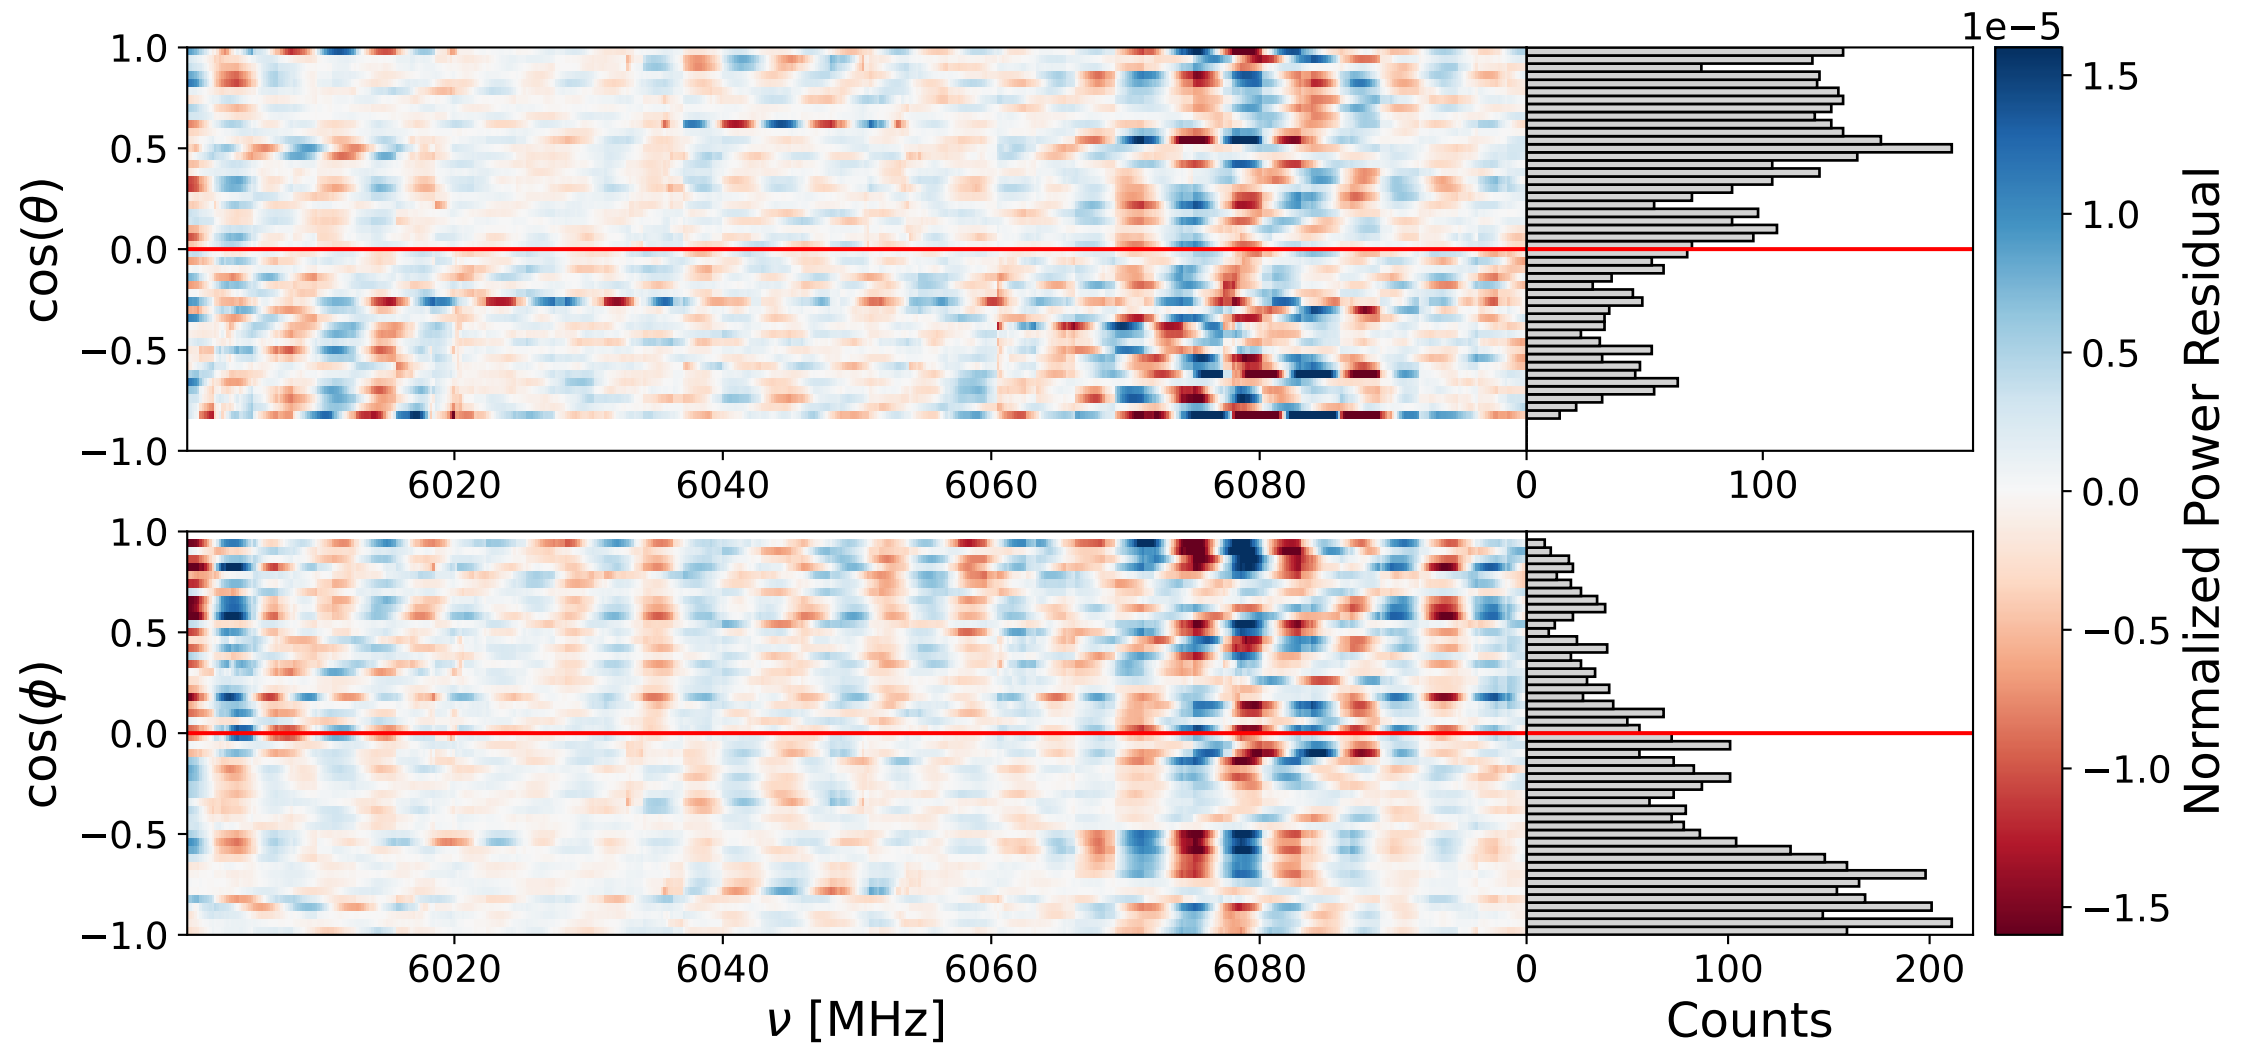


Bank 1 decay: 6100-6180 MHz

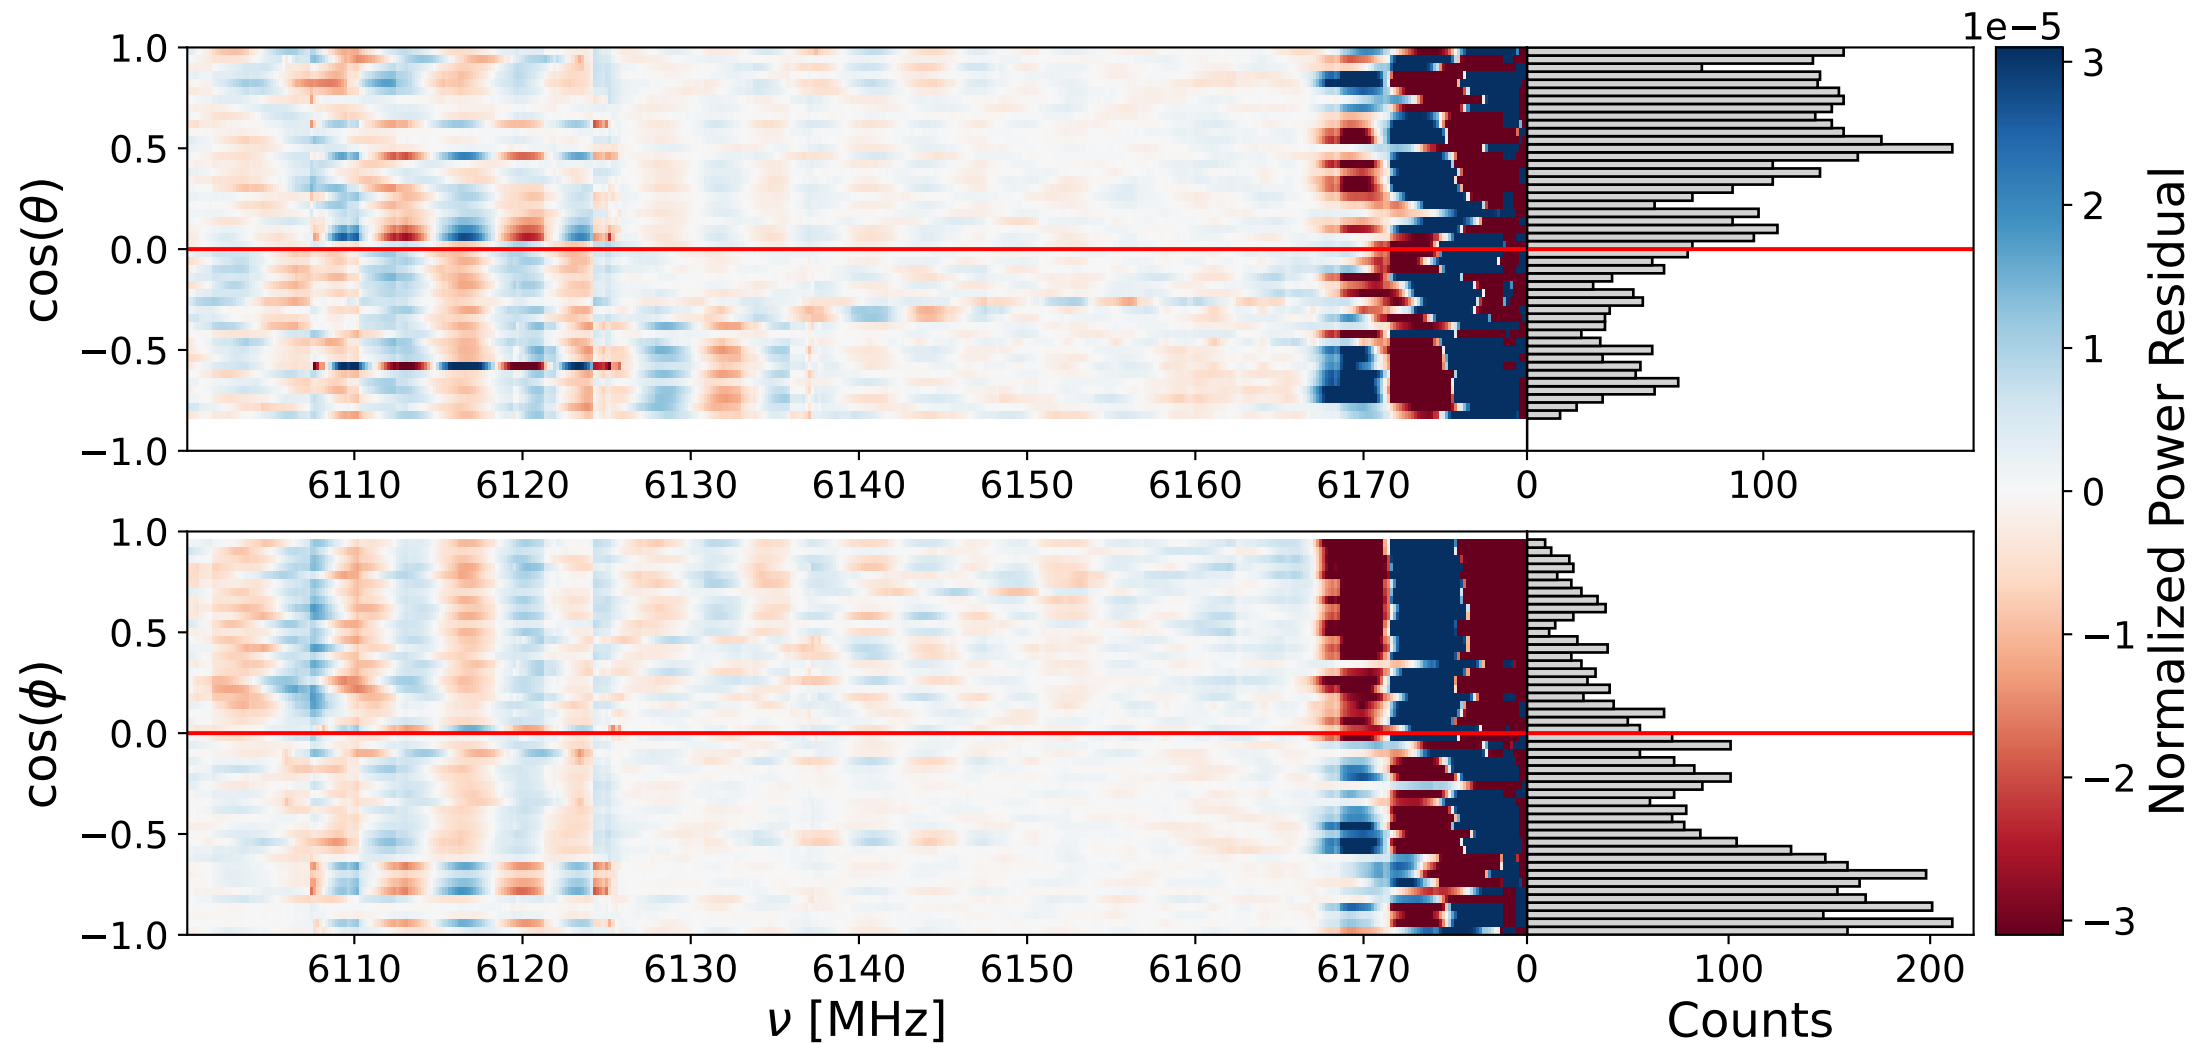


Bank 2 decay: 5830-5930 MHz

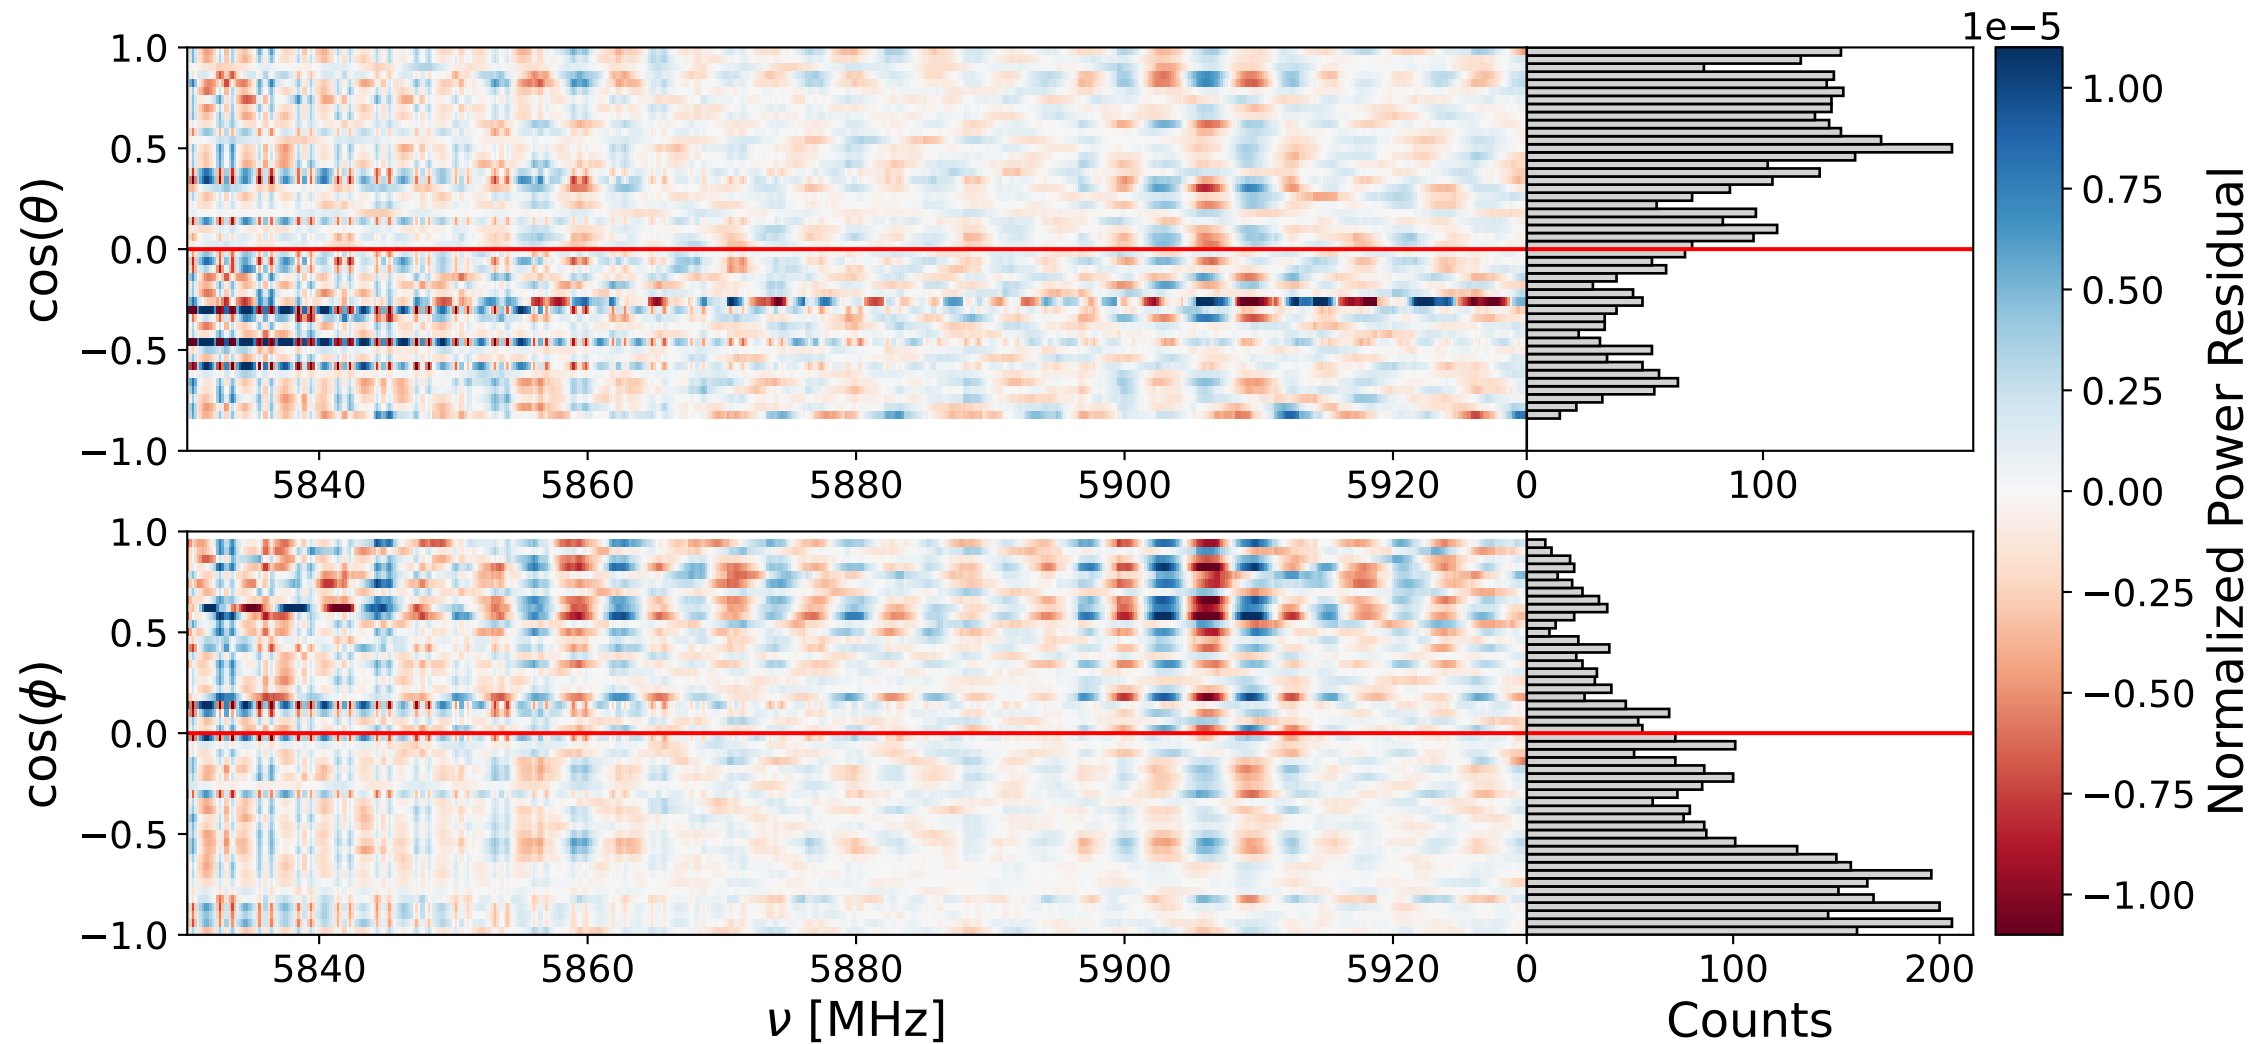


Bank 2 decay: 5930-6030 MHz

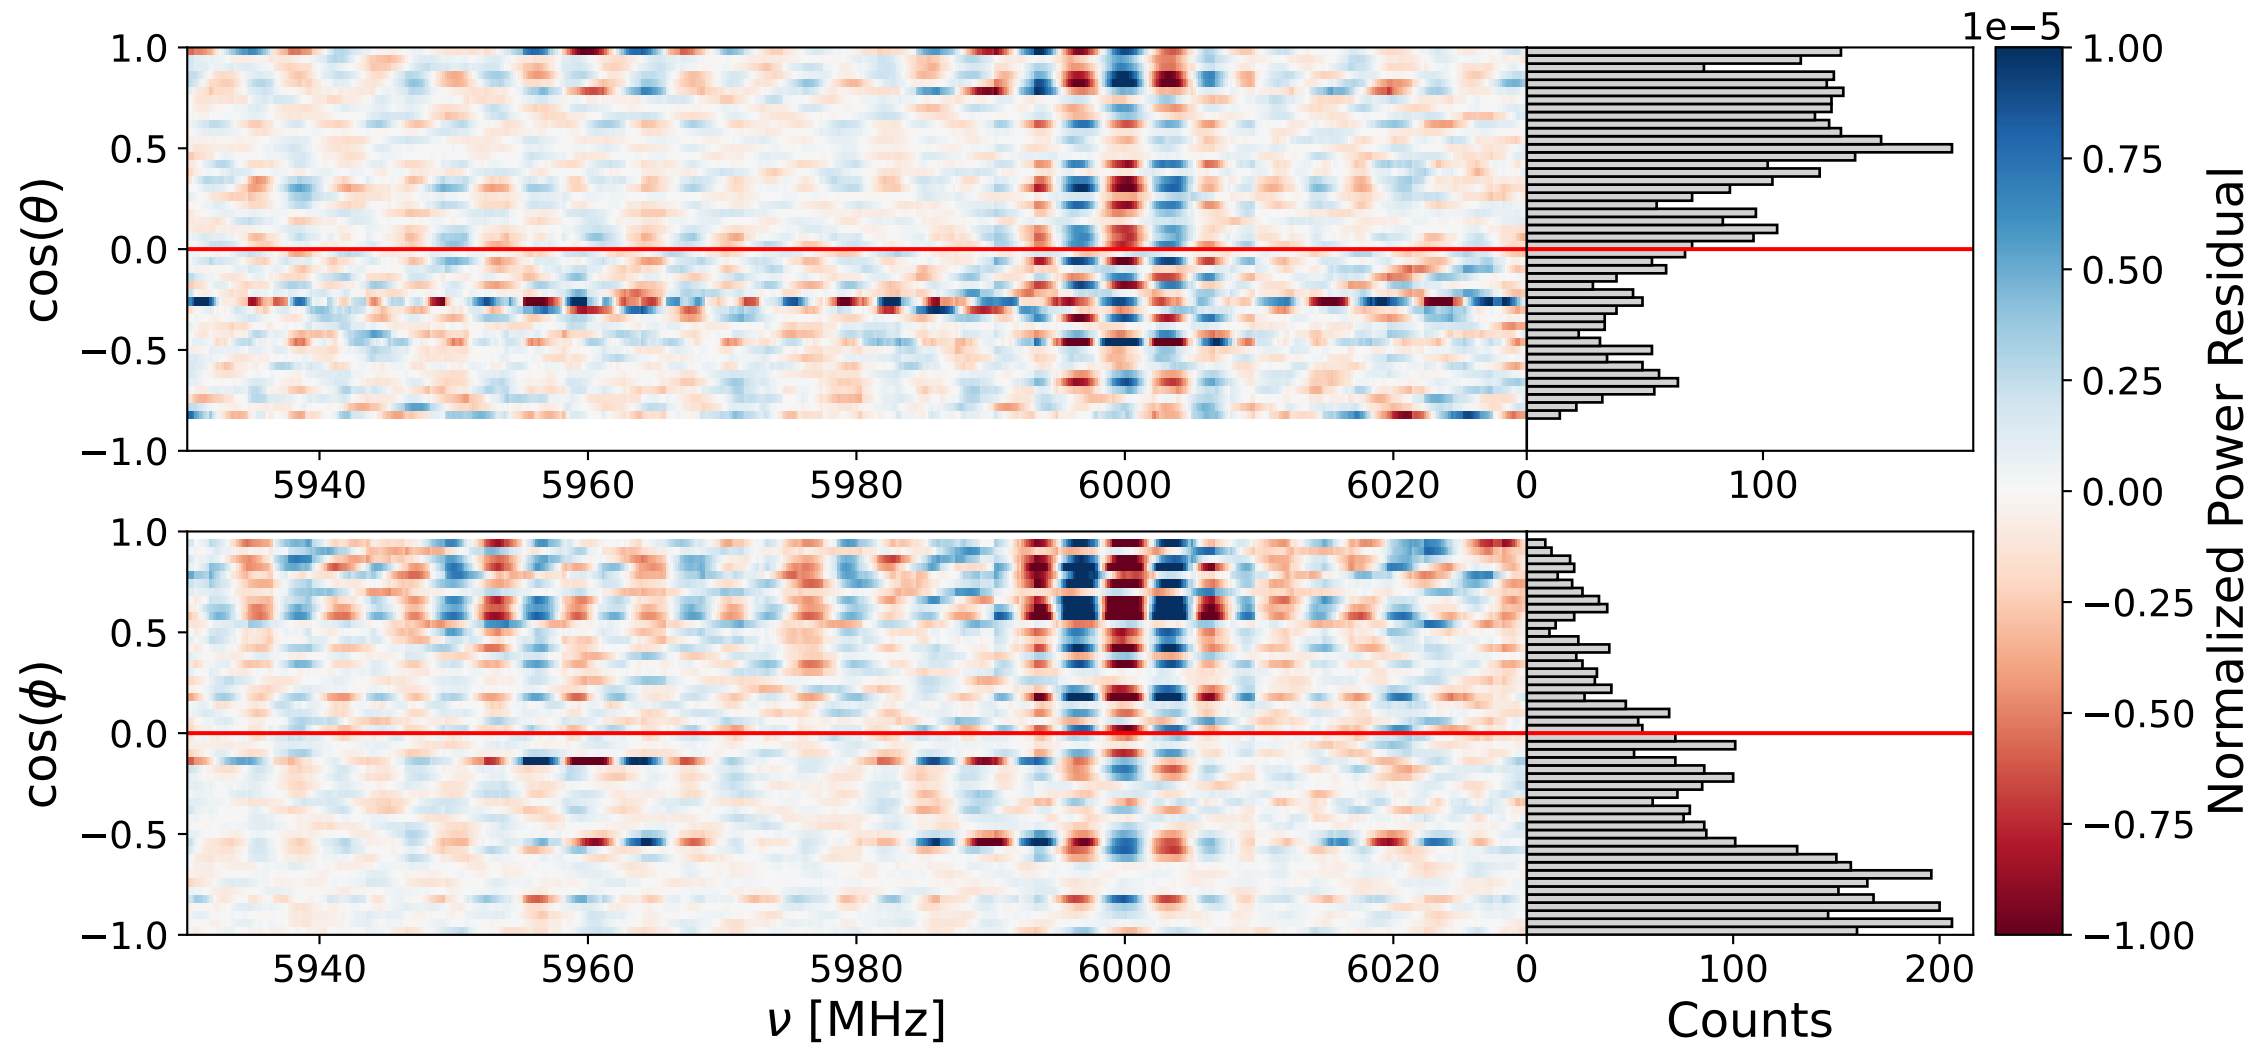


Bank 2 decay: 6030-6130 MHz

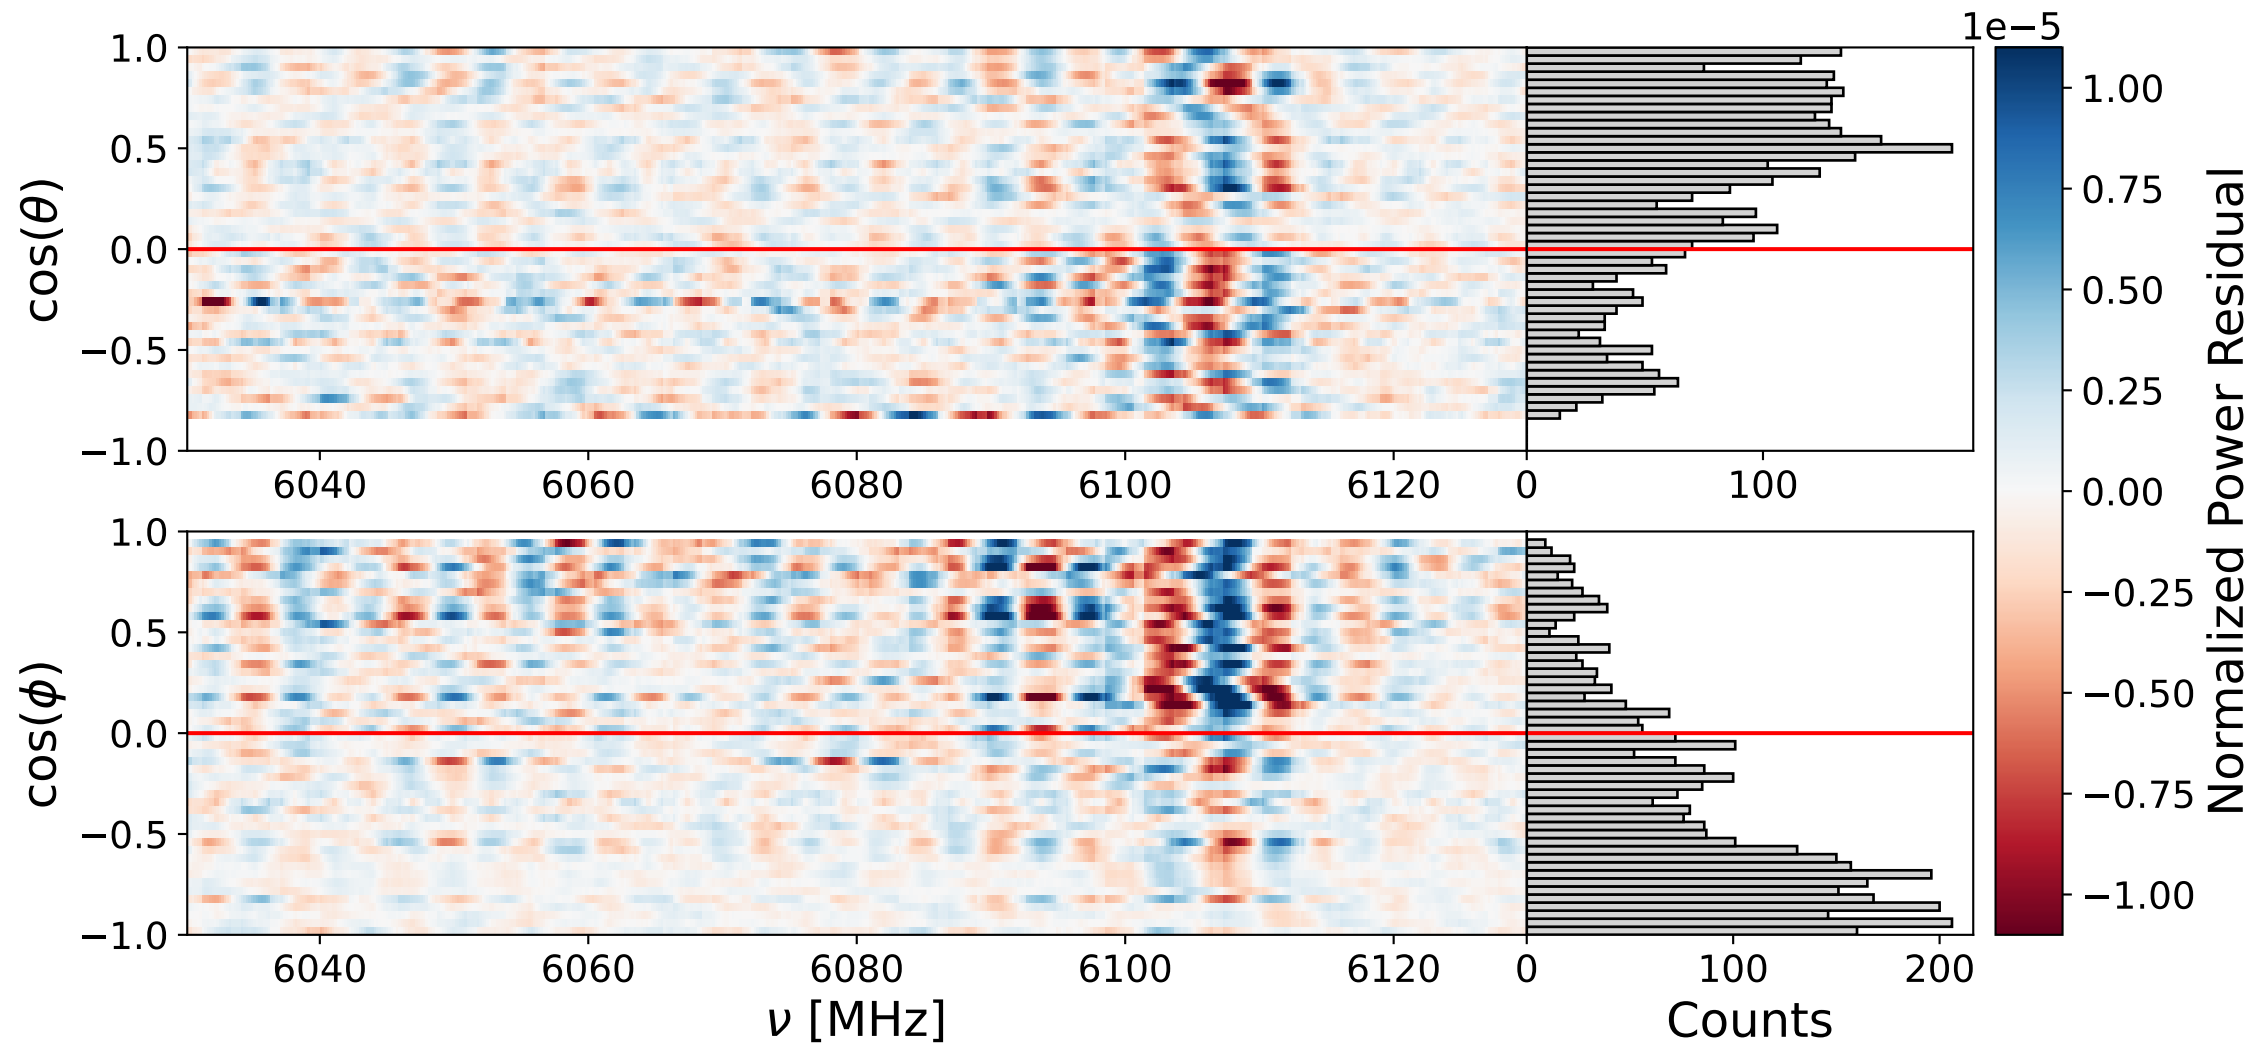


Bank 2 decay: 6130-6230 MHz

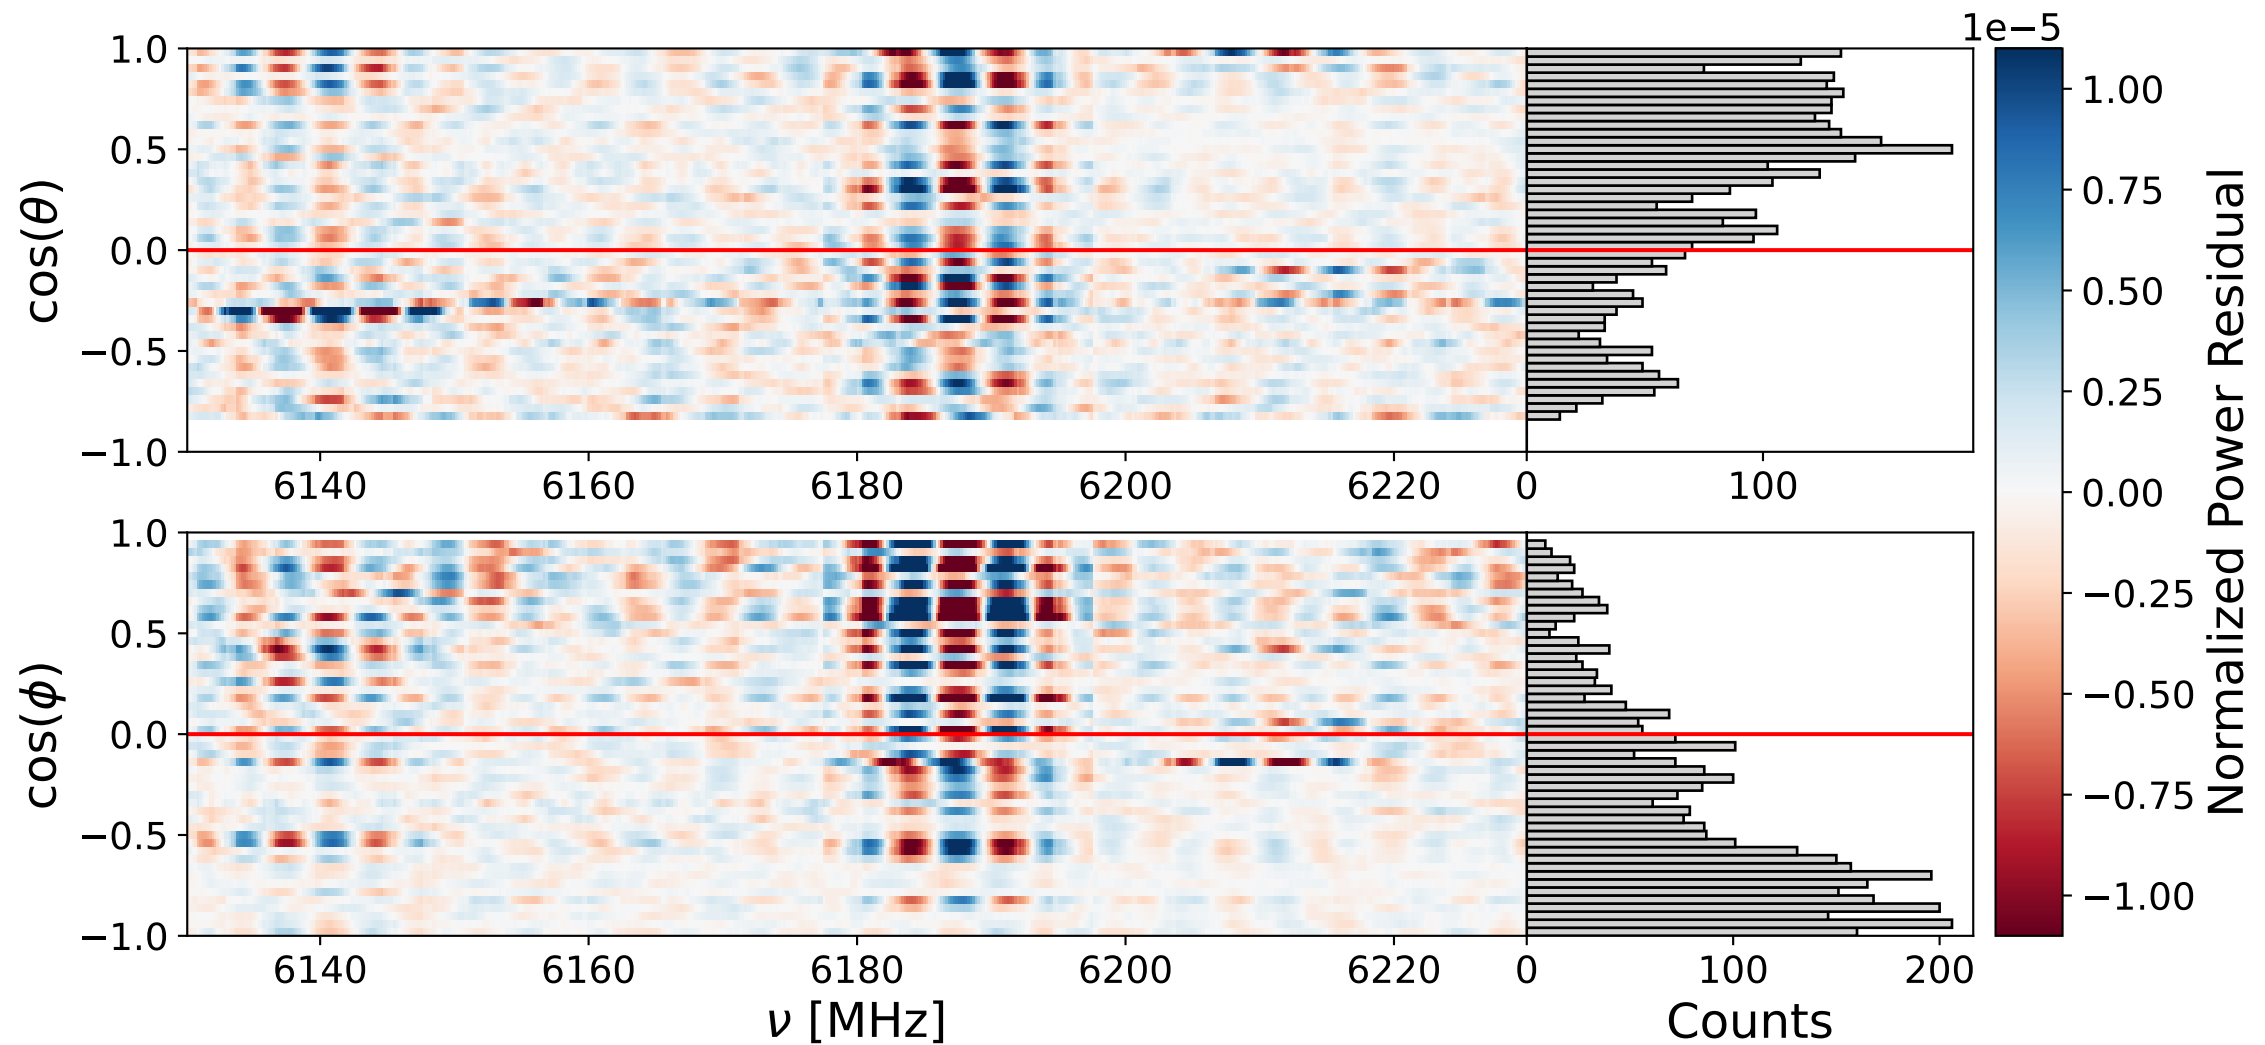


Bank 2 decay: 6230-6330 MHz

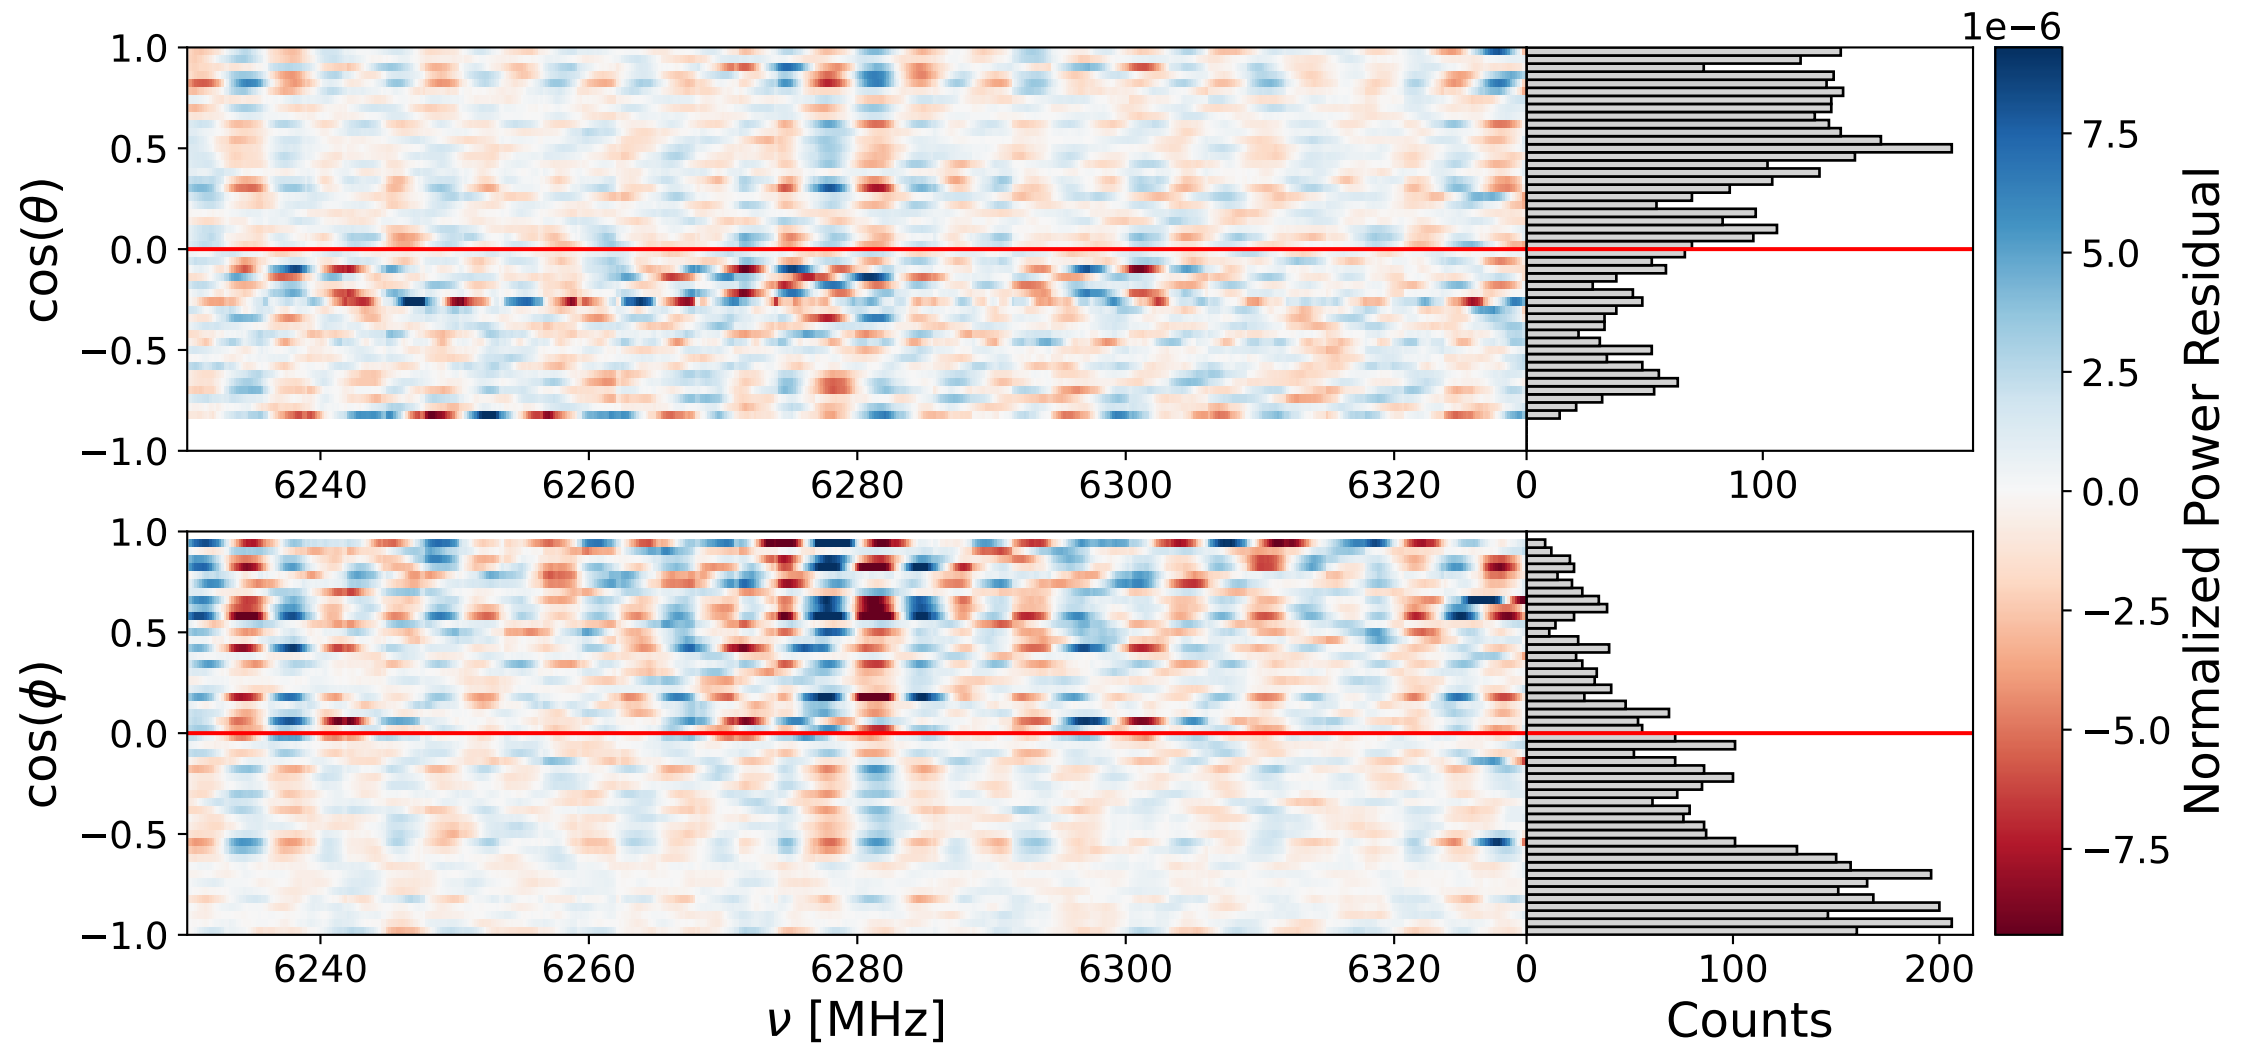


Bank 2 decay: 6330-6430 MHz

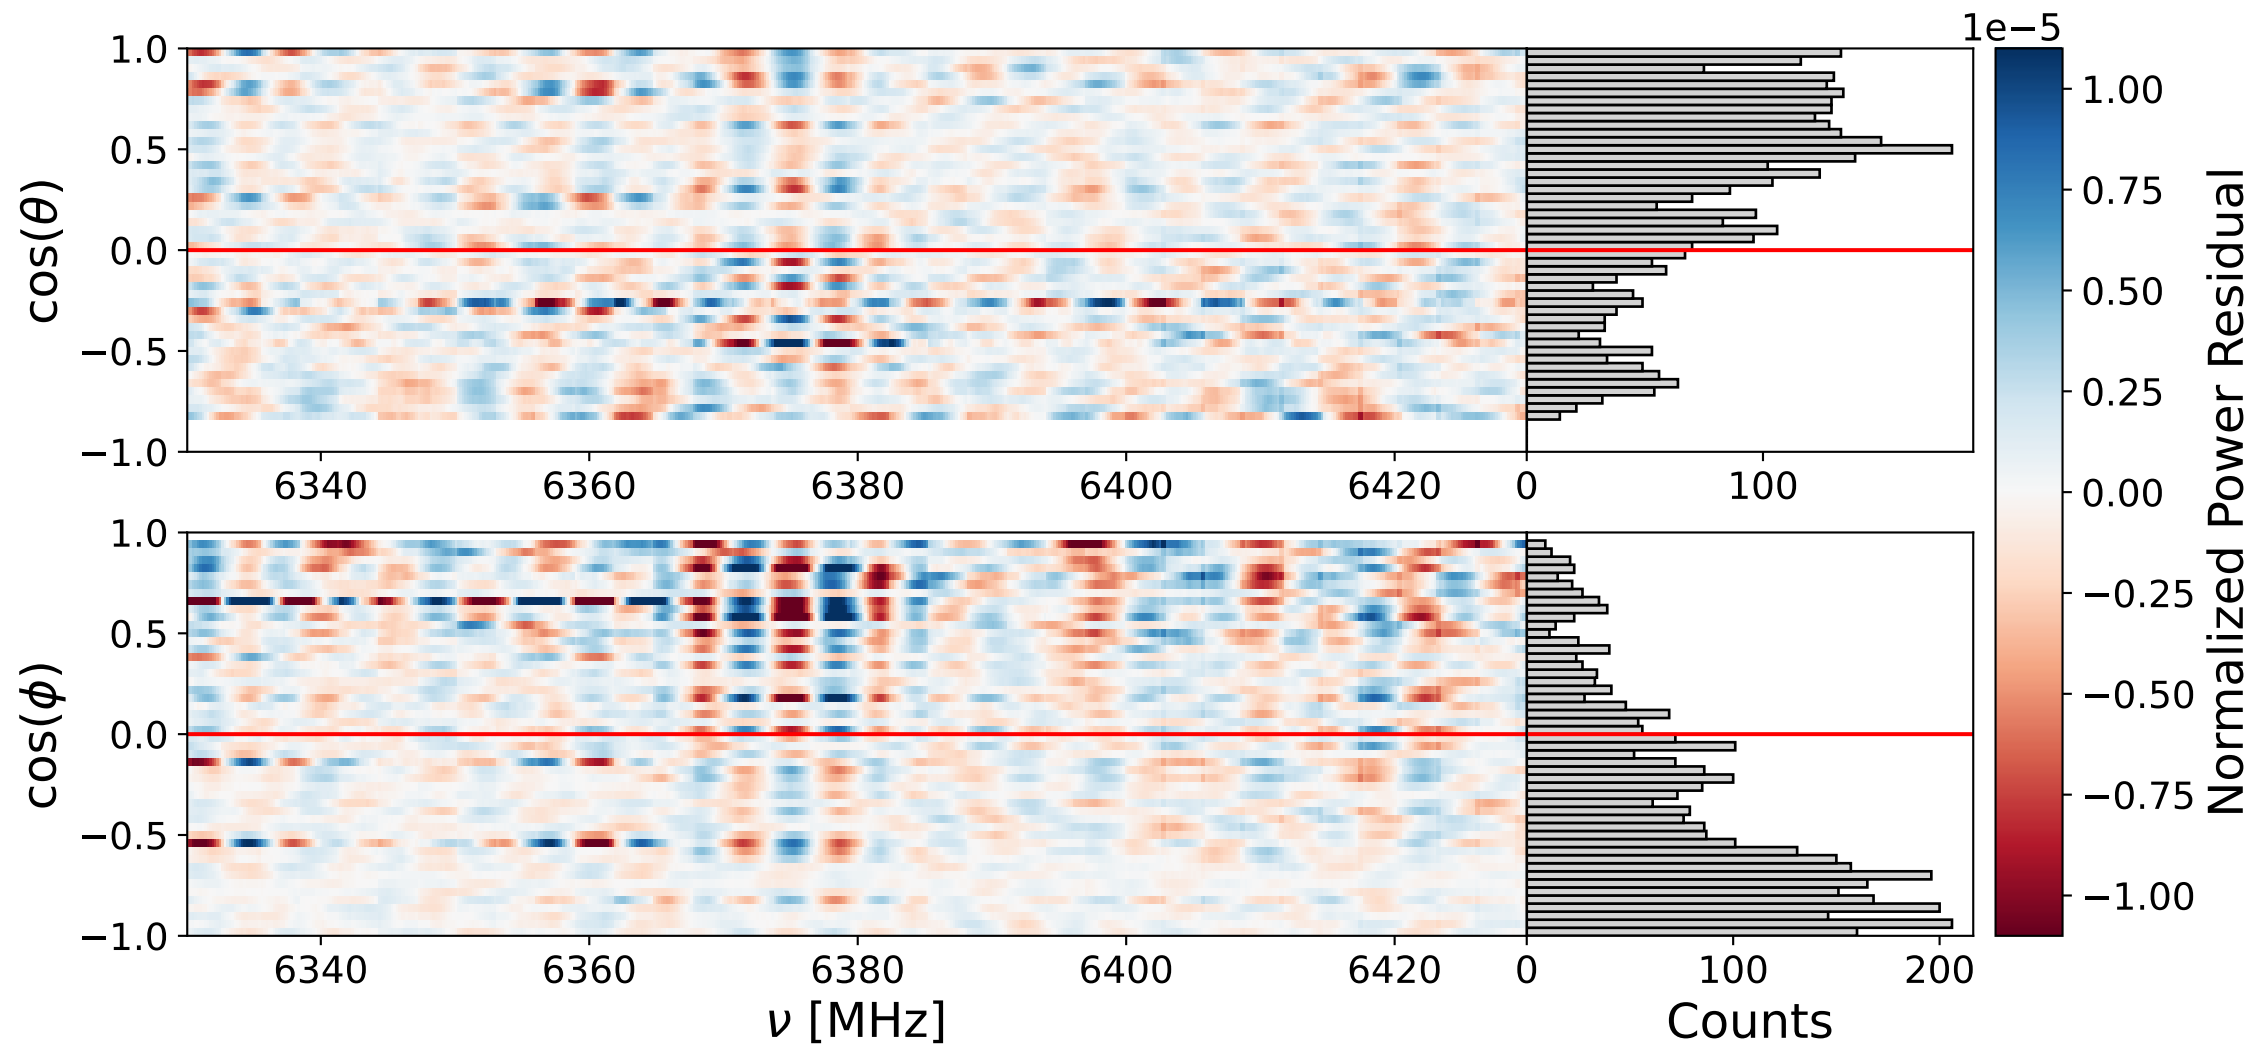


Bank 2 decay: 6430-6530 MHz

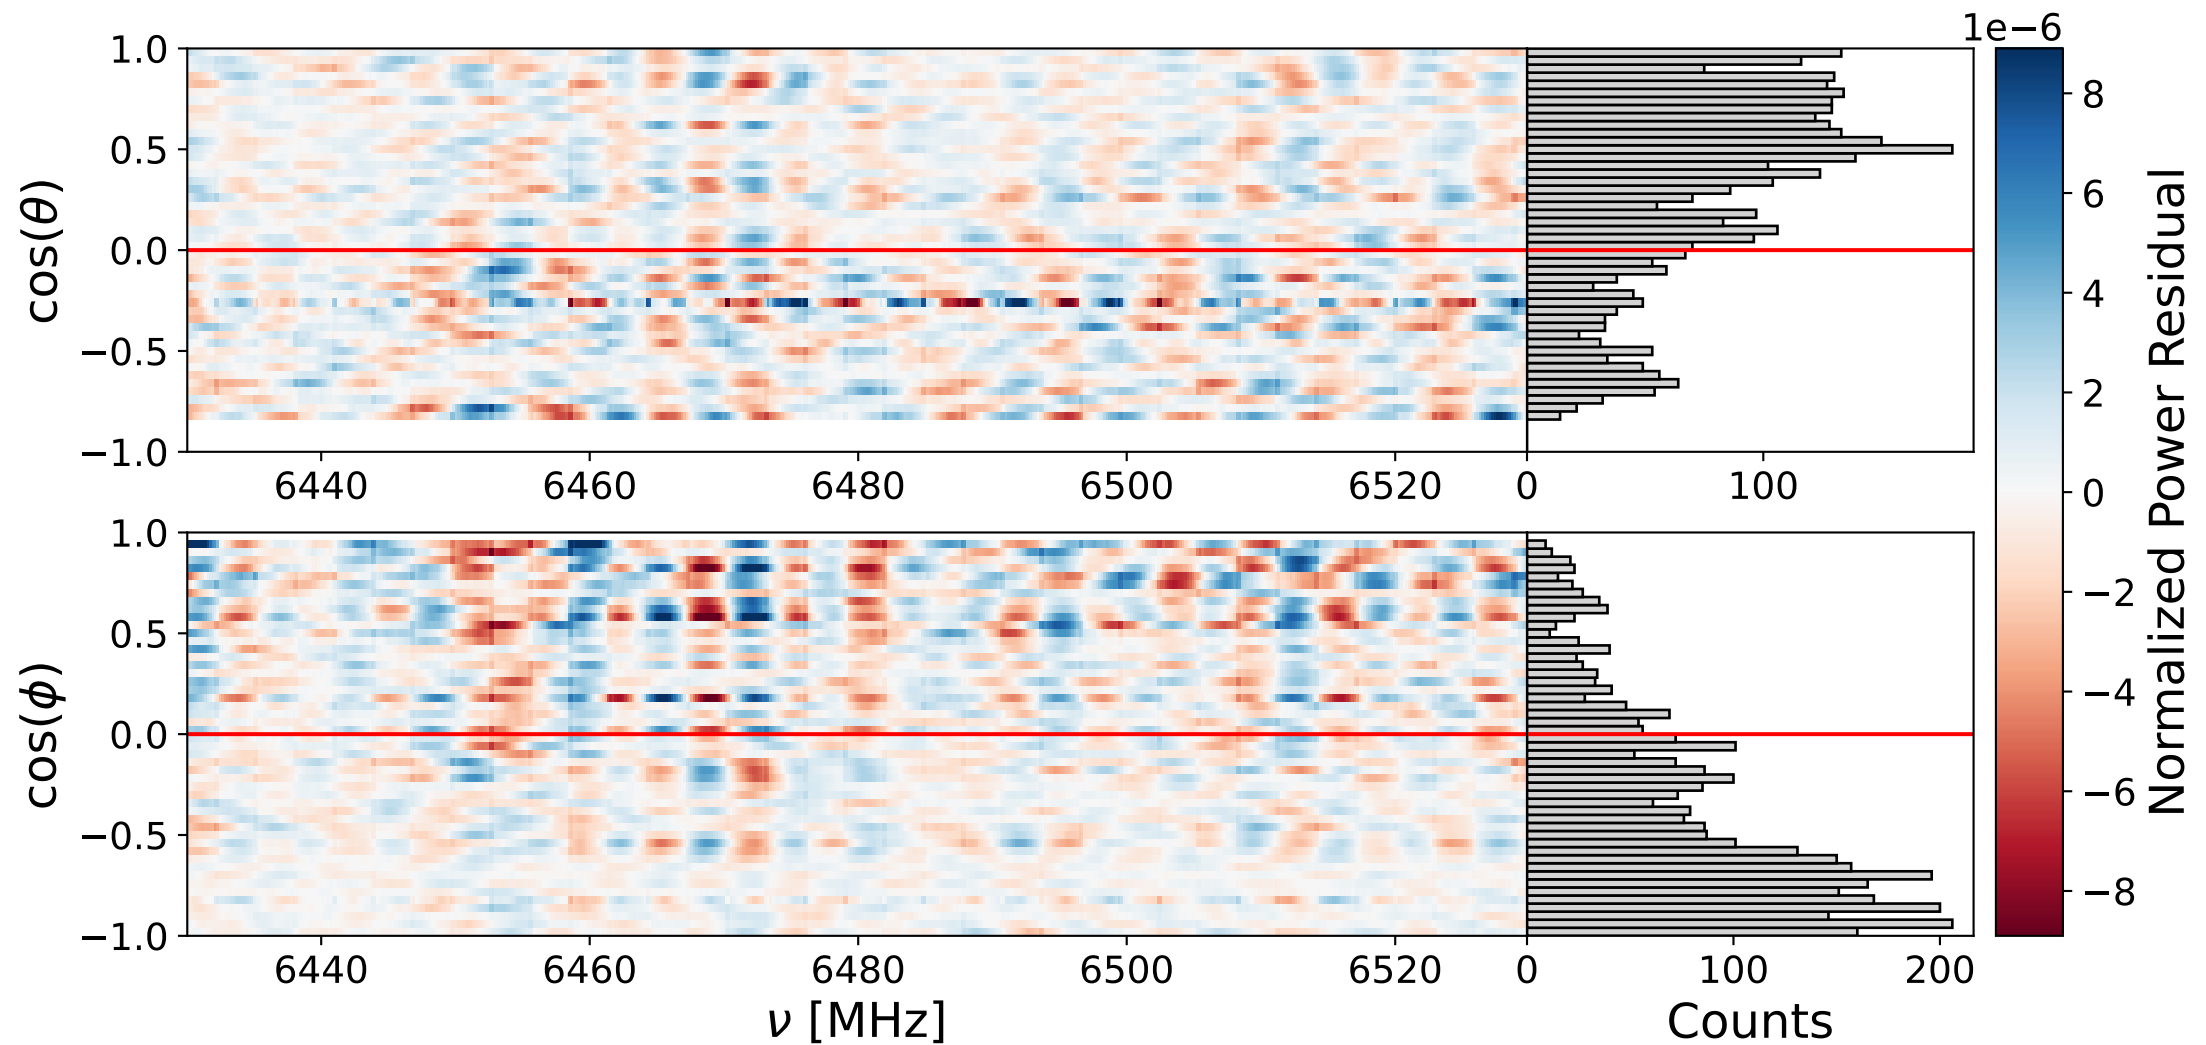


Bank 2 decay: 6530-6630 MHz

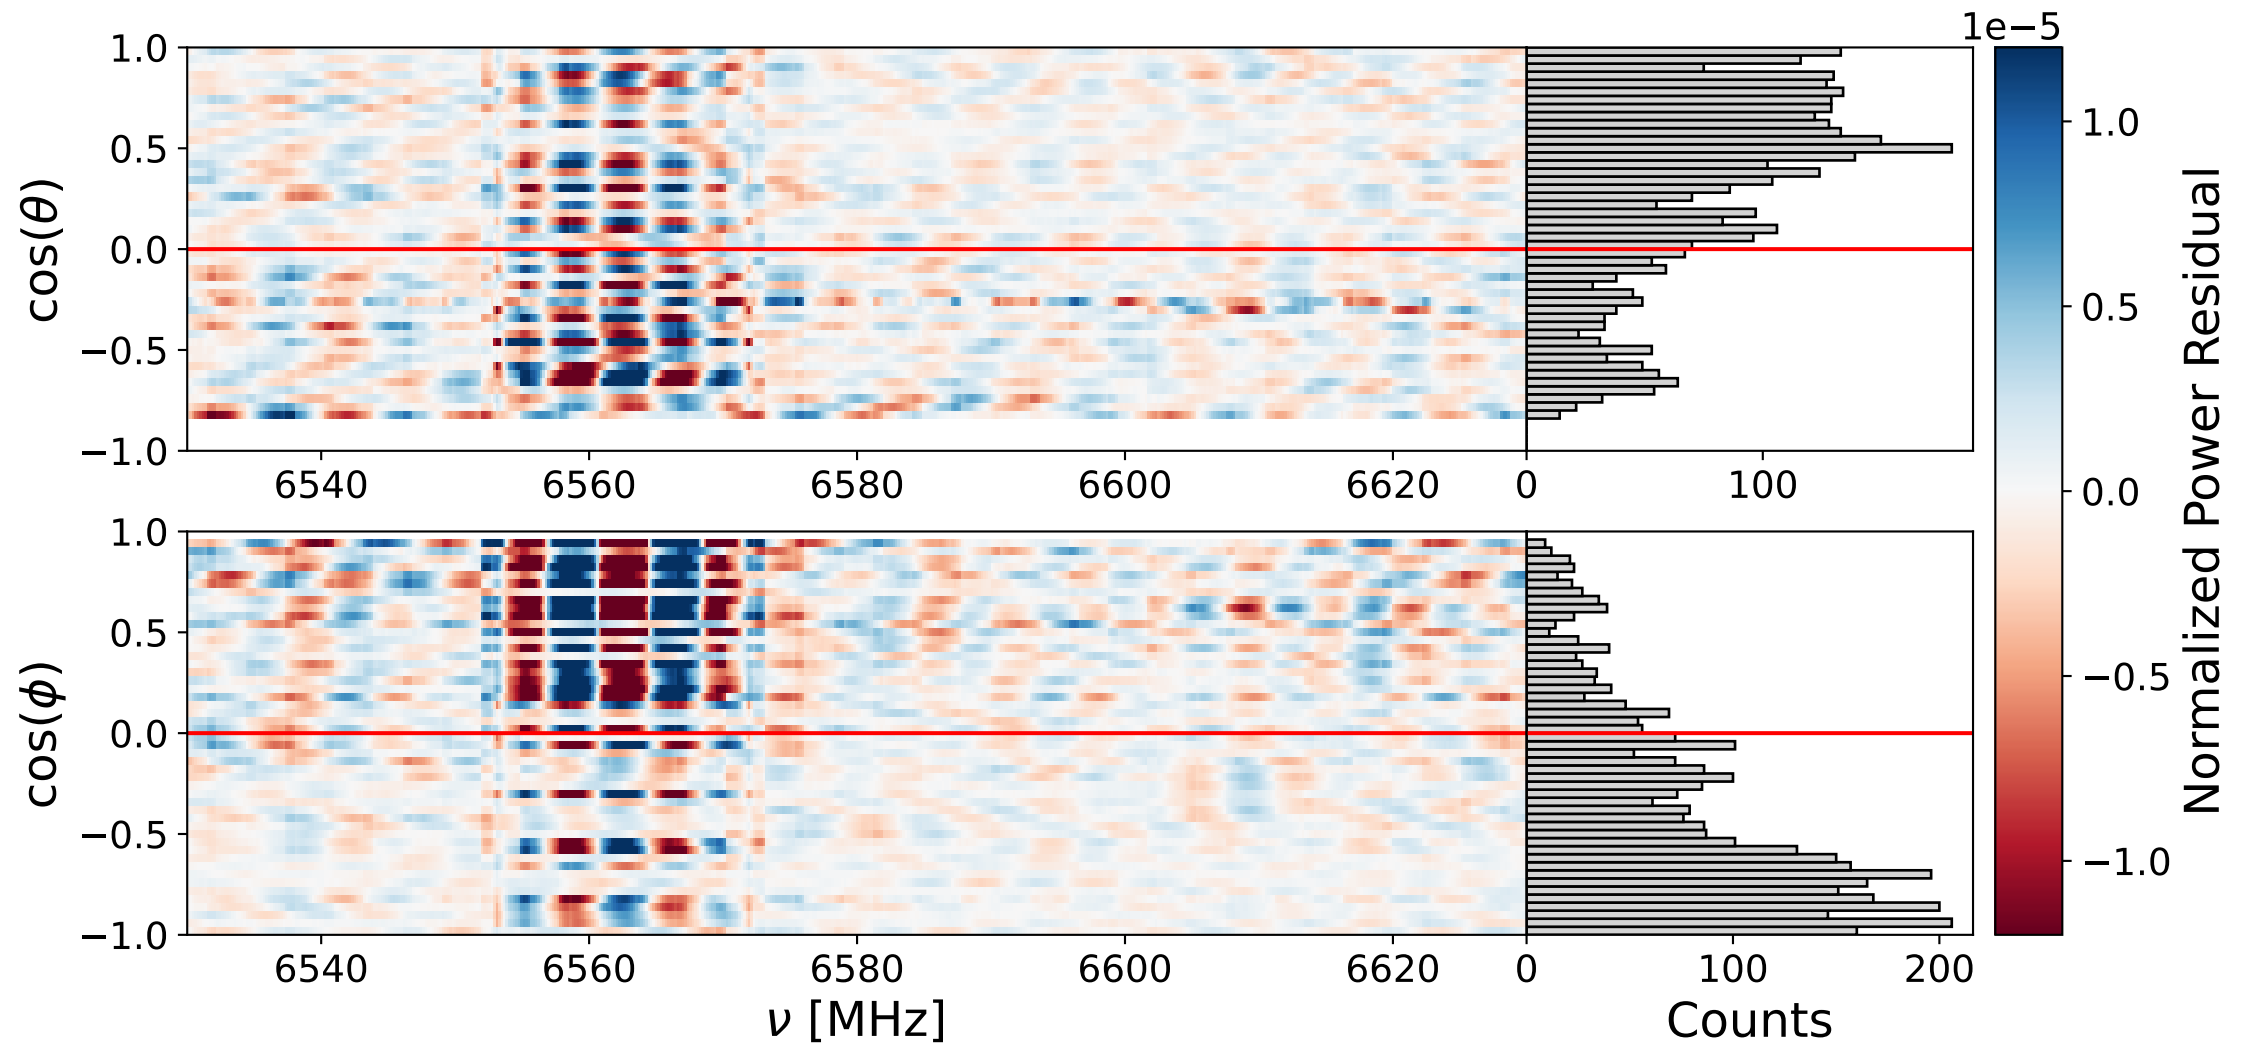


Bank 2 decay: 6630-6730 MHz

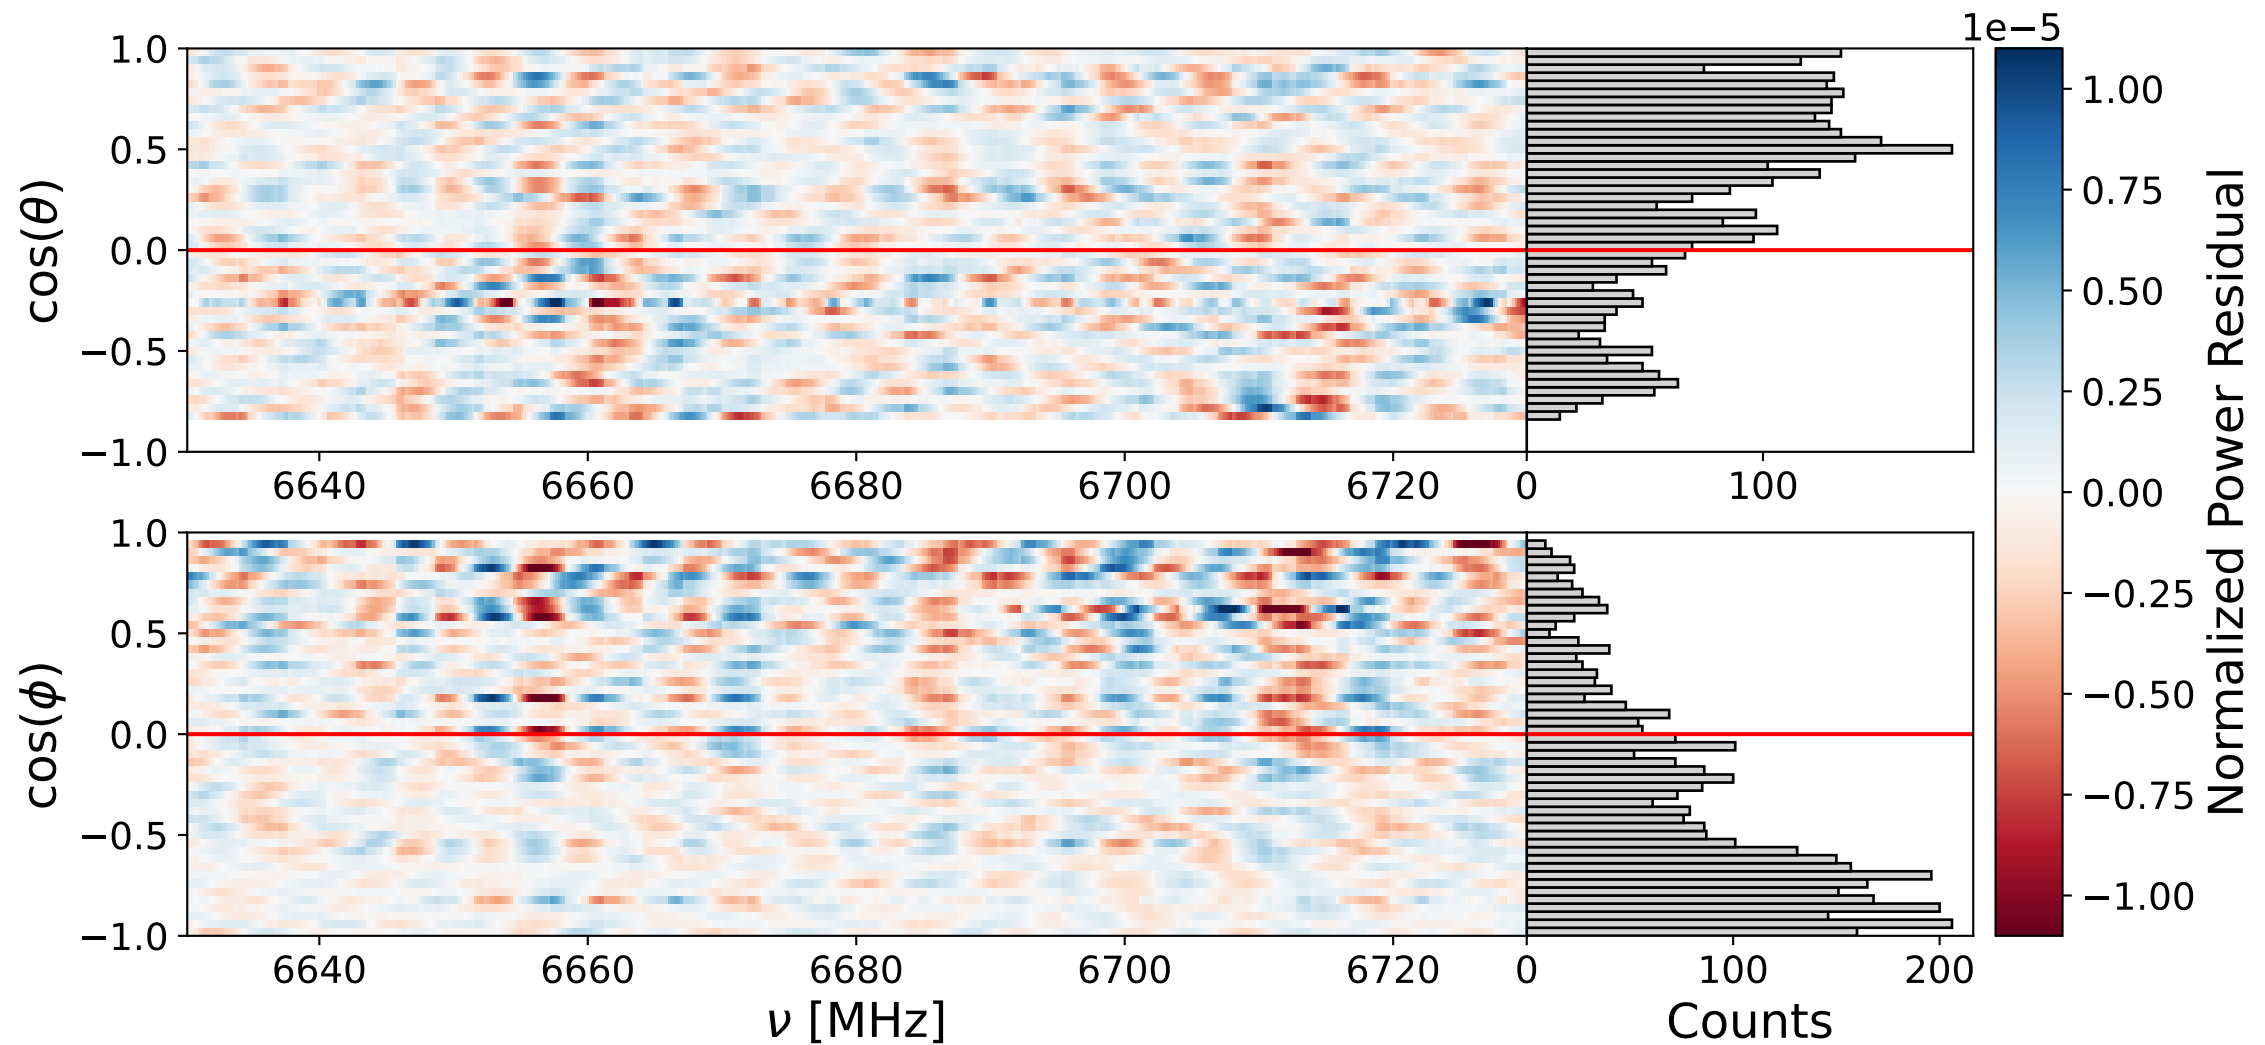


Bank 2 decay: 6730-6830 MHz

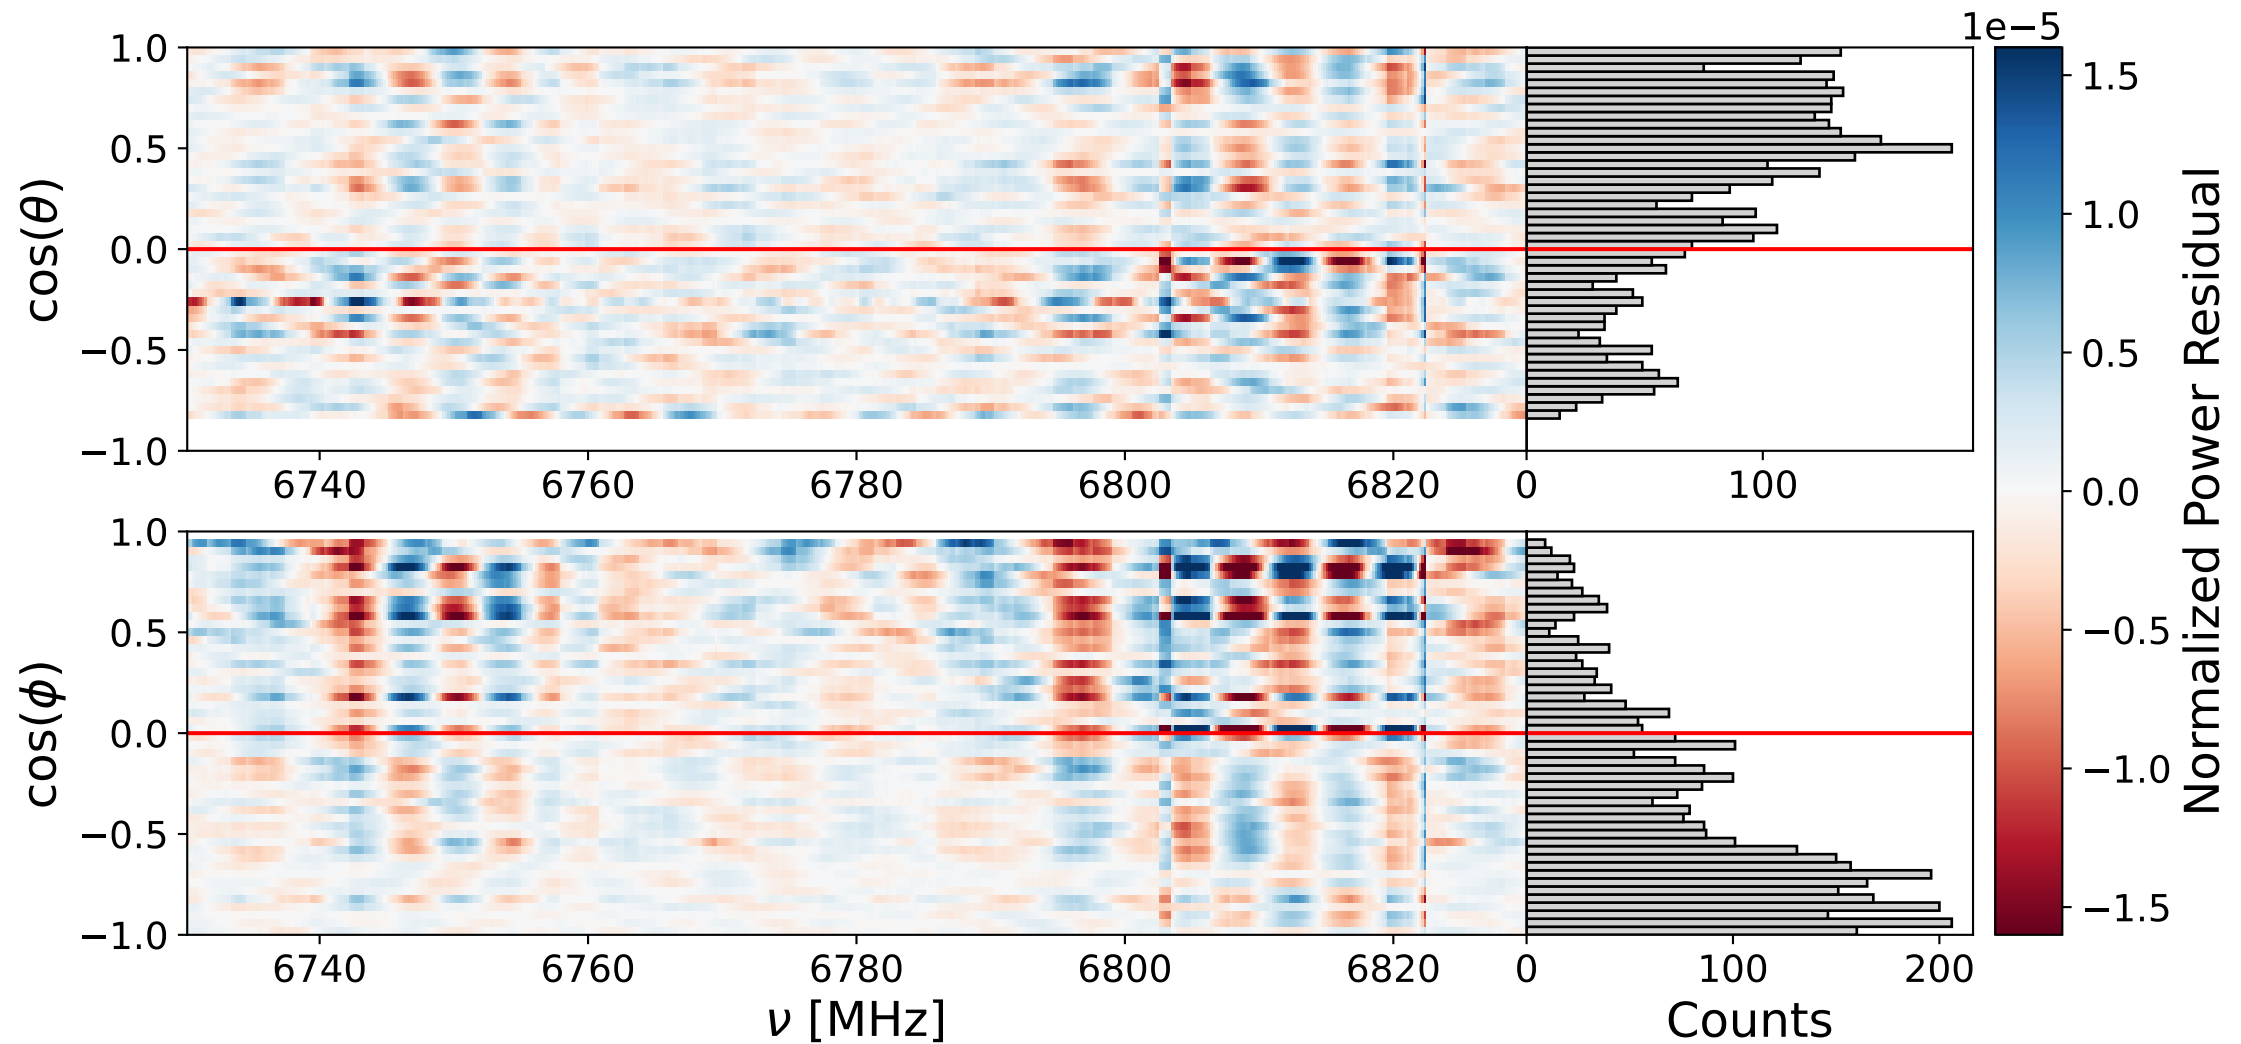


Bank 2 decay: 6830-6930 MHz

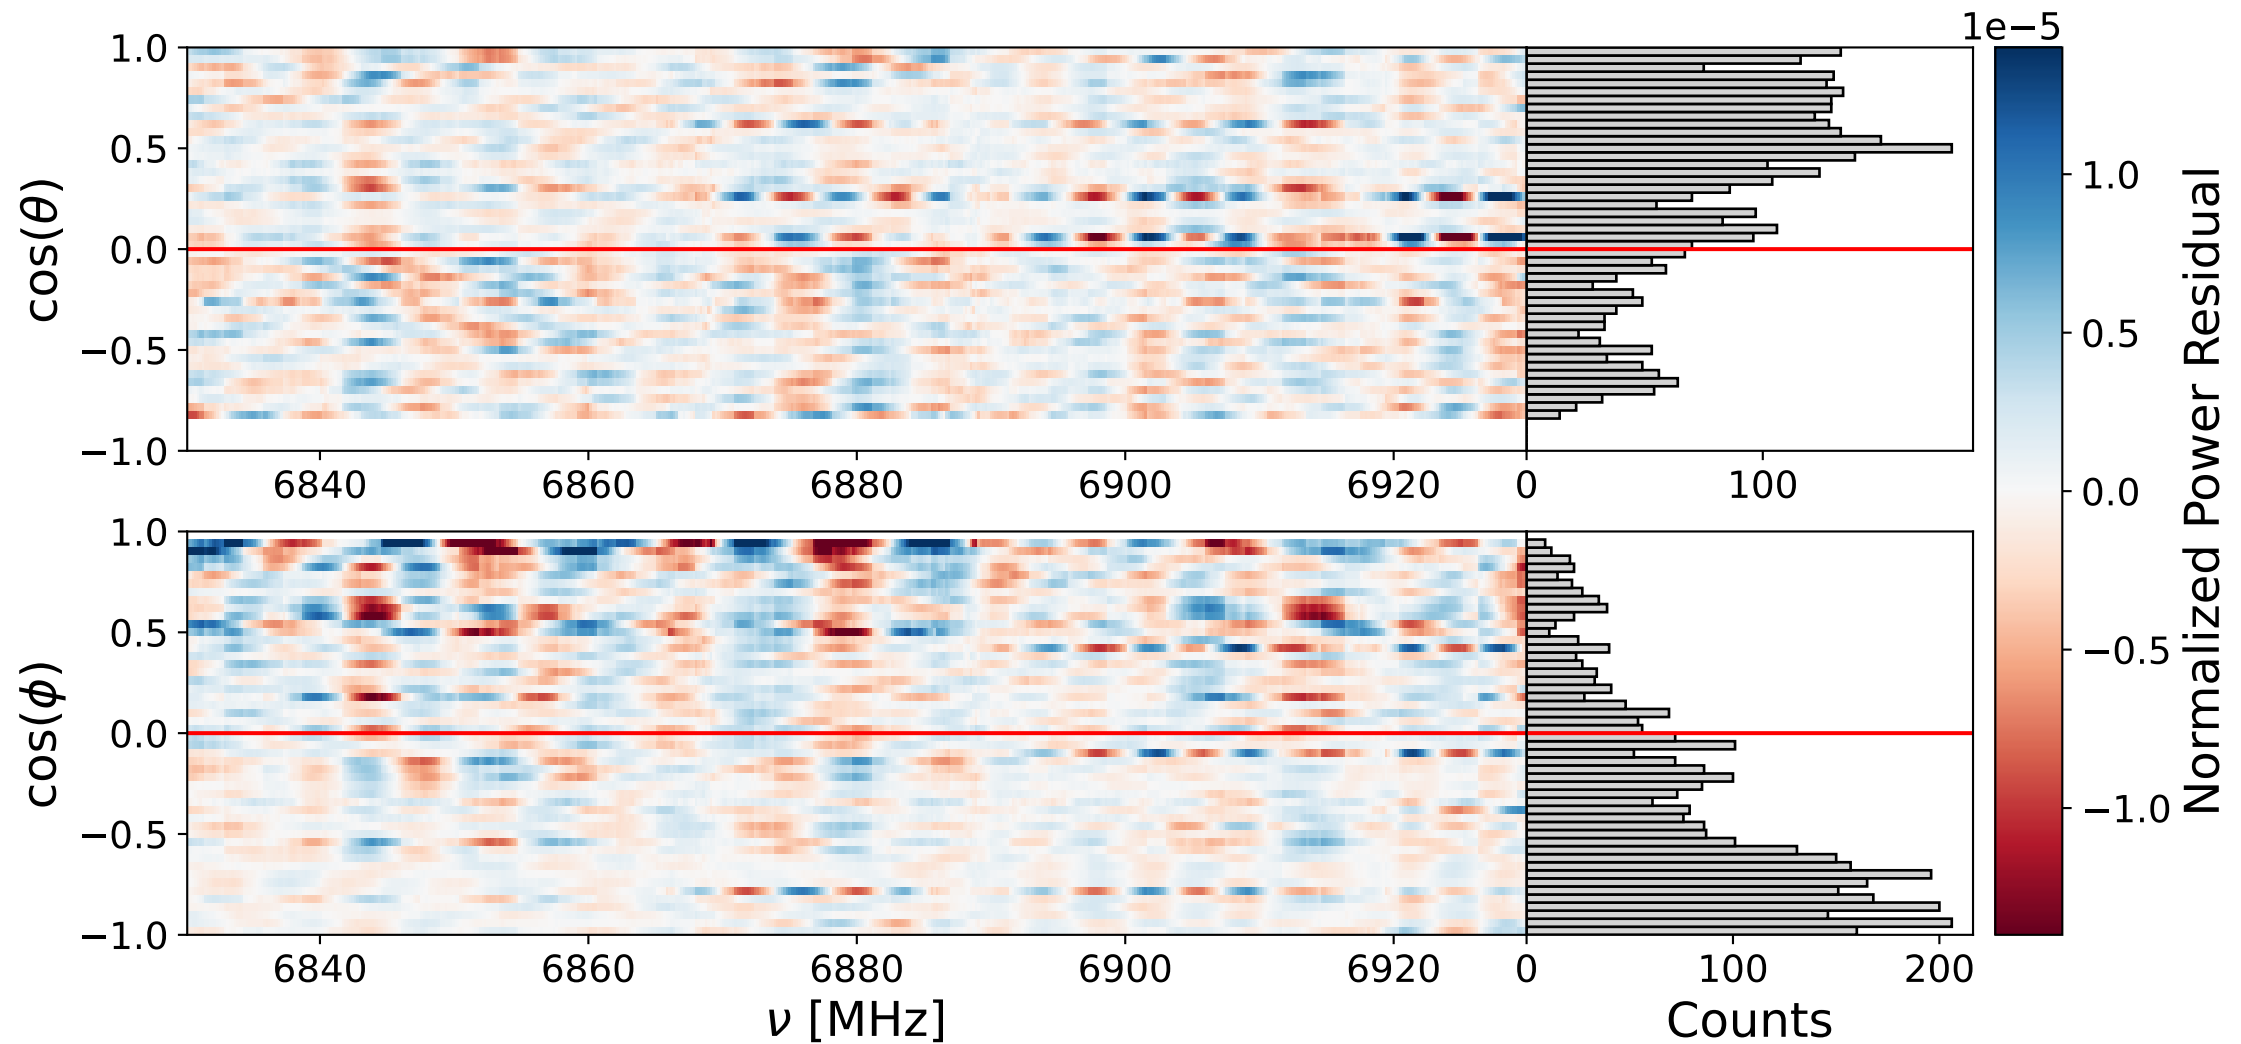


Bank 2 decay: 6930-7030 MHz

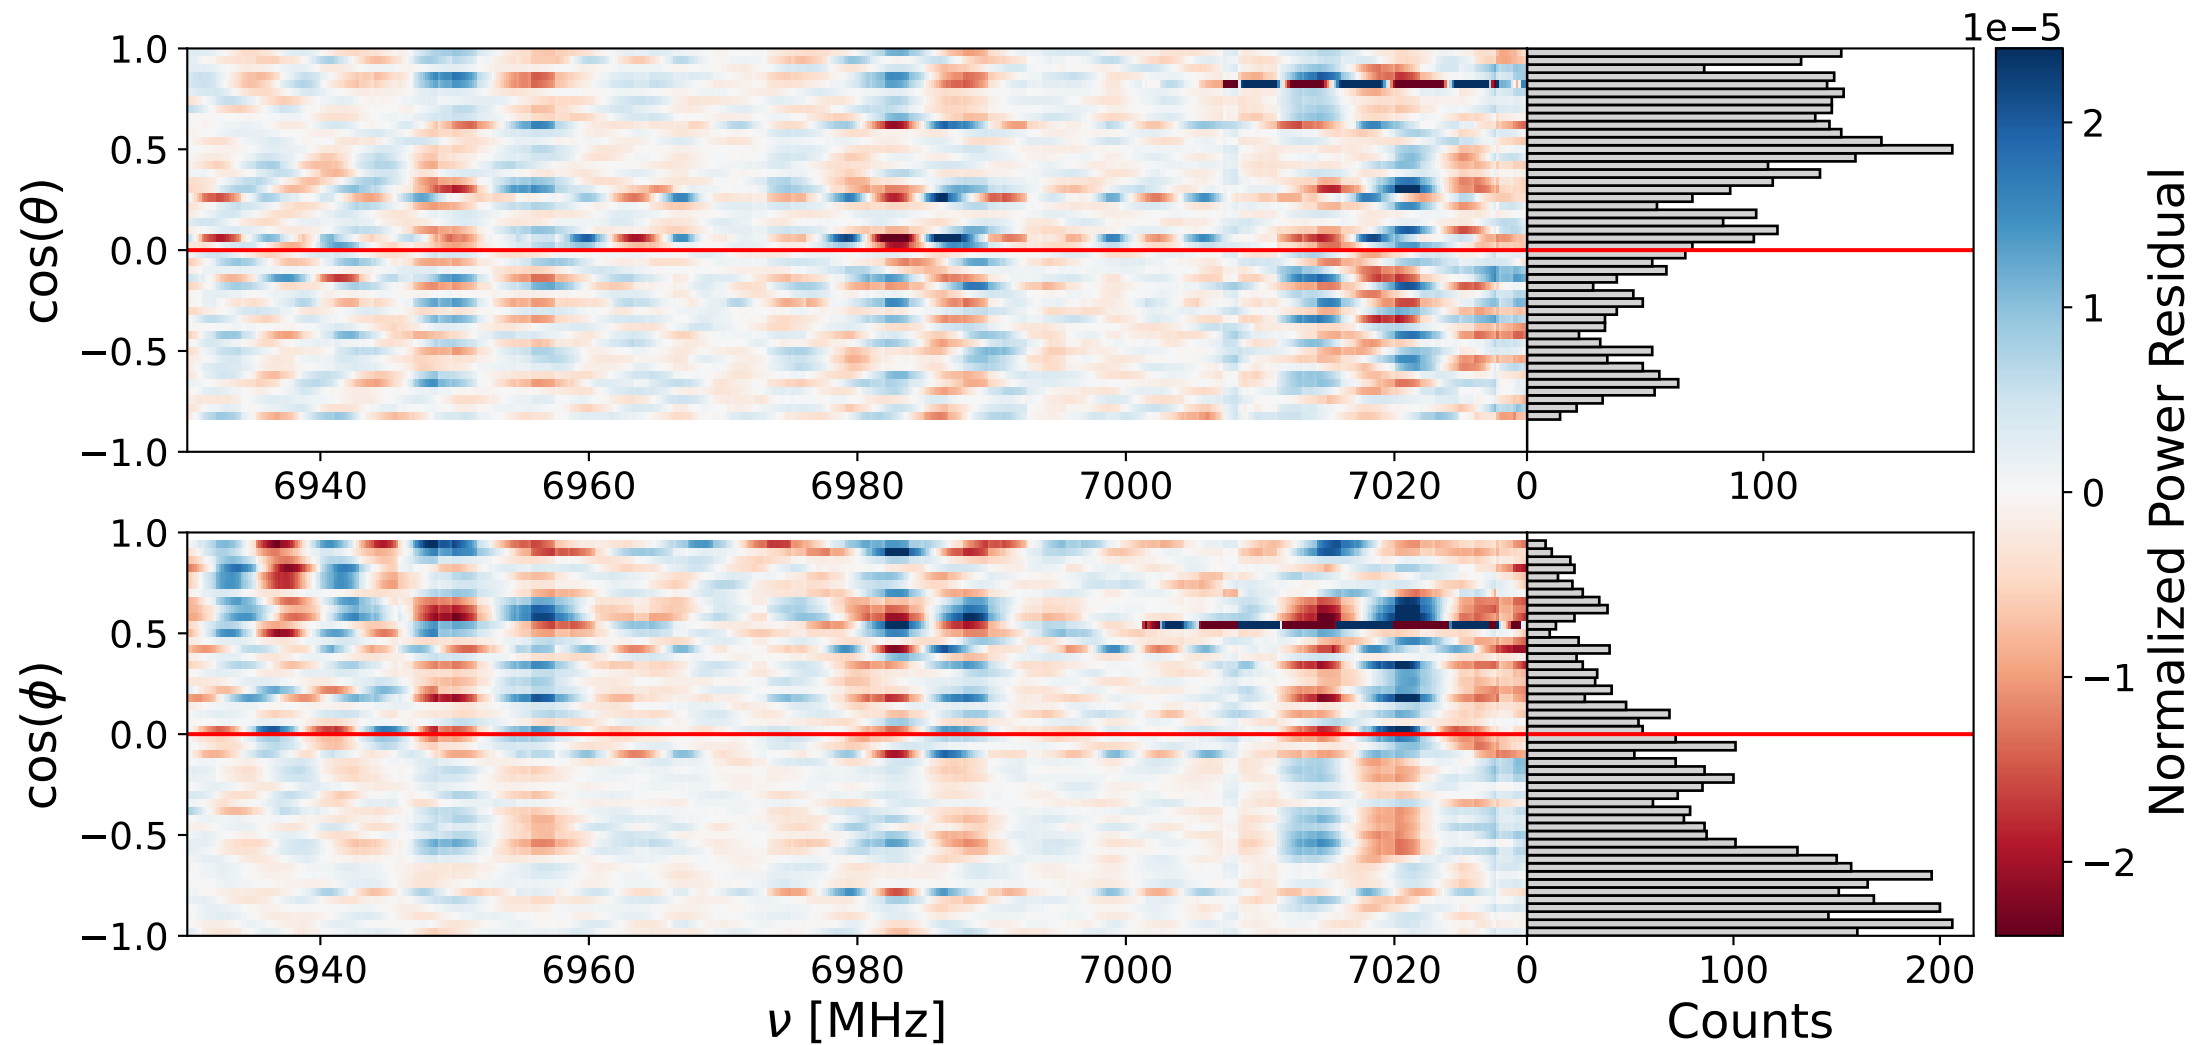


Bank 2 decay: 7030-7130 MHz

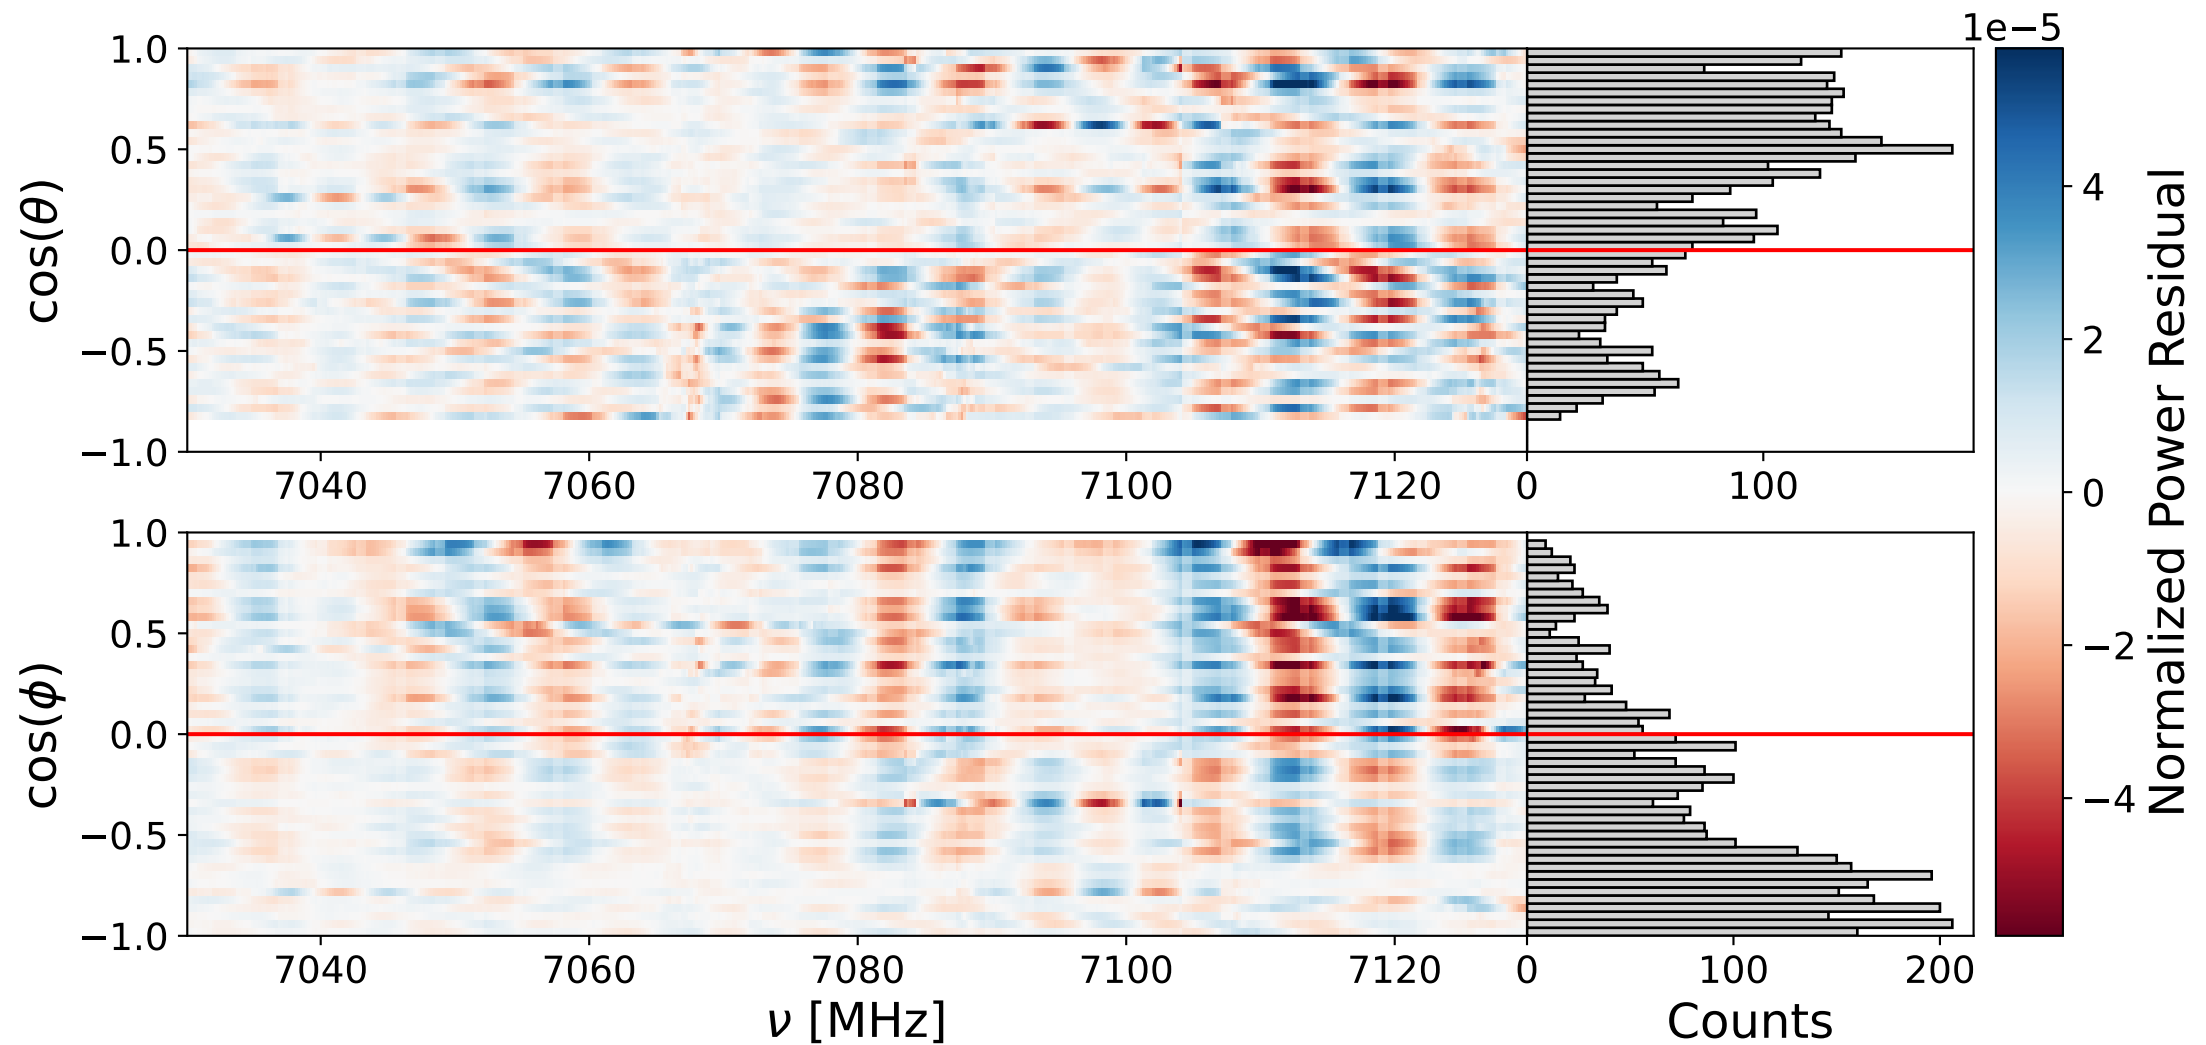


Bank 2 decay: 7130-7230 MHz

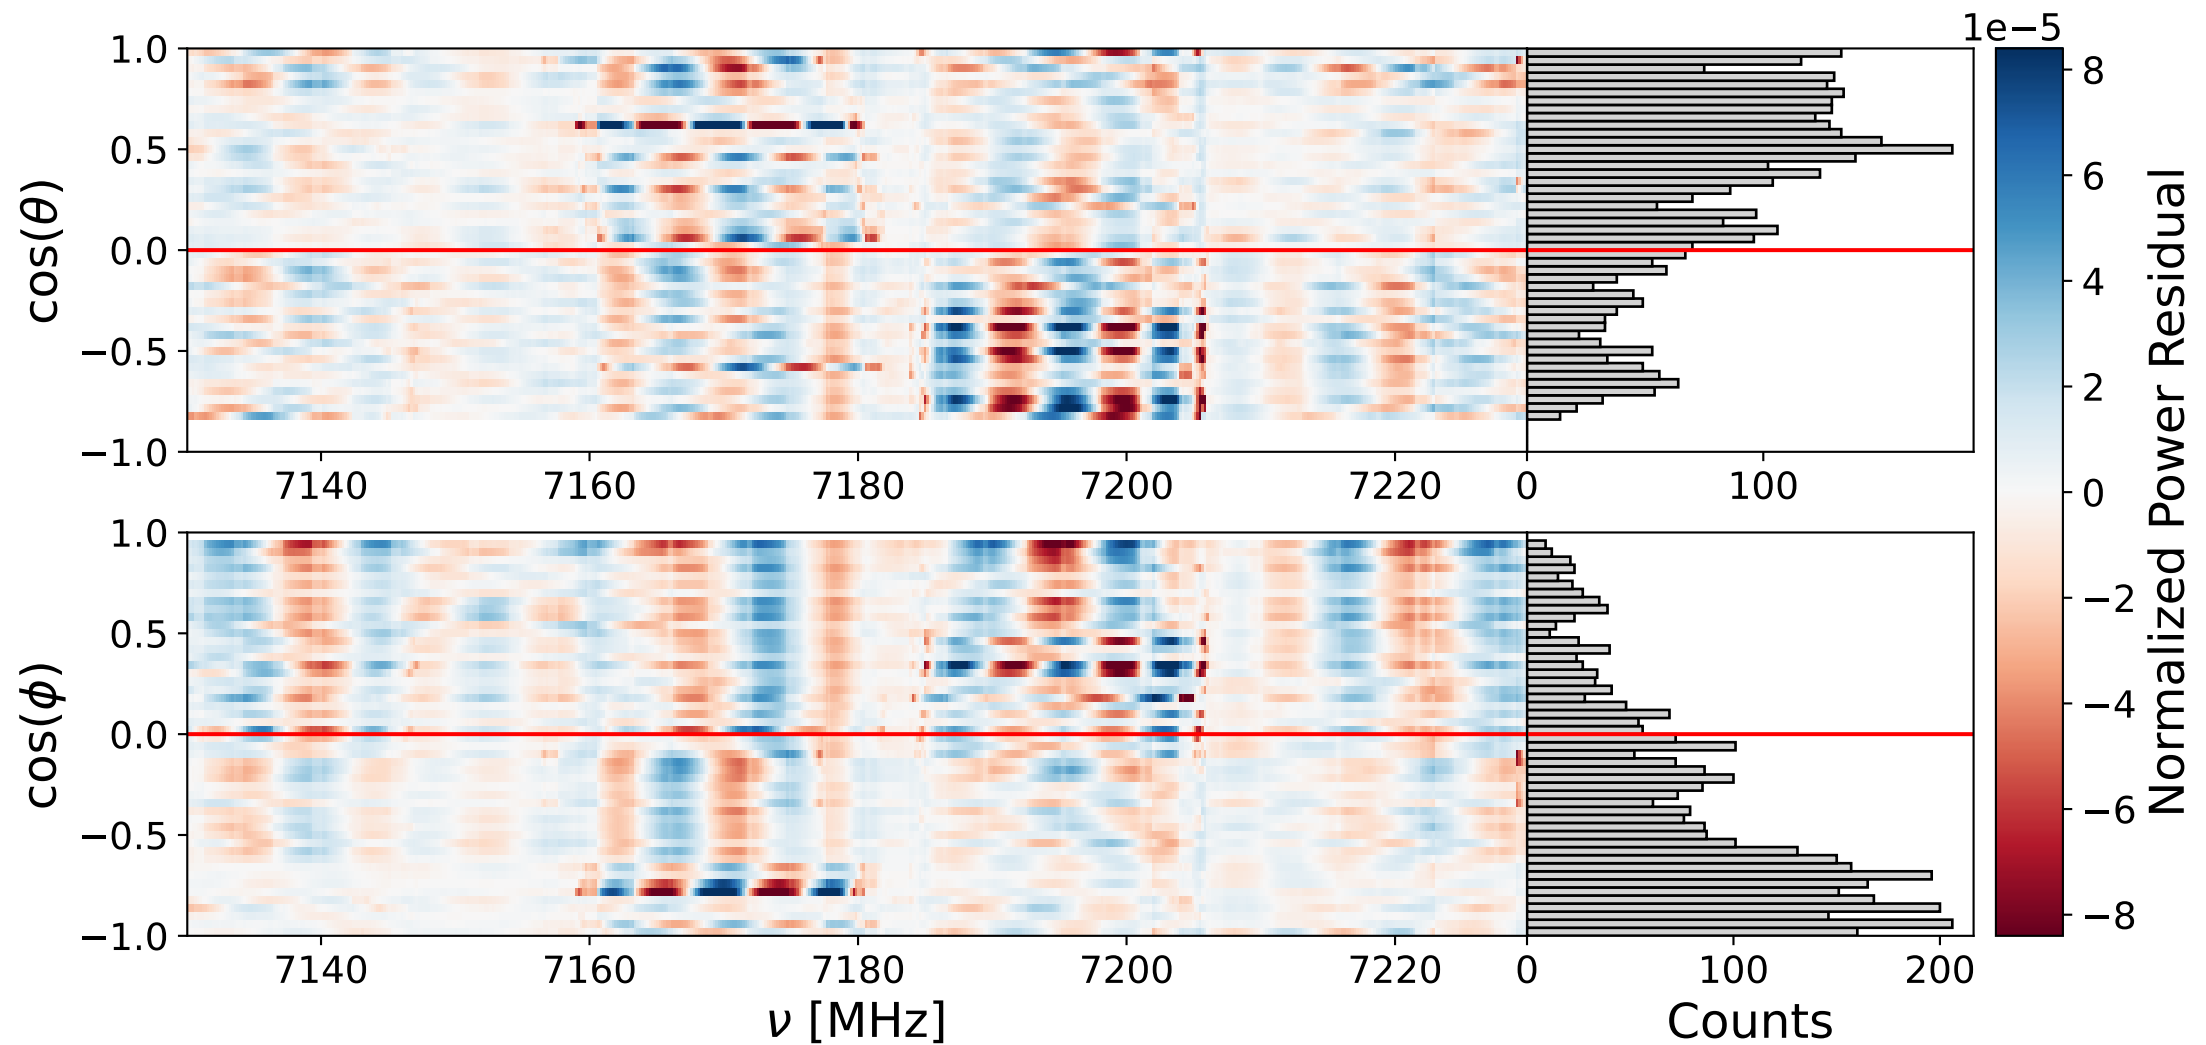


Bank 2 decay: 7230-7303 MHz

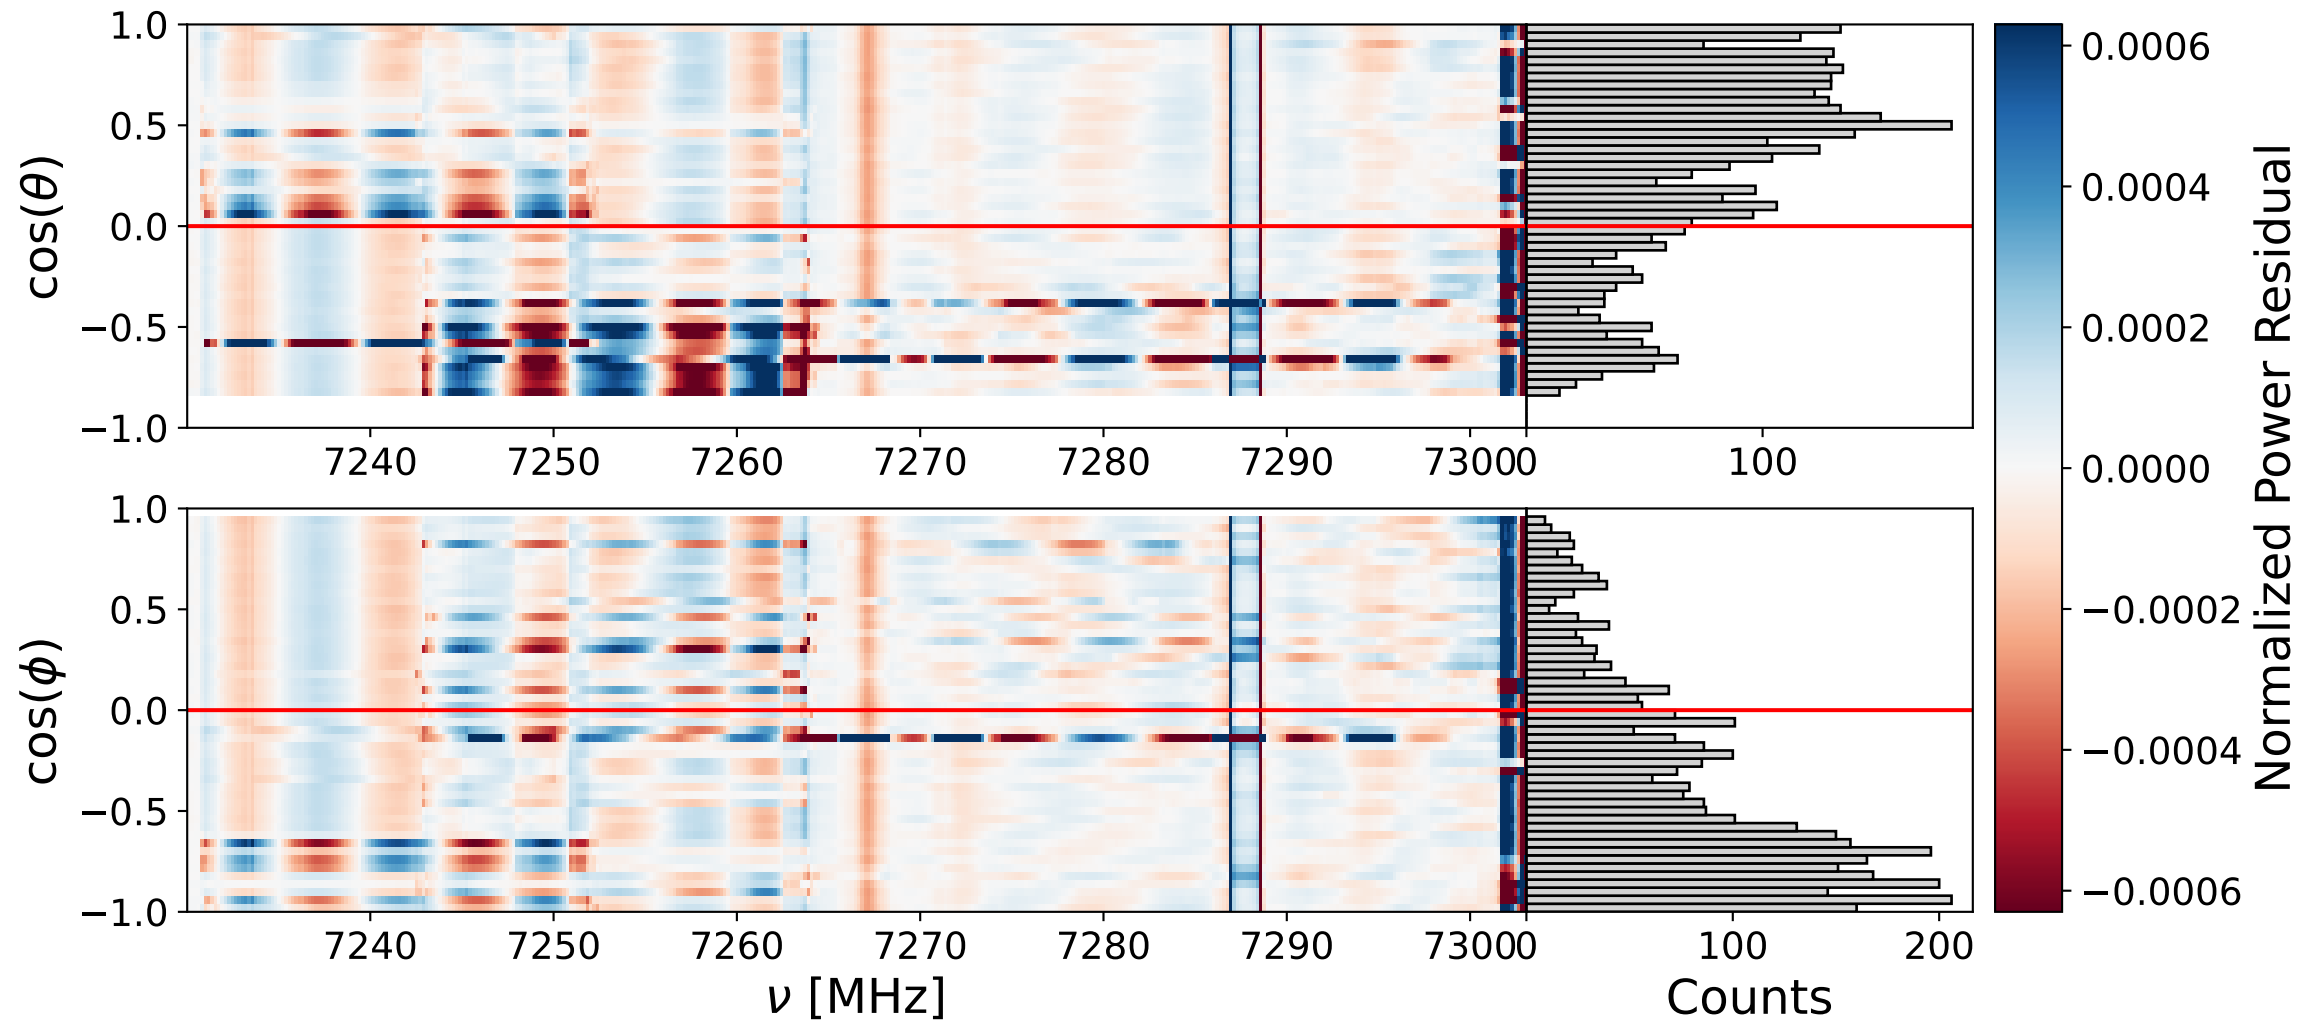


Bank 3 decay: 6950-7050 MHz

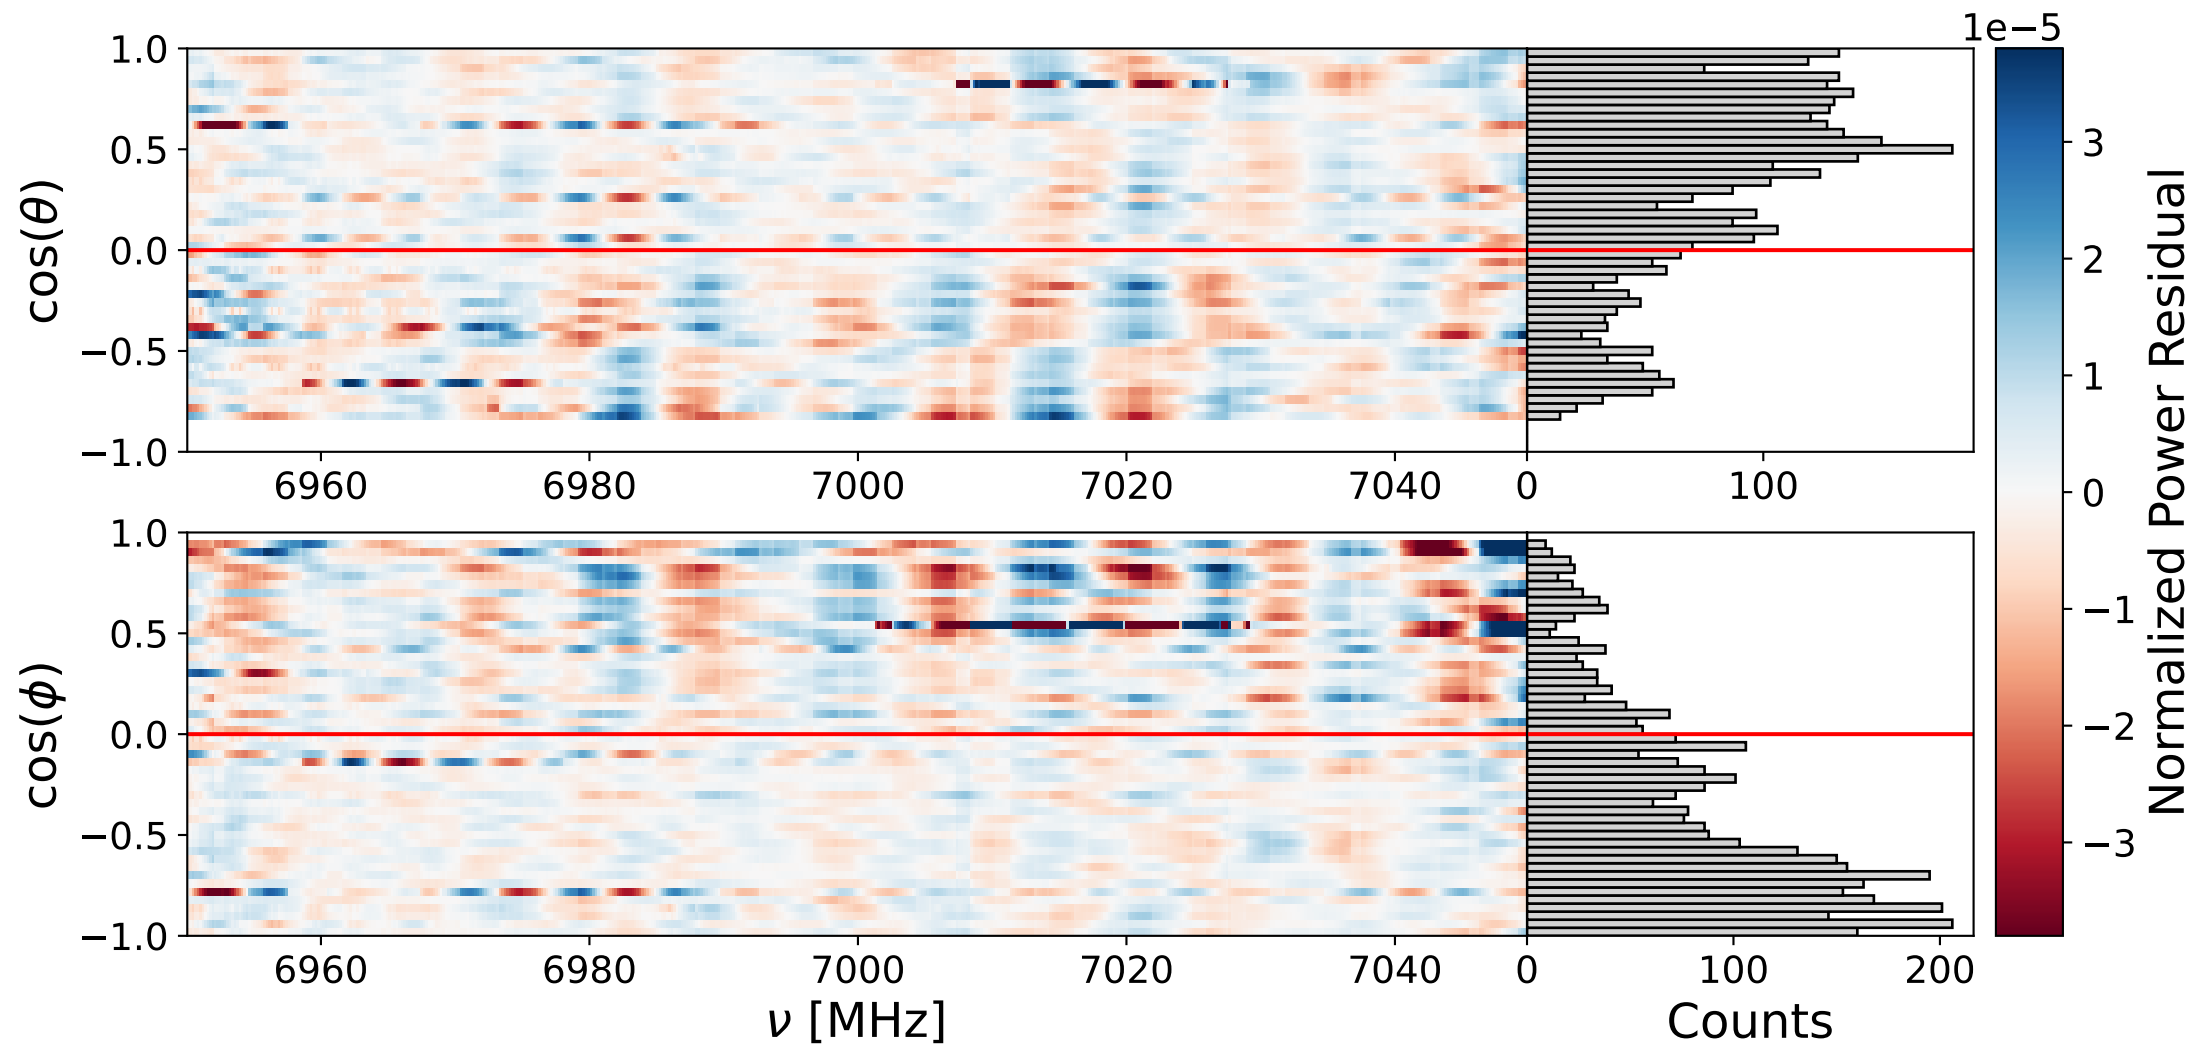


Bank 3 decay: 7050-7150 MHz

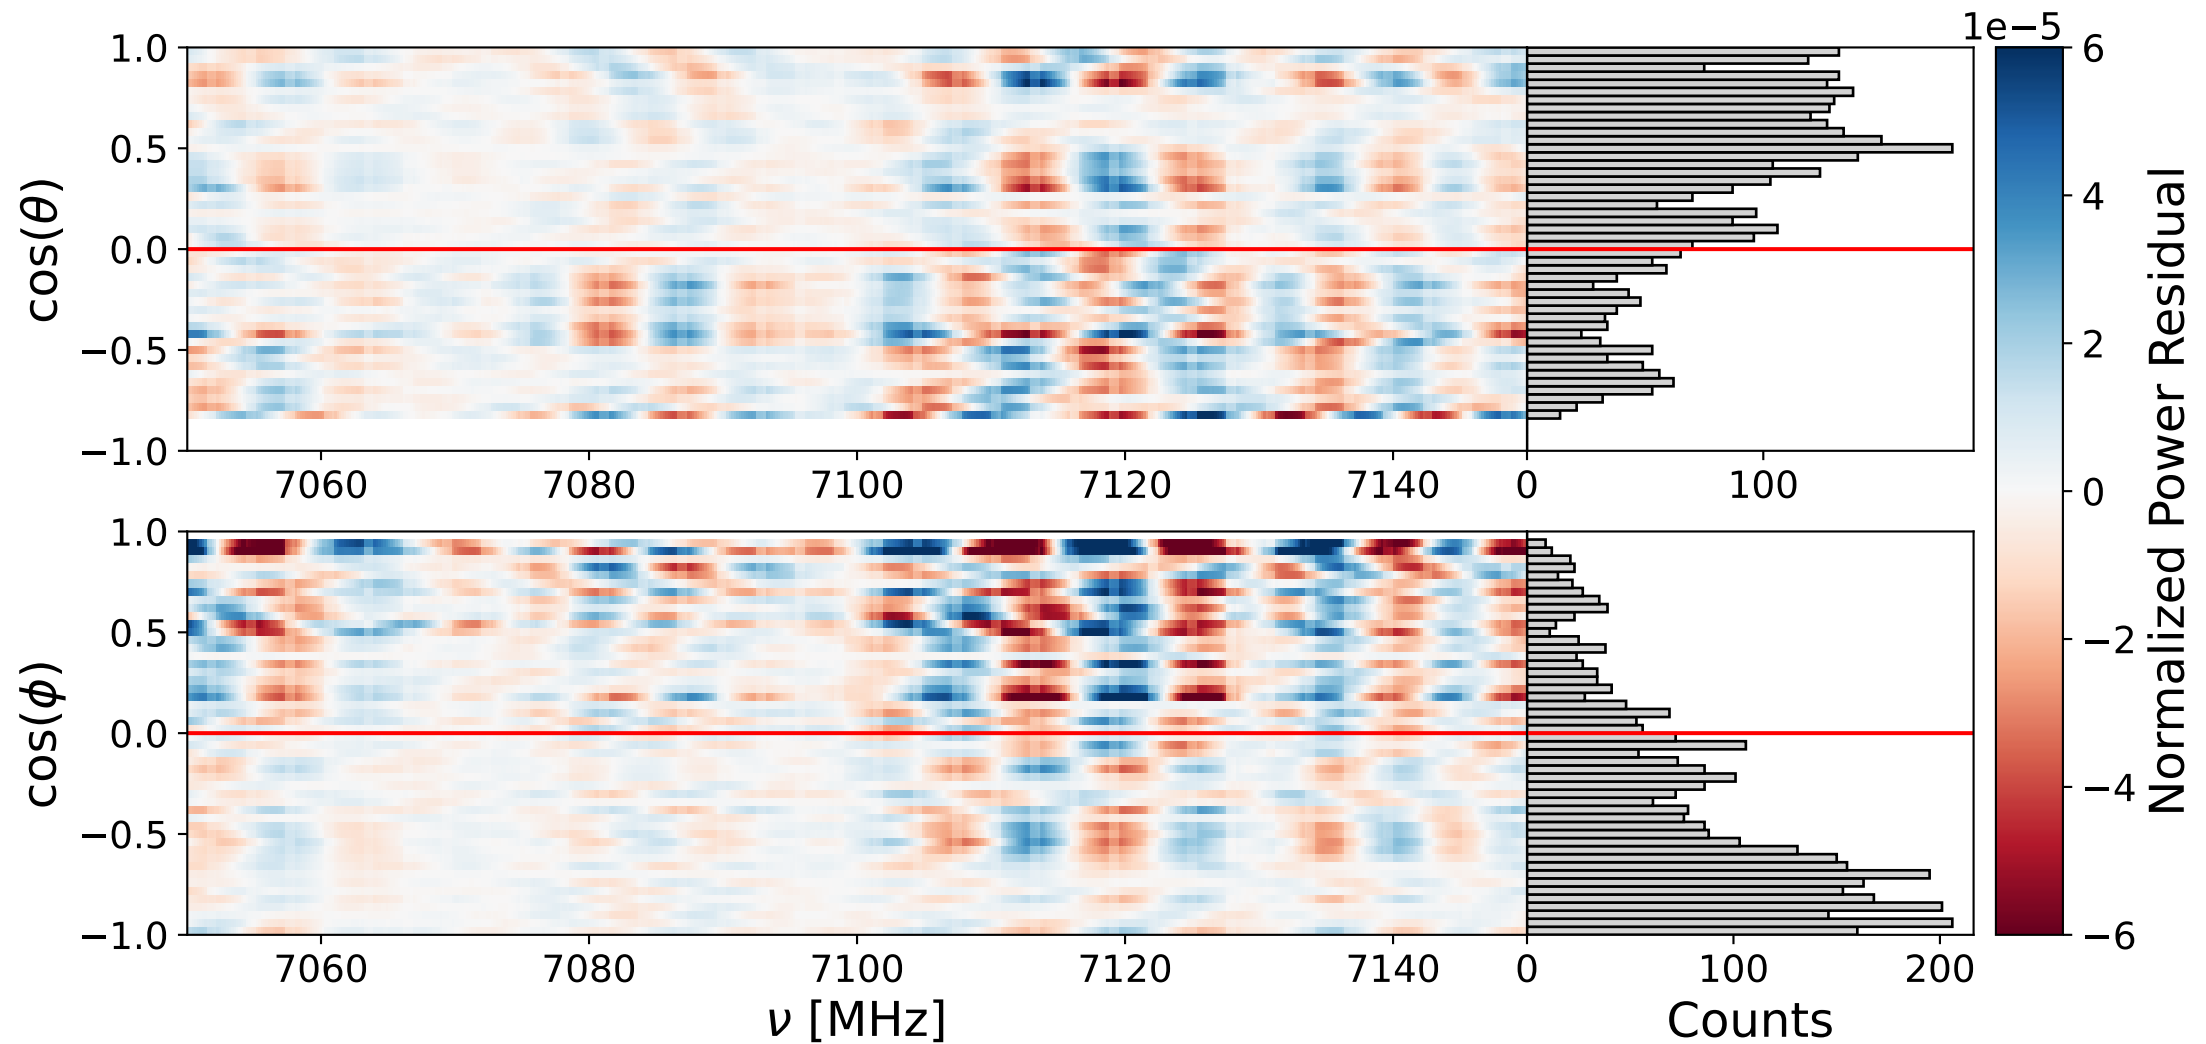


Bank 3 decay: 7150-7250 MHz

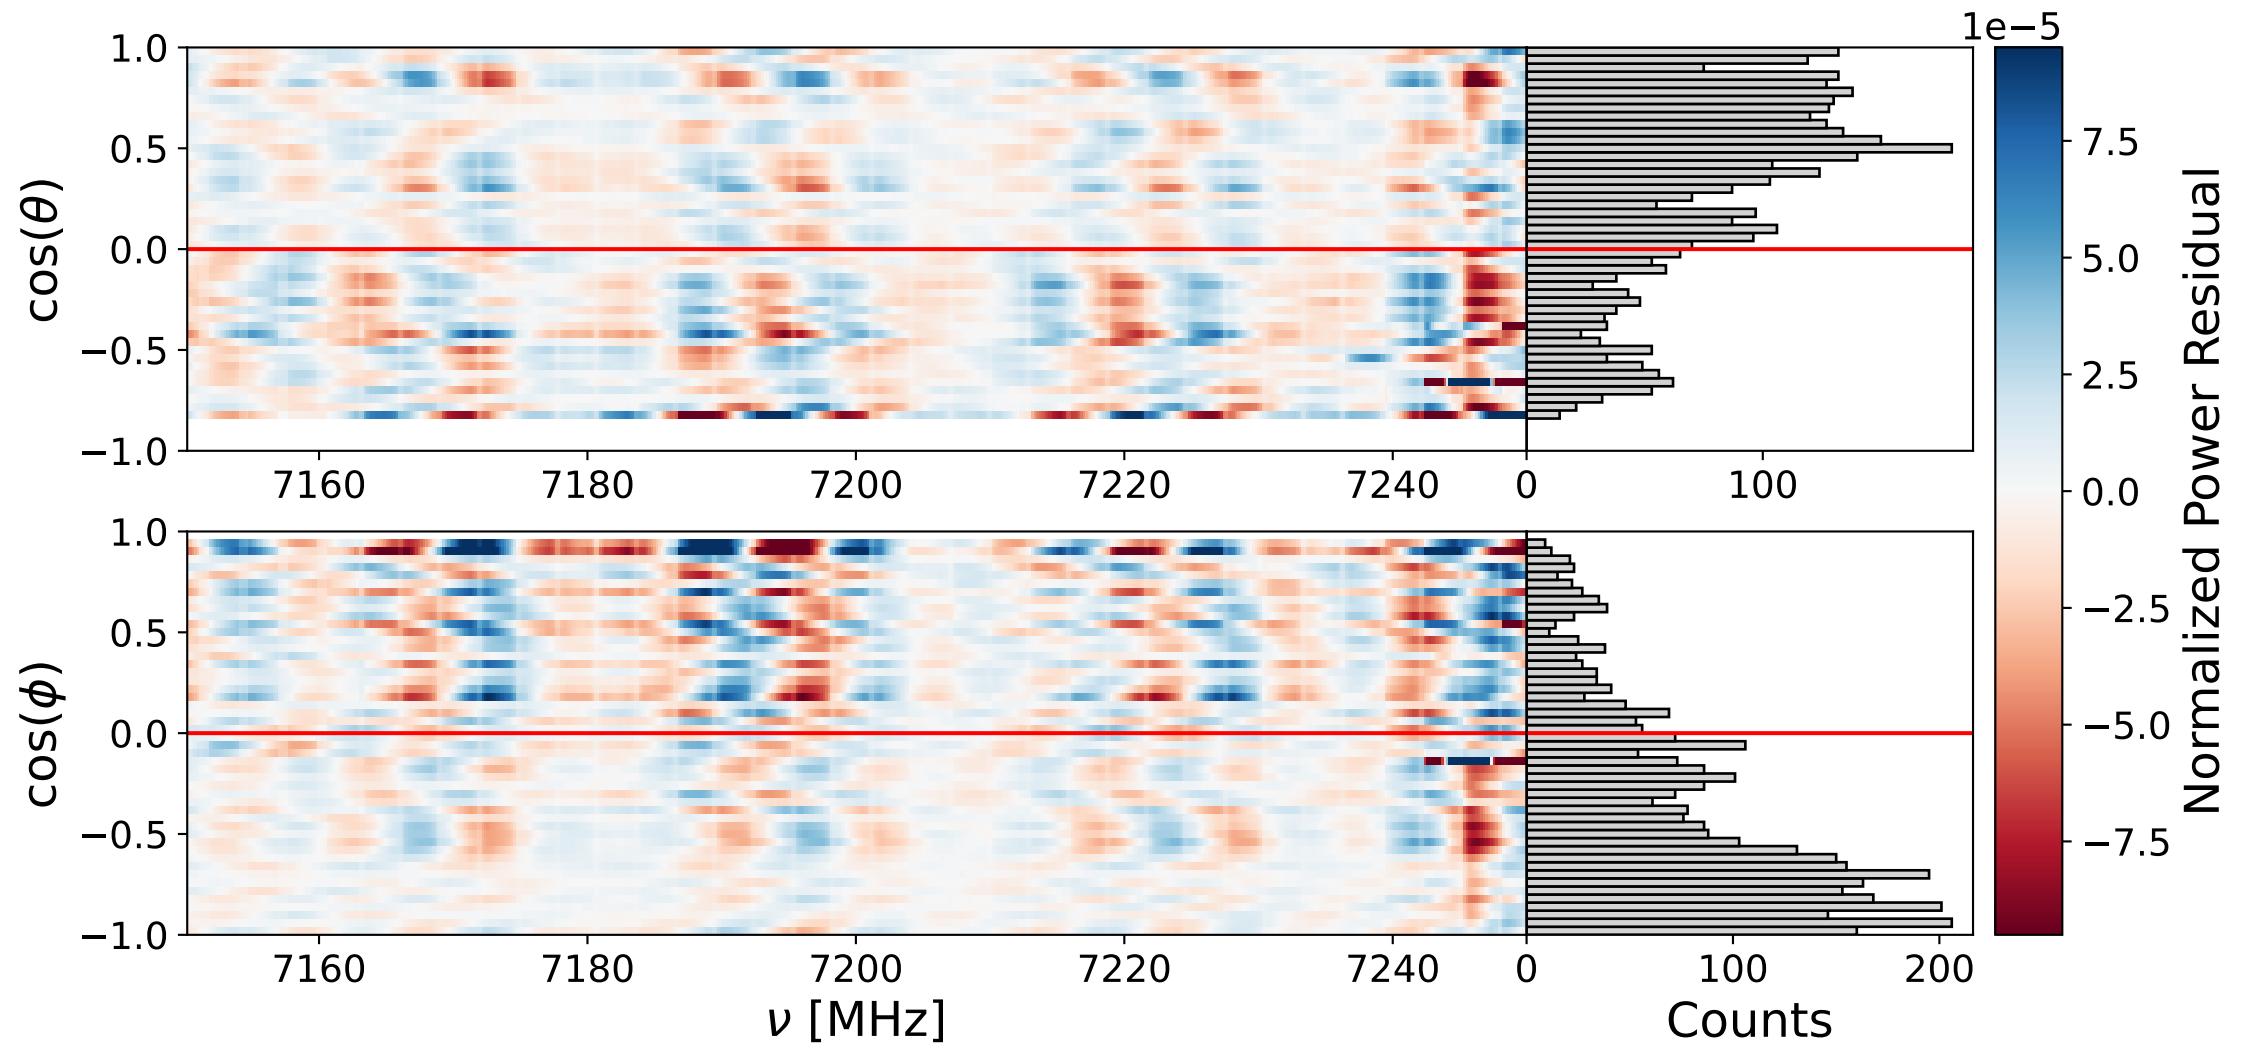


Bank 3 decay: 7250-7350 MHz

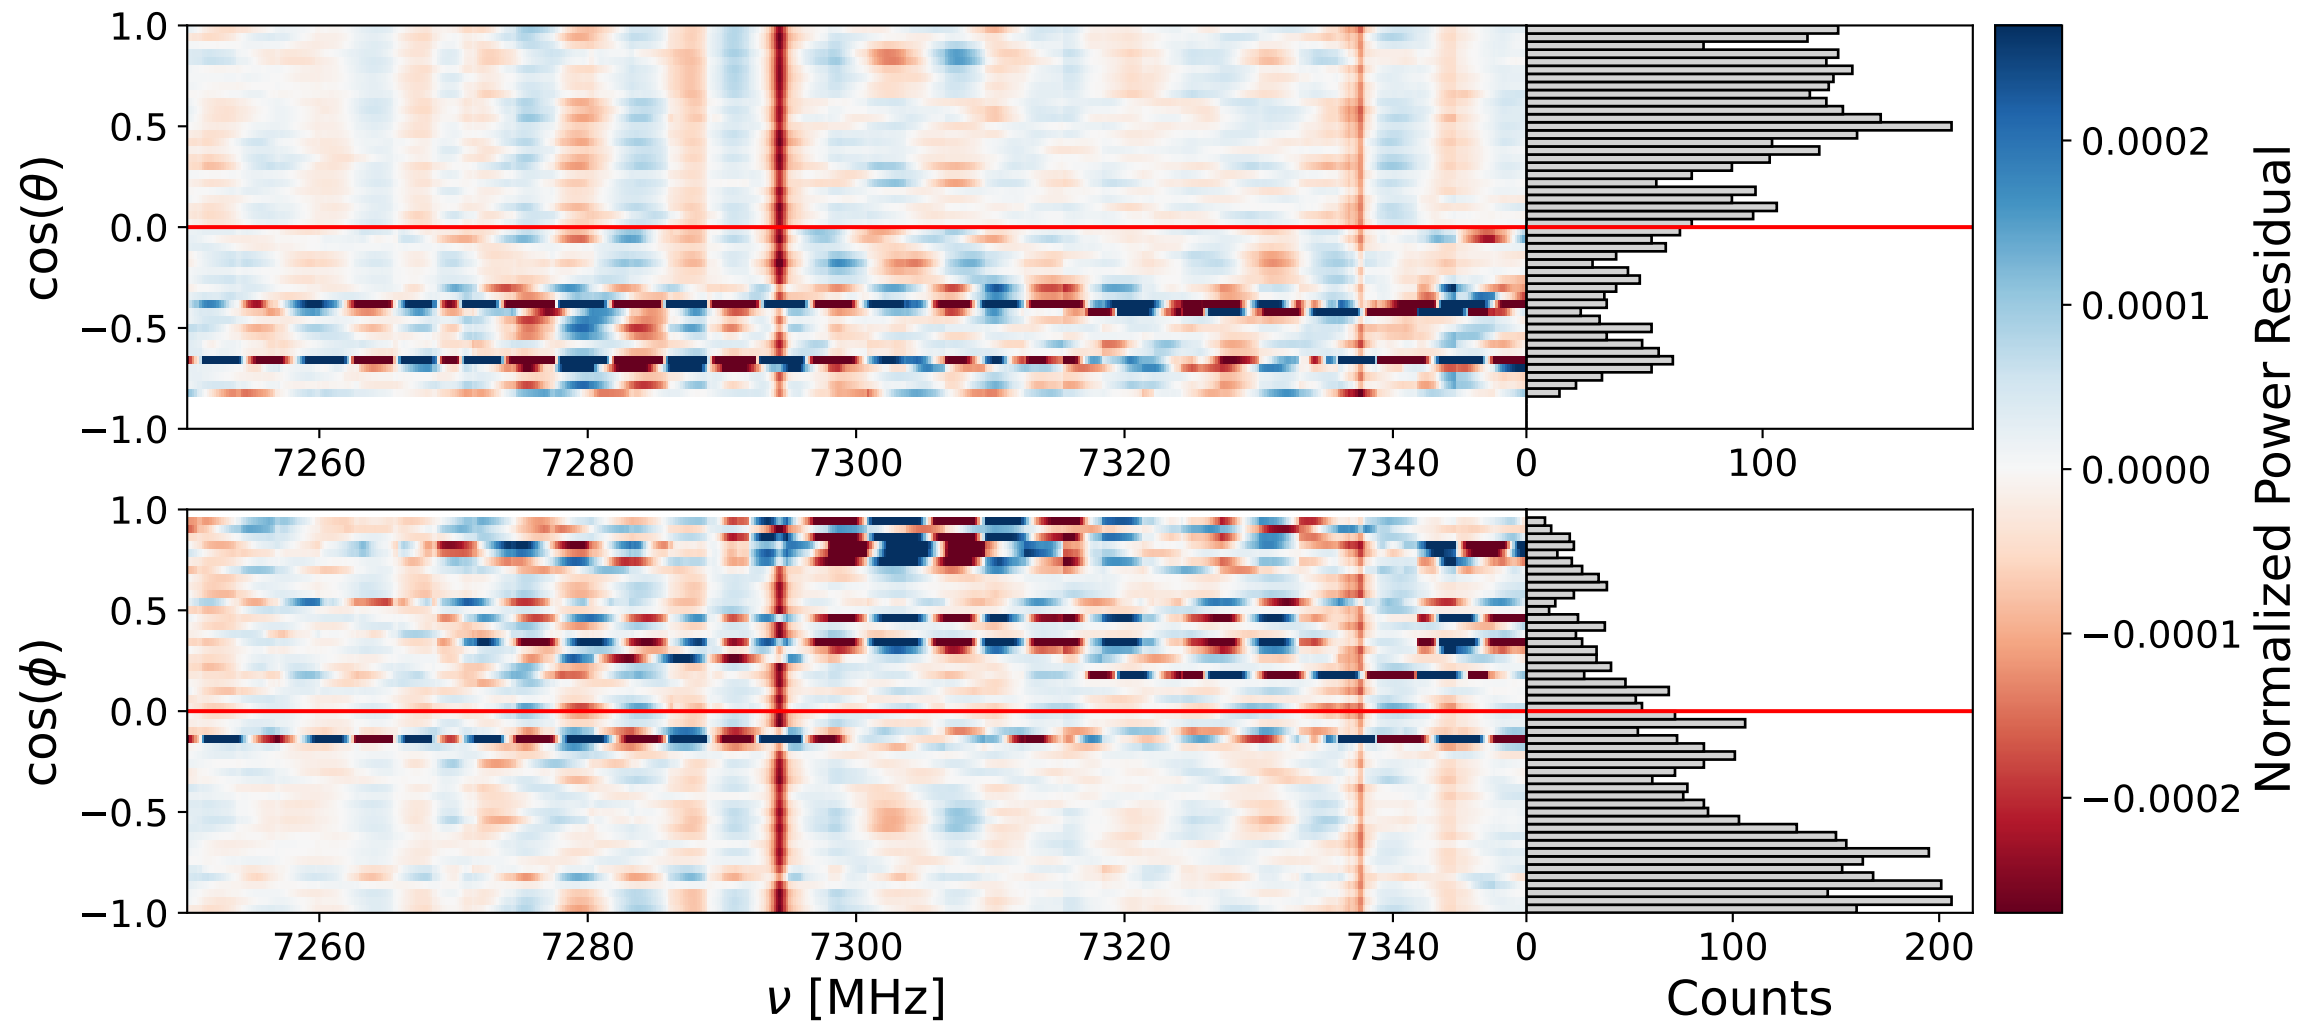


Bank 3 decay: 7350-7450 MHz

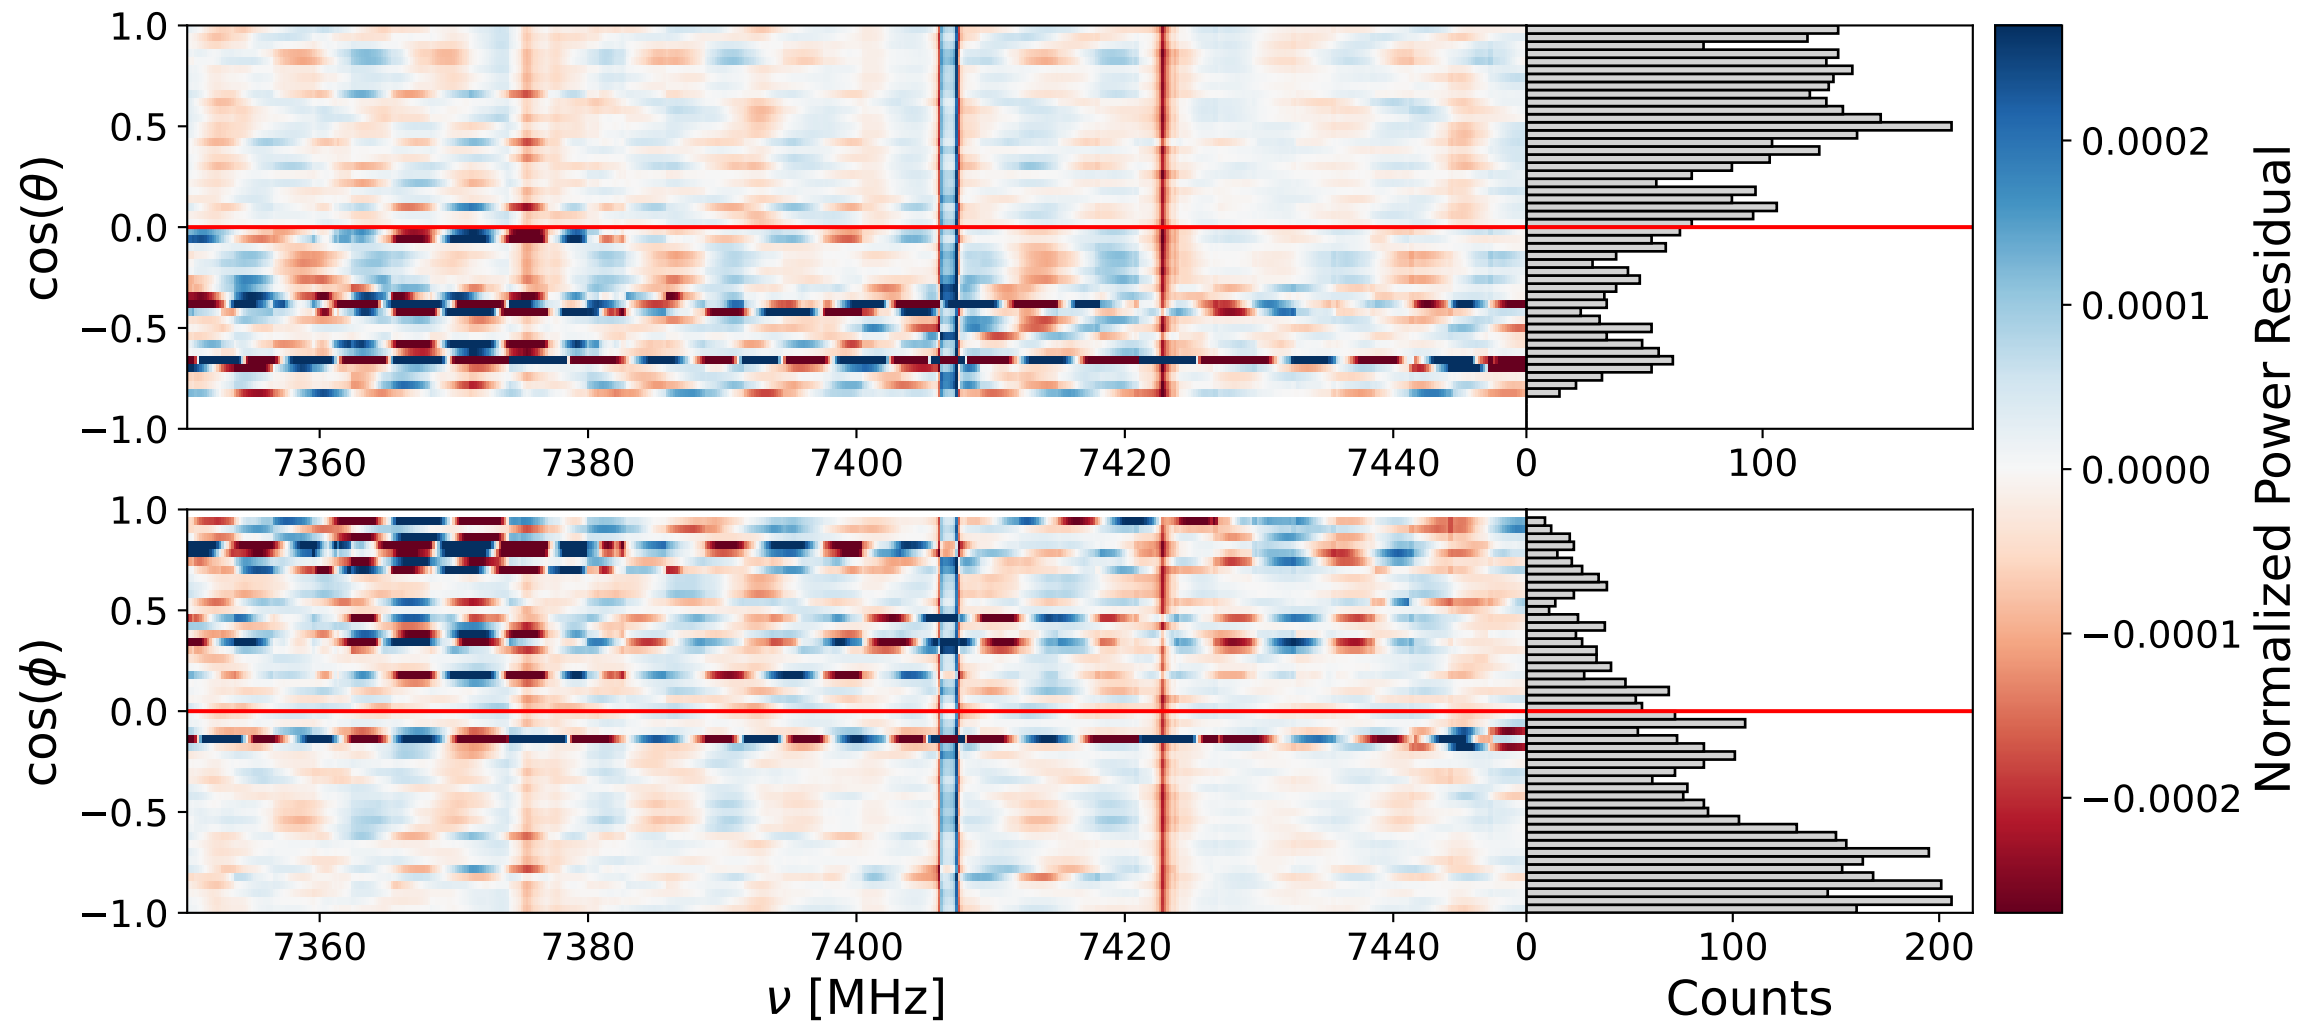


Bank 3 decay: 7450-7550 MHz

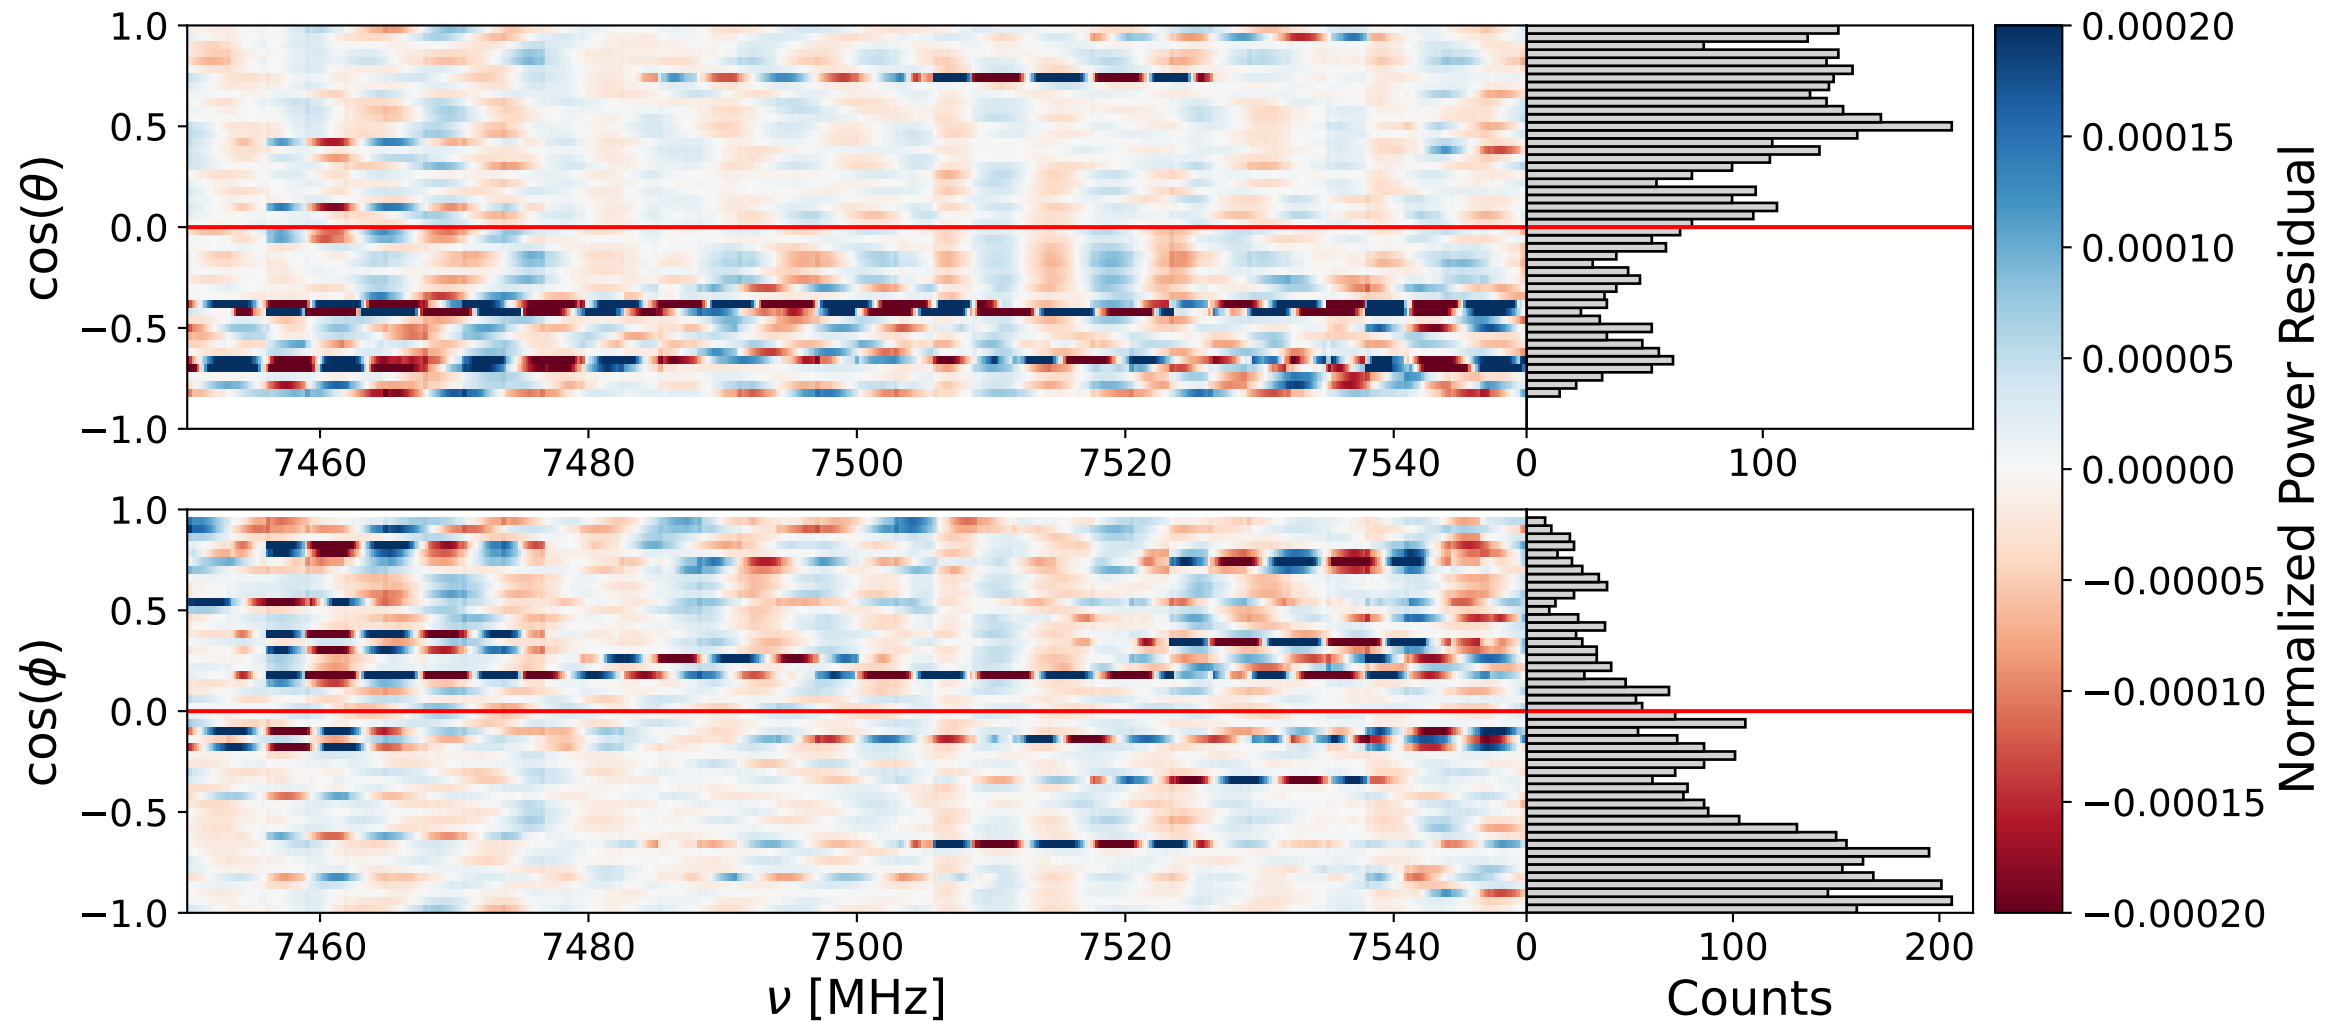


Bank 3 decay: 7550-7650 MHz

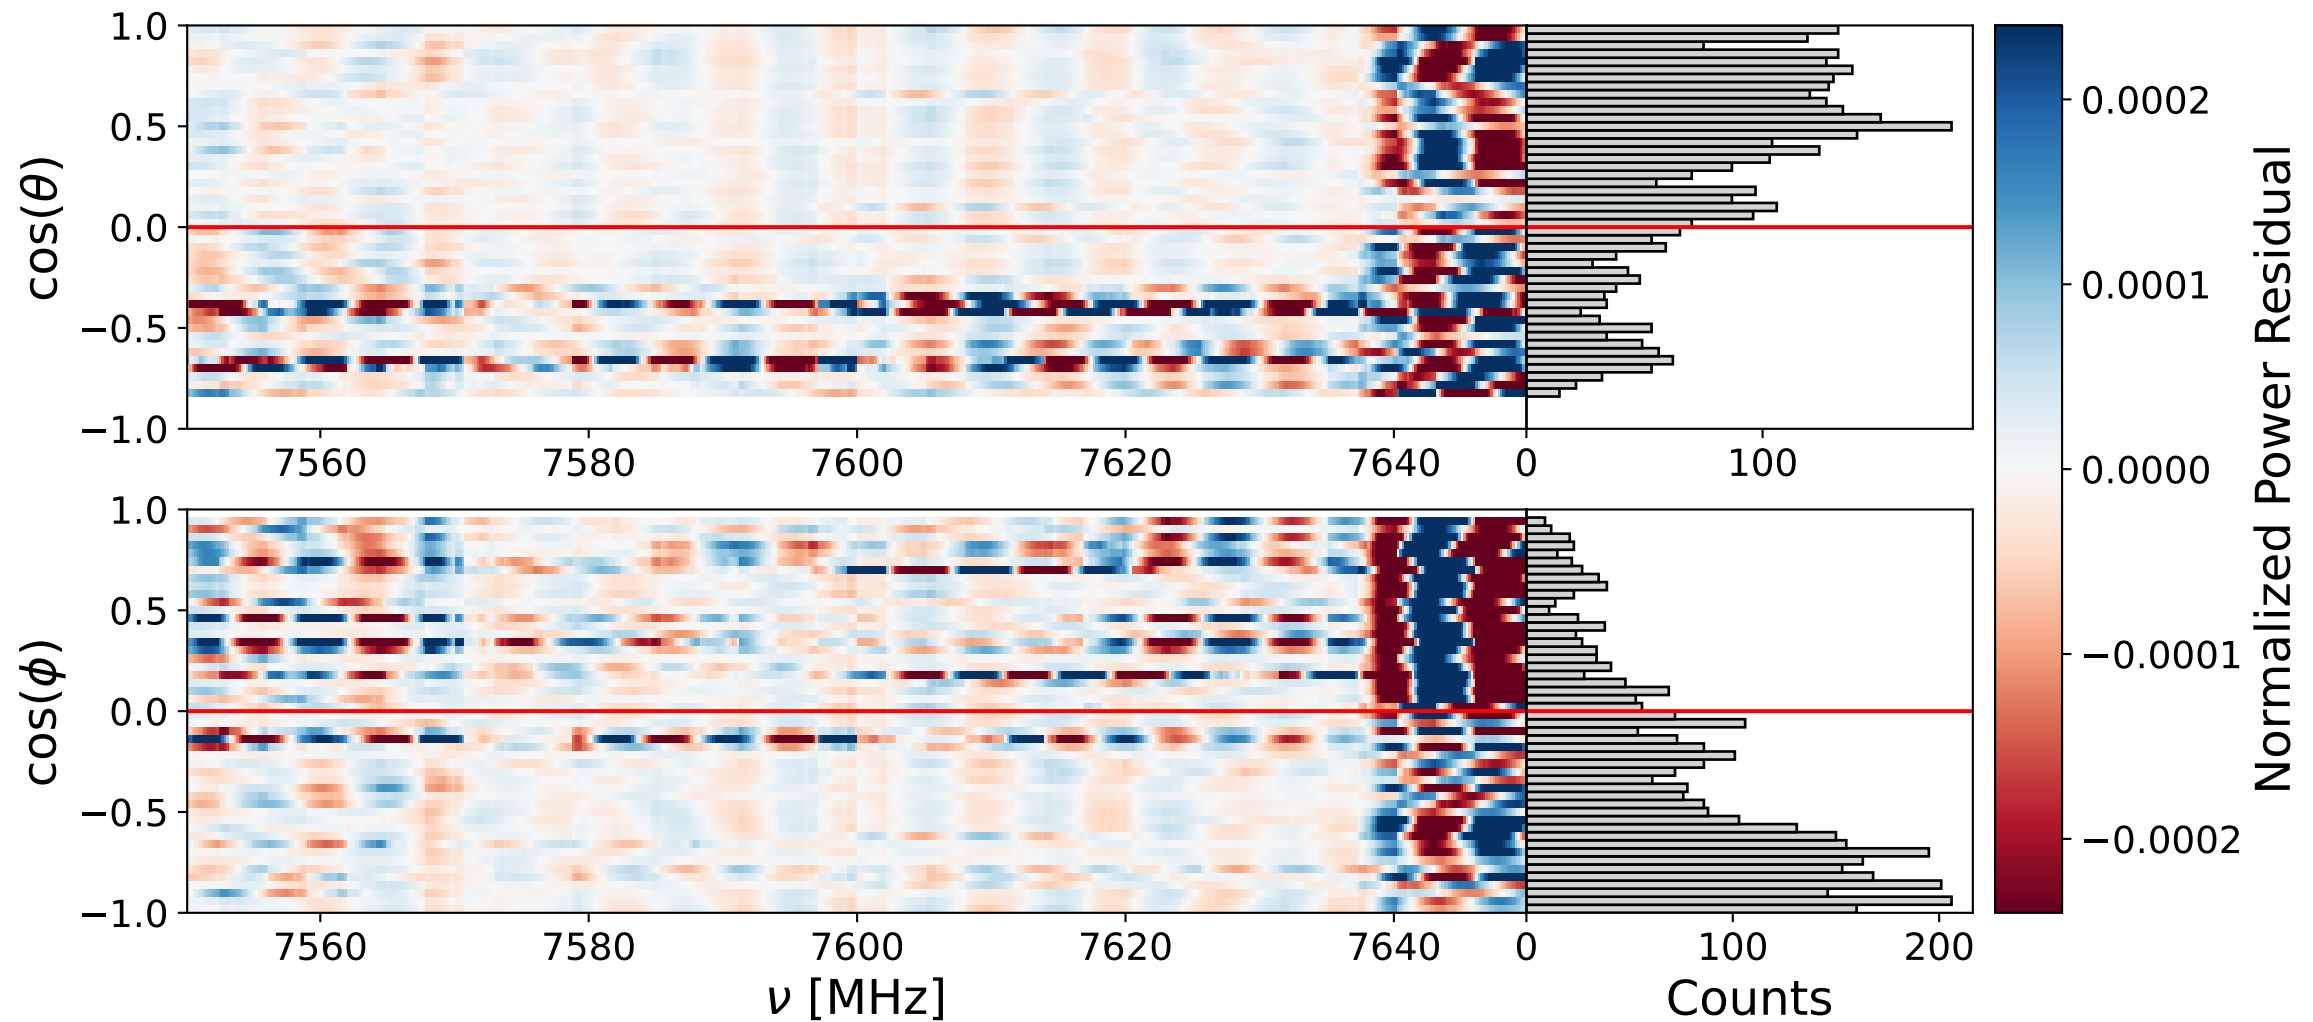


Bank 3 decay: 7650-7750 MHz

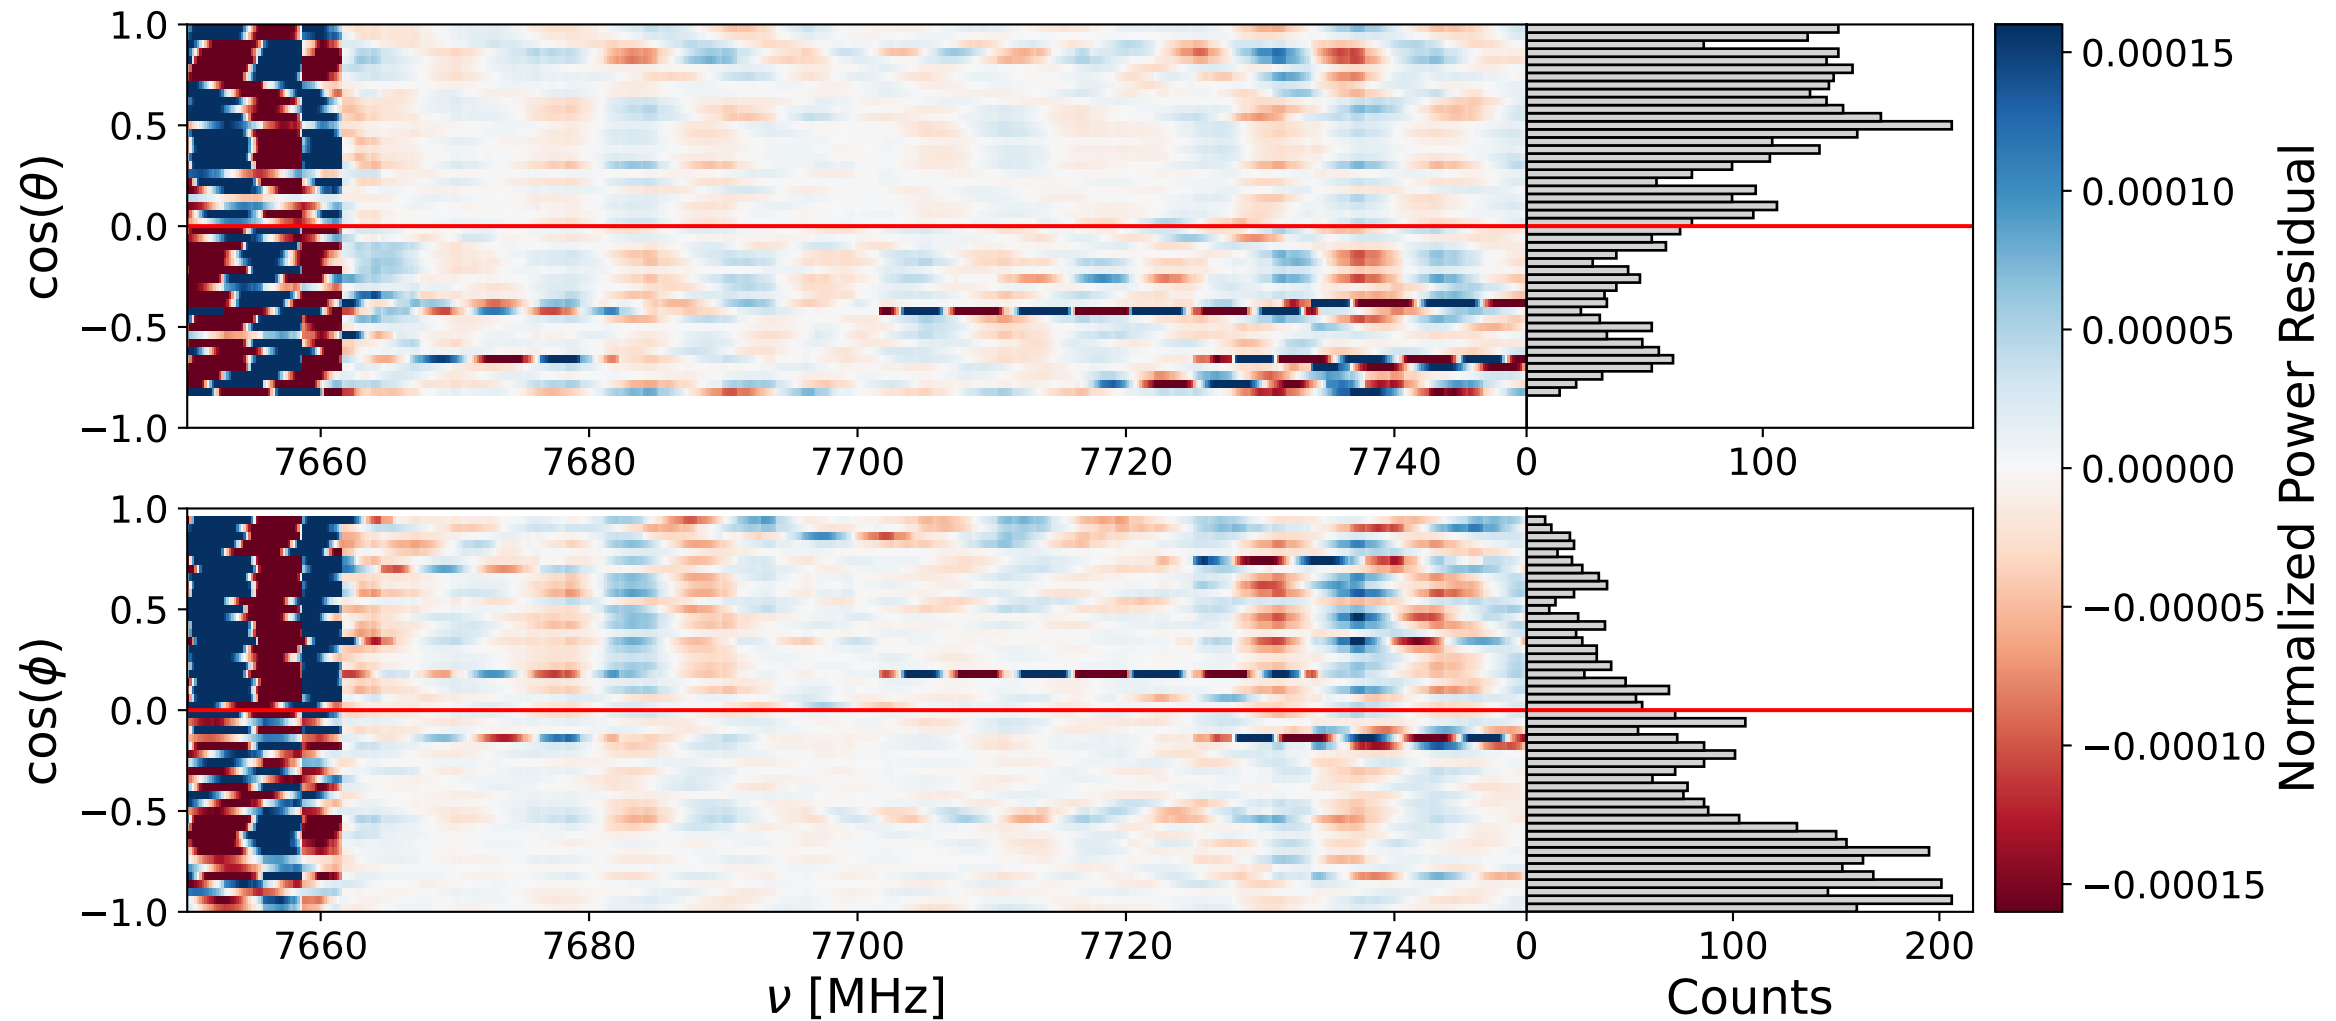


Bank 3 decay: 7750-7850 MHz

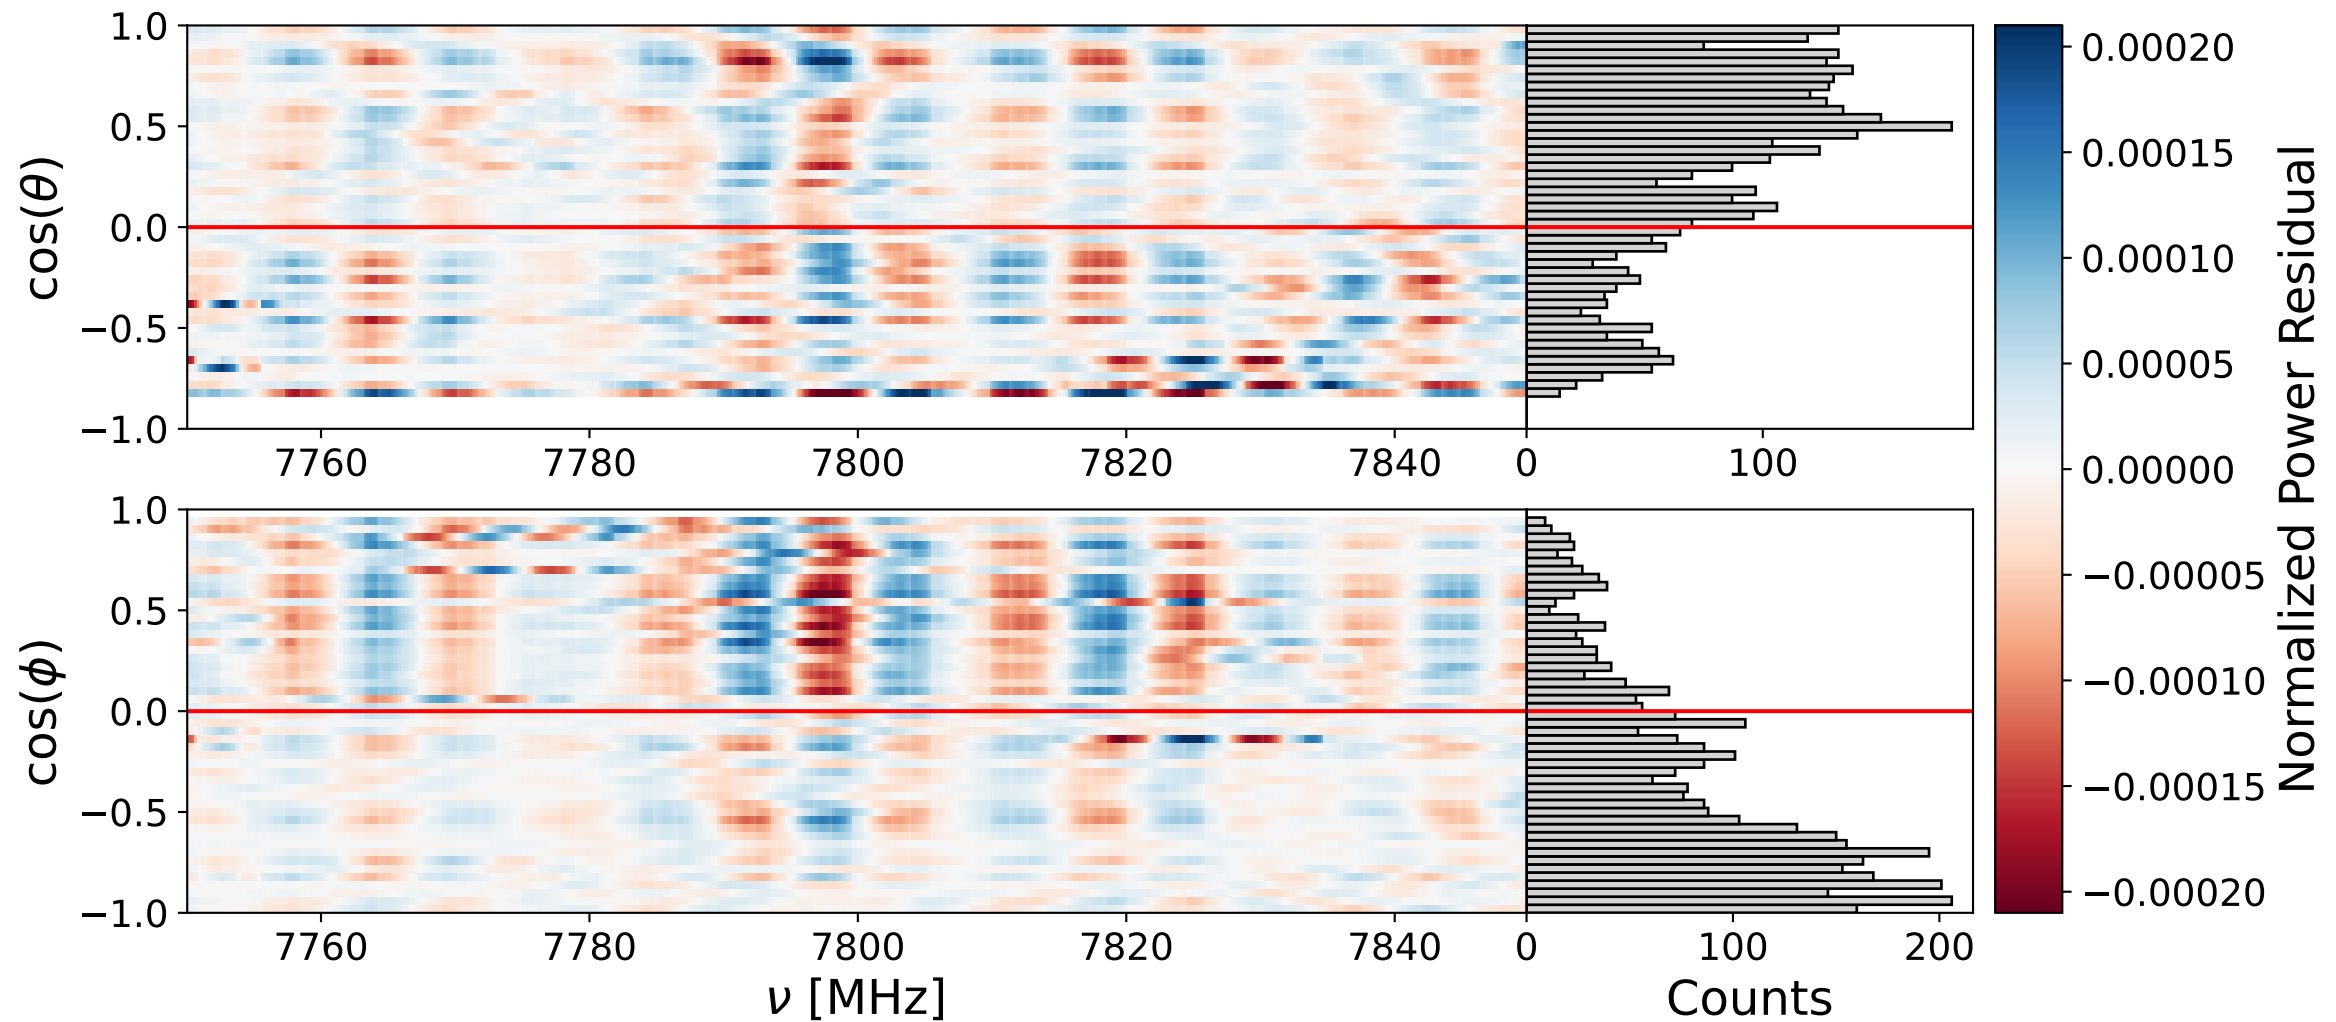


Bank 3 decay: 7850-7950 MHz

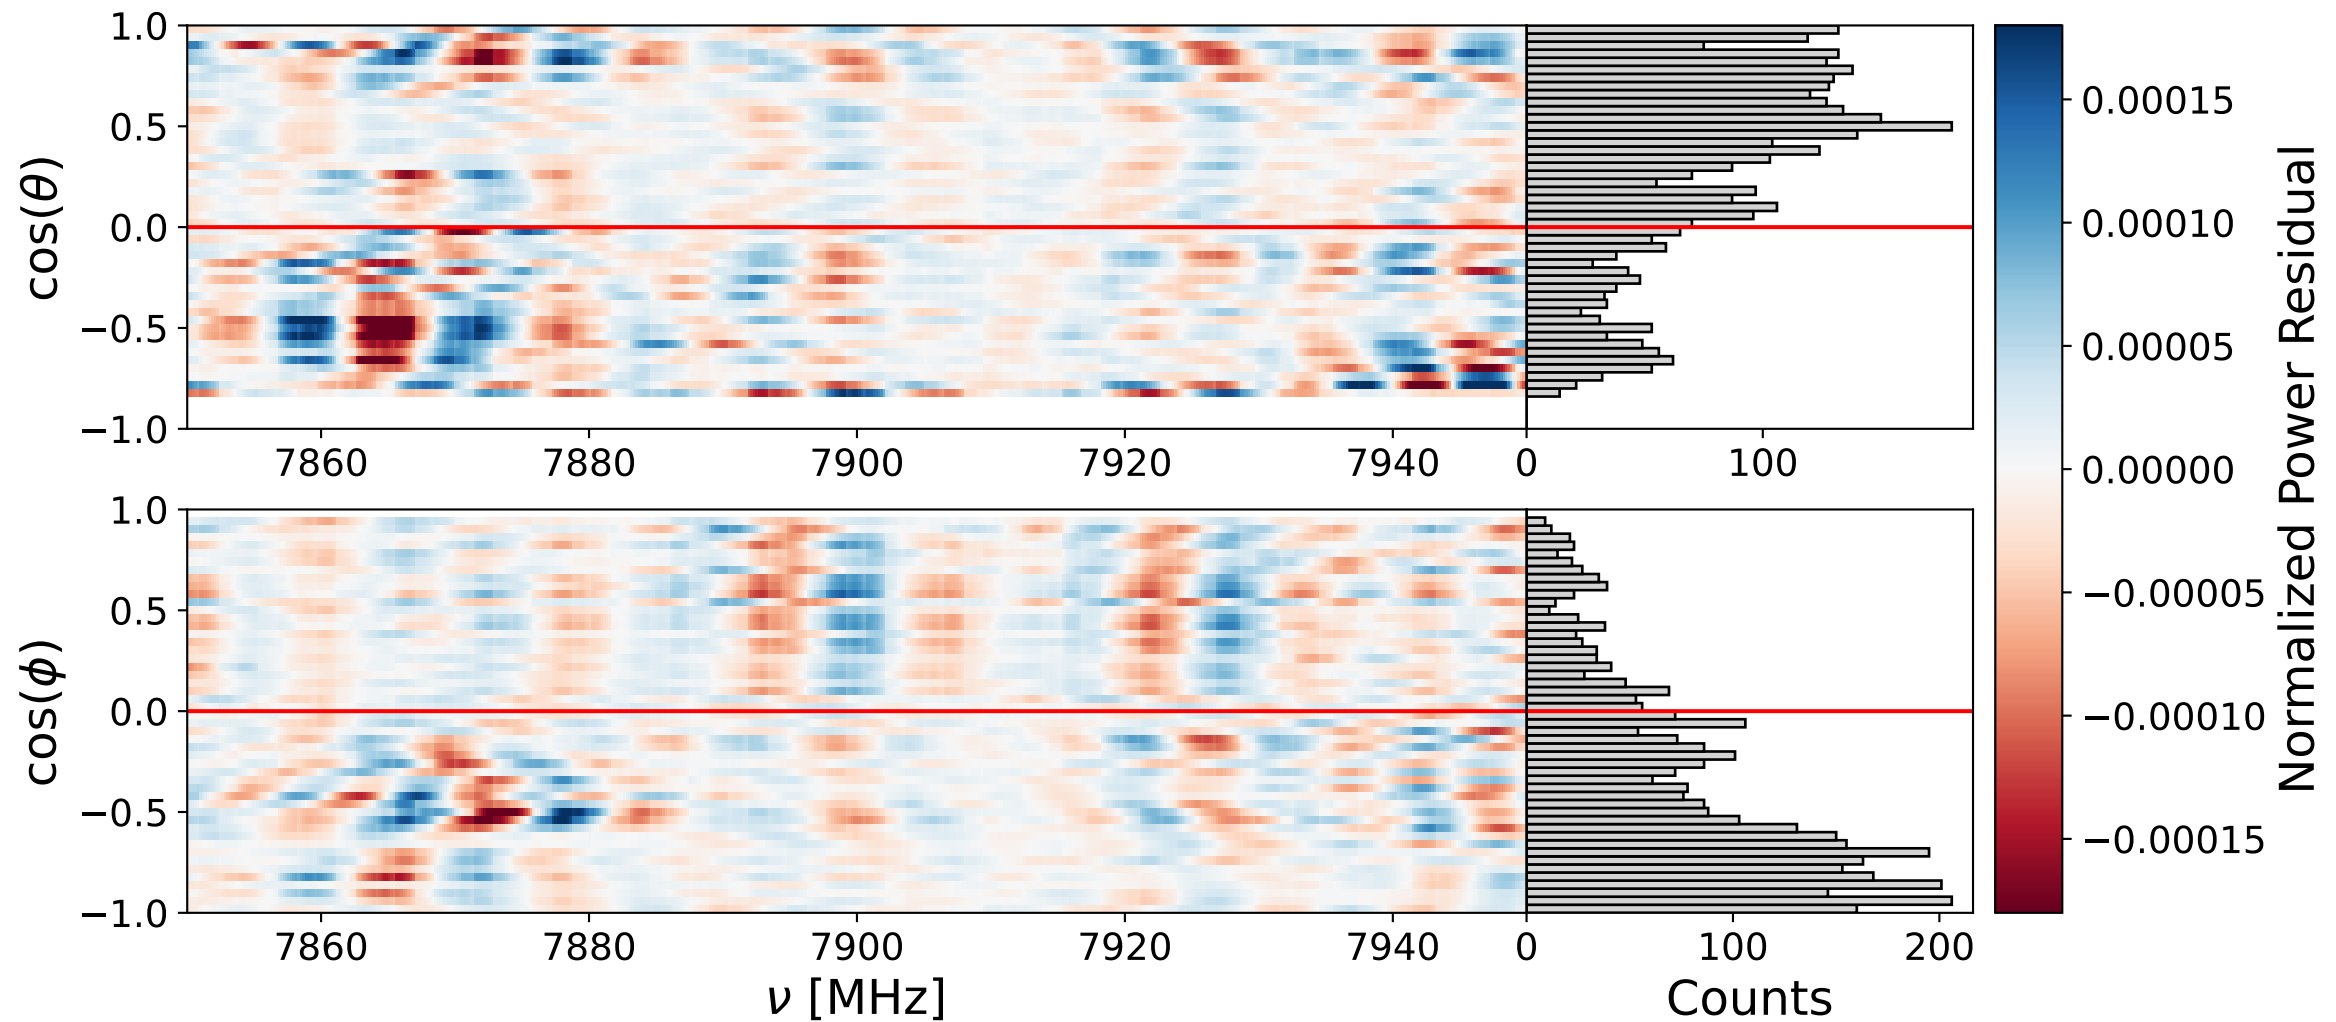

Bank 3 decay: 7950-8050 MHz

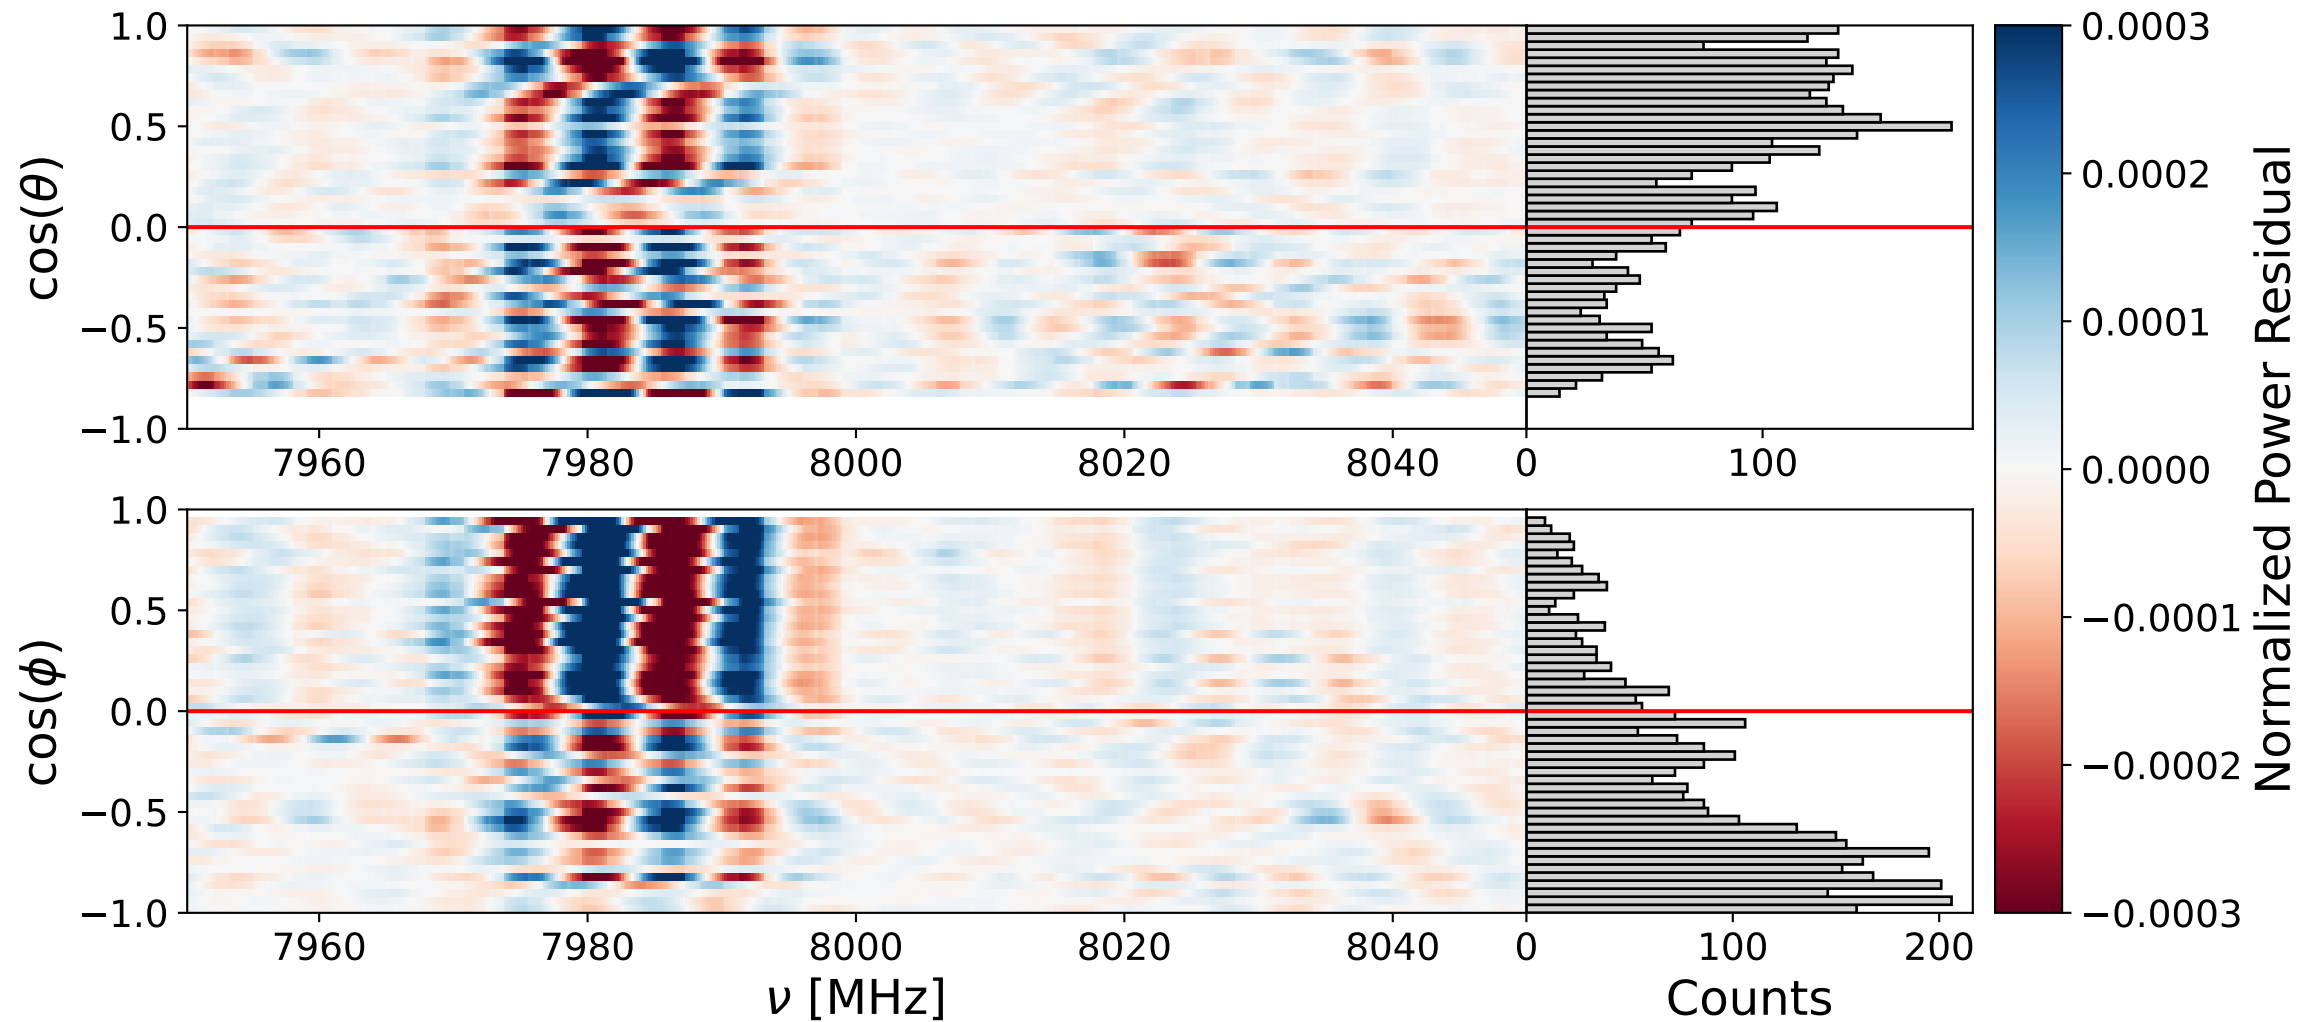

Bank 3 decay: 8050-8150 MHz

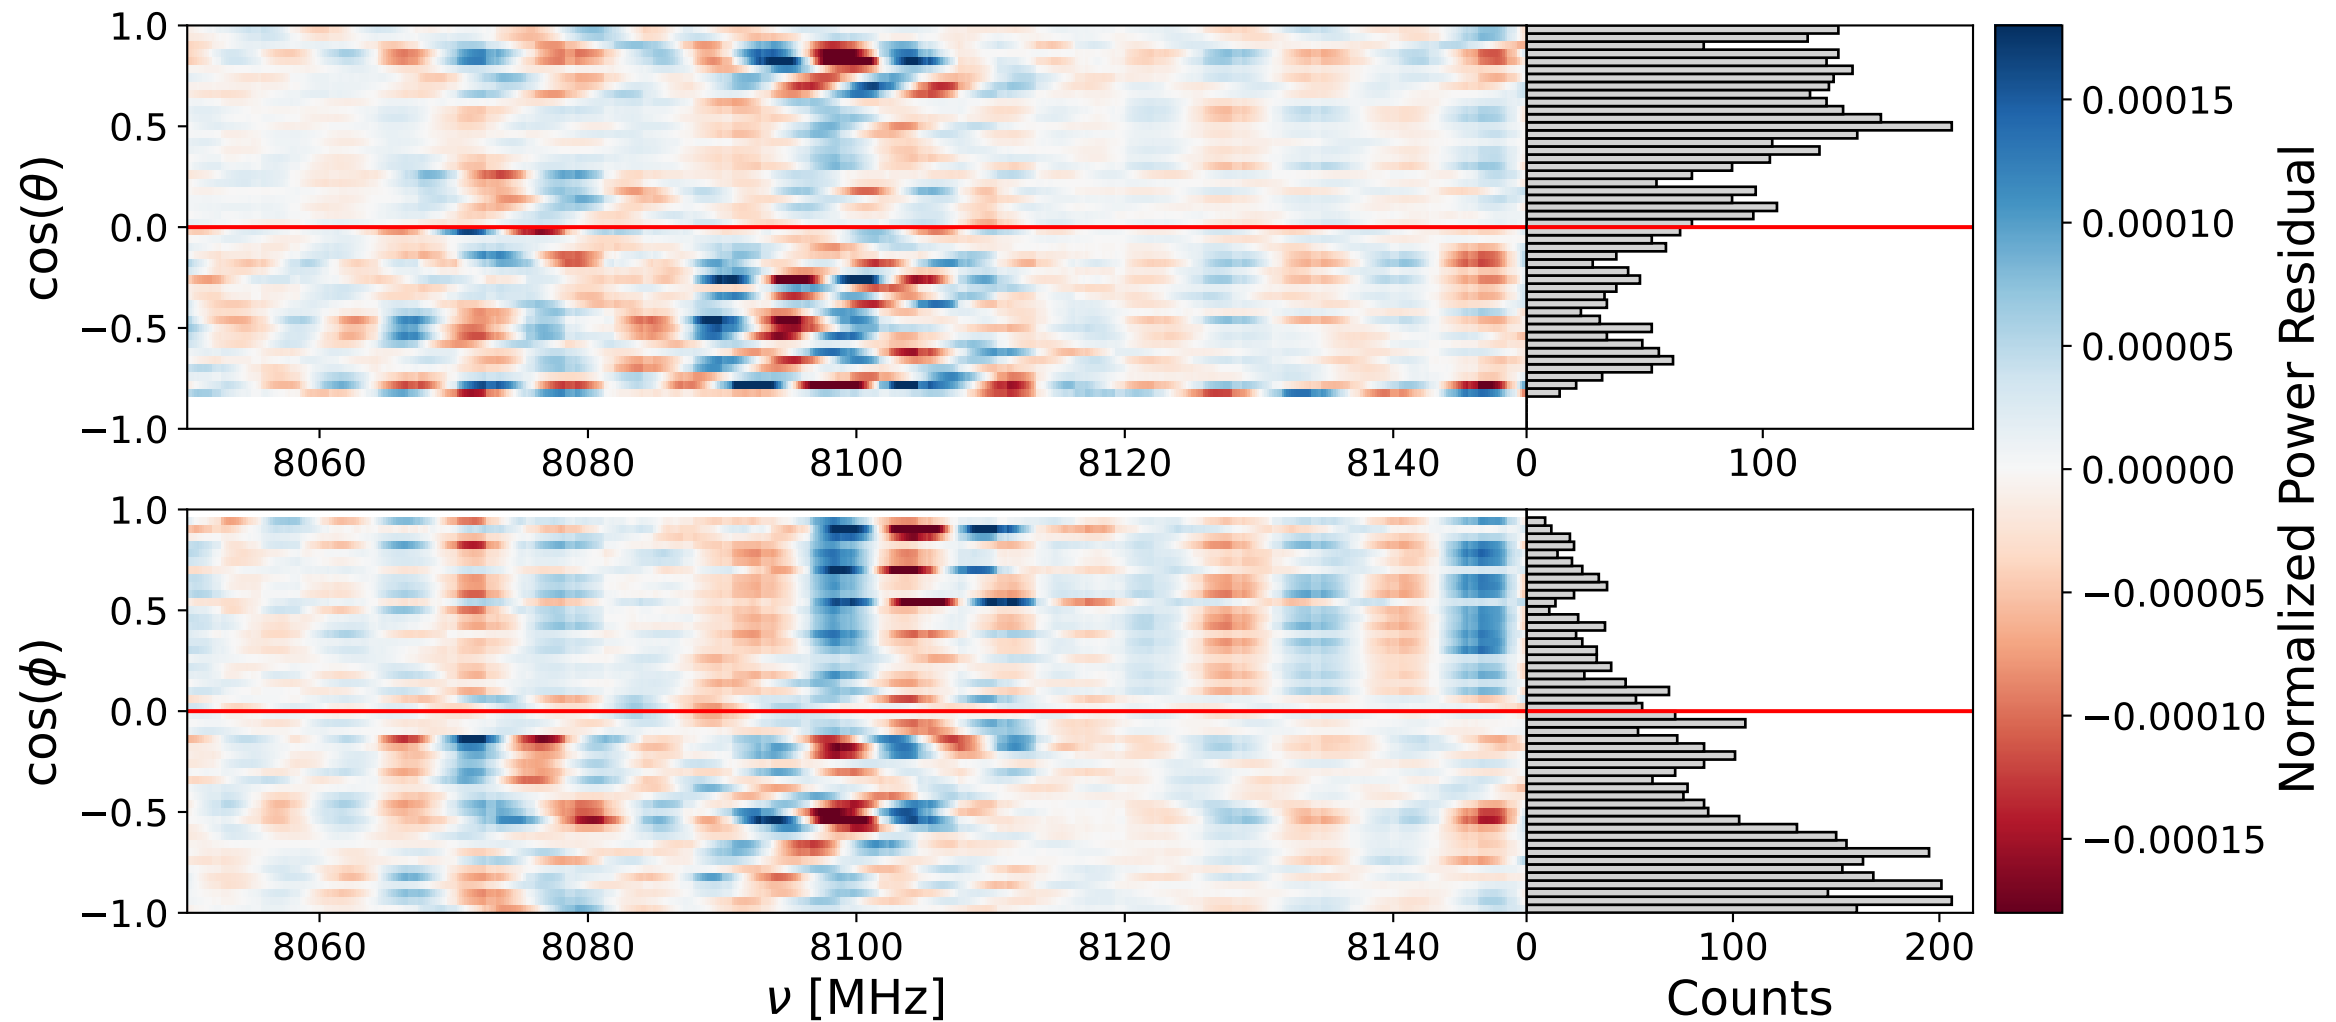

Bank 3 decay: 8150-8239 MHz

