



GTC4Lusso USA - Checking engine oil level and changing engine oil and engine lubrication system filter -
Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.01 Checking engine oil level and changing engine oil and engine lubrication system filter

Checking engine lubrication oil level



When checking the engine oil level, the vehicle must be on a level surface and the engine must be warm.


➤ Remove the engine compartment cosmetic shields (E3.14).

➤ Remove the right hand cosmetic inspection shield.

- Start the engine.
- Wait for the engine oil temperature to reach **85/90 °C**.
- DO NOT use the engine coolant temperature as reference.
- Run the engine at idle speed for **4 minutes**.
- Hold the engine speed between **4000** and **4500 rpm** for **1 minute**.
- Leave the engine idling at **720 rpm** for **2 minutes**, then, without switching the engine off, check the oil level within **1 minute**.



- Undo and open the cap **(A)**.
- Remove the dipstick **(B)**.

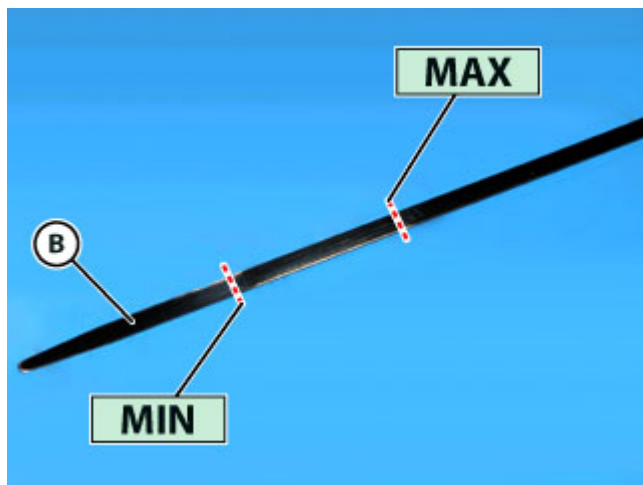

- Check that the engine oil level is between the **MIN** and **MAX** limits indicated on the dipstick (**B**).

i The gap between the **MIN** and **MAX** limits corresponds to approximately **1.5 litres** of oil.



If the level is too low, identify the cause of excessive oil consumption before proceeding.



Top up the engine oil using only new oil of the type specified in the fluids and lubricants table.

- If the engine oil level is near or below the **MIN** limit, top the system up to between the **MIN** and **MAX** limits with new engine oil of the specified type.

i Due to inevitable pooling within the lubrication system, the actual quantity of oil added may vary from vehicle to vehicle.




- Fit and tighten the cap (**A**) securely.
- Insert the dipstick (**B**) fully.


- Hold the engine speed between **4000** and **4500 rpm** for **1 minute**.
- Idle the engine for **2 minutes**, then, without switching the engine off, check the oil level within **1 minute**.



- Undo and open the cap **(A)**.
- Unscrew and remove the dipstick **(B)**.

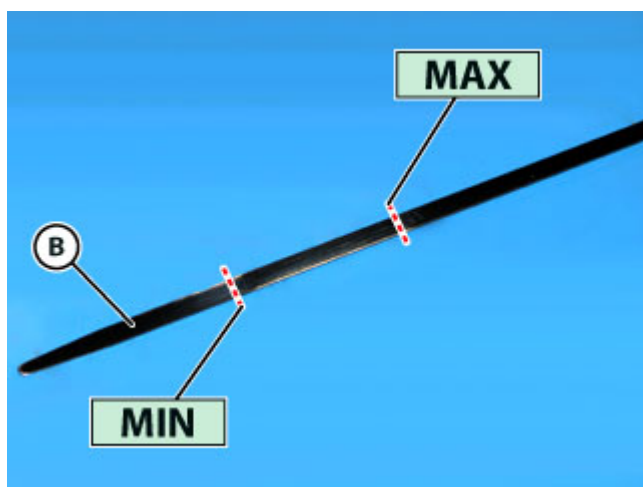

- Check that the engine oil level is between the **MIN** and **MAX** limits indicated on the dipstick **(B)**.
- The gap between the **MIN** and **MAX** limits corresponds to approximately **1.5 litres** of oil.
- If the level is too low, identify the cause of excessive oil consumption before proceeding.
- Top up the engine oil using only new oil of the type specified in the fluids and lubricants table.
- If the engine oil level is near or below the **MIN** limit, top the system up to between the **MIN** and **MAX** limits with new engine oil of the specified type.
- Due to inevitable pooling within the lubrication system, the actual quantity of oil added may vary from vehicle to vehicle.

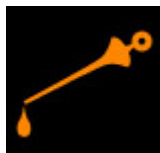

- After topping up the engine oil, the left hand TFT display may continue to display the relative icon with the specific message "Check engine oil level" for a prolonged period of time.


- Refit the engine compartment cosmetic shields (E3.14).
- Refit the right hand cosmetic inspection shield.

Draining the engine lubrication system




Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.


- Remove the flat undertray sections ( E3.13).
-  Remove the front and central flat undertray sections.

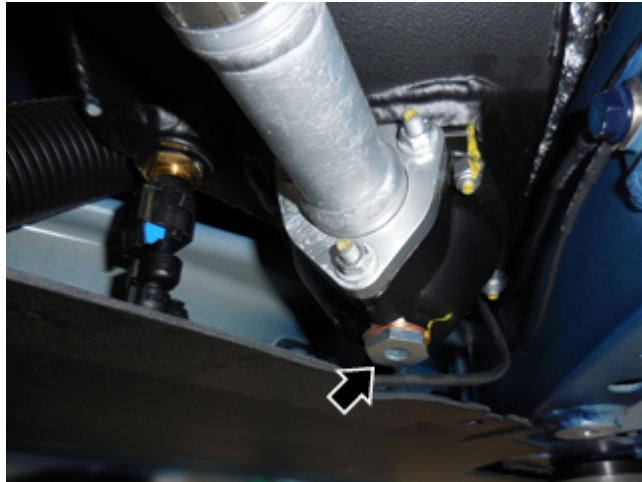

- Place a container for collecting engine oil under the indicated plug.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.

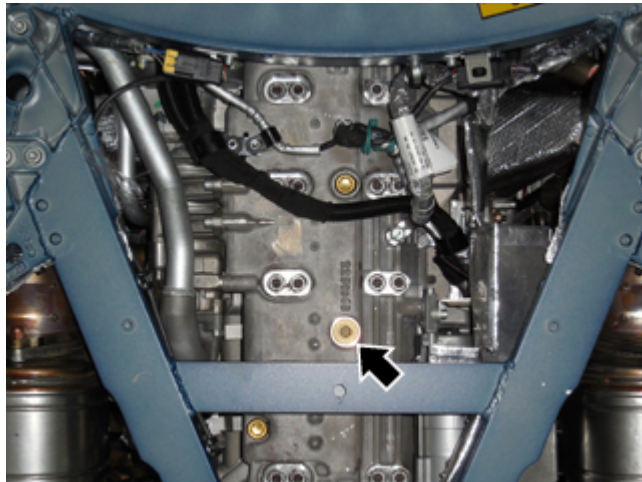


- Place a container for collecting engine oil under the indicated plug.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.

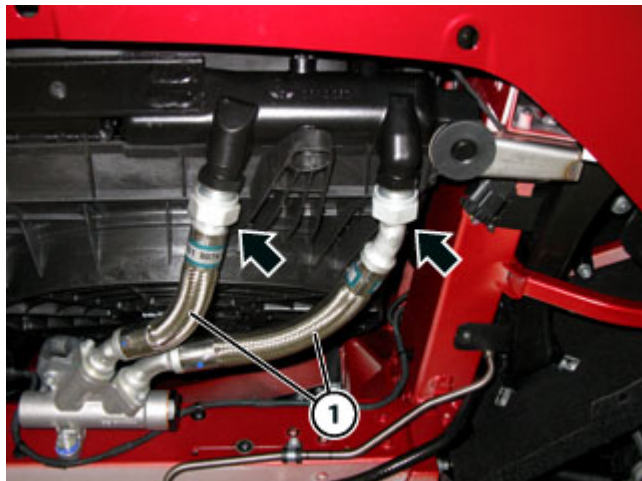

- Place a container for collecting engine oil under the pipes (1).
- Disconnect the pipes (1), undoing the indicated unions.
- Wait for the oil to drain completely.

Replacing the engine oil filter

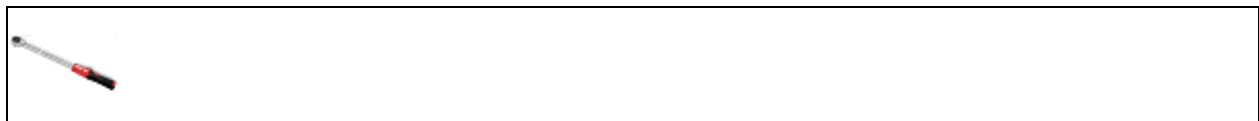

ng torque	Nm	Class
		


Tightening torque		Nm	Class
Fastening engine oil filter	Filter	30 Nm	B

The engine oil filter must be replaced at each engine oil change.

➤ Remove the flat undertray sections ( E3.13).

 Remove the central flat undertray section.

➤ Drain the engine lubrication system ( A3.01).

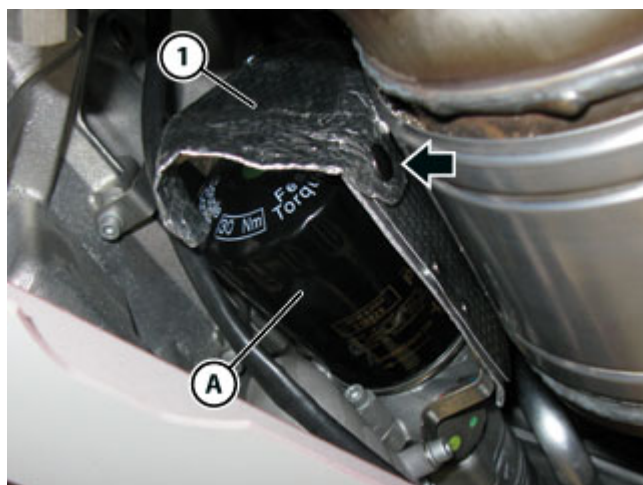

- Detach the indicated clip.
- Bend the heat shield **(1)** to one side.
- Using the tool **(95971560)** in combination with the wrench (USAG D156), undo and remove the filter **(A)**.
- Replace the filter **(A)**.
-  Only use filter cartridges specified by Ferrari.
- Check that the gasket of the new filter cartridge is installed correctly in its seat, with the round part visible, and is free of cuts and/or cracks.
- Lubricate the filter gasket with the specified engine oil.
- Clean the filter seat thoroughly.
- Fit the new filter **(A)**.
- Using the tool **(95971560)** in combination with the torque wrench (USAG D156), tighten the filter **(A)**.

		
Tightening torque	Nm	Class
Filter	30 Nm	B

- Fit the heat shield **(1)**.
- Fasten the indicated clip.

➤ Fill the engine lubrication system ( A3.01).


➤ Refit the flat undertray sections ( E3.13).

 Refit the central flat undertray section.

Filling the engine lubrication system




 ng torque		Nm	Class
Tightening torque		Nm	Class
Fastening engine oil tank drain plug	Plug	50 Nm	B
Fastening the magnetic engine oil drain plug	Magnetic plug	60 Nm	B
Fastening engine oil pipes leading from thermostat valve to radiator	Ring nut	70 Nm	B

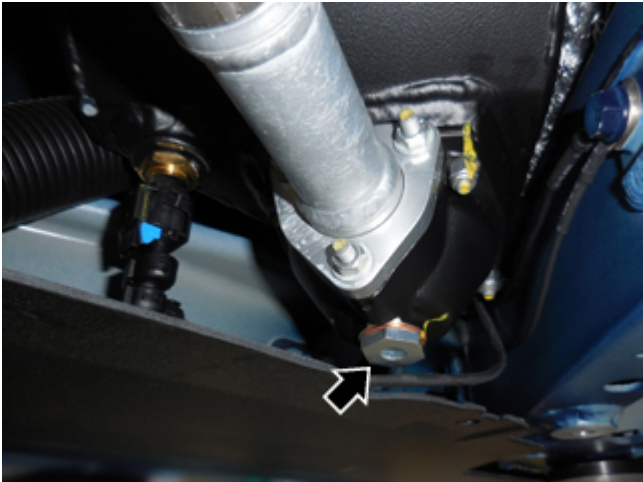


- Clean the indicated plug thoroughly with a suitable degreaser that does not leave residue.
- Definitively tighten the indicated plug, replacing the respective gasket.

		
Tightening torque	Nm	Class
Plug	50 Nm	B

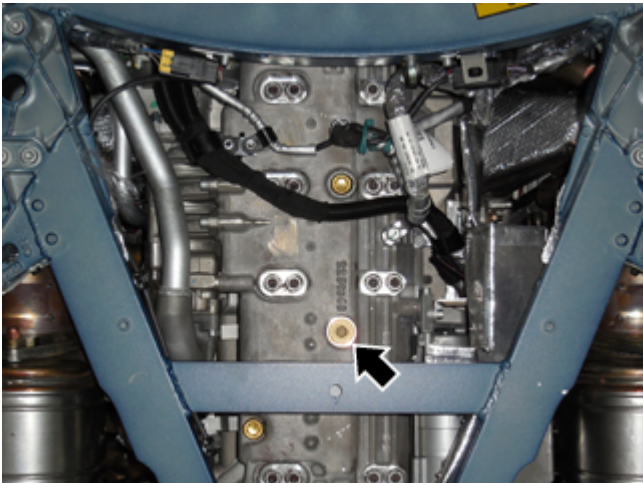

- Clean the indicated plug thoroughly with a suitable degreaser that does not leave residue.
- Definitively tighten the indicated plug, replacing the respective gasket.

		
Tightening torque	Nm	Class
Magnetic plug	60 Nm	B

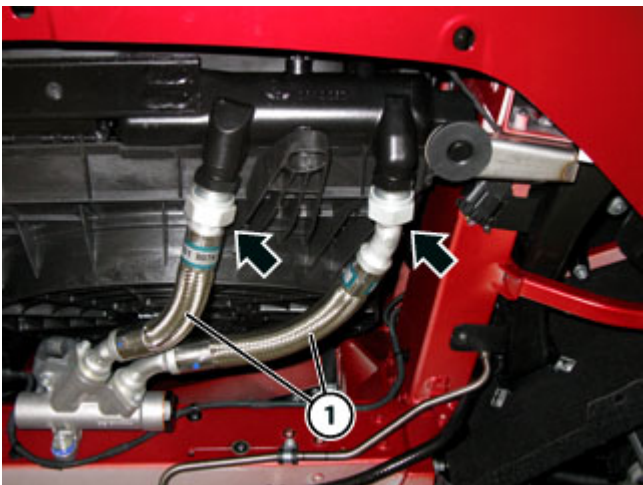

- Connect the pipes (1), tightening the indicated unions.

		
Tightening torque	Nm	Class
Ring nut	70 Nm	B



- Undo and remove the cap **(A)**.
-  Fill the engine lubrication system using only new oil of the type specified in the fluids and lubricants table.
- Gradually add **9 litres** of new oil of the specified type to the tank.
- Start the engine and run at idle speed for approximately **3 minutes**.
- Switch off the engine.
-  Fill the engine lubrication system using only new oil of the type specified in the fluids and lubricants table.
- Gradually add **4 litres** of new oil of the specified type to the tank.
- Check the engine lubrication oil level ( **A3.01**).
-  Due to inevitable pooling within the lubrication system, the actual quantity of oil added may vary from vehicle to vehicle.
- Close and tighten the cap **(A)** securely.

- Check that there are no engine oil leaks from the drain plugs and from the engine oil filter.
- Refit the flat undertray sections ( **E3.13**).
-  Refit the front and central flat undertray sections.