



GTC4Lusso USA - Checking and changing the DCT gearbox gear oil - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.02 Checking and changing the DCT gearbox gear oil

Checking level of Shell SPIRAX S5 ATE 75W-90 DCT gearbox gear oil

			
Tightening torque		Nm	Class
Fastening gearbox gear oil filler/drain plugs	Plug	25 Nm	B



The following procedures must be carried out exactly as described to ensure that the hydraulics are properly lubricated and function correctly.



To check the gear oil level correctly, carry out the following procedures precisely as described.

➤ Remove the flat undertray sections ( E3.13).

 Remove the rear flat undertray section.


➤ Ensure that the vehicle is NOT on a gradient.

➤ Start the engine and run at idle speed.


➤ Select reverse **R** and hold the brake pedal.

➤ Check that the clutch system ATF fluid temperature DOES NOT exceed **40 °C**.

➤ Check that the engine coolant temperature is between **40** and **50 °C**.

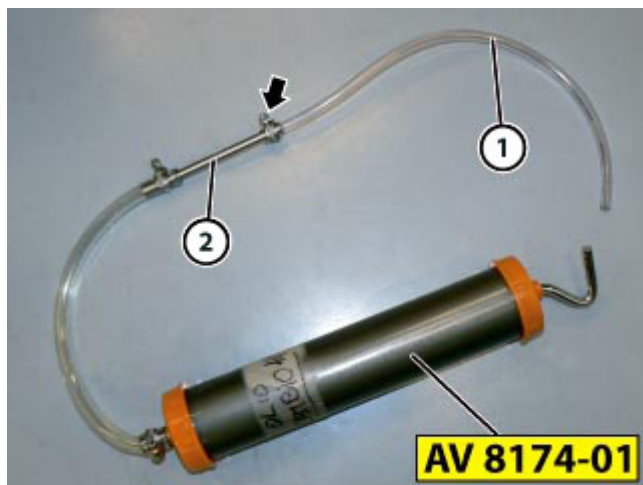

- Select the element **01** (with short spout) of the pump (**AV 8174**).
- Obtain a length of flexible rubber pipe (**1**) of a suitable diameter and measuring **350 mm** in length.
- Fit the length of pipe (**1**) onto the spout (**2**), fastening with the indicated screw collar **Part No. 13000190 (D.10-16x7 mm)**.

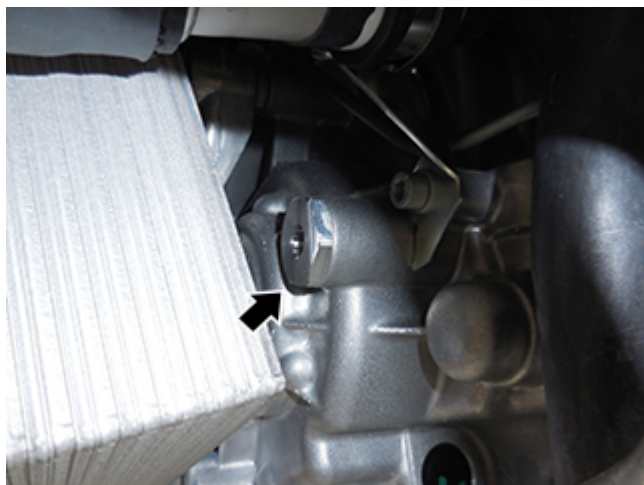**CAUTION**


HOT OIL may be released: use adequate protection.

- Unscrew the indicated plug.
- The oil must be almost overflowing and level with the level inspection orifice (seat for threaded plug) (**1**).



If the level is too low, identify the cause of excessive oil consumption.

- If fluid does not overflow, the level is too low and must be topped up as follows.
- Using the element **01** (with the short spout) of the pump (**AV 8174**), aspirate the specified oil from a newly opened container.
- Place a container under the oil level inspection orifice.
- Using the element **01** (with short spout) of the pump (**AV 8174**), top up by injecting oil through the filler orifice until oil starts to overflow.
- Let all the excess oil drain completely.

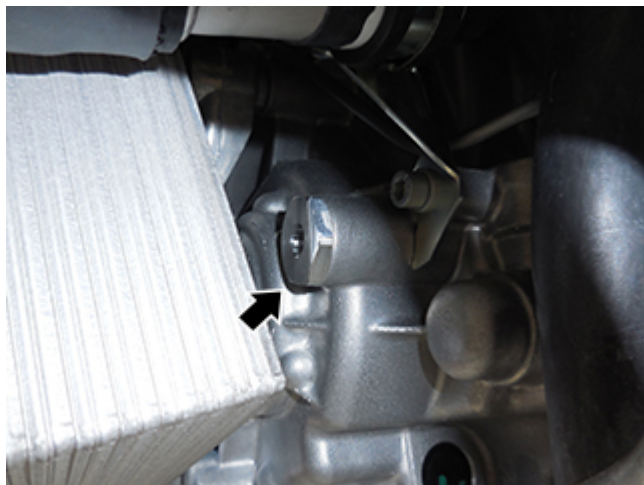

- Replace the plug, fitting and tightening the new component.

		
Tightening torque	Nm	Class
Plug	25 Nm	B

- Refit the flat undertray sections ( E3.13).

 Refit the rear flat undertray section.

Draining the Shell SPIRAX S5 ATE 75W-90 DCT gearbox gear oil




ALWAYS dispose of liquids correctly in accordance with applicable legislation.

Collect all liquids drained from the vehicle systems in appropriate airtight containers, then close the containers.


The gearbox gear oil must be changed at the intervals specified in the MAINTENANCE SCHEDULE.

- Remove the flat undertray sections ( E3.13).

 Remove the rear flat undertray section.

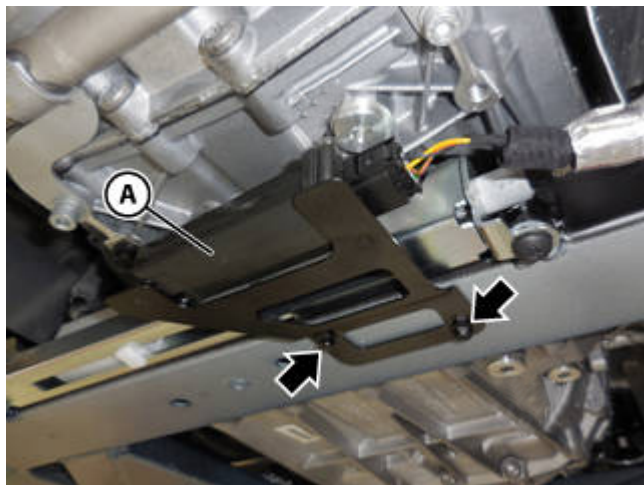


- Undo the indicated screws and move the antenna (**A**) aside, complete with its bracket.

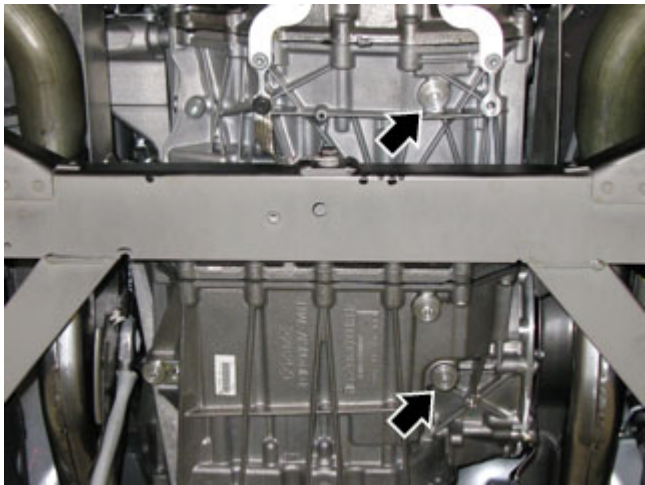


- Place a container under the gearbox for collecting oil.
- Undo the indicated plugs.
- Let the oil drain completely.

Filling the DCT gearbox with Shell SPIRAX S5 ATE 75W-90 gear oil

			
Tightening torque		Nm	Class
Fastening gearbox gear oil filler/drain plugs	Plug	25 Nm	B
Fastening the TPMS antenna	Nut	1.25 Nm	C
	Screw	5 Nm	B

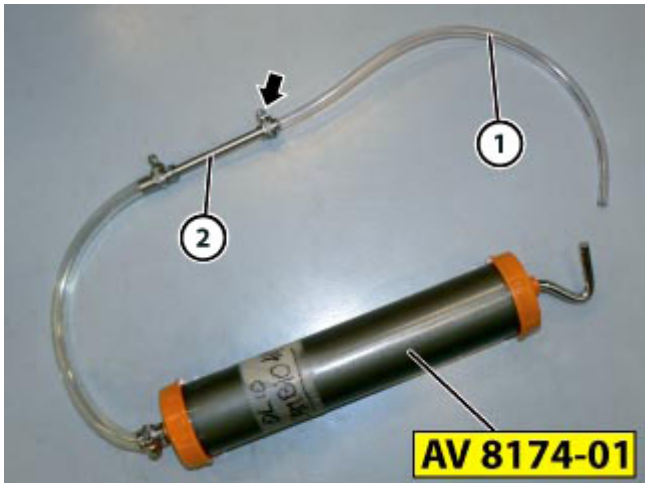


- Select the element **01** (with short spout) of the pump (**AV 8174**).
- Obtain a length of flexible rubber pipe (**1**) of a suitable diameter and measuring **350 mm** in length.
- Fit the length of pipe (**1**) onto the spout (**2**), fastening with the indicated screw collar **Part No. 13000190 (D.10-16x7 mm)**.

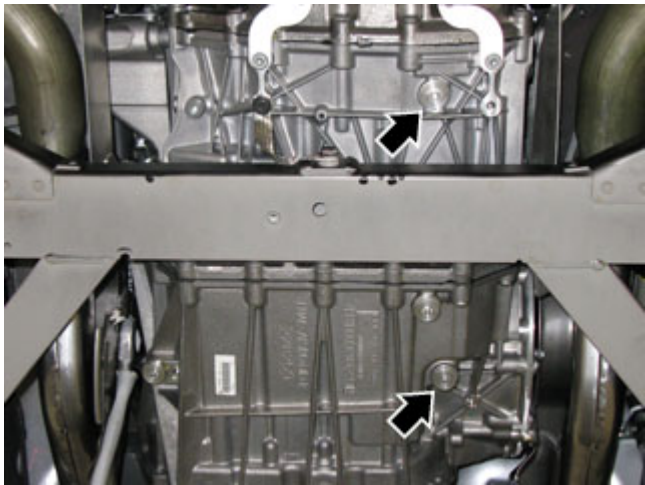


- Replace the indicated plugs, fitting and tightening the new components.

		
Tightening torque	Nm	Class
Plug	25 Nm	B

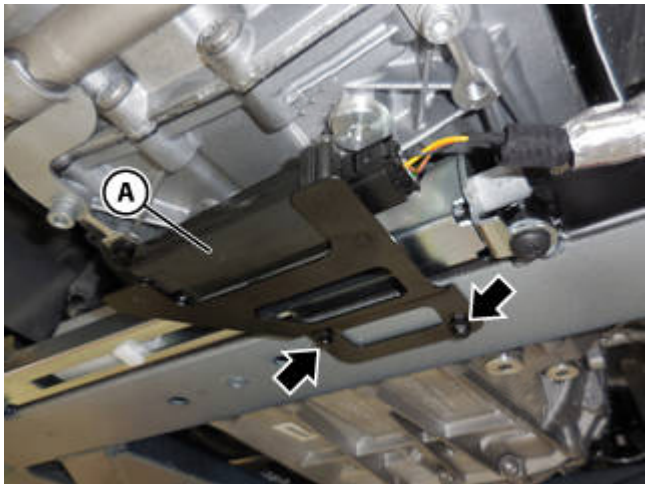


- Refit the bracket **(A)** moved aside previously and tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

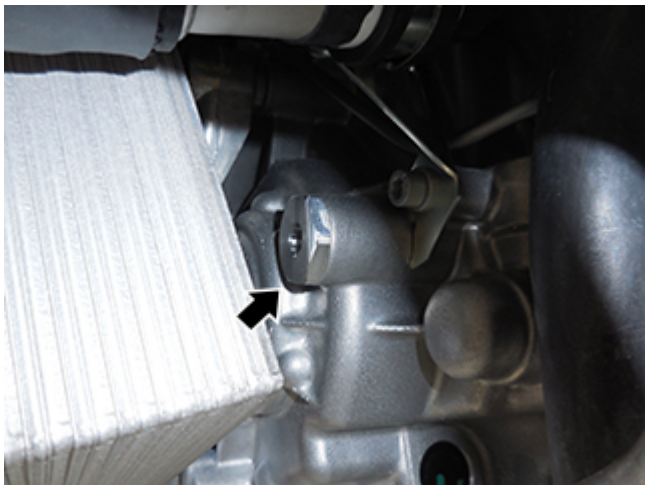

- Unscrew the indicated plug.

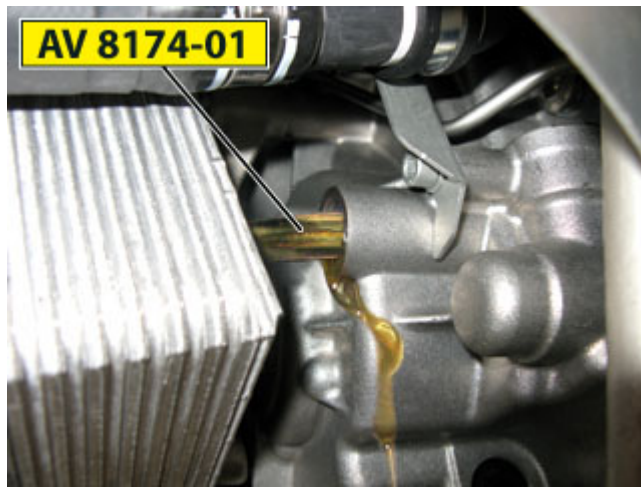

- Using the element **01** (with the short spout) of the pump (**AV 8174**), aspirate the specified oil from a newly opened container.
- Place a container under the oil filler orifice.
- Using the element **01** (with short spout) of the pump (**AV 8174**), top up by adding oil through the filler orifice until oil starts to overflow.
- Wait a few minutes to allow the oil to distribute, then repeat the procedure in gradual steps until oil overflows immediately when added.
- Repeat this procedure until oil overflows as soon as it is added.

- Check the level of the Shell SPIRAX S5 ATE 75W-90 DCT gearbox gear oil (🔧 **A3.02**).
- Check that there is no leakage from the drain plugs.