



GTC4Lusso USA - Checking DCT gearbox hydraulic clutch system oil level - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.03 Checking DCT gearbox hydraulic clutch system oil level

Checking level of Shell DCT-F3 fluid in DCT clutch hydraulic system

			
Tightening torque		Nm	Class
Fastening hydraulic clutch fluid filler/drain plugs	Plug	25 Nm	B




The following procedures must be carried out exactly as described to ensure that the hydraulics are proper lubricated and function correctly.




To check the hydraulic clutch system fluid level correctly, carry out the following procedures precisely as described.

- Remove the flat undertray sections ( E3.13).
 -  Remove the rear flat undertray section.
- Ensure that the vehicle is NOT on a gradient.
- Start the engine and run at idle speed.
- Select neutral **N**.
 -  Alternatively, select reverse **R**.
- Wait for the ATF fluid temperature to reach approximately **60 °C**.
 -  Ensure that the ATF fluid temperature does NOT exceed **80 °C** at any point during the operation.
- Check that the engine coolant temperature is between **40** and **50 °C**.

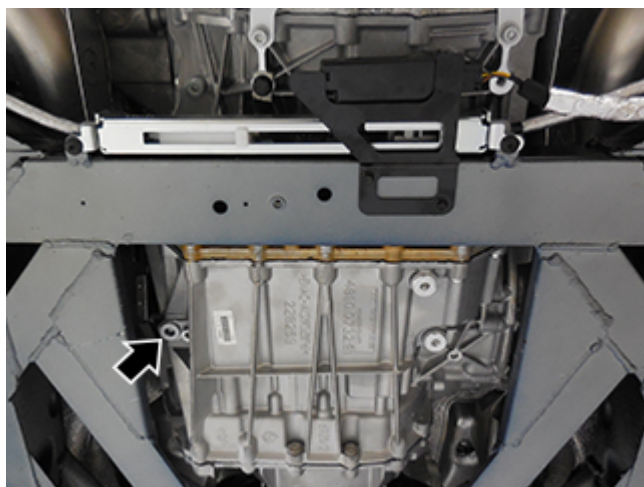**CAUTION**

HOT OIL may be released: use adequate protection.

- Unscrew the indicated plug.

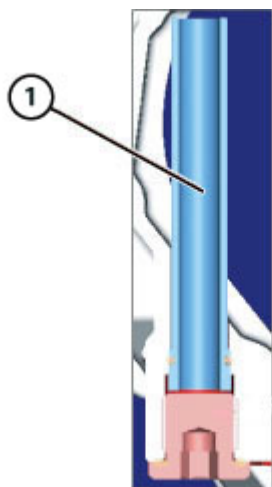


- The oil must be almost overflowing and level with the upper edge of the level inspection pipe (1).



If the level is too low, identify the possible causes for excessive consumption before refilling.

- If no oil overflows, top up as follows.
- Using the element **02** (with the long spout) of the pump (**AV 8174**), aspirate the specified oil from a newly opened container.
- Place a container under the oil level inspection orifice.
- Using the element **02** (with long spout) of the pump (**AV 8174**), top up by injecting oil gradually into the level inspection tube until oil starts to overflow.
- Let all the excess oil drain completely.

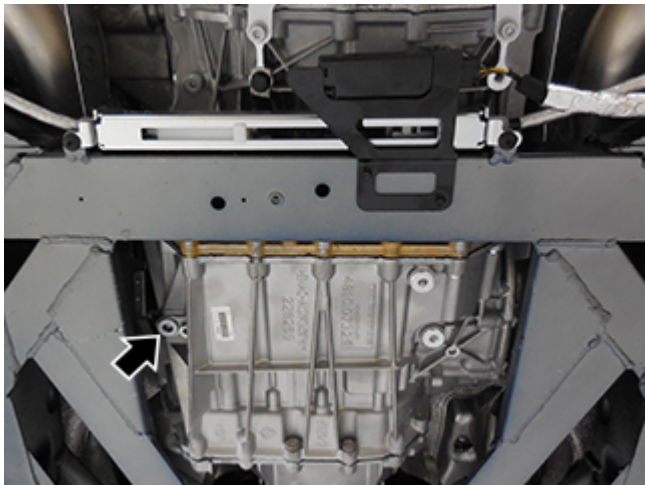

- Replace the plug, fitting and tightening the new component.

		
Tightening torque	Nm	Class
Plug	25 Nm	B

- Refit the flat undertray sections (📄 E3.13).
- Refit the rear flat undertray section.