




GTC4Lusso USA - Checking brake system fluid level - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.
Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.05 Checking brake system fluid level

Checking brake system fluid level

- Remove the engine compartment cosmetic shields ( E3.14).
-  Remove the left hand cosmetic inspection shield.

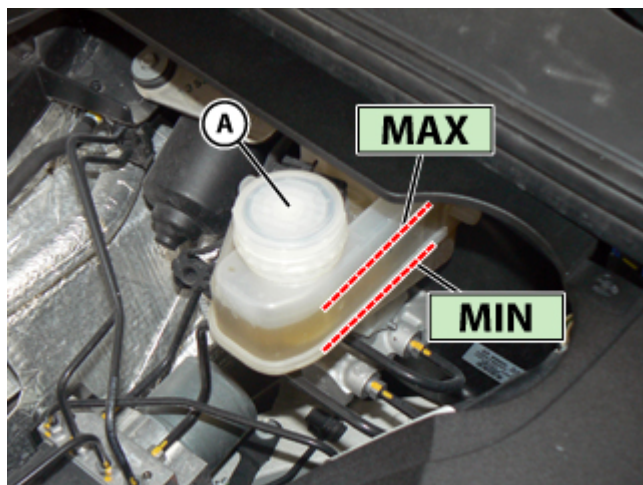

Hydraulic brake fluid is corrosive.

Contact with brake fluid may cause severe injury or damage to painted parts of the vehicle.

In the event of skin contact with fluid, wash the respective part of the body immediately with plenty of water.

In the event of contact between the fluid and painted parts of the vehicle, wash and dry the respective areas immediately.

- Check that the brake fluid level is near the **MAX** limit indicated on the side of the brake fluid reservoir.
- Top up with brake fluid if the level is near the **MIN** limit.

i Levels approaching the **MIN** limit may be indicative of excessive brake fluid consumption.

- Undo and open the cap **(A)**.
- Top up with the specified brake fluid to reach the **MAX** limit.

i The brake circuit is filled with synthetic brake fluid. Using mineral brake fluids may cause irreparable damage to the rubber gaskets in the system.

- Close and tighten the cap **(A)** securely.

➤ Refit the engine compartment cosmetic shields (🔧 E3.14).

i Refit the left hand cosmetic inspection shield.