



GTC4Lusso USA - Checking power steering system fluid level - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.06 Checking power steering system fluid level

Checking power steering system fluid level




The power steering fluid level must be checked with the system warm, after driving for at least 15 Km.

If checked cold, the level may appear to be excessively low even with the correct amount of fluid in the system.

At the intervals specified in the MAINTENANCE SCHEDULE, check the power steering system fluid level.



- Undo and open the cap (A).

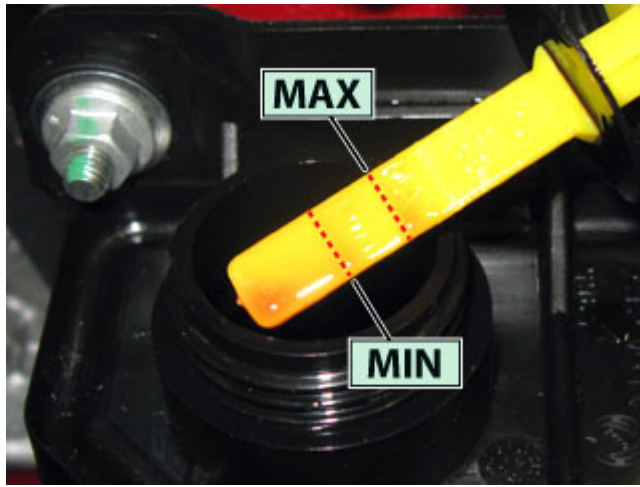

- Check that the power steering fluid level is between the **MIN** and **MAX** limits marked on the dipstick of the cap.
- There are MIN and MAX limits indicated on both sides of the dipstick. Refer to the limits on the side of the dipstick indicating a temperature of **90°C**.
- If the power steering fluid level is near or below the **MIN** limit, top the system up to the **MAX** limit with new power steering fluid of the specified type.
- Levels approaching or below the **MIN** limit may indicate fluid loss or air in the system.



- Close and tighten the cap (**A**) securely.