



GTC4Lusso USA - Checking the PTU gear system oil level - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

A3.08 Checking the PTU gear system oil level

Checking the PTU gear system oil level

			
Tightening torque		Nm	Class
Fastening the PTU gear oil level inspection/filler plug	Threaded plug	40 Nm	B

- Remove the flat undertray sections ( E3.13).
-  Remove the central flat undertray section.
- Start the engine and run at idle speed.
- Wait for the engine coolant temperature to reach **80°C**.
- Switch off the engine.

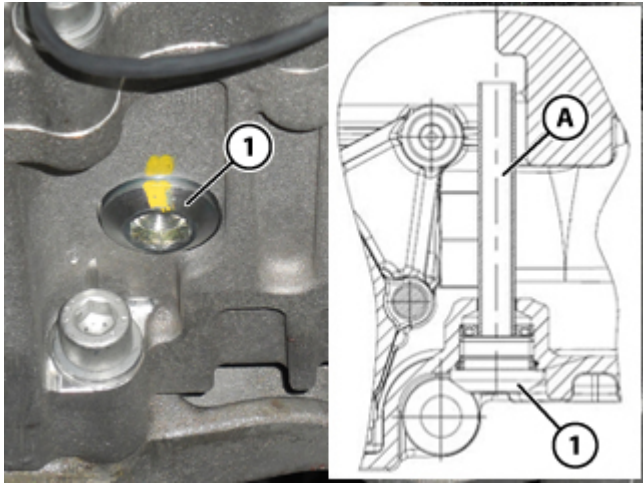

- Undo the cap **(1)**.
- Using a suitable syringe connected to a suitable rubber pipe, inject the specified oil into the PTU through the tube **(A)** until the oil overflows.
- Start the engine and run at idle speed.
- Inject the specified oil into the PTU until oil overflows, as described previously, then wait **2 minutes**.
- Repeat this procedure until oil overflows as soon as it is added.
- Wait **5 minutes** for the oil to settle.
- Tighten the plug **(1)**.

		
Tightening torque	Nm	Class
Threaded plug	40 Nm	B

- Refit the flat undertray sections (🔑 E3.13).
- Refit the central flat undertray section.

- Switch off the engine.