



GTC4Lusso USA - Replacing the active carbon filter - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

## A3.10 Replacing the active carbon filter


### Removing the active carbon filter

Replace the active carbon filter at the intervals specified in the MAINTENANCE SCHEDULE. The filter is located behind the right hand rear wheel bay.

- Disconnect the battery (  F2.01).
- Remove the rear wheelhouses (  E3.05).
-  Remove the rear right hand wheelhouse.

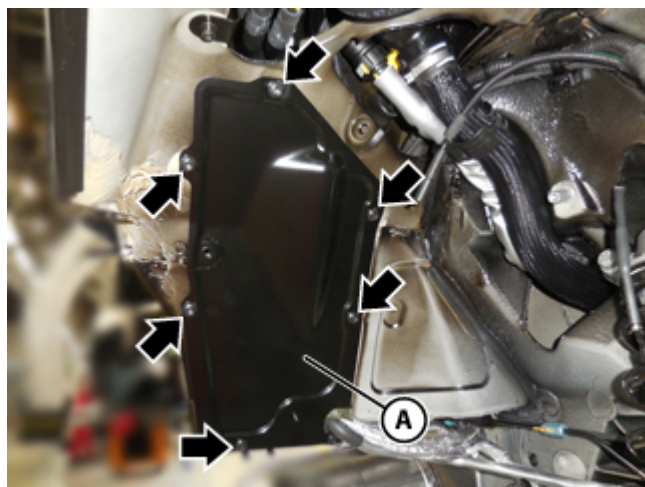


- Undo the screws indicated.
- Remove the cover (A).

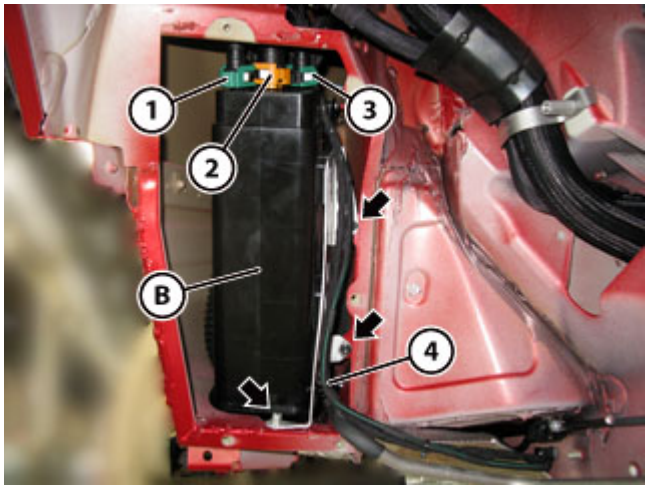

- Undo the screws indicated.
- Release and disconnect the "double-lock" quick connectors (1), (2) and (3).
- Detach the clamp (4).
- Remove the active carbon filter (B), complete with diagnostic pump and relative filter, disconnecting the diagnostic pump connector.


Refitting the active carbon filter

|  |       |      |       |
|-----------------------------------------------------------------------------------|-------|------|-------|
| Tightening torque                                                                 |       | Nm   | Class |
| Fastening the active carbon filter                                                | Screw | 9 Nm | B     |
| Fastening the active carbon filter cover                                          | Screw | 9 Nm | B     |

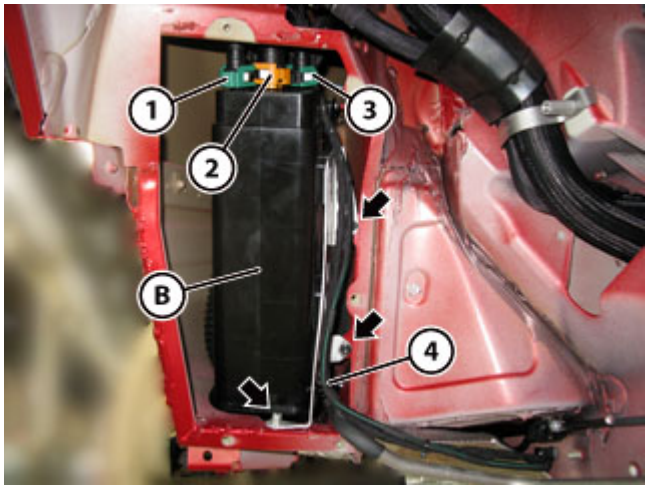

- Fit the active carbon filter (B), complete with diagnostic pump and relative filter, connecting the diagnostic pump connector.
- Fasten the clamp (4).
- Connect and fasten the "double-lock" quick connectors (1), (2) and (3) of the respective pipes.
- Tighten the screws indicated.

|  |      |       |
|-------------------------------------------------------------------------------------|------|-------|
| Tightening torque                                                                   | Nm   | Class |
| Screw                                                                               | 9 Nm | B     |

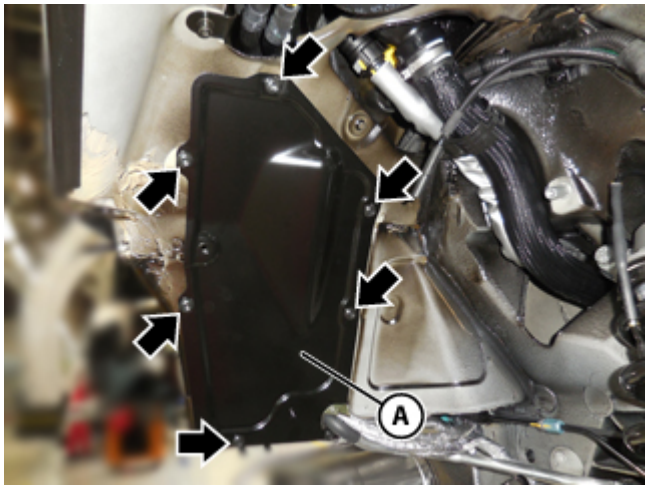

- Fit the cover (A).
- Tighten the screws indicated.

|  |      |       |
|-----------------------------------------------------------------------------------|------|-------|
| Tightening torque                                                                 | Nm   | Class |
| Screw                                                                             | 9 Nm | B     |

- Refit the rear wheelhouses (  E3.05).
-  Refit the rear right hand wheelhouse.
- Connect the battery (  F2.01).